


CONVENIENCE CONCEPTS

121699

Console table with shelf

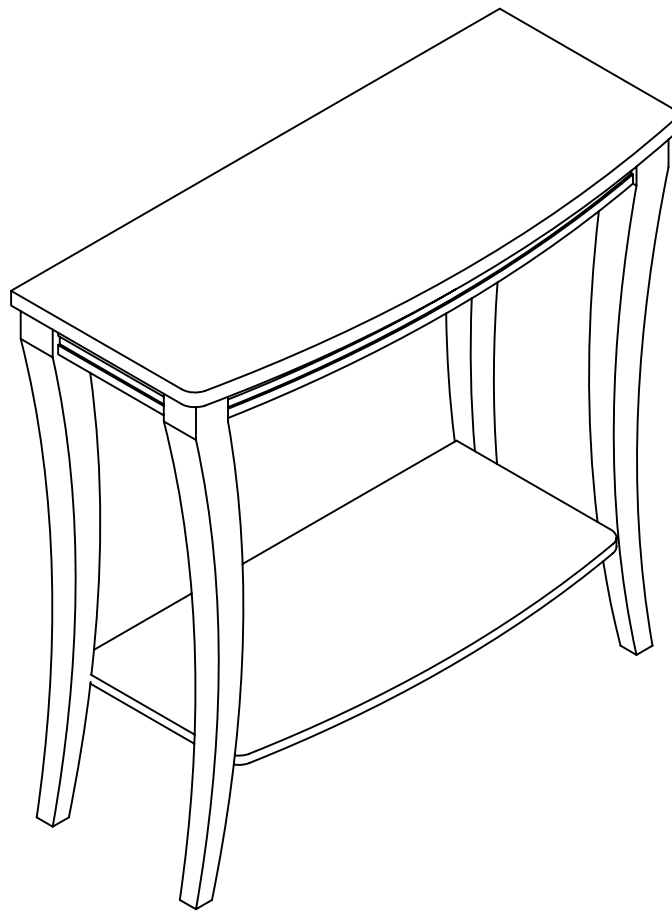

Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store


. Broken or missing Hardware?

. Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

PARTS IDENTIFICATION

ITEM#:121699

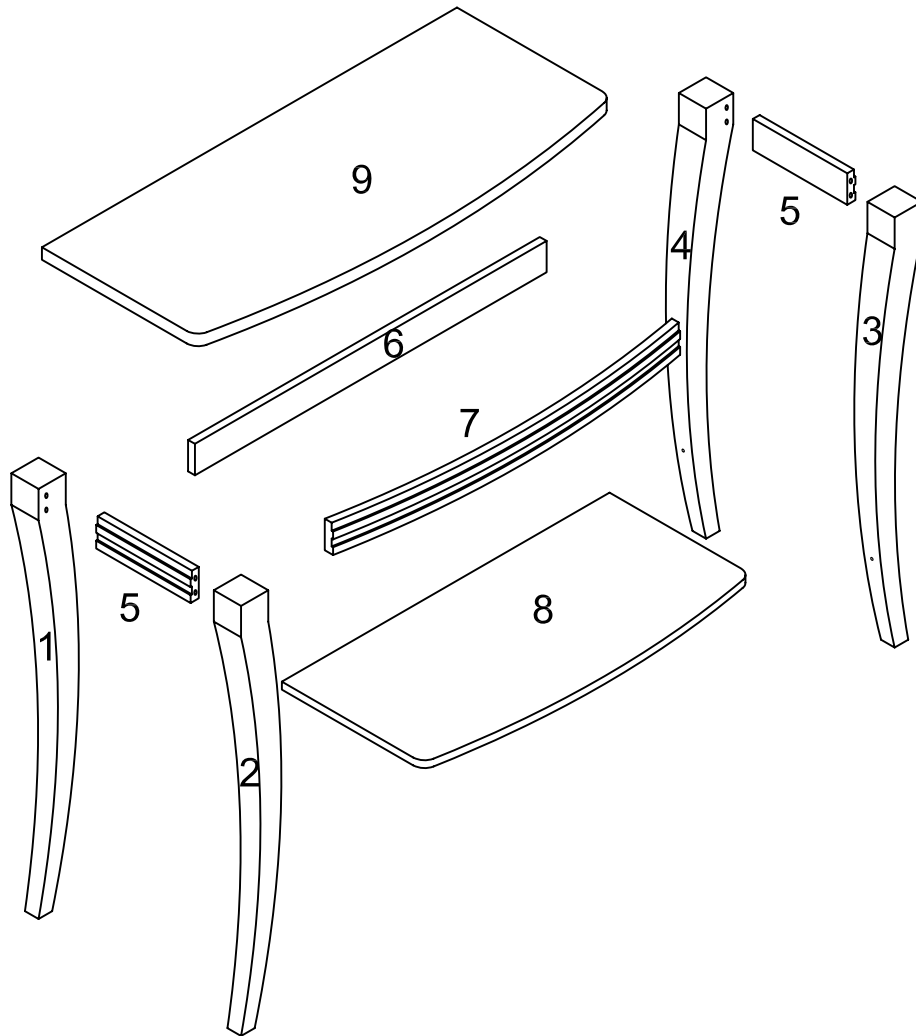











Please count and verify all parts before assembly






1.Rear-left Leg	(1)	1pc
2.Front-left Leg	(2)	1pc
3.Front-right Leg	(3)	1pc
4.Rear-right Leg	(4)	1pc
5.Side Crossbar	(5)	2pcs
6.Back Crossbar	(6)	1pc
7.Front Crossbar	(7)	1pc
8.Bottom panel	(8)	1pc
9.Top Panel	(9)	1pc

HARDWARE IDENTIFICATION

ITEM#:121699


A		Cambolt	L29	20pcs	
B		Camlock	Ø15	20pcs	
C		Dowel	Ø8×25	6pcs	
D		Medium Screw	Ø4x35	4pcs	
E		Large Screw	Ø4x50	10pcs	
F		Anti-tip bracket	40x20x15	1pc	
G		Small Screw	Ø4x25	1pc	
H		Wall Screw	Ø5x40	1pc	
I		Plastic Anchor	Ø8x40	1pc	
J		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.		1pc

Assembling the unit with camlocks and wood dowels.

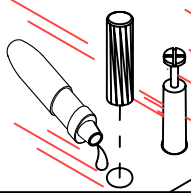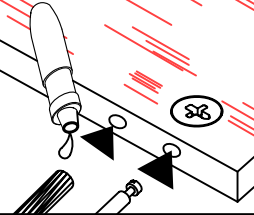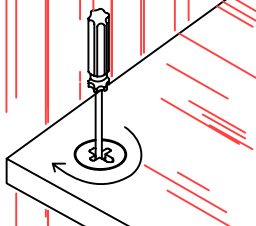				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently turn the cam clockwise into locked position. Do not overtighten.


Step1

1. Screw Cambolt(A) into four legs(1.2.3.4).
2. Insert cam locks(B) into side crossbars.
3. Attach Legs(1) and(2) to side crossbars.
Using care not to over tighten cam locks(B).
4. Repeat for legs(3) and (4).

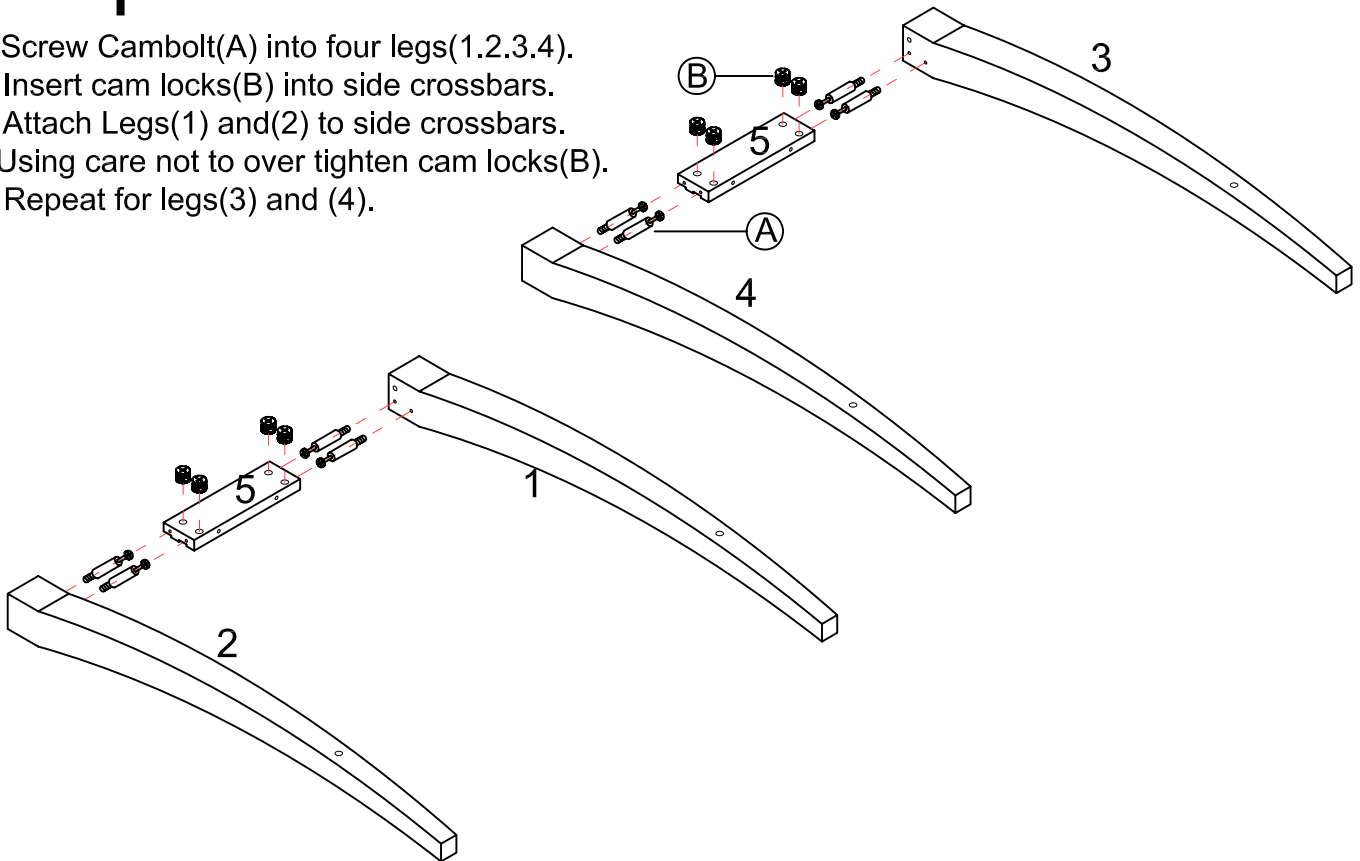

Step2


1. Insert cambolts(A) into rear-left leg and rear-right leg(1.4).
2. Insert medium screw(D) through front crossbar (7) into front-right leg(3) and loosely screw down. Attach back crossbar(6) with rear-right leg(4). Insert cam lock(B) into back crossbar(6) and loosely tighten.
3. Repeat step2 for legs(1) and (2).

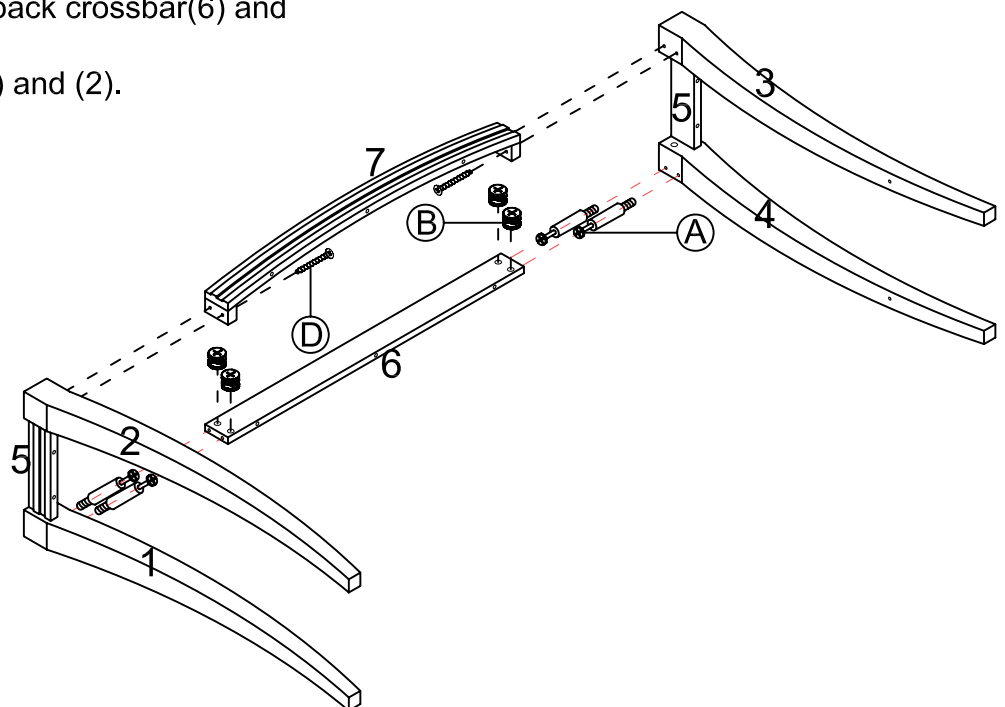

Step3


PAGE: 5 of 6

1. Place top panel(9) on carpet or soft surface.
Insert cambolts(A) and wooden dowels(C) into top panel(9) and leg assembly.
2. Place leg assembly onto top panel(9) and gently tighten cam locks.
3. Insert large screws(E) into crossbar as shown and gently tighten.

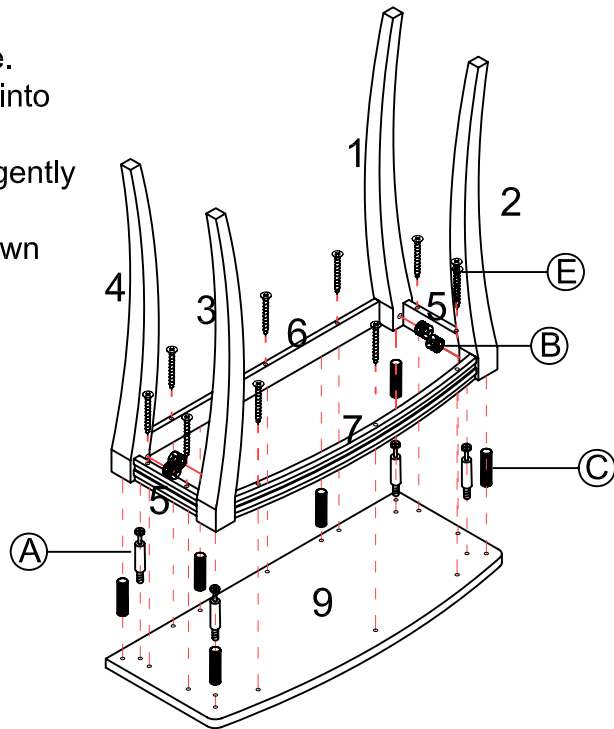

Step4

1. Attach cambolts(A) to legs(1.2.3.4).
2. Insert cam locks(B) into bottom panel(8).
3. Attach bottom panel(8) to table assembly.
loose screws/cam locks will allow leg movement for panel entry.
4. Gently tighten all cam locks and screws on entire assembly.

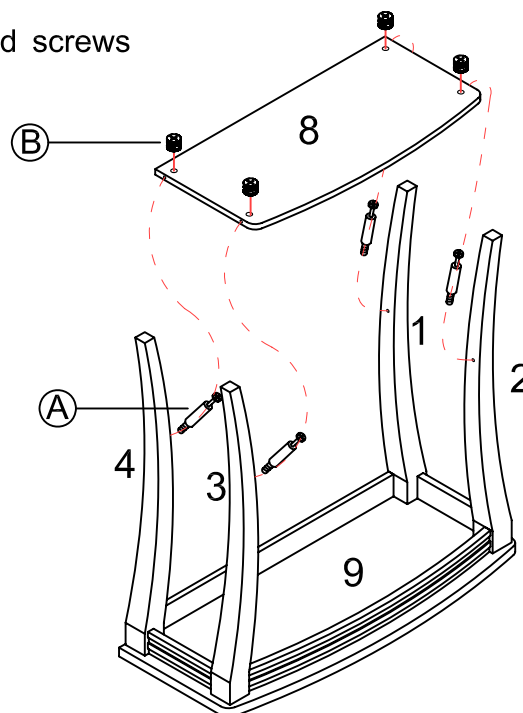

Step5

Optional but recommended!

1. Place table against wall and temporarily hold anti-tip bracket(F) under table top and against wall.
2. Mark bracket holes with pencil.
3. Drill hole into wall and tap in plastic anchor(I) into place.
4. Attach bracket to table with self tapping screw(G) and fasten table to wall with wall screw(H).

