


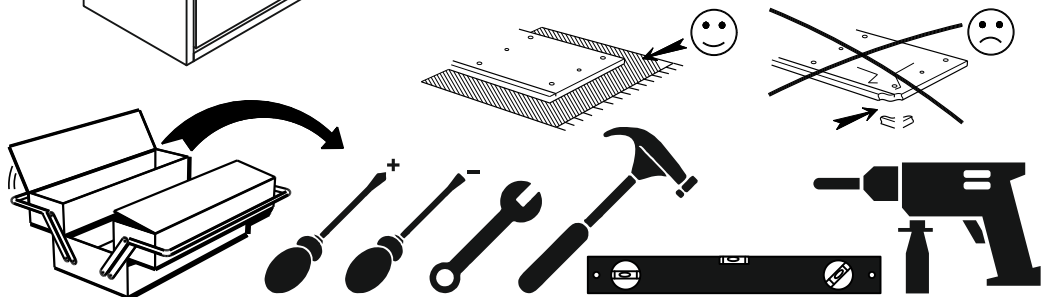


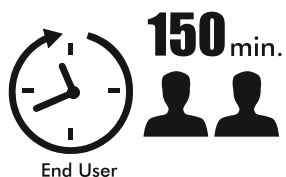

# MULTIMO



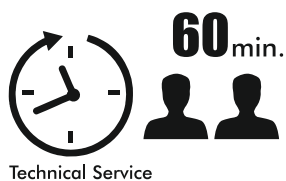


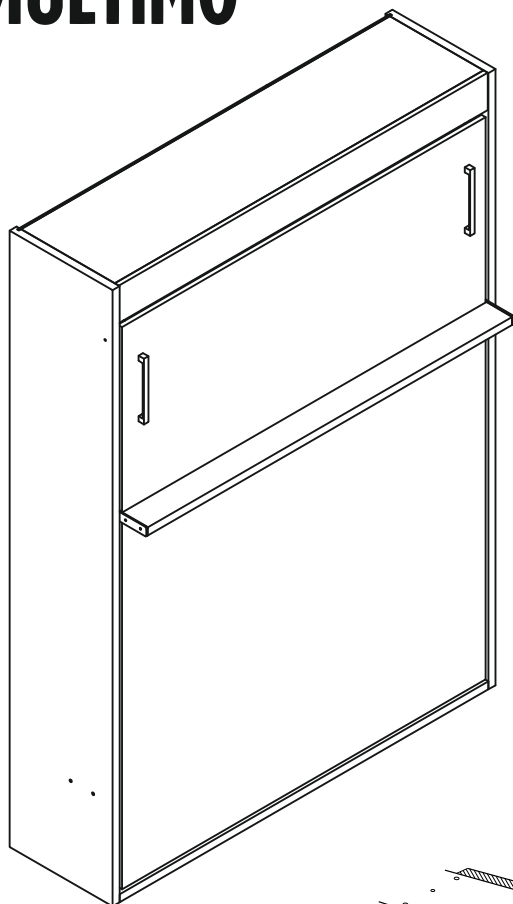














## A 226 BELLEZA FULL SIZE





Assembly Instructions


Track Title	Piece	(inch)			Piece	(mm)		
		Thickness	Length	Width		Thick	Height	Most
<b>A</b>	2	1,18	89,76	17,32	2	30	2280	440
<b>B</b>	1	1,18	57,87	17,32	1	30	1470	440
<b>C</b>	2	0,71	57,87	15,75	2	18	1470	400
<b>D</b>	1	0,71	57,87	5,43	1	18	1470	138
<b>E</b>	1	0,71	57,87	10,24	1	18	1470	260
<b>F</b>	1	1,18	57,17	4,33	1	30	1452	110
<b>G</b>	1	1,97	57,64	19,69	1	50	1464	500
<b>H</b>	1	0,71	81,89	57,01	1	18	2080	1448
<b>L</b>	3	0,31	88,94	19,45	3	8	2259	494

## Accessories List


<b>MNX 02</b>  <b>24/ piece</b> <b>IM - 01 (6x30) mm</b>  <b>4 / piece</b> <b>DD - 01 ( R10 )</b>  <b>3 / piece</b> <b>VTB - 01 (4,8x16) mm</b>  <b>12 / piece</b> <b>KVL 01</b>  <b>25 / piece</b>	<b>MNG - 01</b>  <b>24 / piece</b> <b>AL - 01</b>  <b>4</b> <b>VD - 01(6X70) mm</b>  <b>3 / piece</b> <b>KP - 01 ( 224 ) mm</b>  <b>2 / piece</b> <b>MKZ - 02</b>  <b>2 / piece</b> <b>1400N</b>	<b>OT-054</b>  <b>2 / piece</b> <b>AL - 02</b>  <b>5</b> <b>PL - 01 (6x19x2) mm</b>  <b>3 / piece</b> <b>VKP - 01 (22) mm</b>  <b>4 / piece</b> <b>TTC 01</b>  <b>4 / piece</b>	<b>CT - 01 ( 6x40 ) mm</b>  <b>2 / piece</b> <b>DSE - 01 (40x90x32) mm</b>  <b>3 / piece</b> <b>VDA - 01 ( 6,5x50 ) mm</b>  <b>4 / piece</b> <b>VD - 02 (3,5x25) mm</b>  <b>26 / piece</b> <b>TAP - 01</b>  <b>24 / piece</b>
---	---	--	---

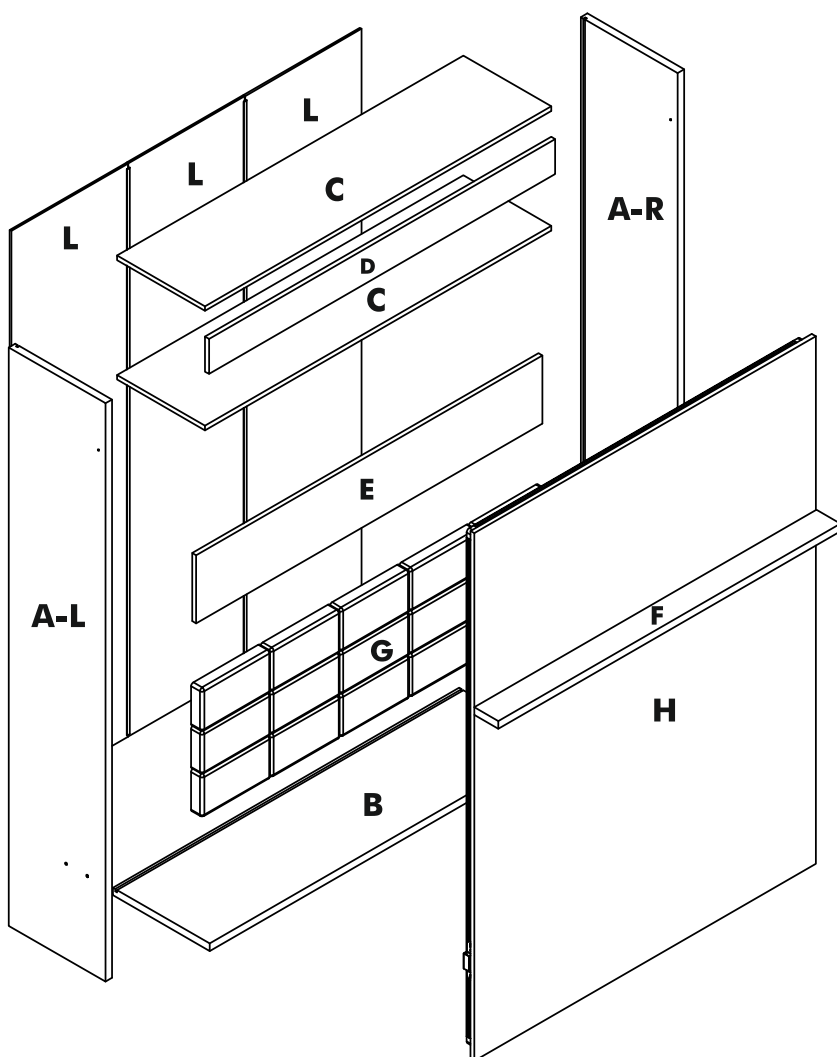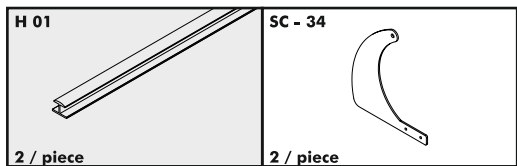

## STEP 1

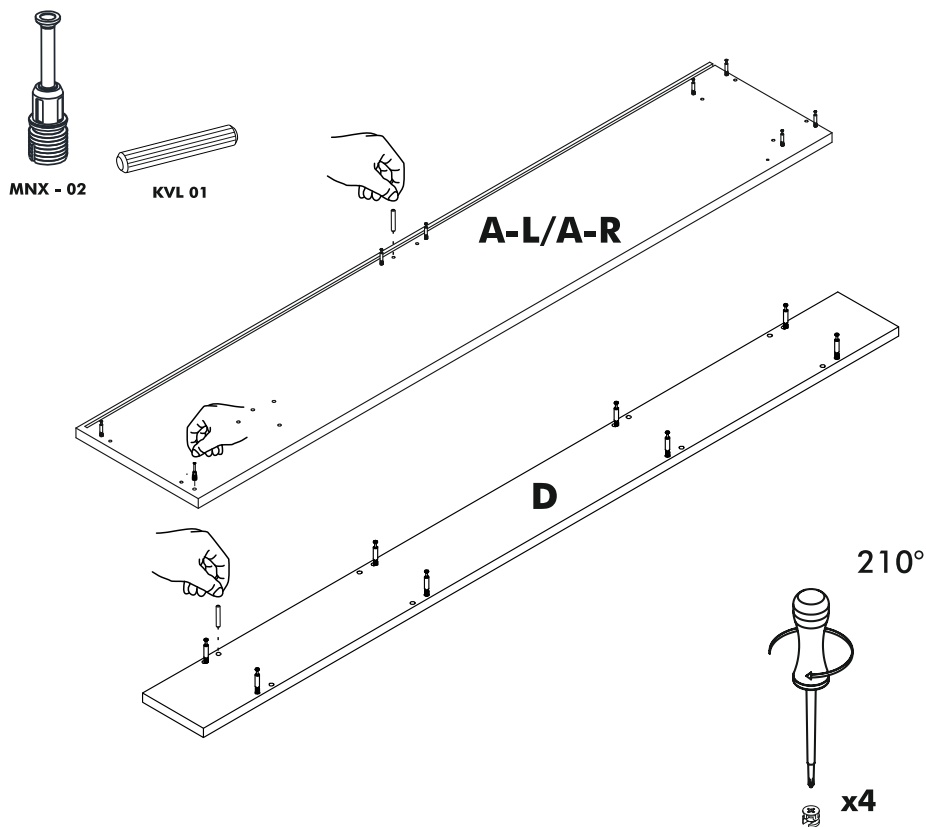


## STEP 2

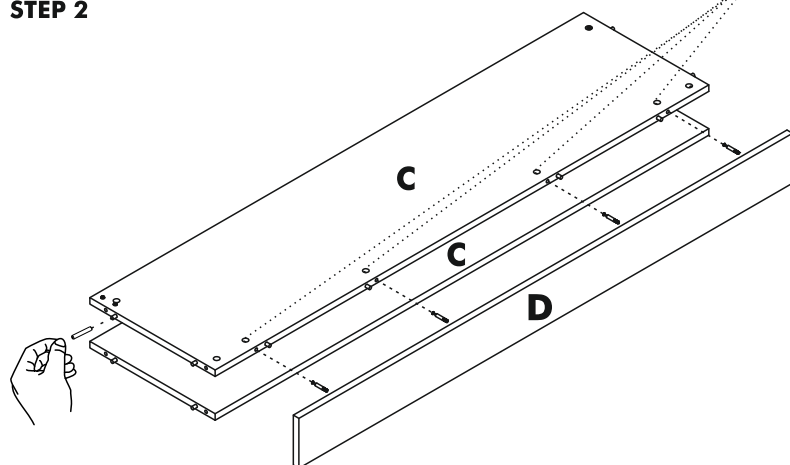


210°




### STEP 3

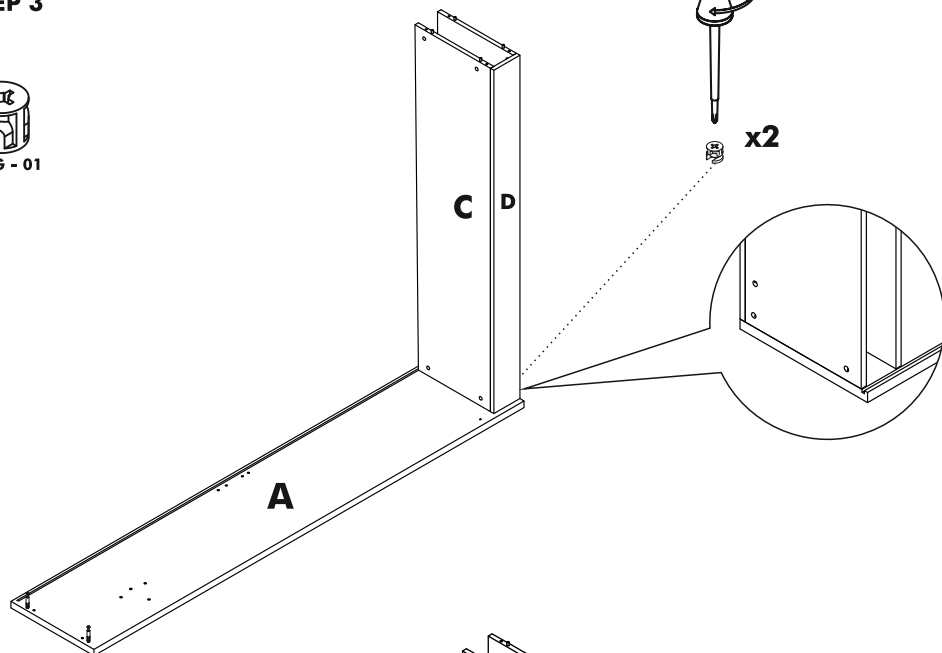


### STEP 4

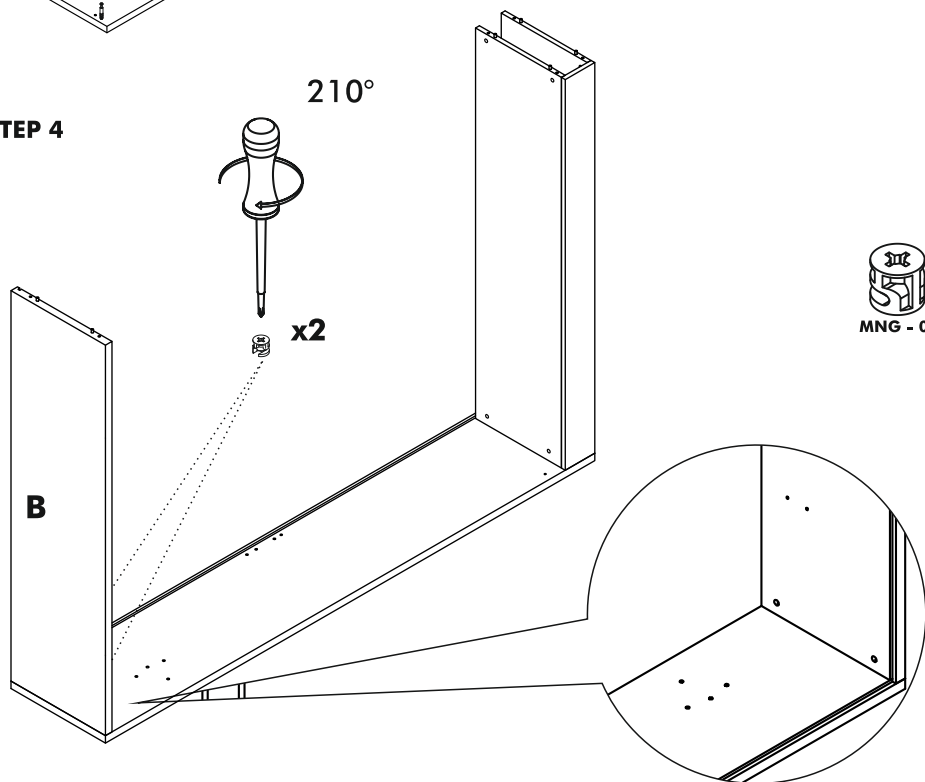


## STEP 5

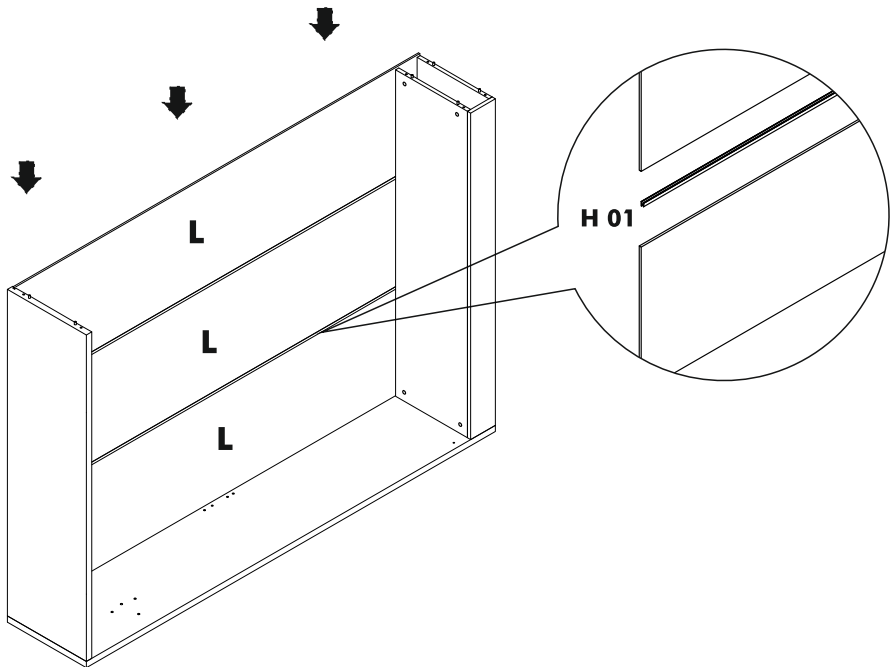


## STEP 6

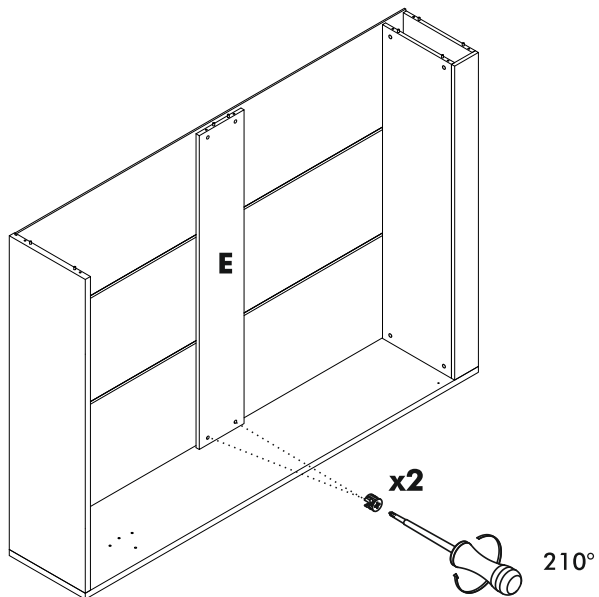


## STEP 7

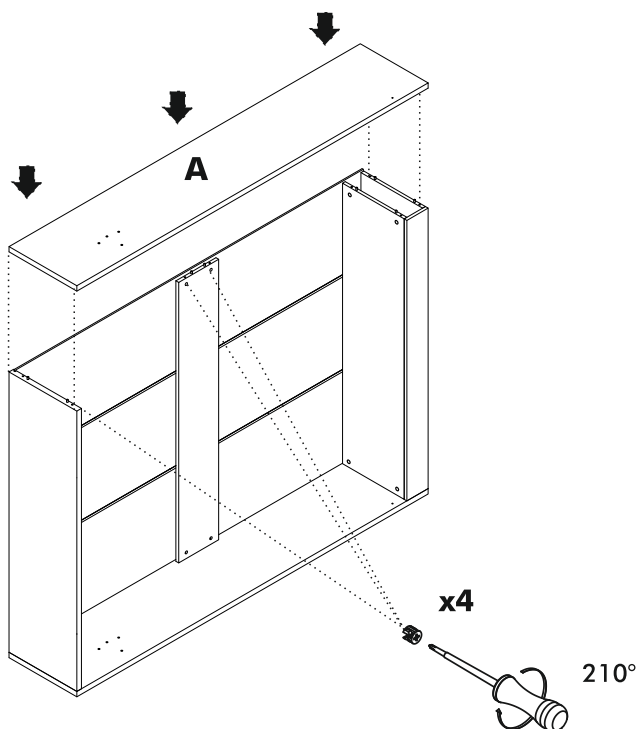

## STEP 8

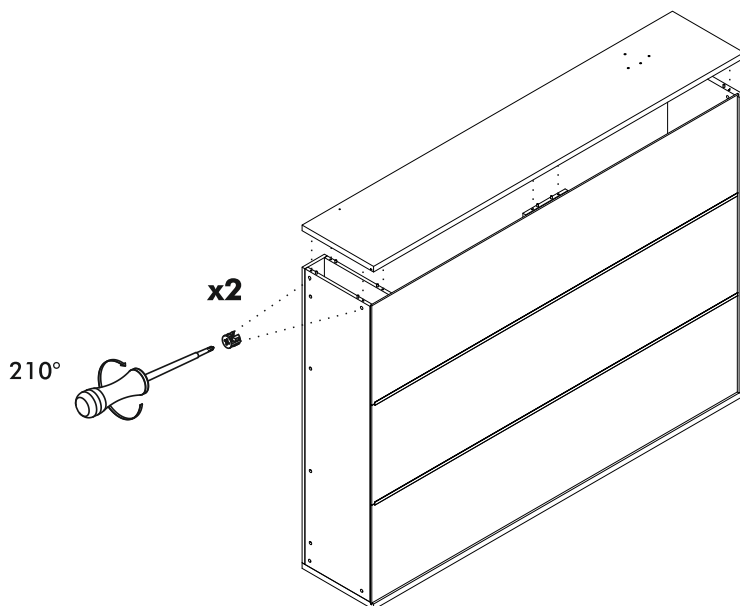

## STEP 9

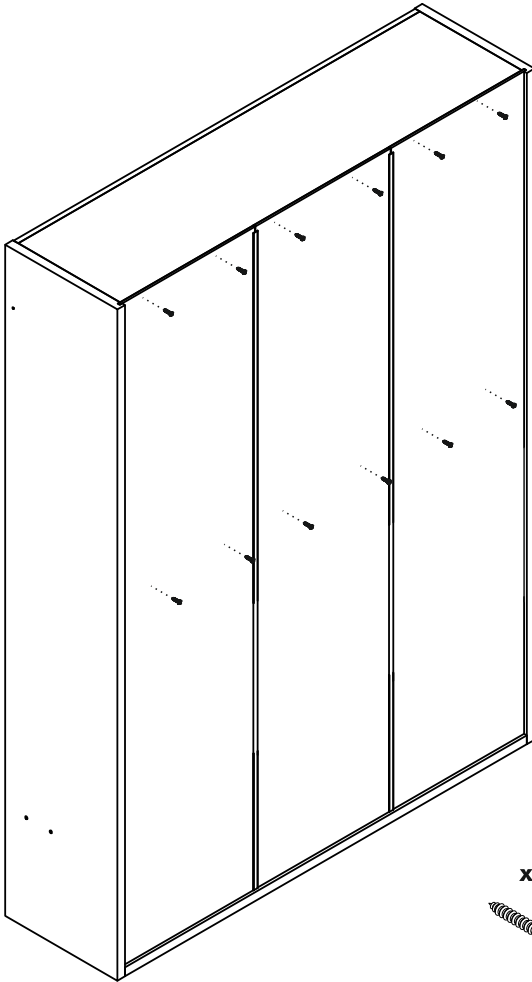

**x20**




**VD - 02**






## STEP 10

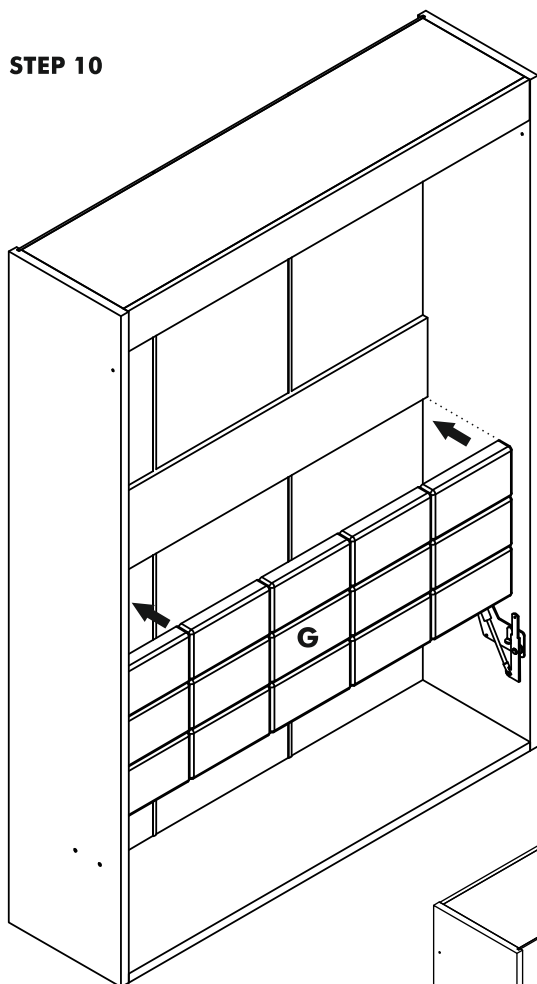

## STEP 11

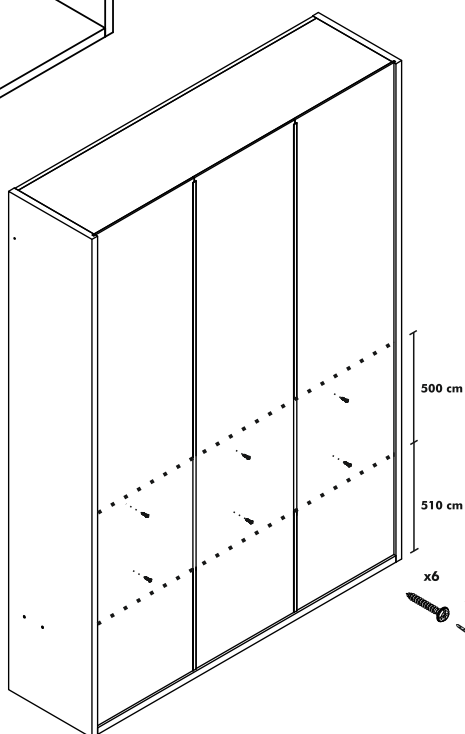




x6





VD - 02



## STEP 12

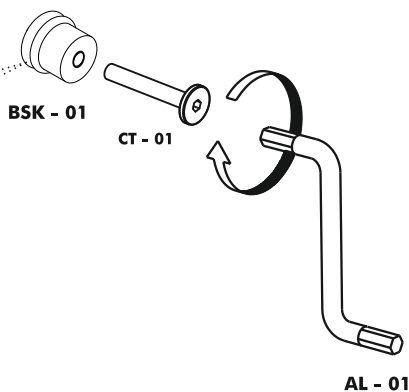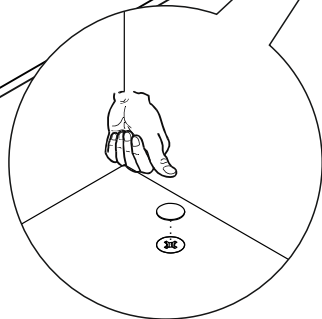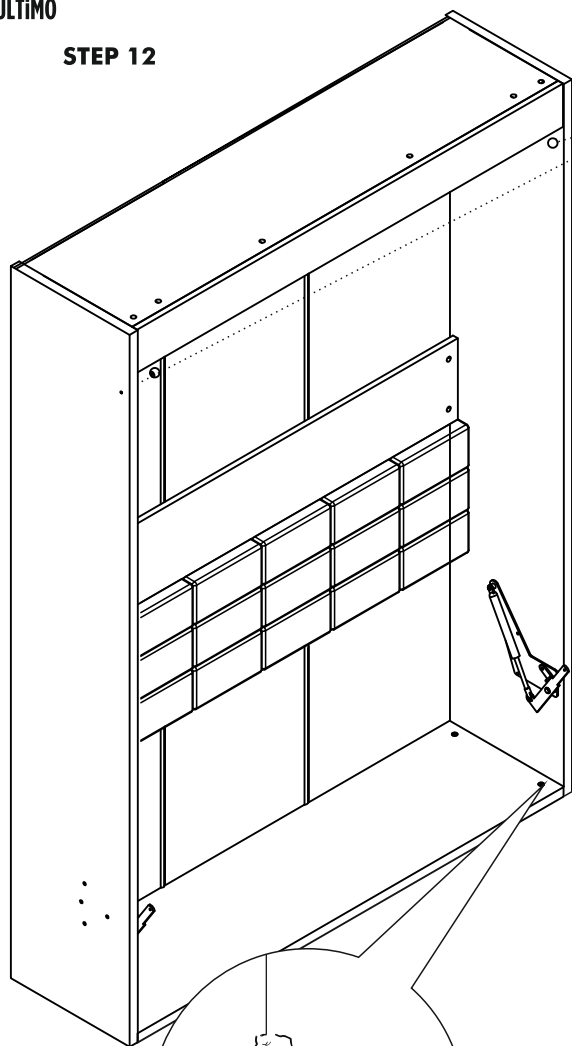

**CAUTION**  
DO NOT UNLOCK BEFORE INSTALL

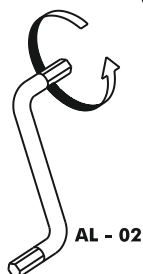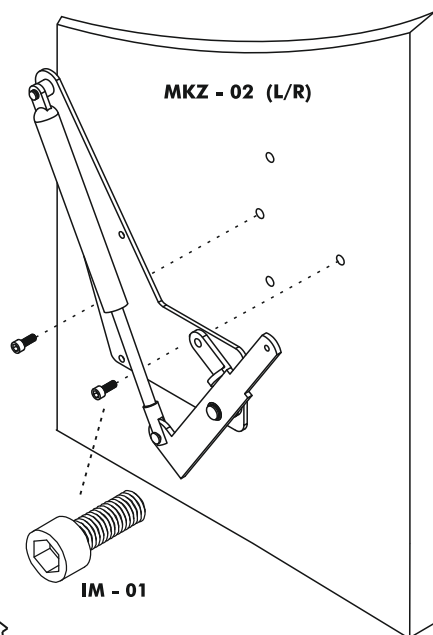

# STEP 13



Ø 10 mm / 0,254 inch


DD - 01

PL - 01

VD - 01



VTB - 01

DSE - 01

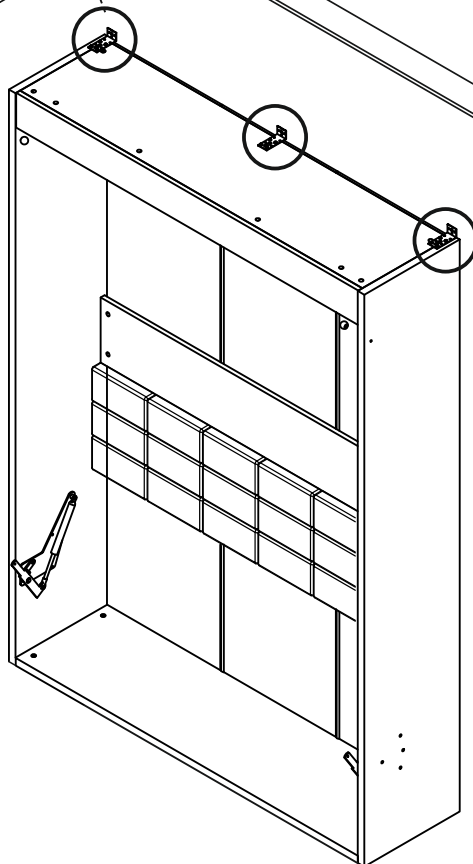

## STEP 13-2



Ø 10 mm / 0,254 inc

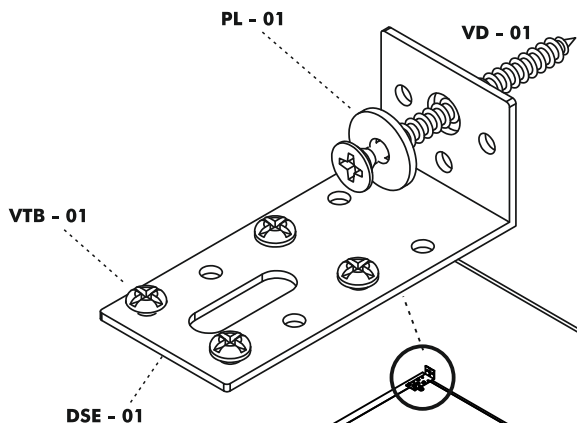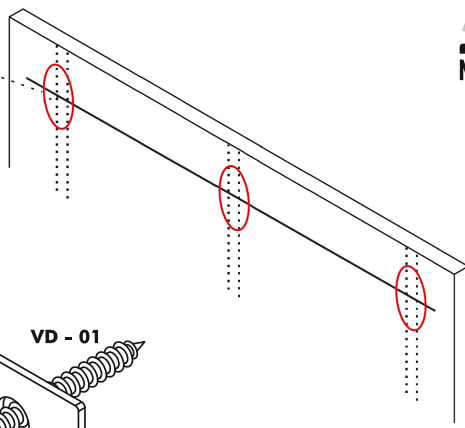



FIRST LOCATE THE STUDS BY USING "STUD FINDER" IN THE WALL AND DRILL IT ACCORDING TO THE HEIGHT MEASUREMENTS GIVEN ON THE SIDE.

UPPER HOLES SHOULD BE DRILLED FOR ATTACHING BED AT NEXT STEP.



SUPPLY DRYWALL FASTENERS APPROPRIATE TO YOUR WALL TYPE. WE RECOMMEND USING STEEL TOGGLE BOLT ANCHOR THAT SHOWN BELOW

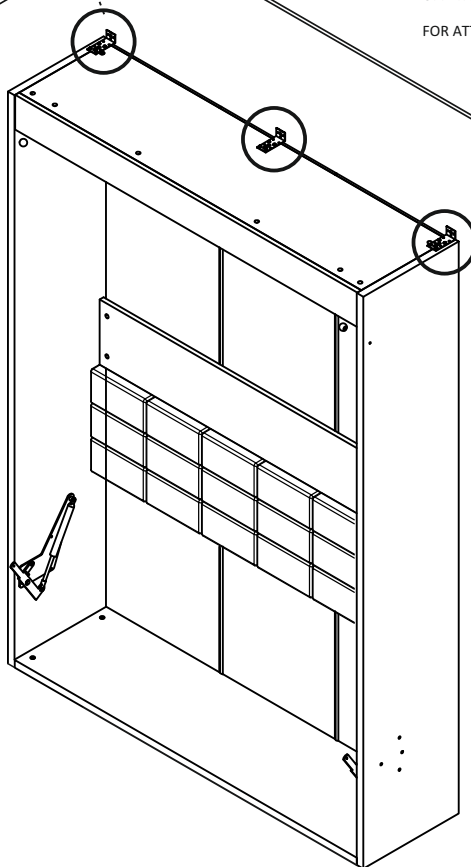


**STEP 14**

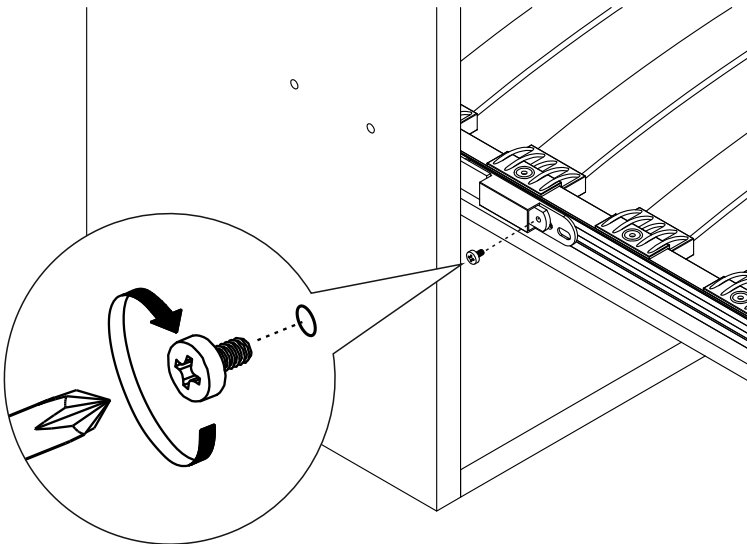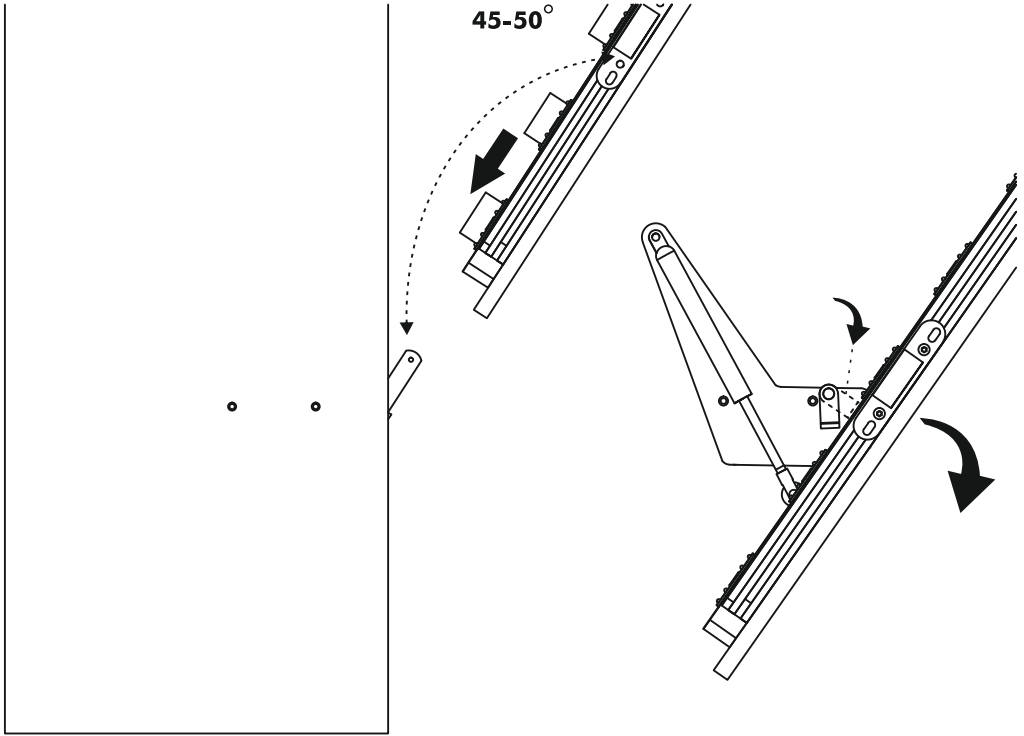

## STEP 15

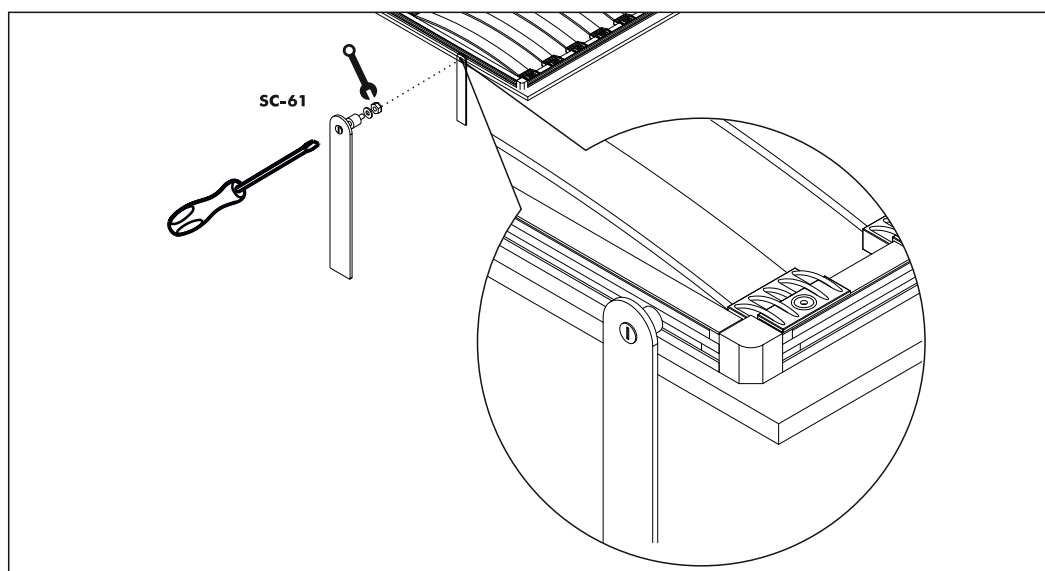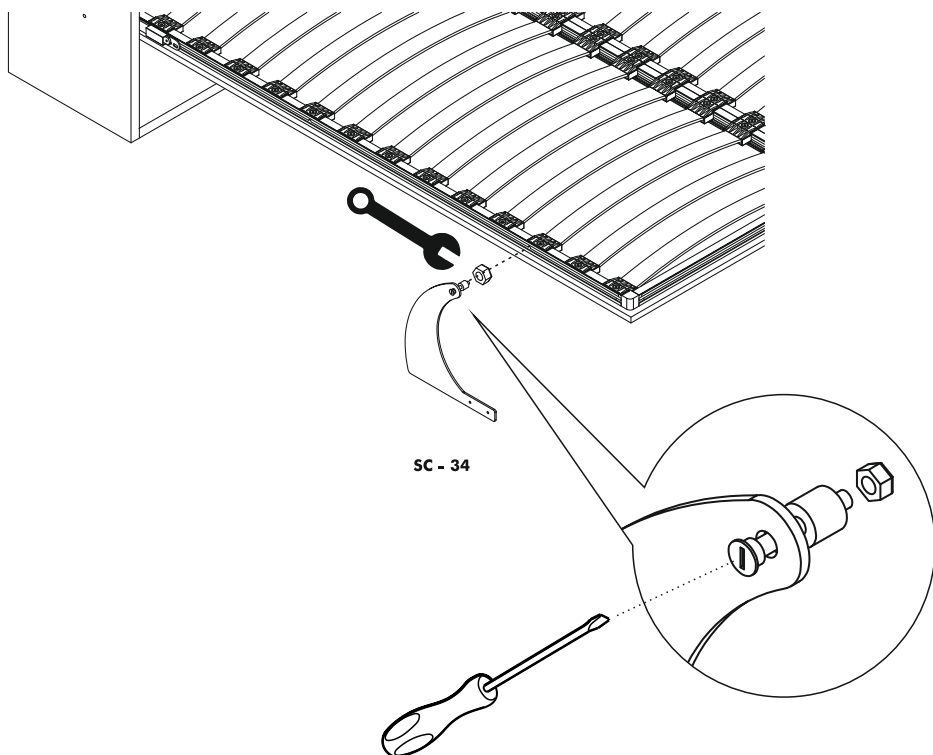


## STEP 16

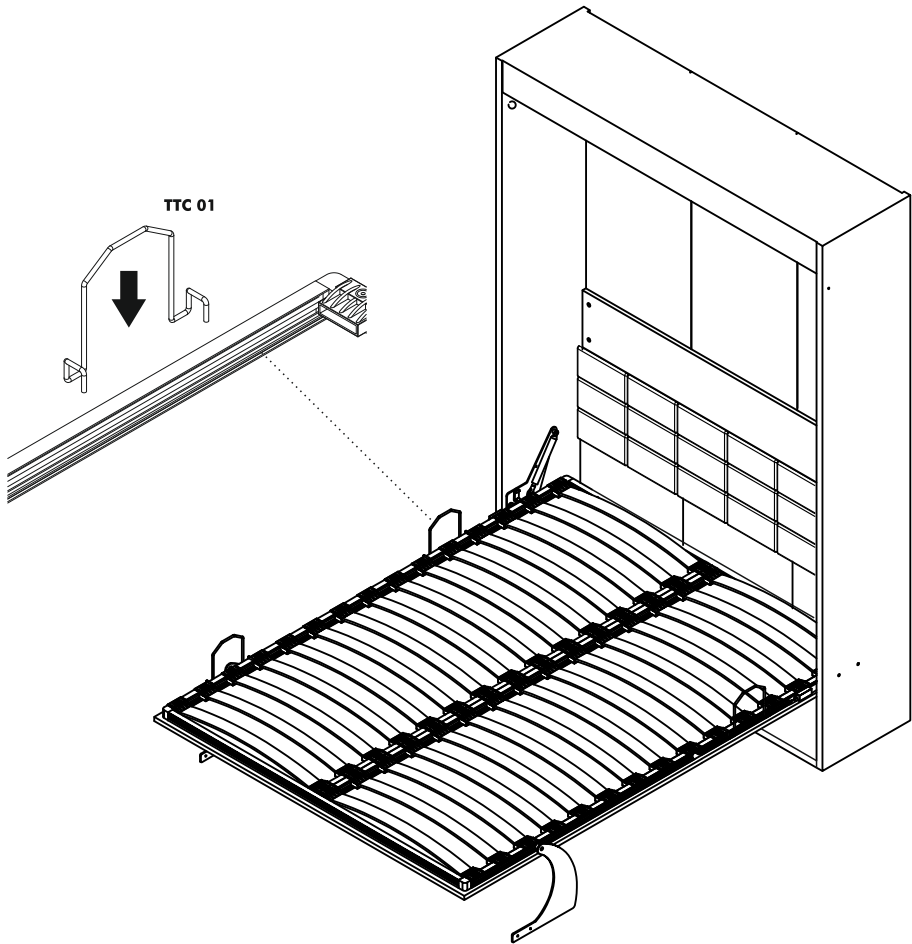

# STEP 17




VKP - 01

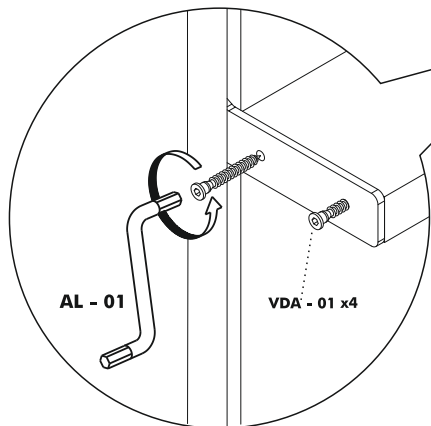


AL - 01

VDA - 01 x4

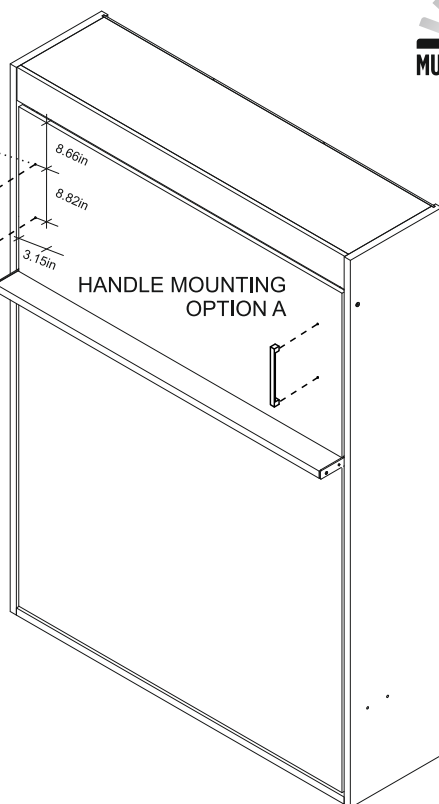


HANDLE MOUNTING  
OPTION A

HANDLE MOUNTING  
OPTION B

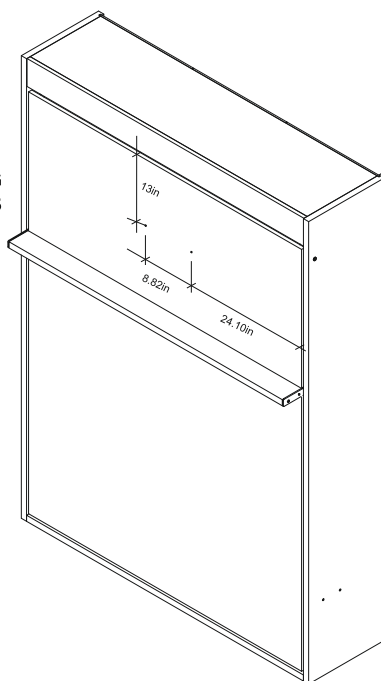




**STANDARD FOOT VIEW**

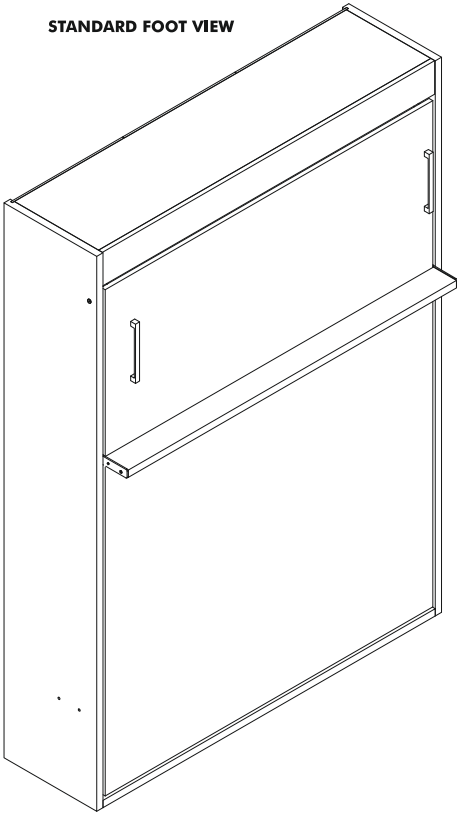

**OPTIONAL FOOT VIEW**

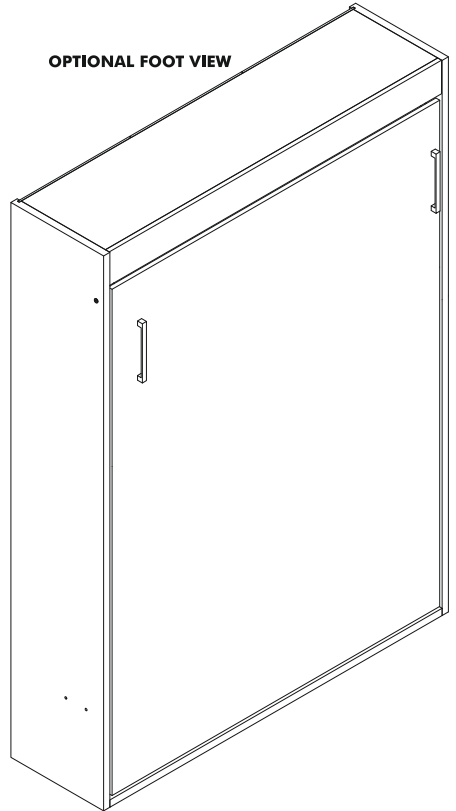

## ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheetrock like material without properly affixing to stud.
2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.
3. Wall Bed mattress thickness may not exceed 8 inch. Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.
4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person. Improperly sleeping more than one person risks injury to person and damage to property.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.
9. For Bunk Beds:
  - a. Always use provided ladder when accessing top bunk.
  - b. Be slow, careful and aware of surroundings when opening top bunk.
  - c. Do not horseplay. Beds are to be slept on only.
  - d. Some have legs that fully extend when open- be aware of where the leg is and will be.



[www.multimobeds.com](http://www.multimobeds.com)