




Welland


Fullerton Corner Wall Shelf Installation

WSV109-157 WH

TOOLS REQUIRED



Hammer

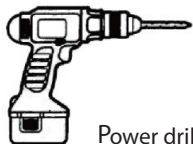

Power drill




3/8 in. drill bit



Level






Pencil

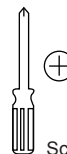

Screwdriver



INSTRUCTION

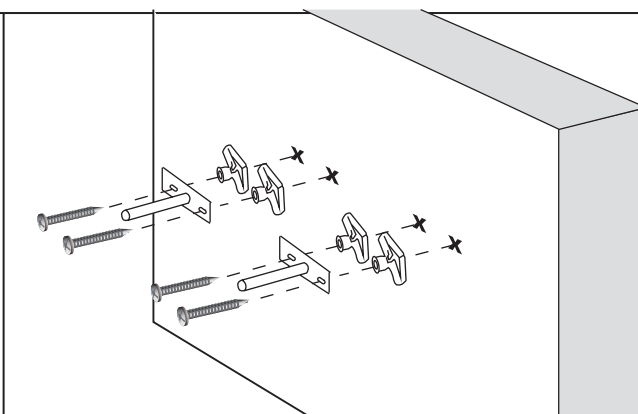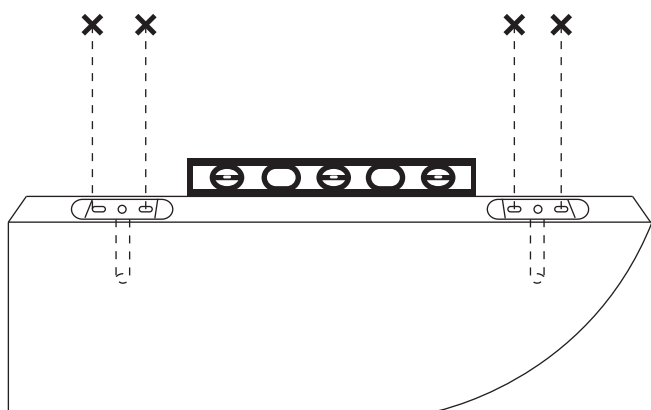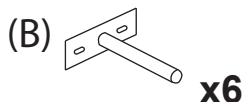

1. Place the shelf board (A) on the desired spot, level it, and mark the hanging position on the desired spot with a pencil.

2. ① In case the holes don't hit the studs, you will need to use the drywall anchors. Drill holes in marked position by Power drill and 3/8 in. drill bit, tap the anchors (C) into the marked holes with a hammer.

2. ② Place the shelf bracket (B) on the desired spot, use a power drill or a philips screwdriver to drive the screws (D) into the studs or drywall anchors.

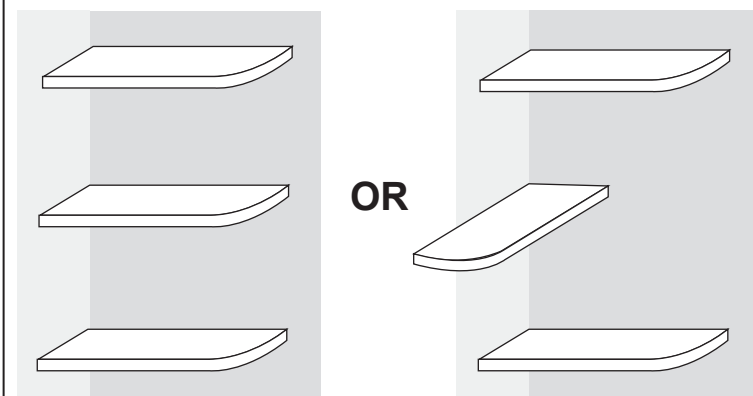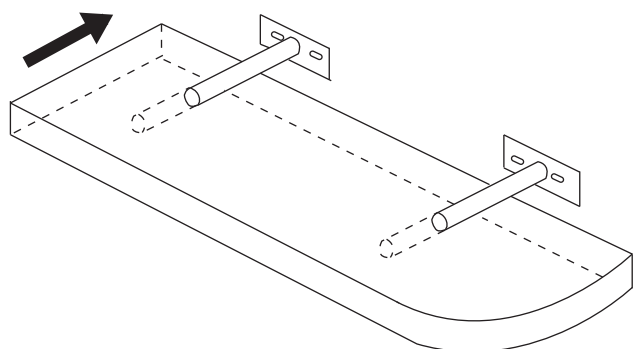

3. Slide the shelf board onto the bracket, push it ultimately against the wall.

4. Two installation methods, Repeat the previous steps to install the other two shelf board on the desired spot.

Please install according to the instruction. Welland LLC and its affiliates are not responsible for injury or damage resulting from improper installation or use.

Email us at customerservice@wellandllc.com

*The emission of the chemicals listed in Prop 65 in this product has been tested to meet the standard of CARB ATCM.