



## PILASTER UPRIGHT DRAWER BOX TEMPLATE - LEFT SIDE CABINET WALL


### SIDE VIEW OF SLIDE



17-9/32"

**LEGEND**

- STANDARD BRACKET** ADJUSTS UP TO 1-3/8" FROM INTERIOR OF CABINET WALL
- XL BRACKET IN XL POSITION** ADJUSTS FROM 1-1/2" TO 2" FROM INTERIOR CABINET WALL
- XL BRACKET IN STANDARD POSITION** ADJUSTS UP TO 1-3/8" FROM INTERIOR OF CABINET WALL

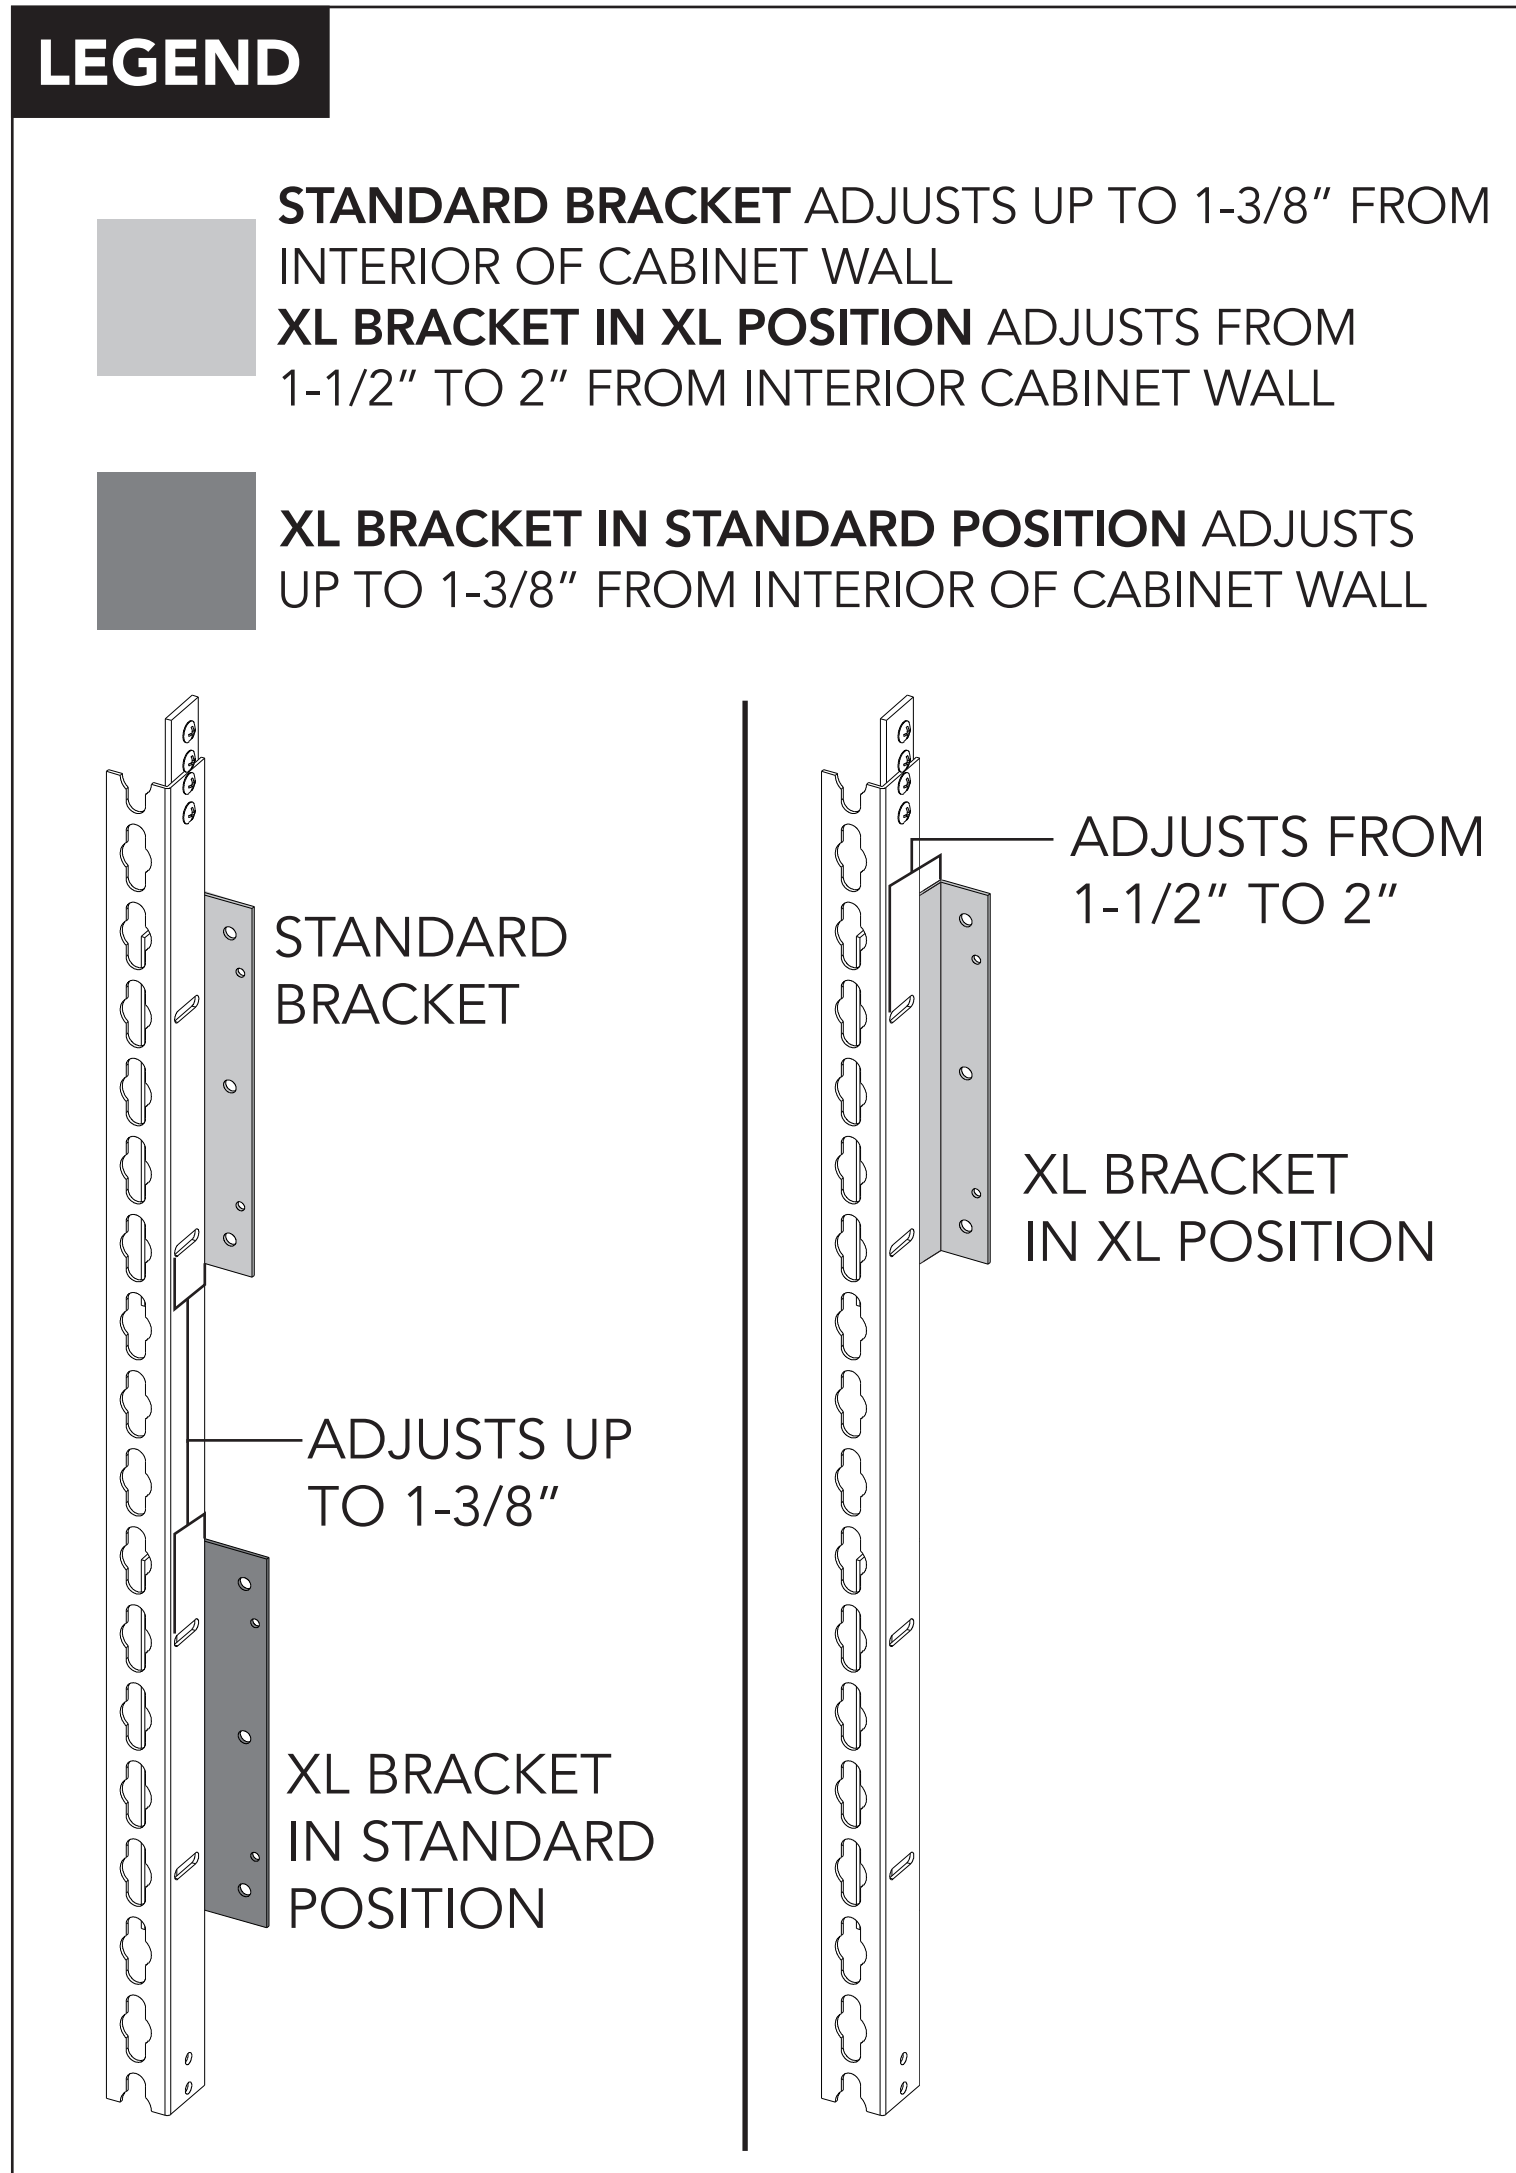

STANDARD BRACKET

ADJUSTS UP TO 1-3/8"

XL BRACKET IN STANDARD POSITION

ADJUSTS FROM 1-1/2" TO 2"

XL BRACKET IN XL POSITION

PLACE AT A MAXIMUM OF 2-3/8" FROM INSIDE OF CABINET'S FACE FRAME TO AVOID SLIDE OBSTRUCTING CABINET DOOR FROM CLOSING PROPERLY. FOR FRAMELESS CABINETS, PLACE AT A MAXIMUM OF 2-3/8" FROM BACK SIDE OF CLOSED CABINET DOOR.

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

2-3/8"

3-1/5"

**FRONT UPRIGHT**

ALIGN TO CABINET FLOOR BOTTOM

**REAR UPRIGHT**

