



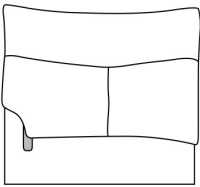
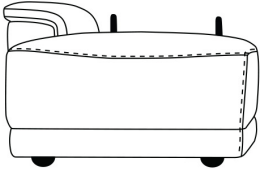
## Assembly Instruction

### LSF CHAISE



### ITEM NO.: 9509MGY-5L

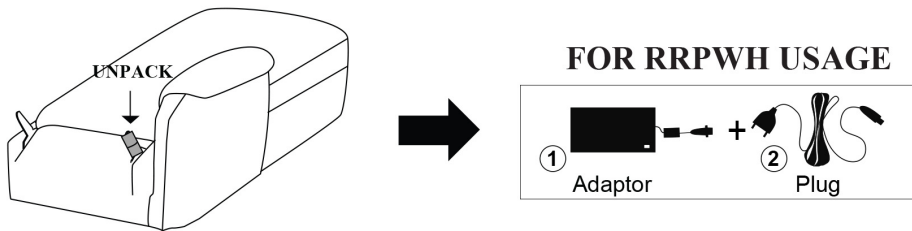
**NOTE:** Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

#### COMPONENT LIST (CHAIR)

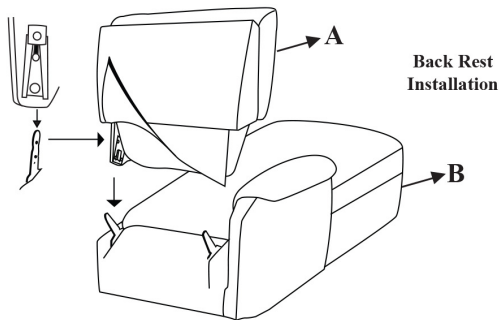
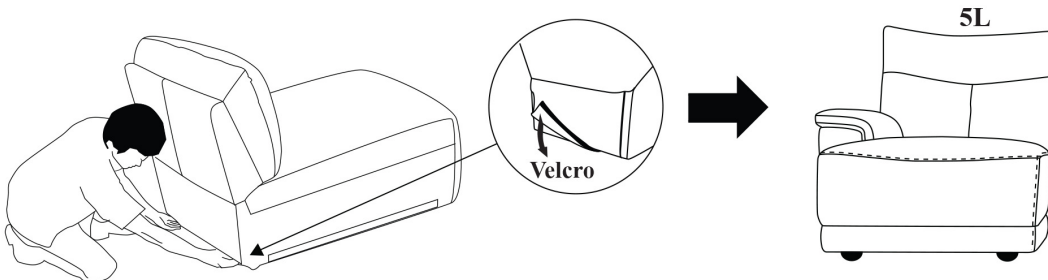

NO.	DRAWING	QTY	DESCRIPTION
<b>A</b>		<b>1 PC</b>	<b>BACK REST</b>
<b>B</b>		<b>1 PC</b>	<b>SEAT</b>

#### HARDWARE LIST (FOR RRPWH)


NO.	DRAWING	QTY	DESCRIPTION
<b>1</b>		<b>1 PC</b>	<b>ADAPTOR</b>
<b>2</b>		<b>1 PC</b>	<b>PLUG WITH WIRE</b>

**STEP#1****STEP#2**

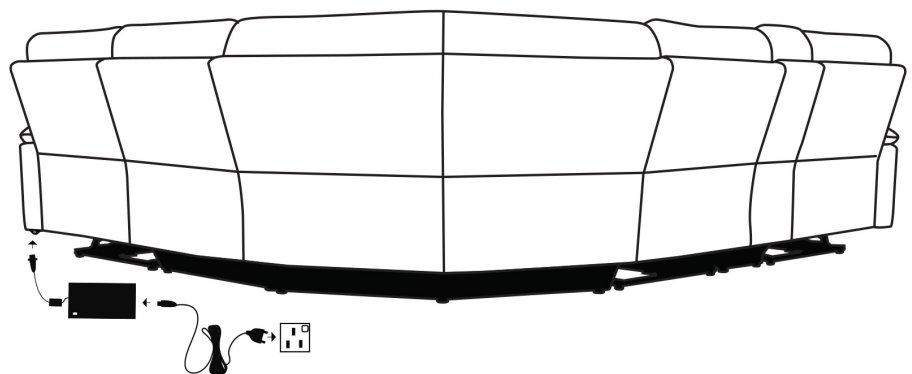
Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

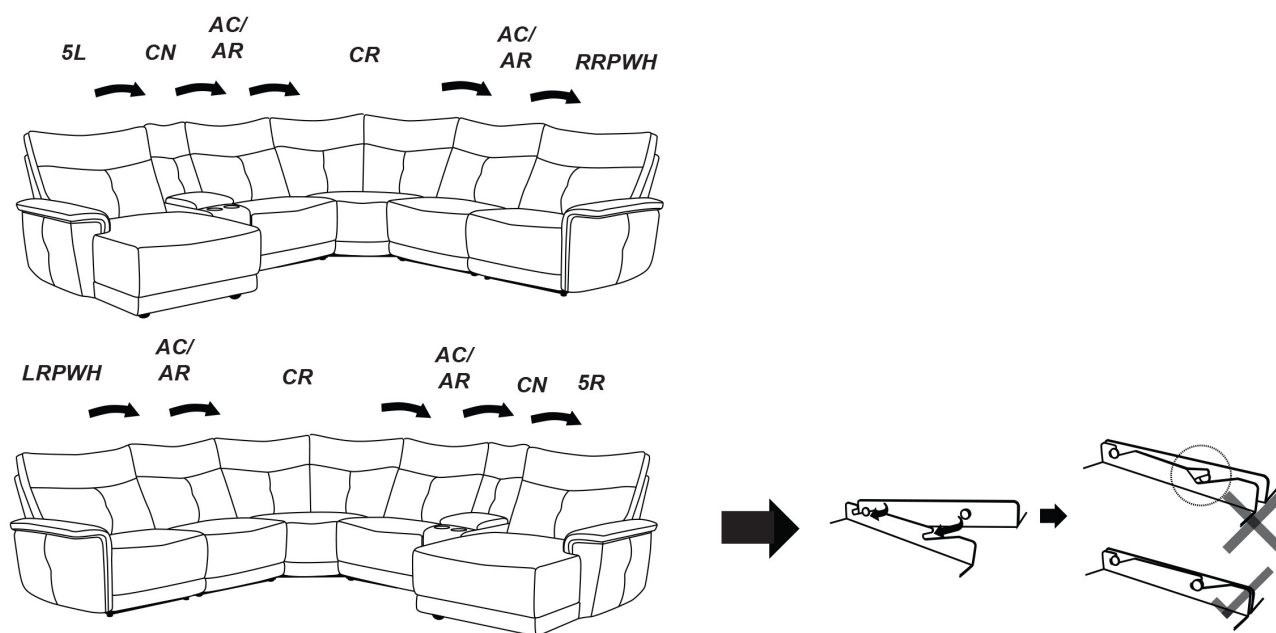
**STEP#3****STEP#4****REMARK:**

\*Adaptor set is packed in 5L for sectional combination with RRPWH.

**REMARK:**

\*Adaptor set and Y cable are packed in LRPWH for sectional combination with RRPWH.



**STEP#5****CARE INSTRUCTION FOR POLYESTER:**

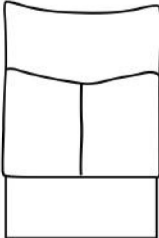

**In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure :**

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

**Assembly Instruction**  
**CONSOLE WITH STAINLESS**  
**STEEL CUPHOLDERS**  
**ITEM NO.: 9509MGY-CN**

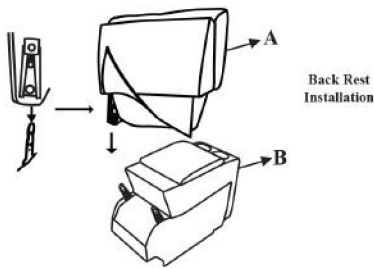
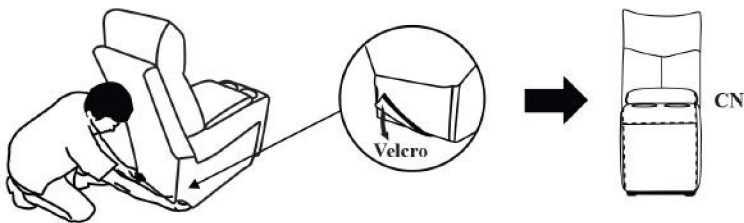
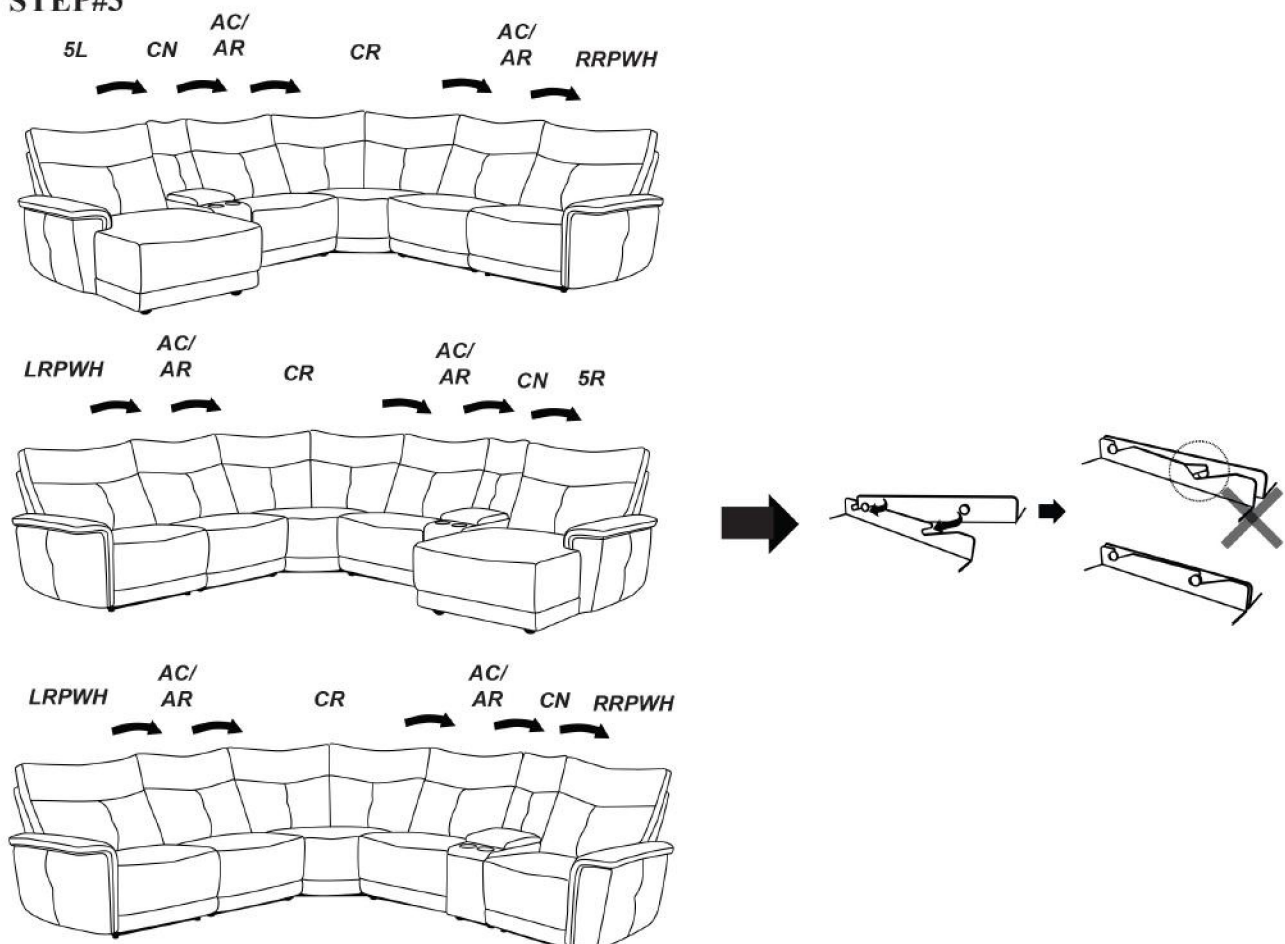
**NOTE:** Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

**COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
B		1 PC	CONSOLE

**STEP#1**

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

**STEP#2****STEP#3****CARE INSTRUCTION FOR POLYESTER**

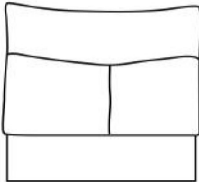
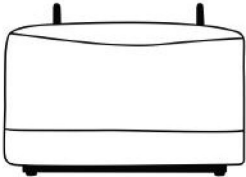
In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure :

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

**Assembly Instruction**  
**ARMLESS CHAIR**  
**ITEM NO.: 9509MGY-AC**

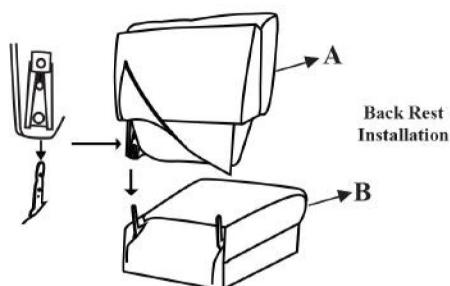
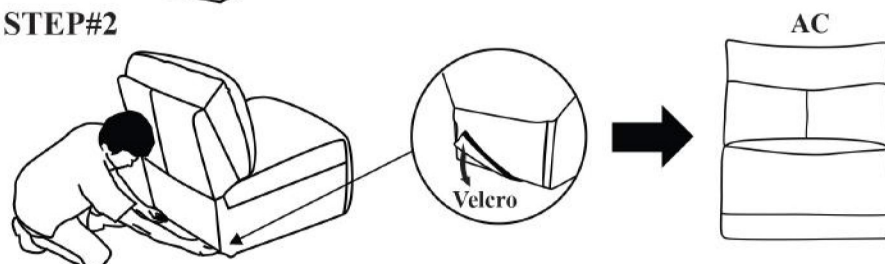
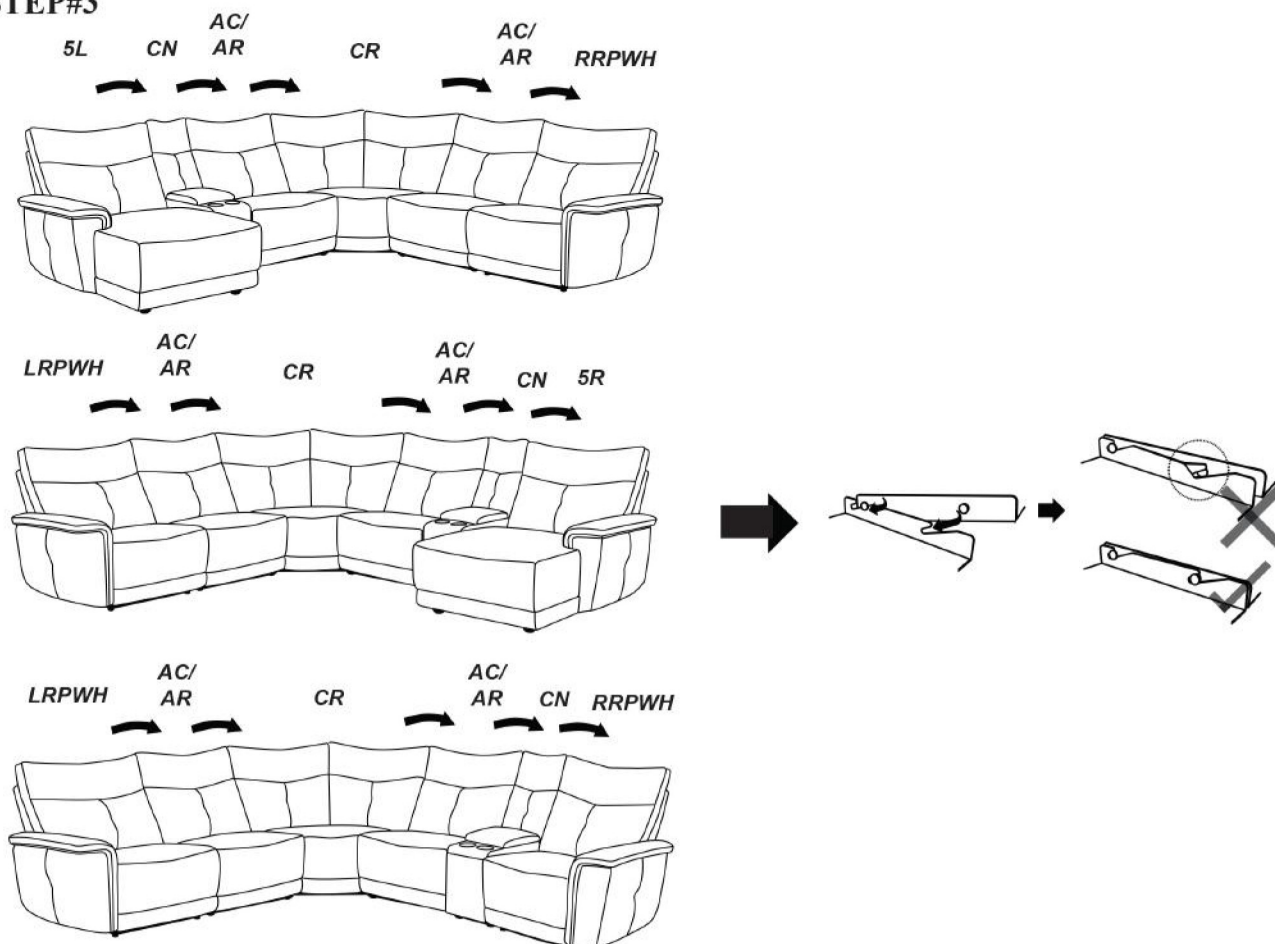
**NOTE:** Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

**COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
<b>A</b>		<b>1 PC</b>	<b>BACK REST</b>
<b>B</b>		<b>1 PC</b>	<b>SEAT</b>

**STEP#1**

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

**STEP#2****STEP#3****CARE INSTRUCTION FOR POLYESTER:**

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure :

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

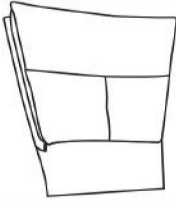
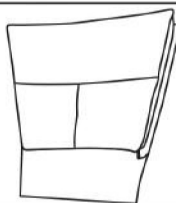
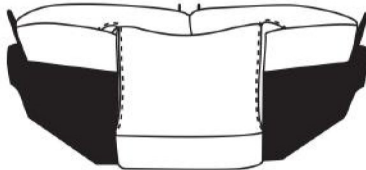
## Assembly Instruction

### CORNER SEAT




### ITEM NO.: 9509MGY-CR

**NOTE:** Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

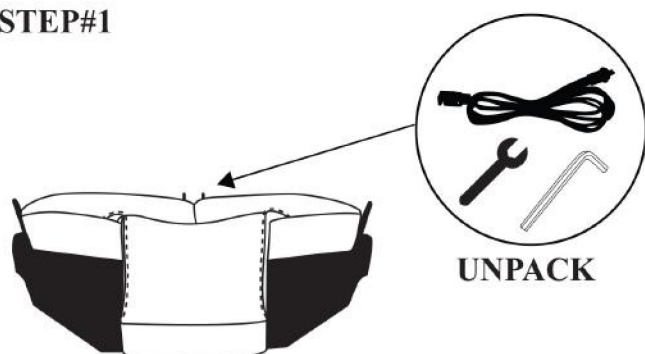
#### COMPONENT LIST (CHAIR)

NO.	DRAWING	QTY	DESCRIPTION
<b>A</b>		<b>1 PC</b>	<b>LSF CORNER BACK REST</b>
<b>B</b>		<b>1 PC</b>	<b>RSF CORNER BACK REST</b>
<b>C</b>		<b>1 PC</b>	<b>CORNER SEAT</b>

#### HARDWARE LIST

NO.	DRAWING	QTY	DESCRIPTION
<b>1</b>		<b>1 PC</b>	<b>EXTENSION CORD</b>
<b>2</b>		<b>1 PC</b>	<b>WRENCH</b>
<b>3</b>		<b>1 PC</b>	<b>ALLEN KEY</b>

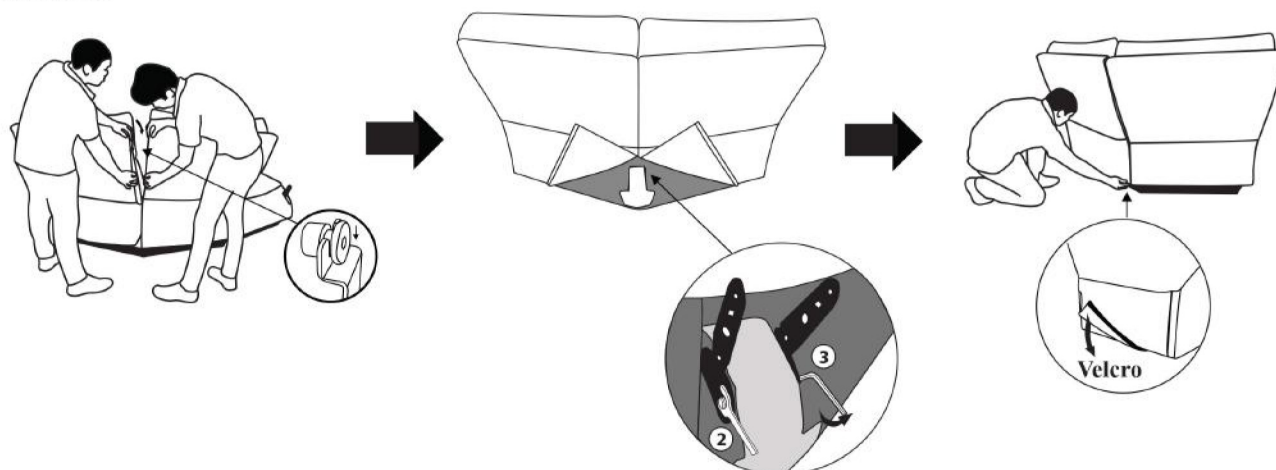
## STEP#1



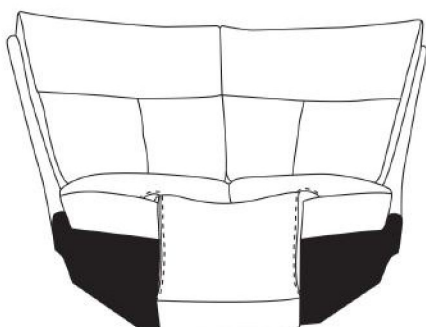
## STEP#2




## STEP#3




## STEP#4

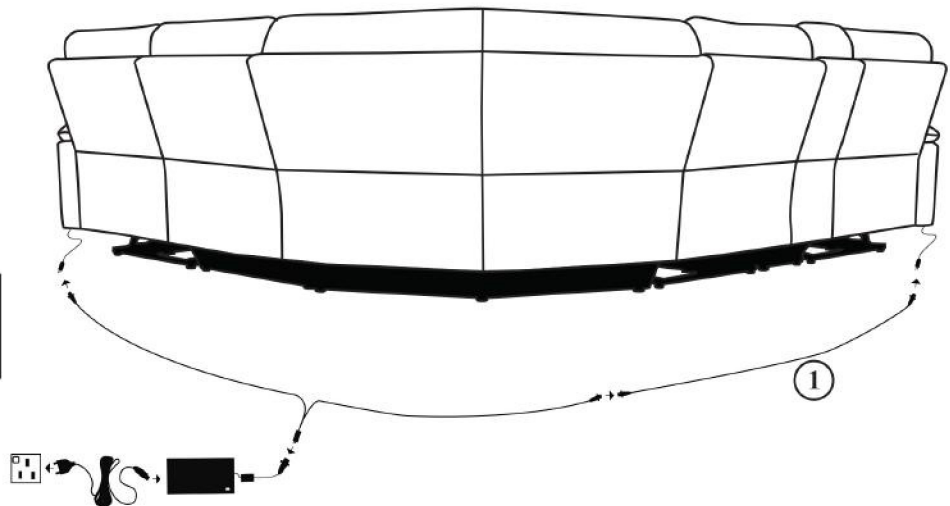
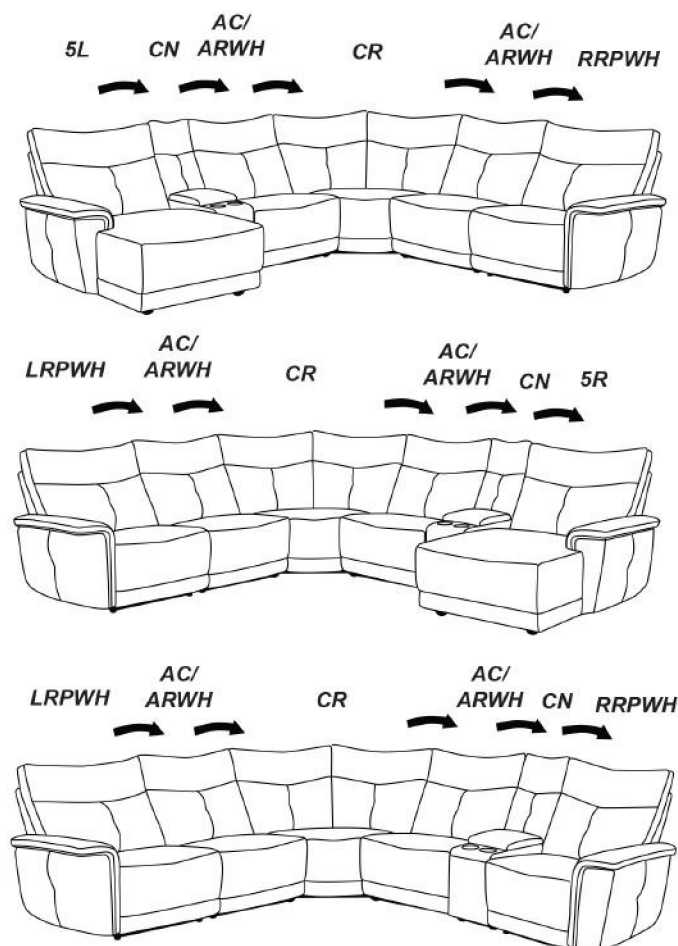


**STEP#5****REMARK:**

\*Adaptor set is packed in 5L for sectional combination with RRPWH.

**REMARK:**

\*Adaptor set and Y cable are packed in LRPWH for sectional combination with RRPWH.

**STEP#6****CARE INSTRUCTION FOR POLYESTER:**

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure :

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

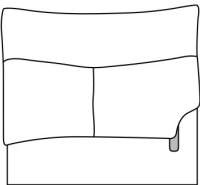
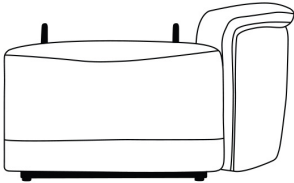
**PLEASE KEEP ASSEMBLY INSTRUCTION FOR FUTURE REFERENCE**



**Assembly Instruction**  
**RSF RECLINING CHAIR**  
**ITEM NO.: 9509MGY-RR**

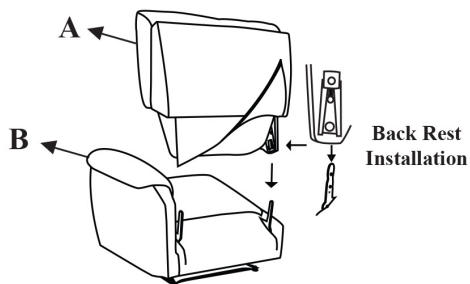
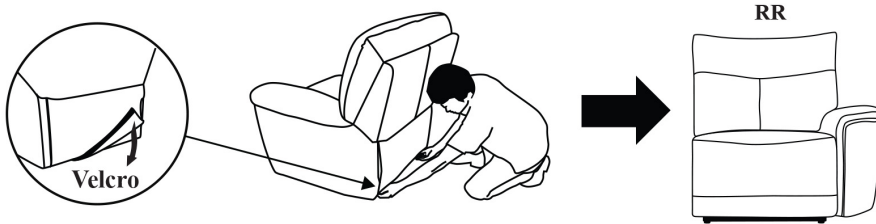
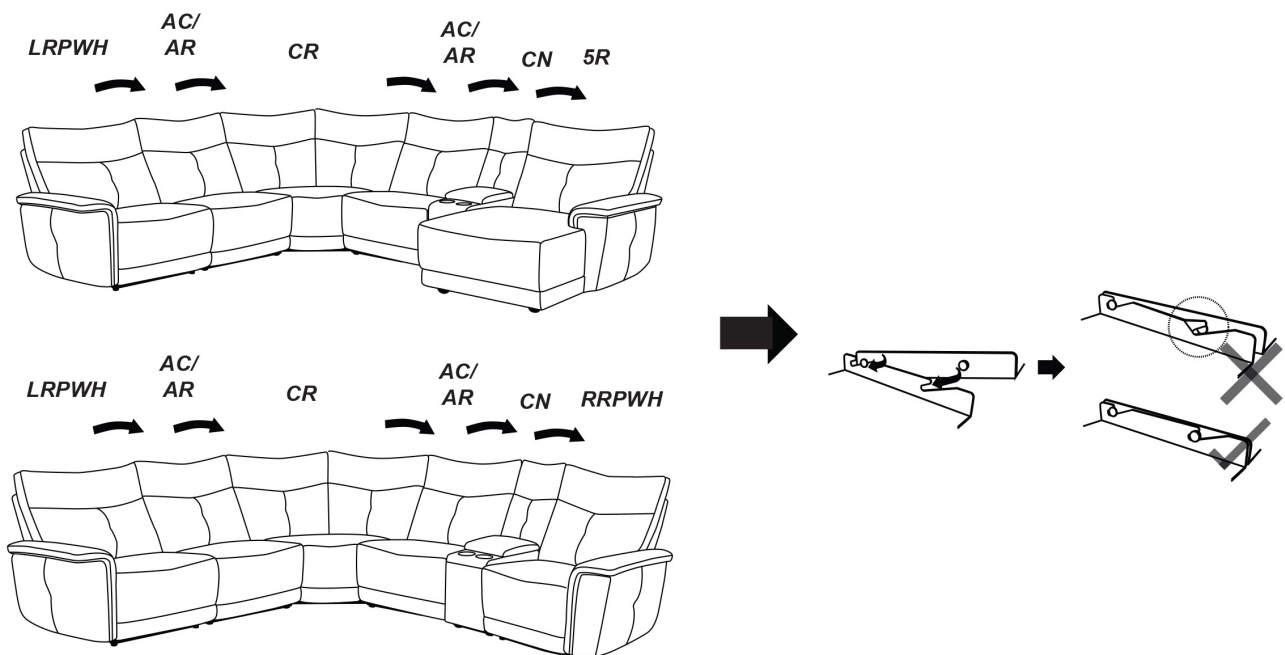
**NOTE:** Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

**COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	RSF BACK REST
B		1 PC	RSF SEAT

**STEP#1**

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

**STEP#2****STEP#3****STEP#4****CARE INSTRUCTION FOR POLYESTER:**

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure :

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.