






ASSEMBLY INSTRUCTION

VANITY CABINET AC-7500GW-59

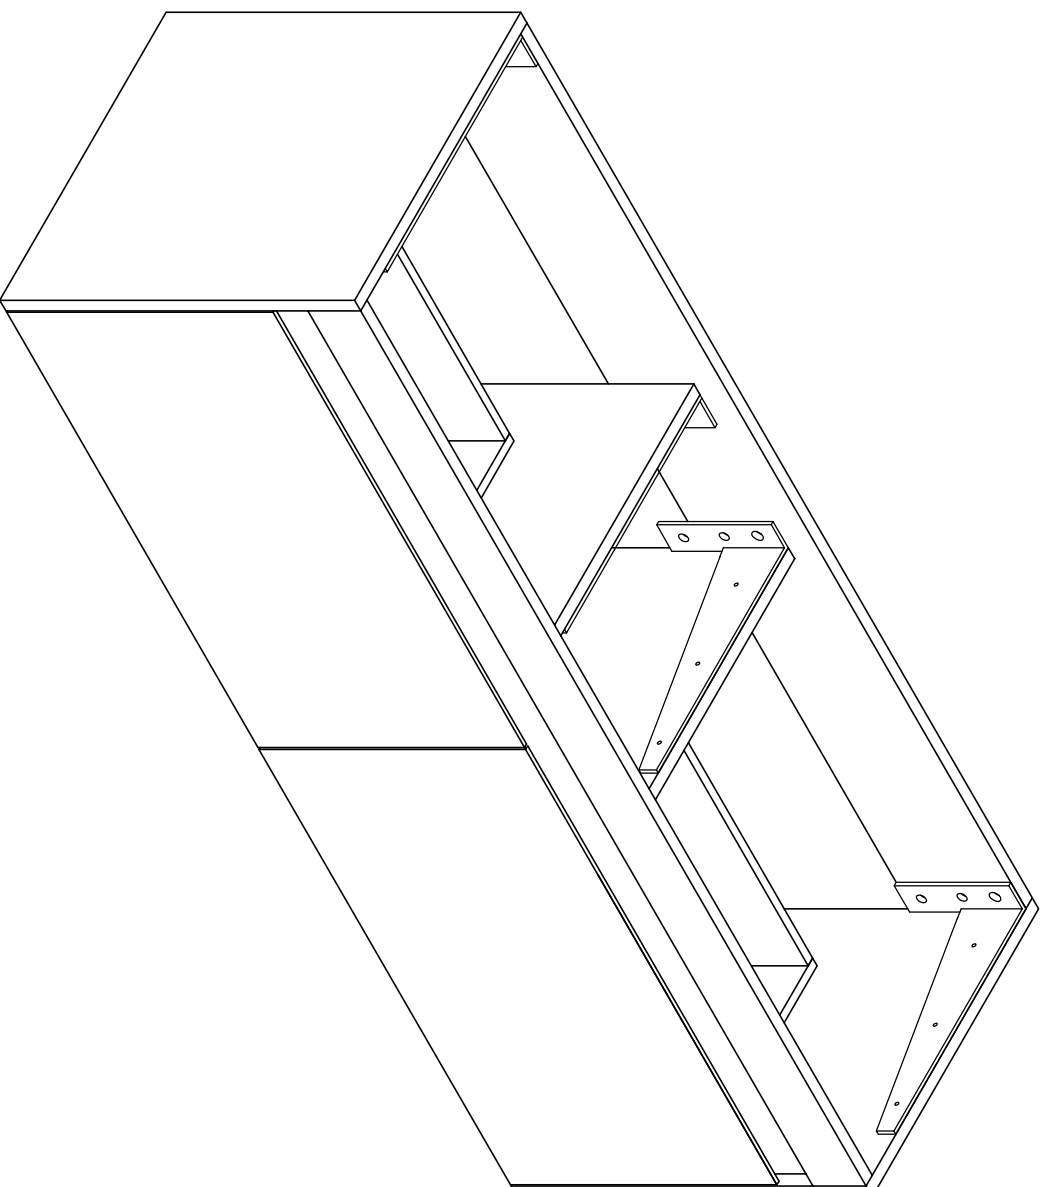

STEP 1


NEED TO FIND STUD WALL
TO BOLT VANITY

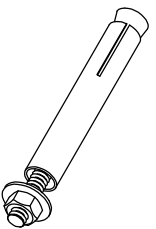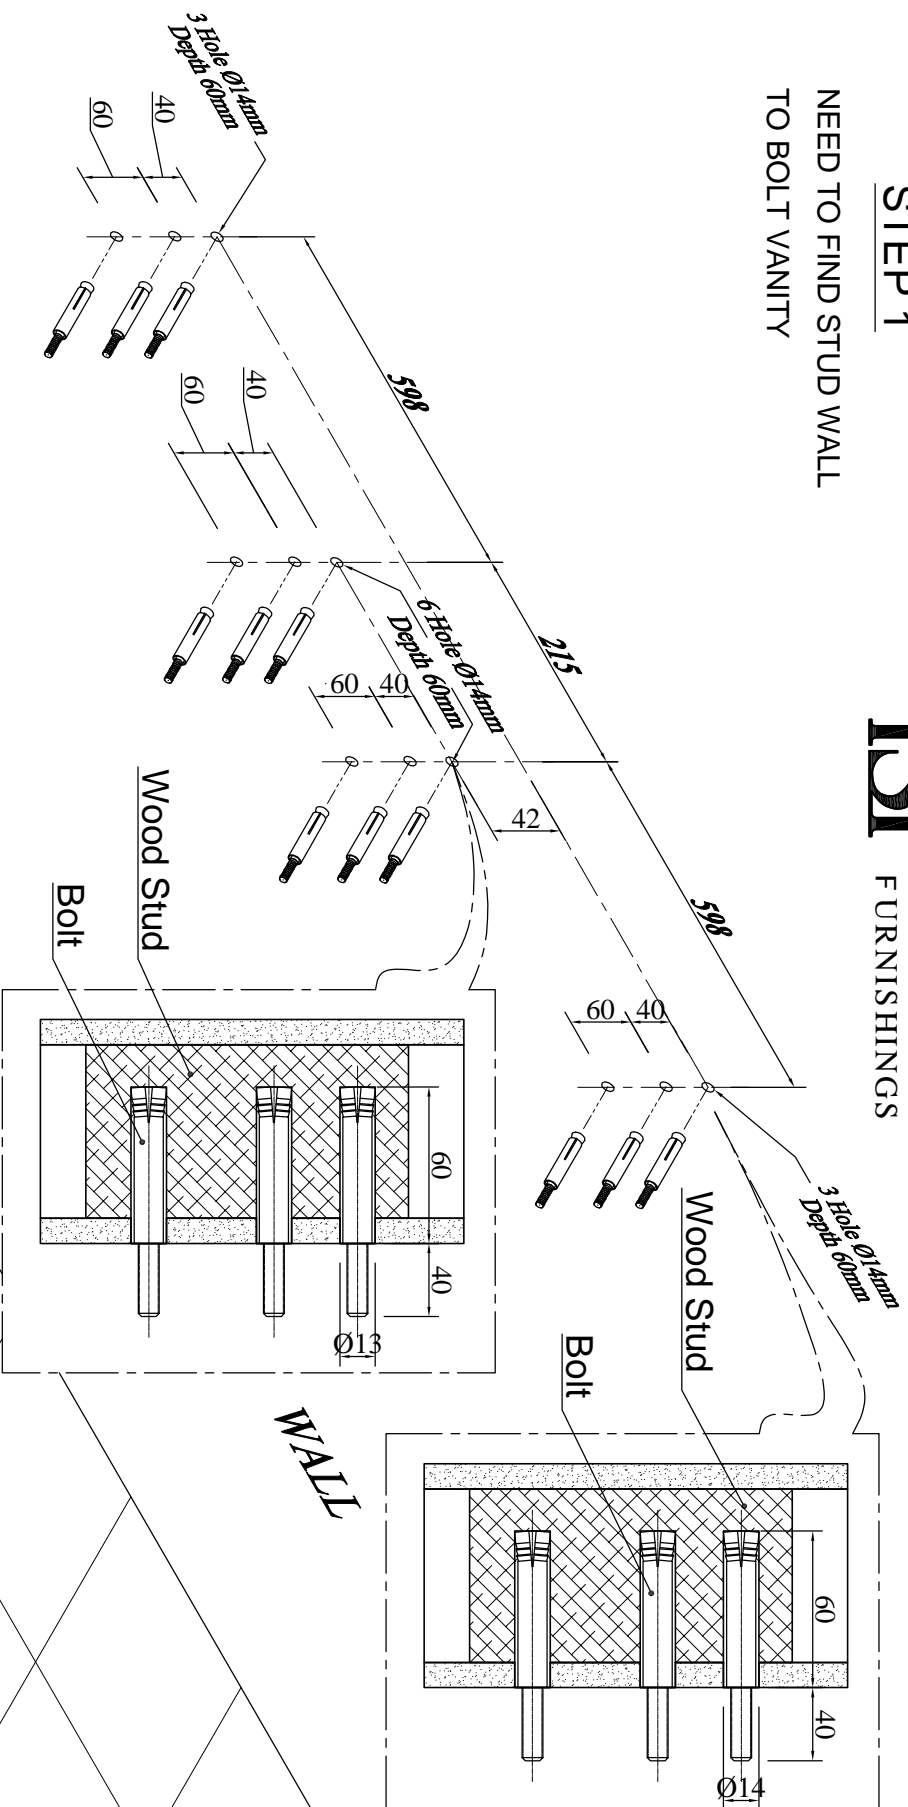


A x 12

STEP 2

SI STUFURHOME
FURNISHINGS

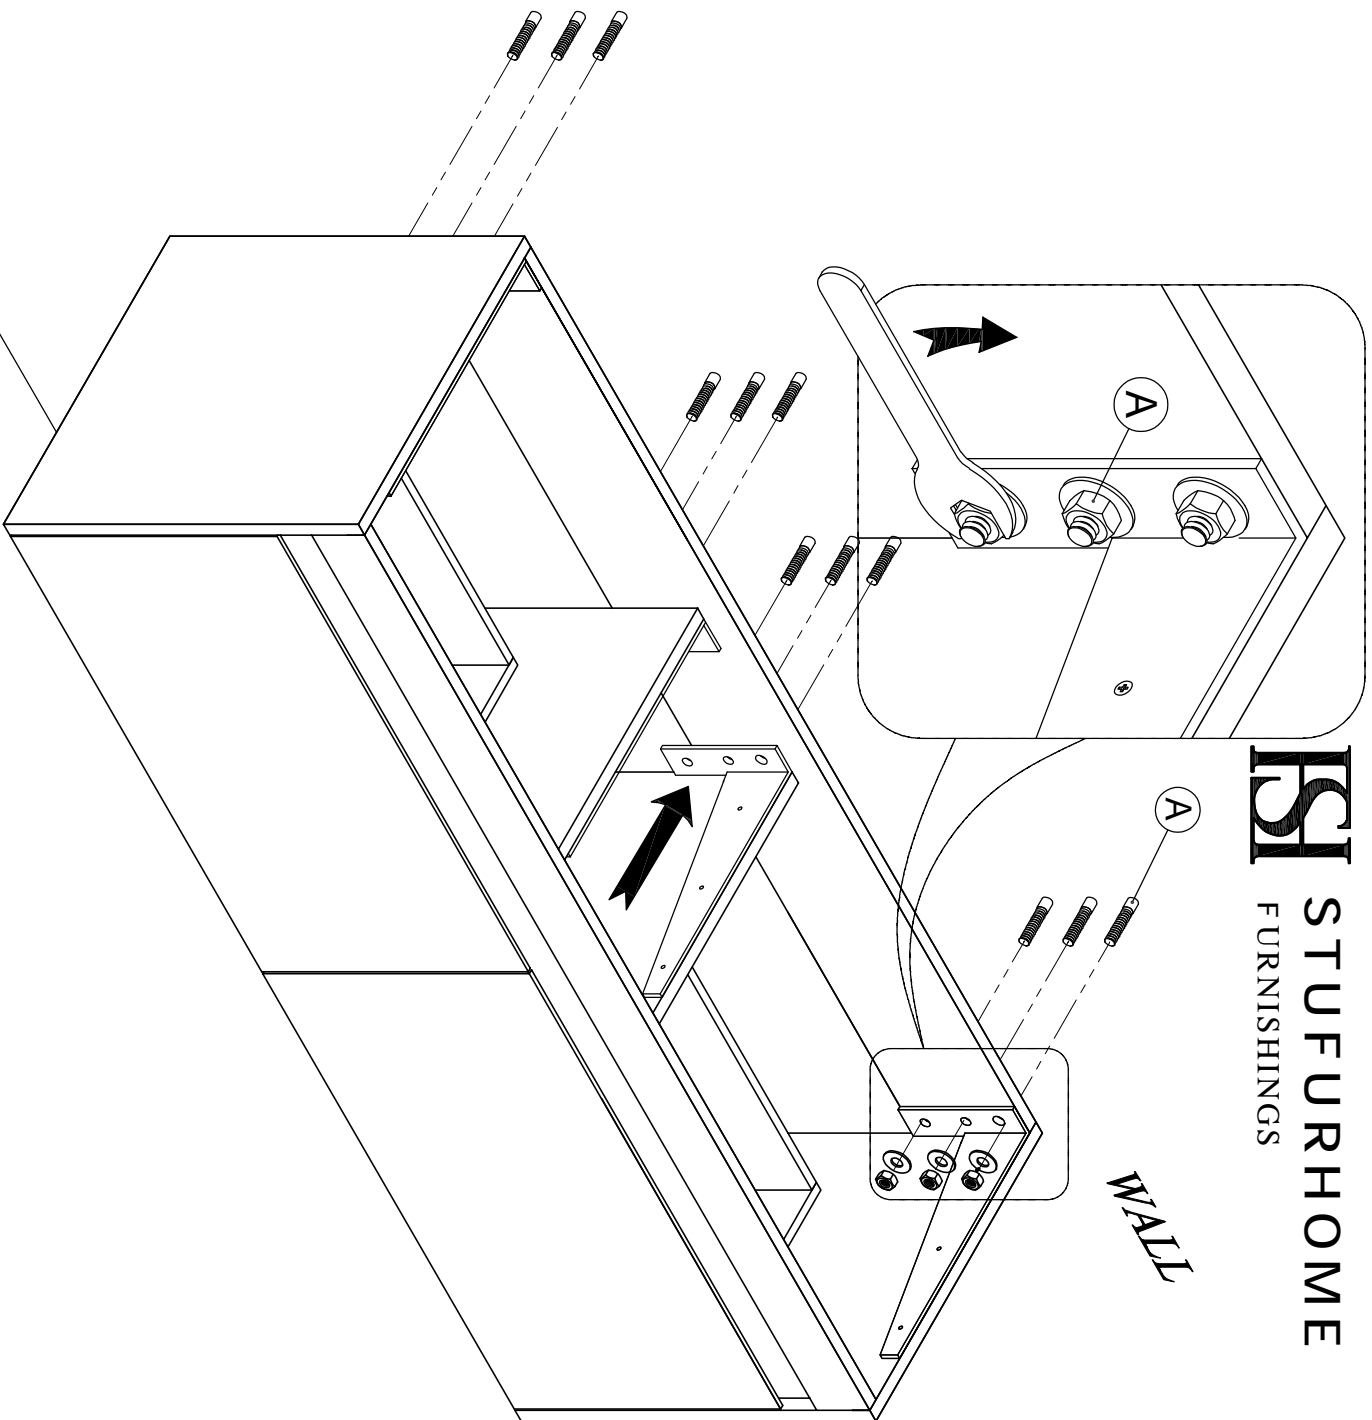

STEP 3: CAULK (SEAL) THE TOP
TO THE VANITY BASE

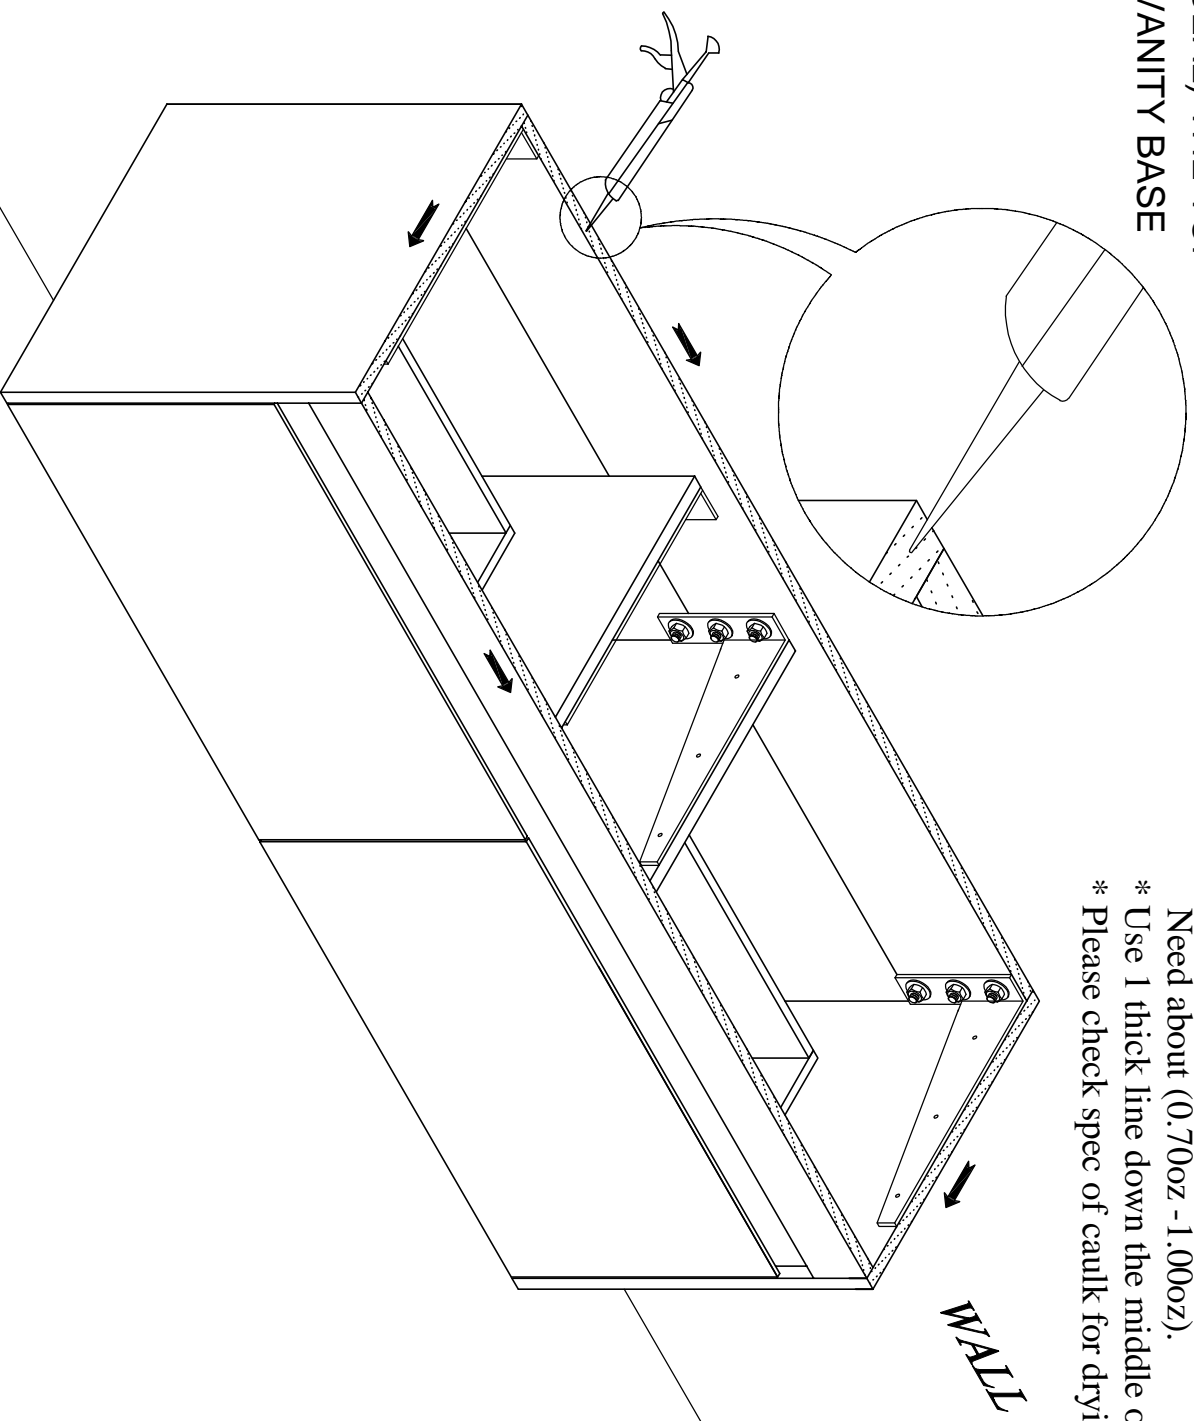

- * Caulk should be used around the cabinet.
Need about (0.70oz - 1.00oz).
- * Use 1 thick line down the middle of each piece.
- * Please check spec of caulk for drying time.

STEP 4

