





HPIC11 & HPIC18

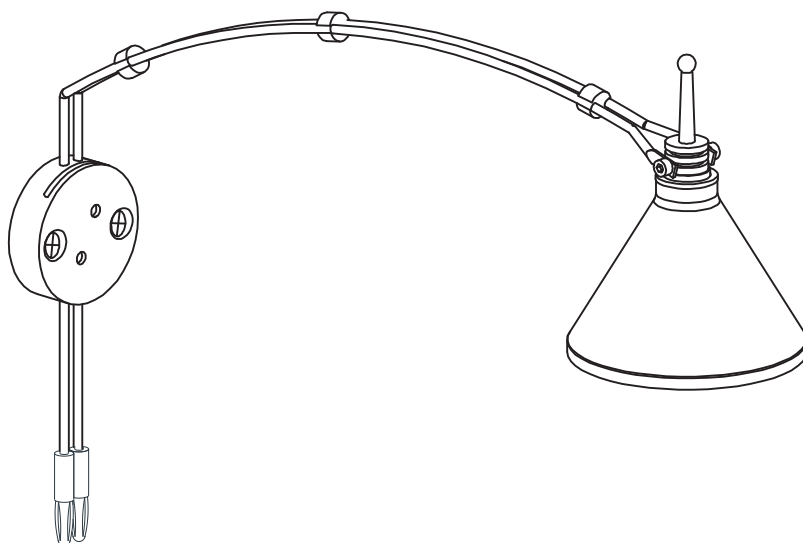


①

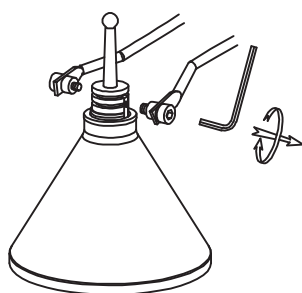


Screws must always be tight.
Loose screws will cause arching
and melting of socket.
Les vis doivent demeurer serrées.
Des vis desserrées causeront la
déformation et la fonte de la douille.

BULB / AMPOULE
50W Max MR16/CG HPIC18
20W Max MR16/CG HPIC11
(included / inclus)
C/w covered glass.
Vient avec une vitre de protection.


②

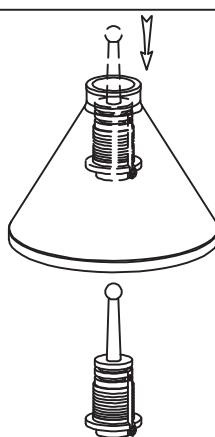


③

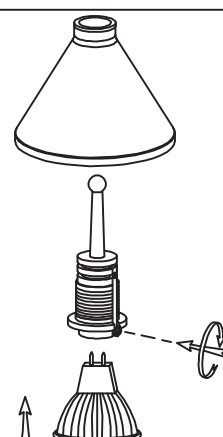

④

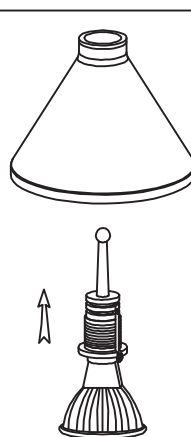

⑤



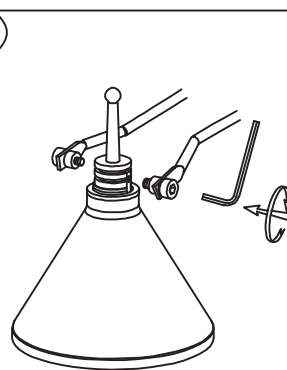




HPIC11 & HPIC18

Hardwire Mounting Instructions

- 1) Connect the 120V leads from the transformer to your power leads in the electrical box.
- 2) Place the transformer in the electrical box.
- 3) Mount the crossbar to the electrical box.
- 4) Connect the 12V leads from the transformer to the leads coming out of the canopy.
- 5) Mount the canopy to the crossbar with the 1/4-20x3/4" screw supplied.
- 6) Connect leads coming out of the canopy to the banana connector on the mounted picture light.

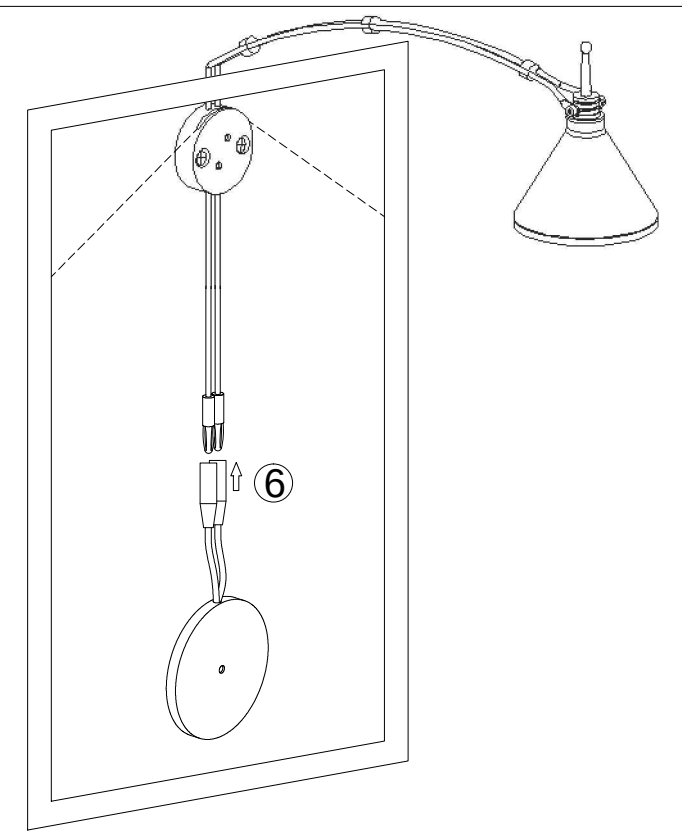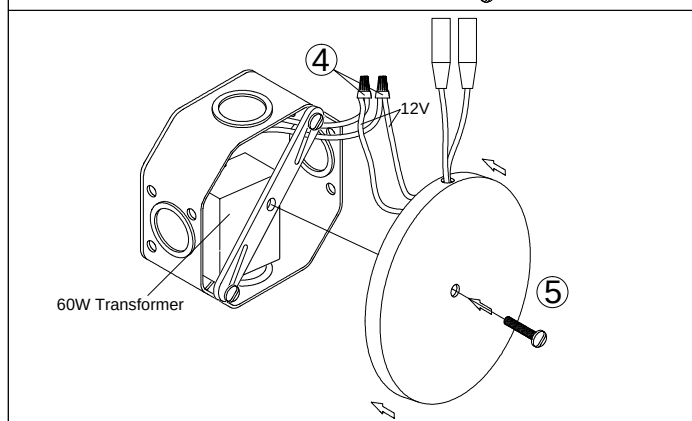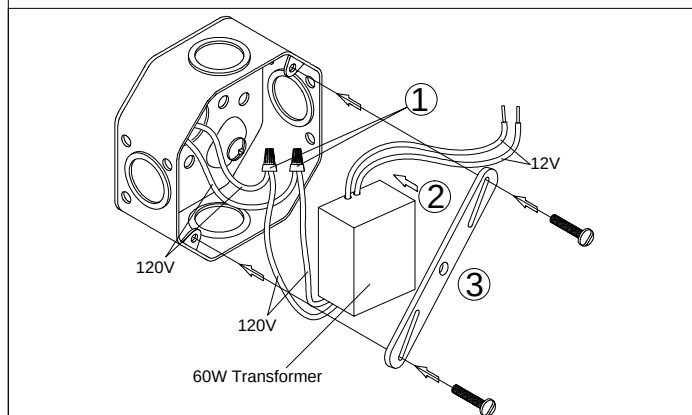

1401 Courtney Park Drive East, Mississauga, Ontario, Canada L5T 2E4
Tel: (905) 564-1262 Fax: (905) 564-1299 Email: dainolite@dainolite.ca Web: www.dainolite.ca