





WE-6706 Assembly Instructions



SIZE:120X29X40 cm
N.W:20kg

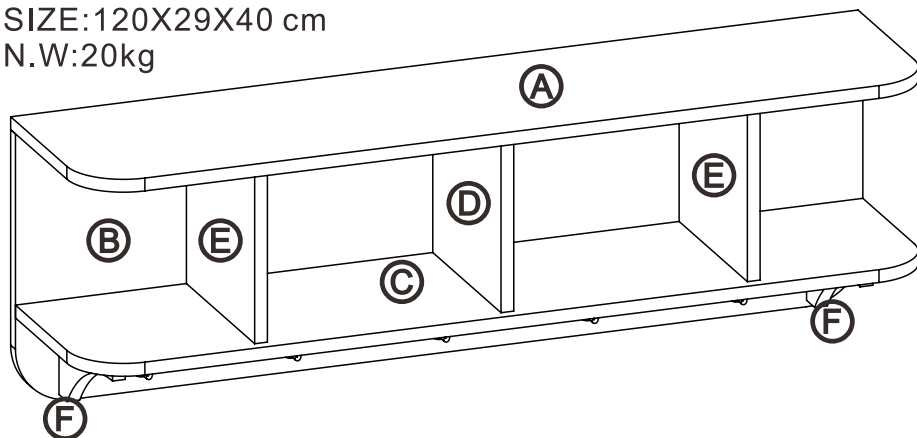

STEP1:





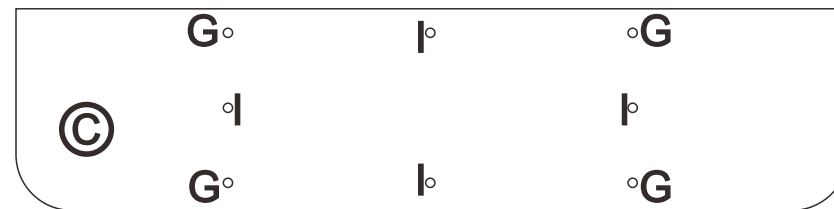


STEP2:

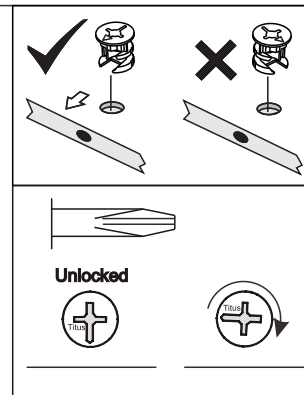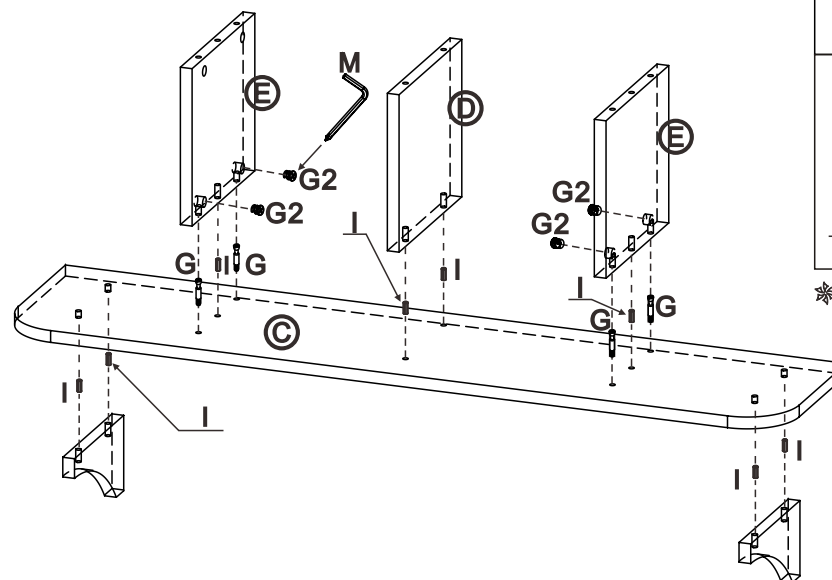


*Notes on the use of G2 parts


Item / Size / Quantity

(A)  290X1200mm	1	(E)  382X1200mm	2	(F)  272X1200mm	2
(B)  382X1200mm	1	G2 	H 		
(C)  272X1200mm	1	16		5	
(D) 	1	I 	J 	K 	L 
		M 			
		24	8	4	10
					1


STEP3:

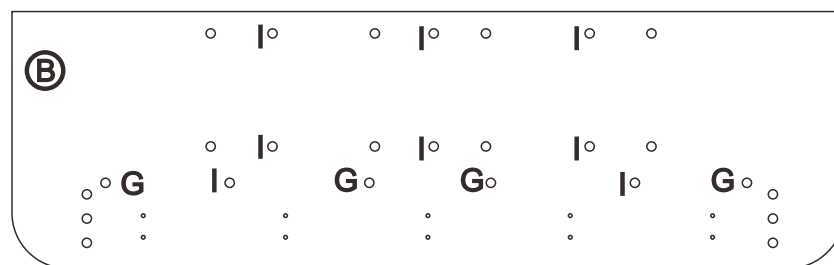


STEP4:

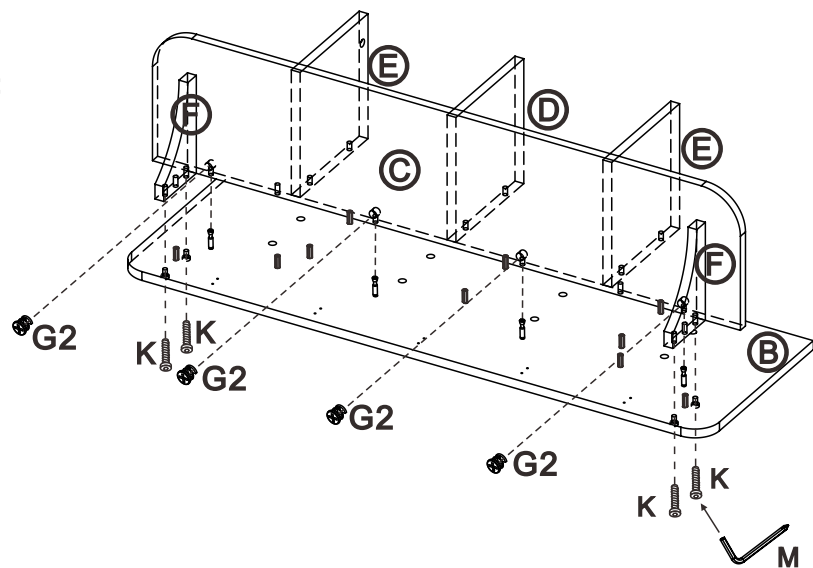


STEP5:

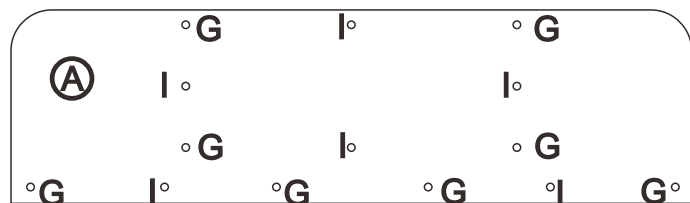

STEP6:

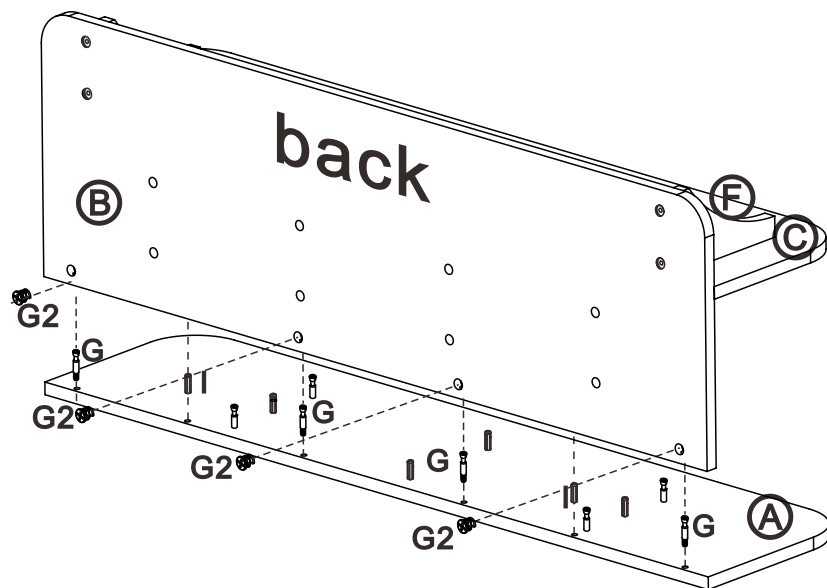

STEP7:

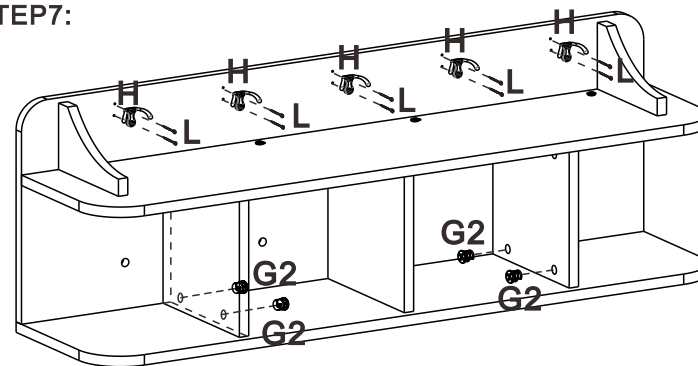

STEP8:

Use a spirit level to measure whether the pre-fixed position is horizontal. And use J parts to lock the product and fix it on the wall

*It is easier to use power tools in this step

