



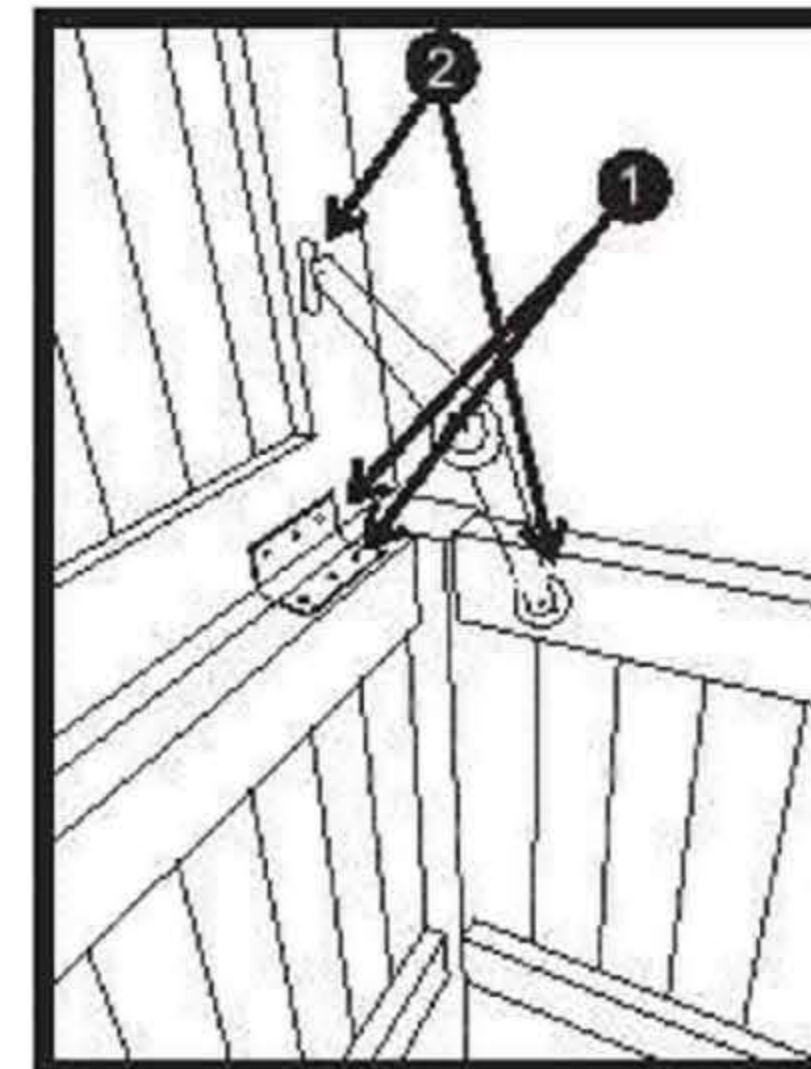

# Assembly Instruction

INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US AT 866-814-8325

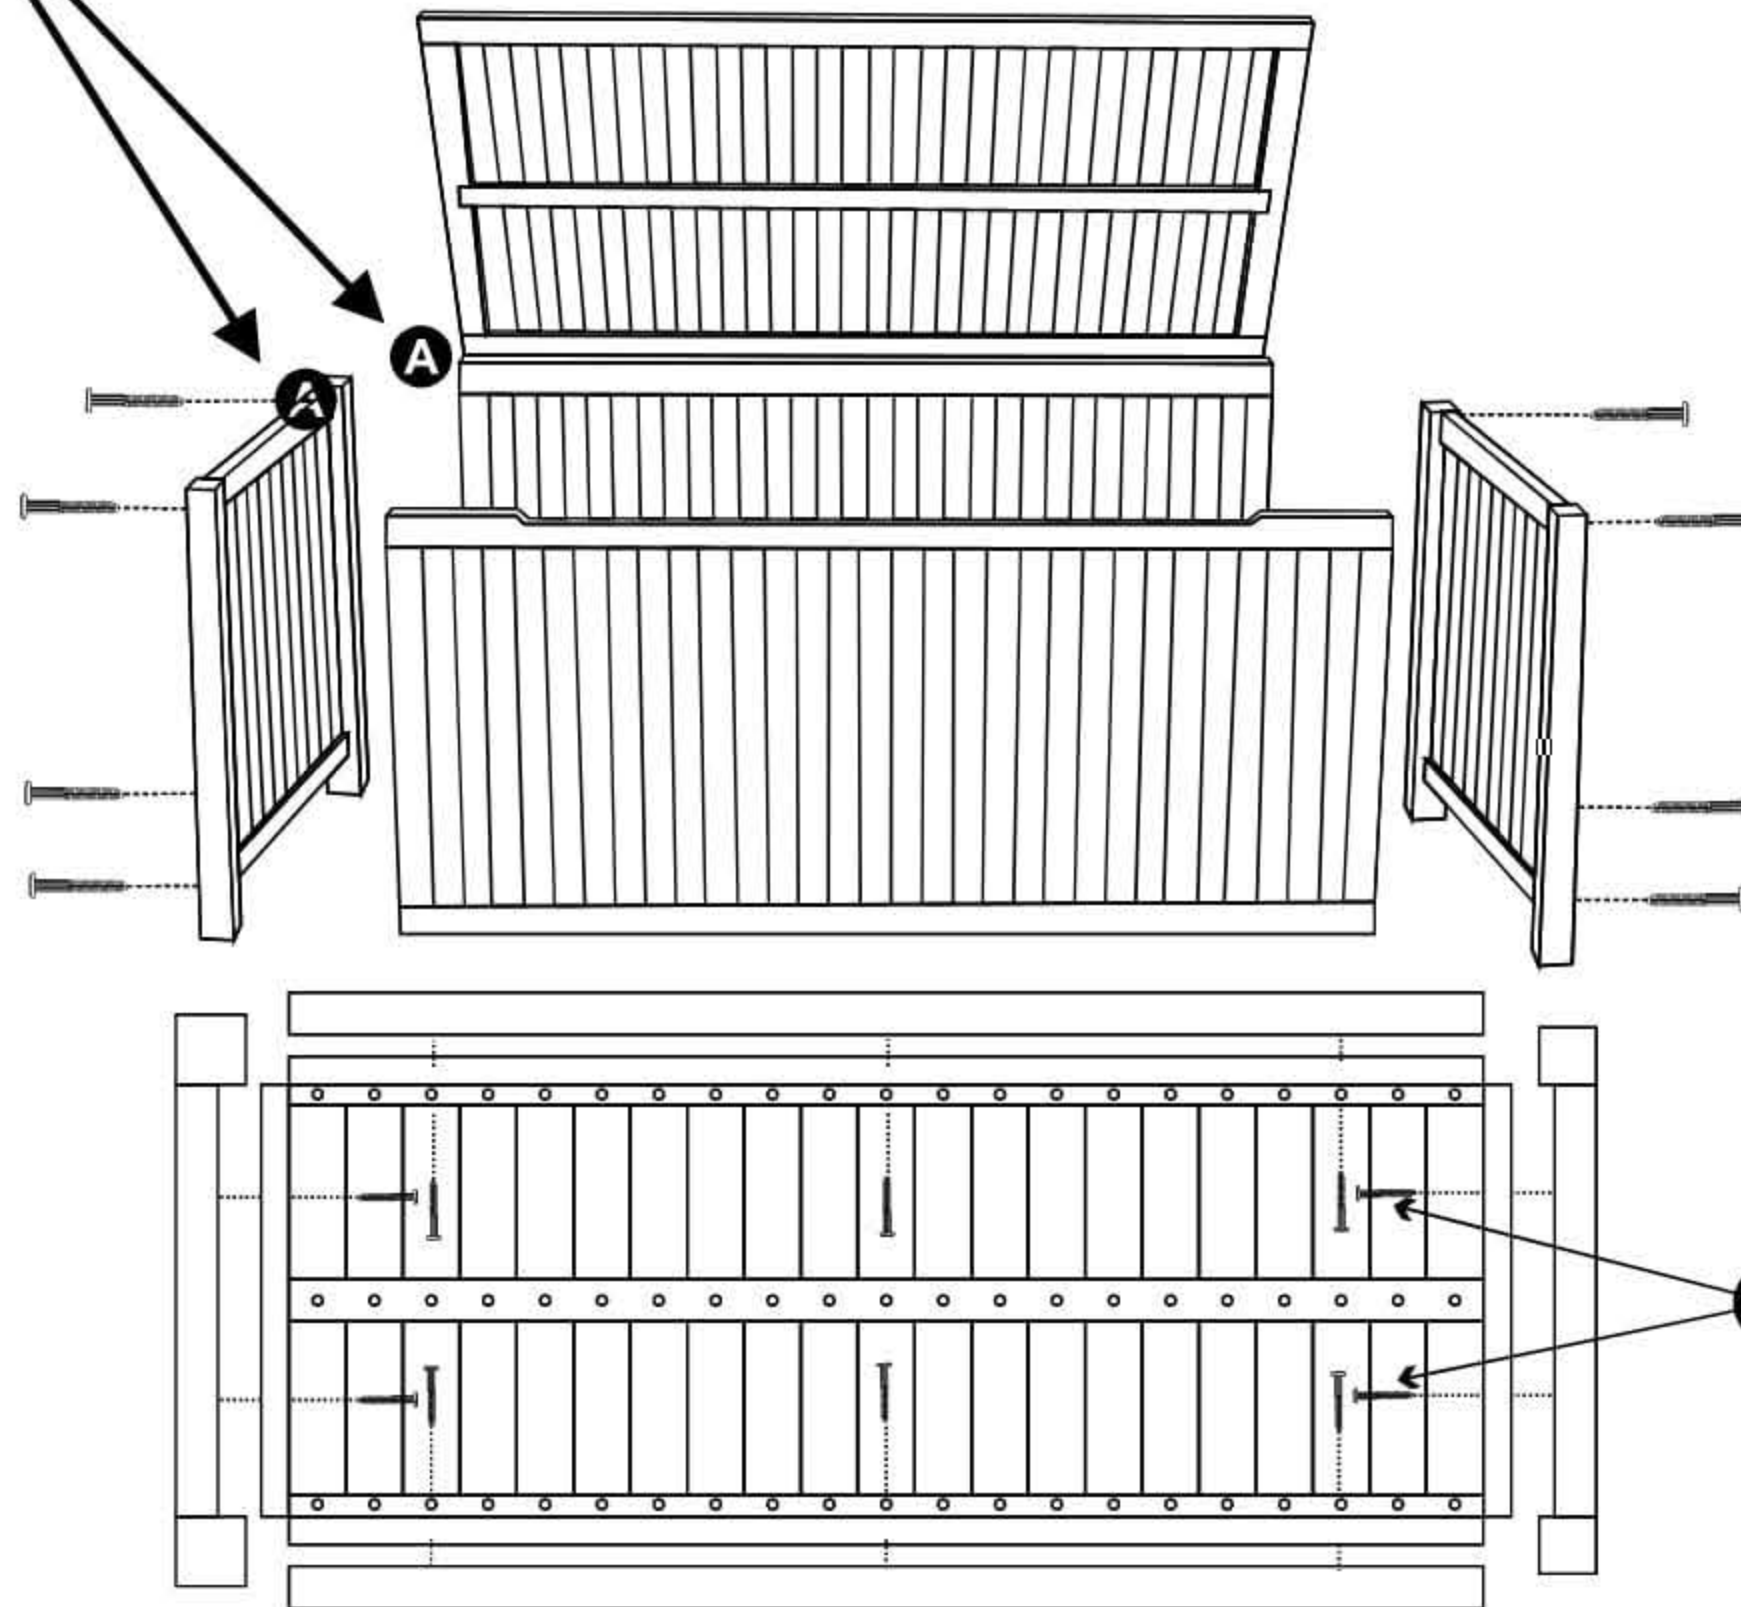


**Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly**

Code

# HJ 166

## Hardware

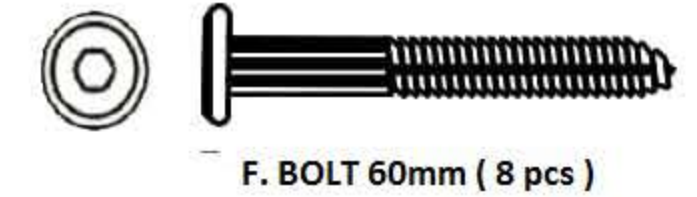

F. BOLT 60mm ( 8 pcs )



SCREW 25mm ( 18 pcs )




SCREW 15mm ( 10 pcs )



SCREW 30mm ( 8 pcs )

## Tool

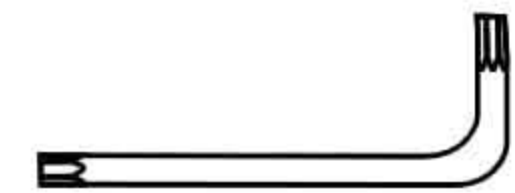

Socket Wrench 4m/m Ht

## Total Section

# 6 Section