


Central Brass Company, Inc.
3325 S. Garfield Ave.
Commerce, CA 90040
(800) 321-8630
www.centralbrass.com

INSTALLATION

Tools:

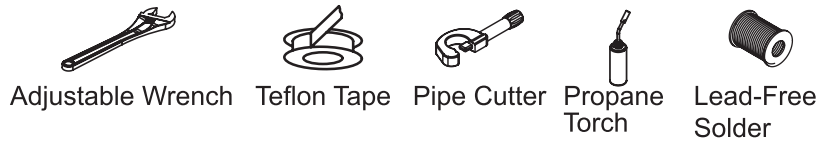

Model Number: 1240, 1246

Warnings and Notes:

Check with local plumbing code requirements before installation.


This product should be installed by a local listed plumber.

Do not use plumbers putty on threads.




Installation Steps:


Shower Valve

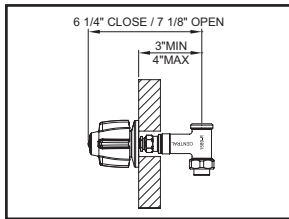


(1) Determine the location of the valve to be installed for new installation. For existing installation please look at the installation drawing and ensure there is enough room to install the valve.

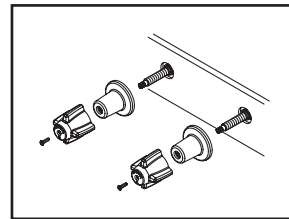


(5) Thread escutcheon into nipple, attach and secure handle with handle screw.

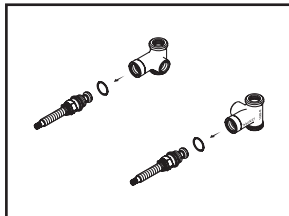

(2) For CXC installation: Remove stem out of the valve body before soldering inlet connections to prevent parts damage.

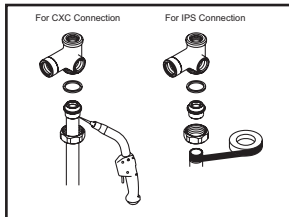

(3) Slide coupling through the inlet pipe,
For CXC installation: Solder inlet copper pipe to union.
For IPS installation: Apply Teflon tape on the thread end of inlet pipe, tighten union to the inlet pipe.
Place washer in-between union and valve inlet, tighten coupling to the valve body with the help of a wrench.

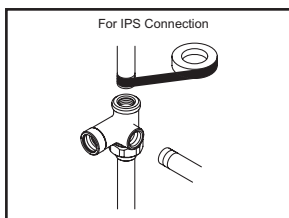

(4) For model 1240 connect pipe between valve single port to center outlet. For model 1246 connect pipe between valve to center outlet and riser pipe to by-pass port.