


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2032TB

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1. CAREFULLY UNPACK AND LAY OUT THE PARTS AS SHOWN IN ILLUSTRATION.
2. SCREW LAMP BODY (B) ONTO BASE (A).
3. PUT REFLECTOR (E), SHADE (D) ONTO SOCKET ON LAMP BODY (B), THEN TIGHTEN IT WITH RING (F).
4. LOOSEN SCREW (C) A LITTLE, ADJUST THE LAMP TO A SUITABLE HEIGHT (PLEASE GENTLY PULL THE CORD WHEN LOWER THE LAMP HEIGHT), THEN TIGHTEN SCREW (C).
5. STICK THE PAD (G) TO THE BOTTOM OF THE BASE (A)
6. INSTALL RECOMMENDED BULB (NOT INCLUDED IN THIS PACKING).
7. INSERT THE POLARIZED PLUG INTO AN OUTLET.

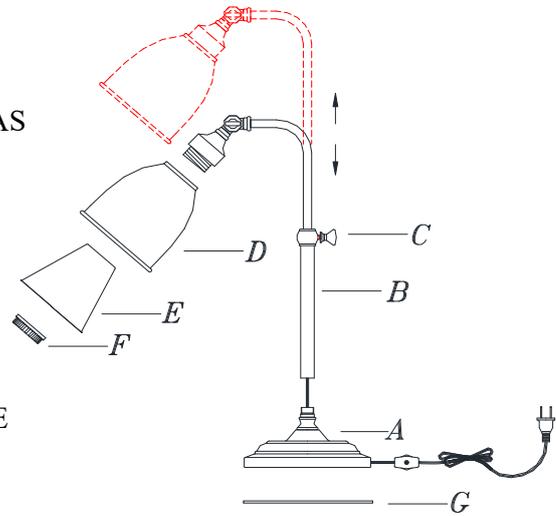

TURN ON THE SWITCH AND ENJOY YOUR LAMP!!!

**Use 60W Wattage type A bulb
(bulb not included)**

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.