

Maykke™

www.maykke.com

Installation, Care Guide and Warranty



Mirror

YSA1021801
YSA7036002
YSA7824001

YSA1041801
YSA7224001
YSA7824003

YSA7024001
YSA7724001
YSA7824004

YSA7036001
YSA7724002
YSA7824005

NOTICE: Do not change or modify the product in any way. Doing so may compromise the products structural integrity and will void the warranty.

NOTICE: Installation instructions must be followed. Any diversions from the installations instructions may risk property damage and will void the warranty.

NOTICE: When moving your vanity be sure to lift, never slide or pull, doing so may result in damage to the product.

IMPORTANT:

Observe all state and local building codes.

PRE-INSTALLATION


Tools Required



Safety goggles




Phillips screwdriver

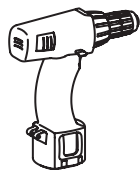


Drill

Hardware Included



AA

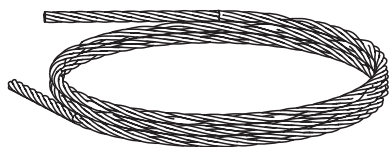


BB

Part	Description	Quantity
AA	Anchor / Wood screw	2
BB	Metal wire	1

PRE-INSTALLATION (continued)

Package Contents

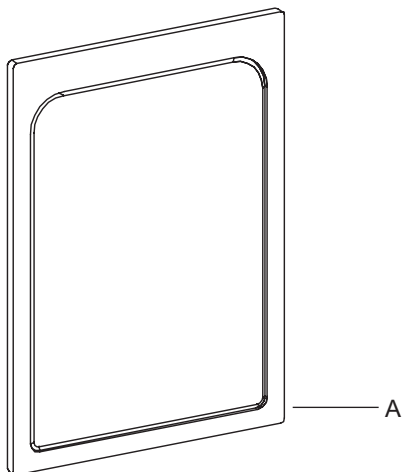


Part	Description	Quantity
A	Mirror	1

INSTALLATION

1 Measuring dimensions (see fig 1)

- ❑ Determine the ideal location for your new vanity mirror.
- ❑ Usually the mirror should be a minimum of 1 in. above the faucet.
- ❑ Lay the mirror (A) face down on a towel to prevent scratches to the glass or wood frame.
- ❑ Measure the length and width of your mirror (A). Record the measurements.

Fig 1

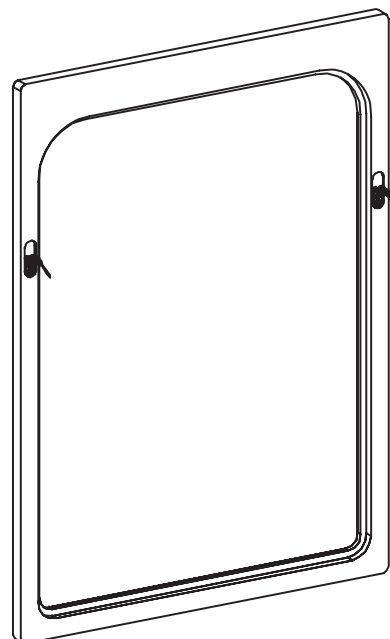


INSTALLATION (continued)

2 Positioning the mirror (see fig 2)

- Place the mirror (A) into the ideal position and mark the corners from the top left and bottom right of the mirror (A).
- Make sure the mirror (A) is centered to the vanity.


Fig 2

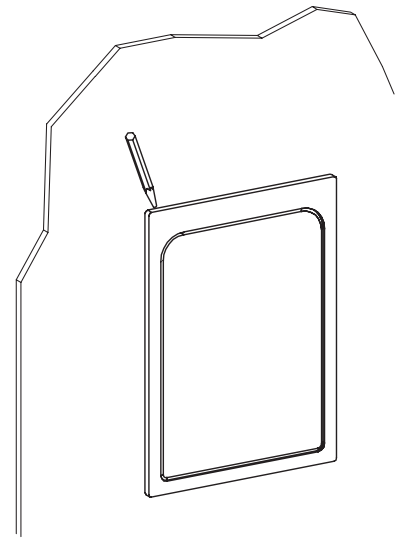

3 Threading the wire (see fig 3, 4 and 5)


- Thread the wire (BB) through the eyelet of one D-ring to the opposite D-ring and back to the beginning point.
- Cut any excess wire (BB) and knot it to secure to the eyelet of the D-ring.
- Cover the sharp edges with electrical tape.

Fig 3

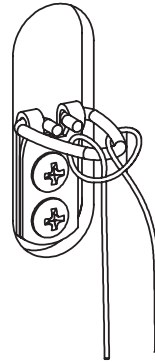


Loose lark's head shows pattern of threading

Fig 4

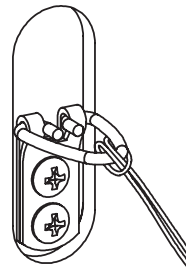

Pull knot tightly

Fig 5

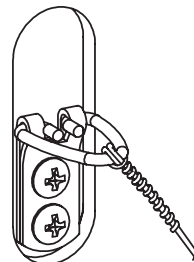


Twist loose end tightly and wrap snug against knot

INSTALLATION (continued)

4 Hanging the mirror

- Measure 6 in down from the top mark on the wall and 12 in right from the same mark.
- Make sure the mirror (A) is at least 1 in. above the faucet.
- Drill a pilot hole. This will be used to anchor a wood screw (AA) to hang the mirror (A).
- Hang the mirror (A) by the metal wire (BB).

Fig 6

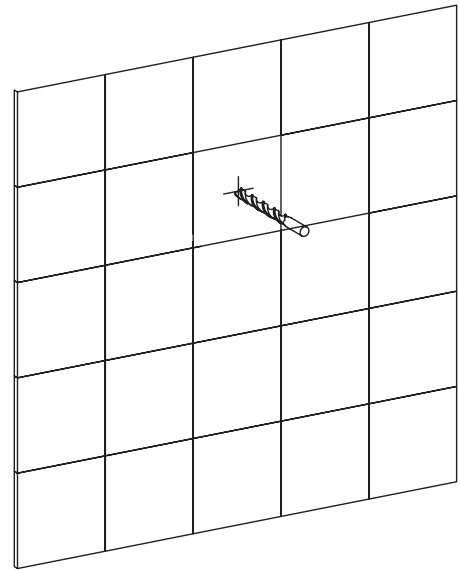

CARE AND CLEANING

Vanity and Accessories

Care: Excess moisture can be damaging to any fine wood finish, be sure to clean up any spills right away.

Over time, exposure to sunlight, smoke and chemicals may cause some finishes to vary from their original color. Cabinets or accessories added at a later date may not match cabinets previously installed. For the same reason, finish samples on displays may not represent the exact color of cabinets received at the time of shipment.

Over exposure to humidity may cause permanent damage to the product. It is very important to dissipate the humidity in the room as soon as possible. If exposed to higher temperatures (excess of 160°) for extended periods of time the heat may be excessive and the doors and drawers should be removed right away.

Cleaning: Dust Cabinets using a soft, lint-free cloth. When needed, clean the vanity with a clean damp cloth, wiping dry with another clean soft cloth. A non-silicone based furniture cleaner can be used periodically when additional cleaning is needed.

Vitreous China

Care: Rinse thoroughly and use a soft cloth to wipe the product dry after each use to prevent hard water stains.

Cleaning: Soft abrasive cleaners may be used when necessary.

Granite or Marble Tops

Care: Natural stone is a porous material; and may stain if not properly cared for. Stone tops should be sealed before using. Follow the instructions on the sealer label.

Cleaning: For best results use a natural stone cleaner and follow the directions on the label.

Quartz Tops

Care: Quartz is an easy material to maintain. It is a non-porous material that is highly resistant to staining, scratching, and heat. Though non-porous, it is not stain, scratch, or heat proof. Spills should be cleaned as soon as possible.

Cleaning: For best results use warm water with a small amount of non-abrasive cleaner that does not contain bleach.

WARRANTY

WHAT IS COVERED

All products in the package carry a One-Year Limited Warranty. This warranty applies only to the original purchaser and to the original installation of the product.

WHAT IS NOT COVERED

Damage caused during moving or during installation is not a defect or warranty issue and will not be considered as such. This warranty does not cover product failure caused by abusive treatment, surface scratches, misuse, neglect or damage due to handling or faulty installations. All wood naturally ages, darkens, changes in color, and mellows over time due to exposure to light. While this color change is imperceptible from day to day, it may be significant over a long period of time, or due to amount of light the wood is exposed to. Imperfections such as small surface splits, small dark holes or darker mineral streaks are natural and are not considered defects.

Contact support@maykke.com or call toll free 1 (877) 659-2858 M-F 7:30am - 4:30pm (PST) with any questions or warranty concerns

