




# Assembly Instruction

INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US AT 866-814-8325

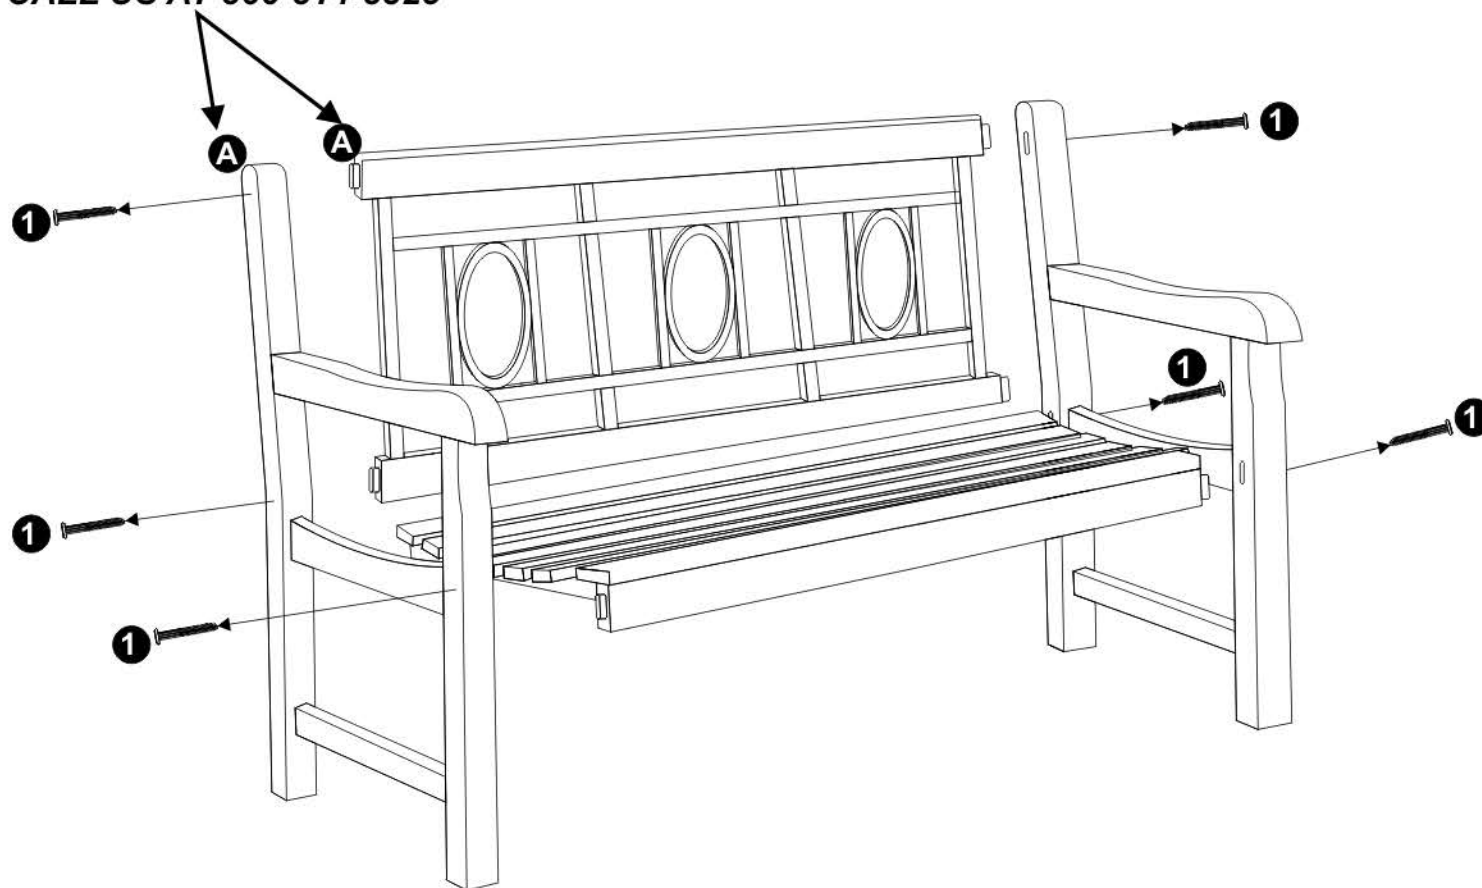

*Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly*

Code

**WJ128**

Hardware



1.F.bolt (6 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

**4 Section**