

# CONVENIENCE CONCEPTS

## Key Largo TV stand

151454 CH



151454 LO

### ASSEMBLY INSTRUCTIONS

---

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. We are confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

---














Please do not return to the store


- . Broken or missing parts?
- . Need help with assembly?

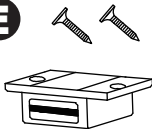If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

## Hardware List

<div><b>A</b></div> <div></div> <div>Cambolt ( 16pcs )</div>	<div><b>B</b></div> <div></div> <div>Camlock ( 16pcs )</div>	<div><b>C</b></div> <div></div> <div>Wood dowel ( 16pcs )</div>	<div><b>D</b></div> <div></div> <div>Long Screw ( 8pcs )</div>	<div><b>E</b></div> <div></div> <div>Magnet ( 2pcs )</div>	
<div><b>F</b></div> <div></div> <div>Metal Pin (12pcs)</div>	<div><b>G</b></div> <div></div> <div>Nail ( 12pcs )</div>	<div><b>H</b></div> <div></div> <div>Knob&amp;Knob Screw ( 2pcs )</div>	<div><b>I</b></div> <div></div> <div>Spring Insert ( 4pcs )</div>	<div><b>J</b></div> <div></div> <div>Allen Key ( 1pc )</div>	<div><b>K</b></div> <div></div> <div>Glue (1pc)</div>

## Panel List

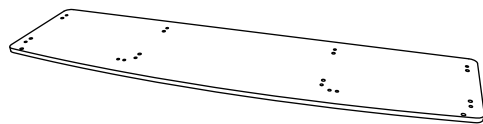


①

Top Panel (1pc)




②




③

Side Panel(2pcs)  
Left ② Right ③




④



⑤

Divider Panel (2pcs)  
Left ④ Right ⑤




6

Long center panel(1pc)



7

Short center panel (2pcs)




8

Bottom Panel (1pc)




9

Foot (4pcs)







10


Back panel (1pc)

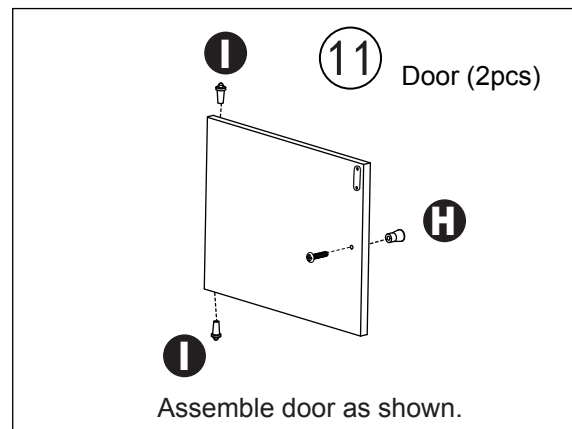

## Assembling the unit with camlocks and wood dowels.

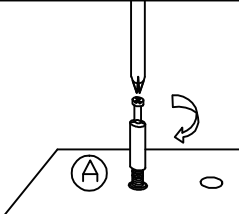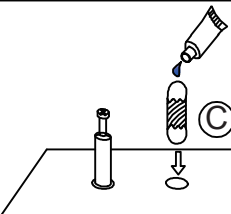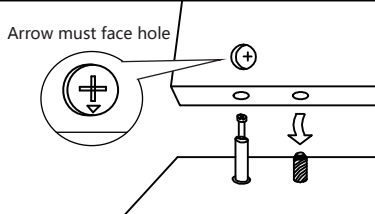
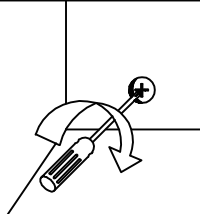
			
<p>Gently screw cam dowel into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

## Exploded Views

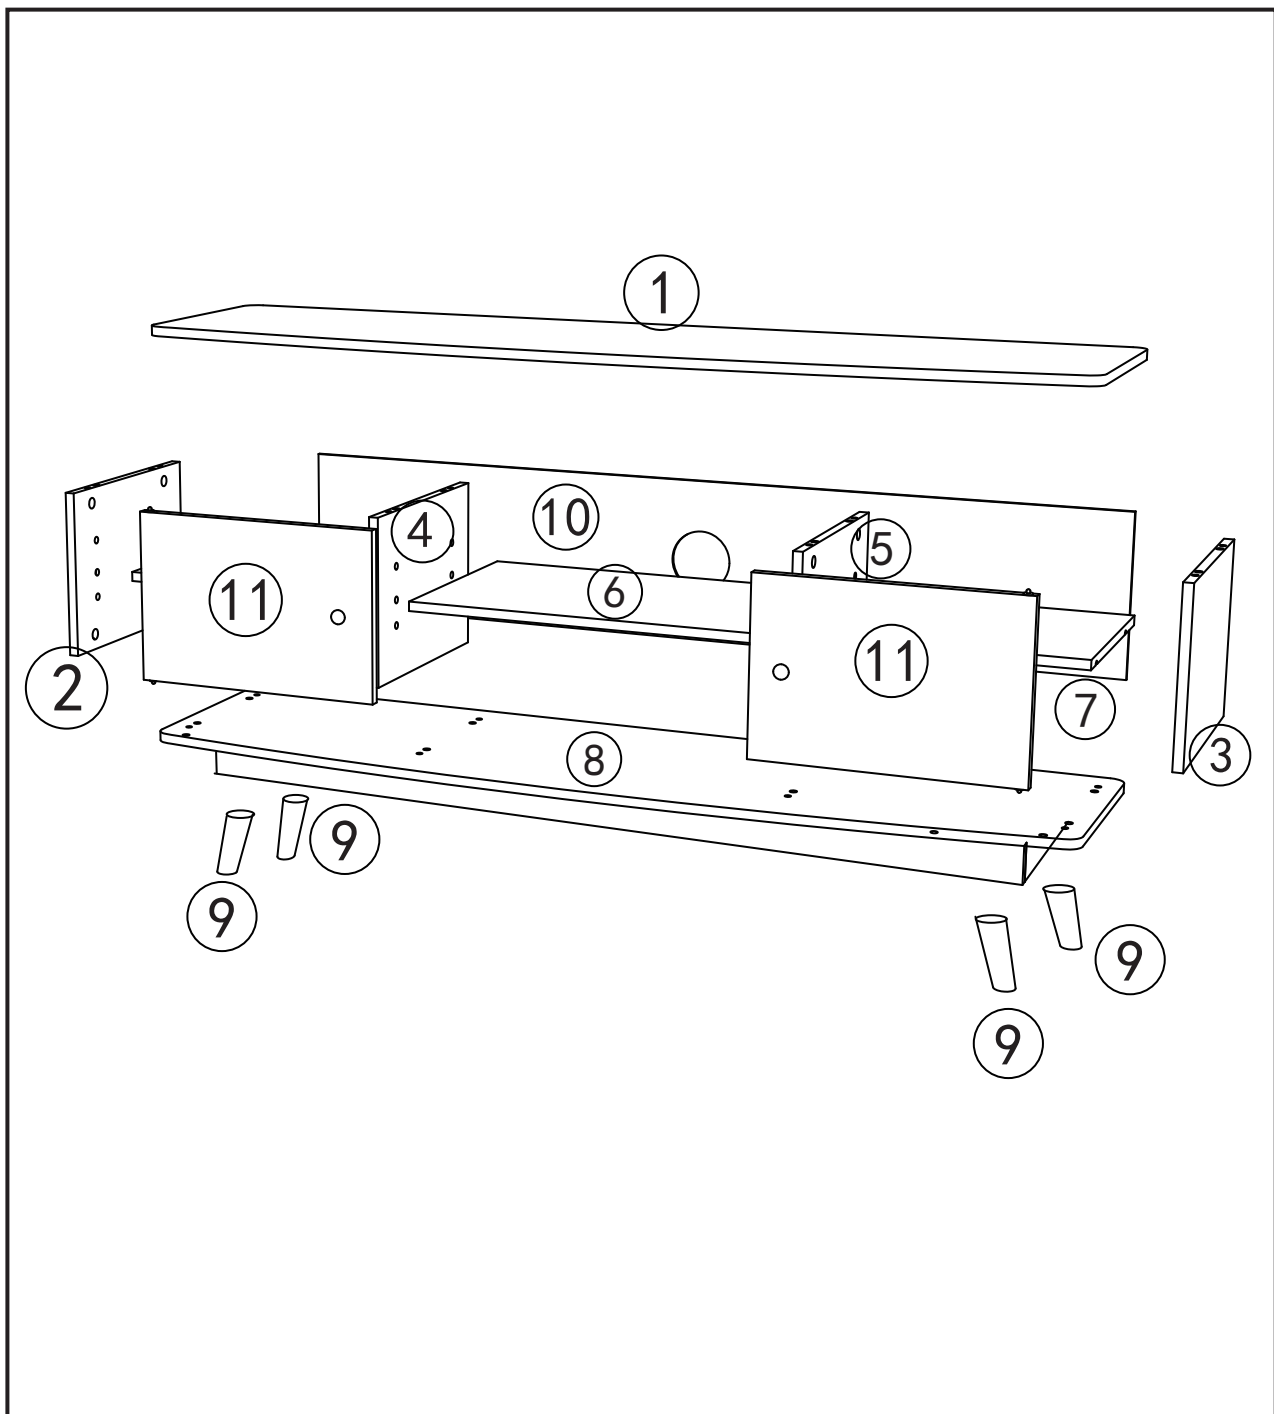




## Step 1

1. Connect the Feet (9) to Bottom Panel (8) as shown.

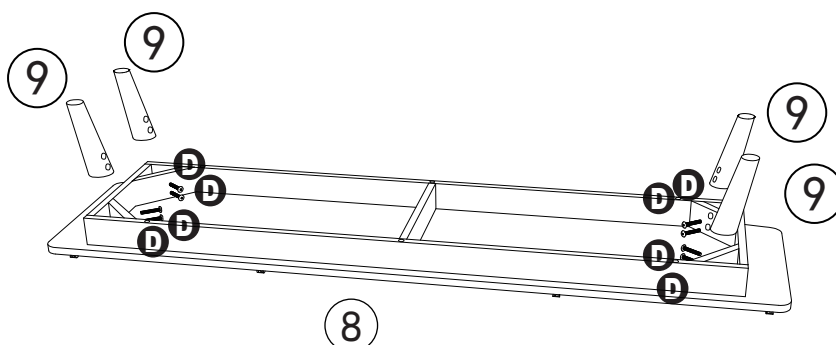



## Step 2

1. Attach hardware to Bottom Panel (8) as shown.

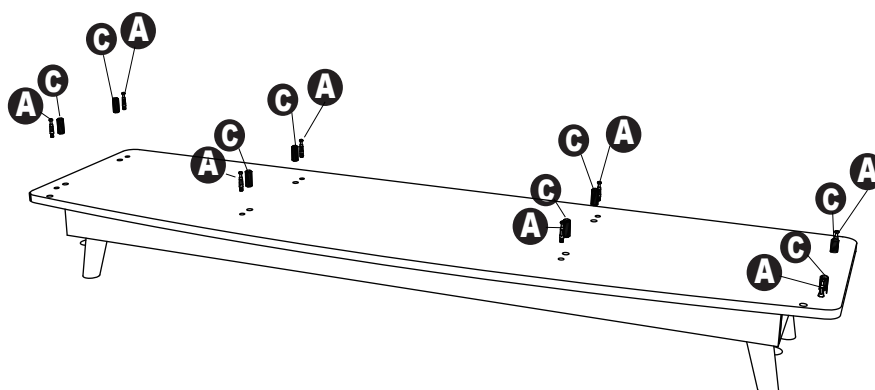

## Step 3


1. Connect side panels (2) (3) and divider panel (4) & (5) to bottom panel (8) and gently tighten camlocks.

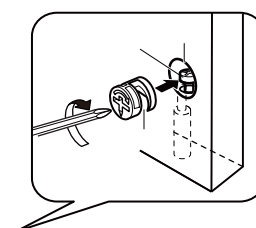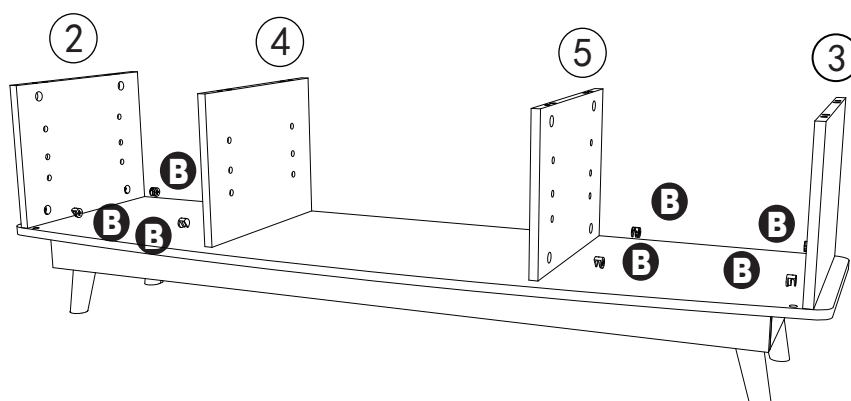

## Step 4


1. Attach hardware to Top Panel ① as shown.

2. Attach magnets **E** to Top Panel ①.

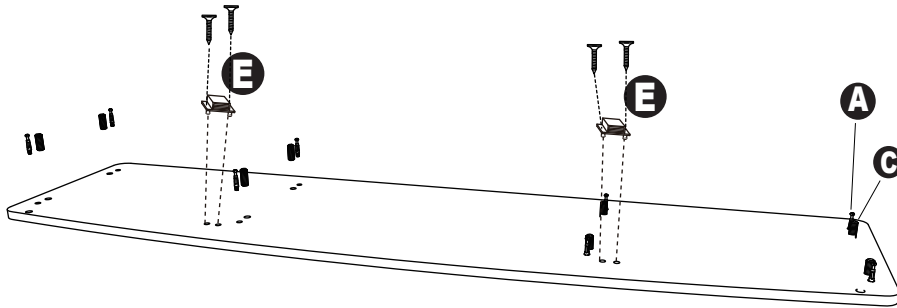

## Step 5


1. Place Top Panel ① on unit and gently tighten camlocks.

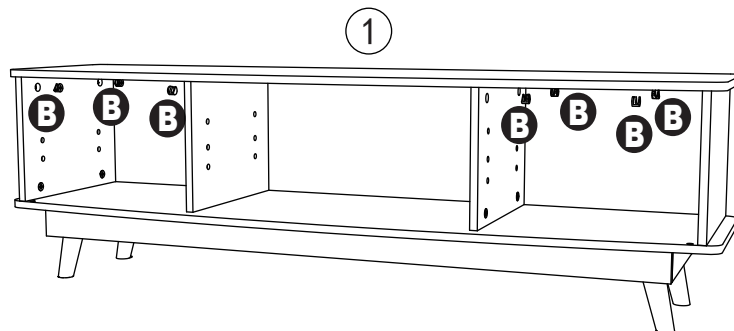

## Step 6

1. Placing metal pins **F** into divider and Side panels wall holes.

2. Place center panels ⑥ ⑦ onto metal pins.

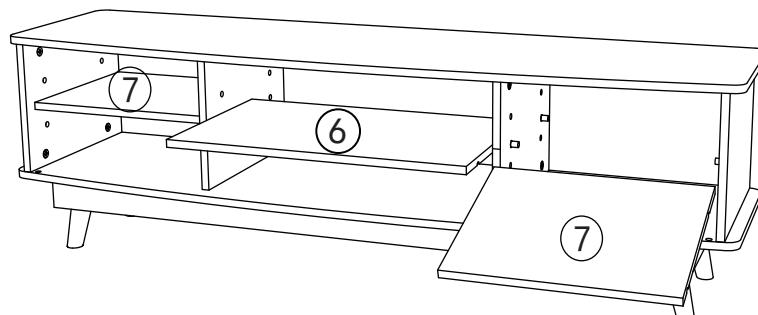



## Step 7

1. Attach door ⑪ to unit by placing one end of spring pin into hole, gently compress other end of spring pin so that it will slide into remaining hole.

### TO ATTACH DOORS

Push door insert down. Align with pre-drilled hole in unit. Release.

Push

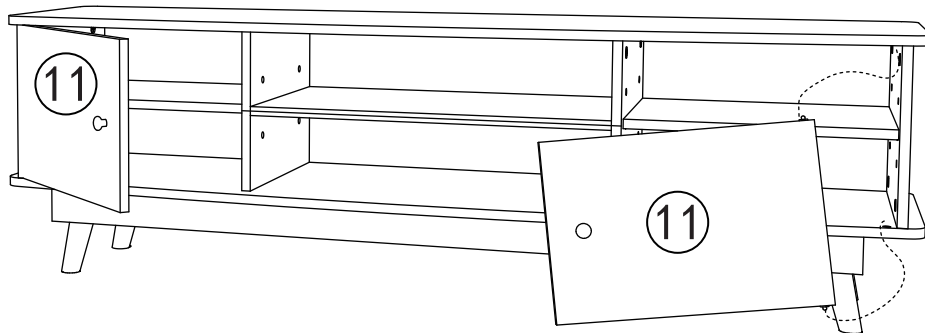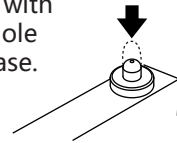

## Step 8

1. Turn sample around and Strengthen the back panel ⑩ to unit using nails ①.
2. Finish and enjoy.

①



x12

