




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325**

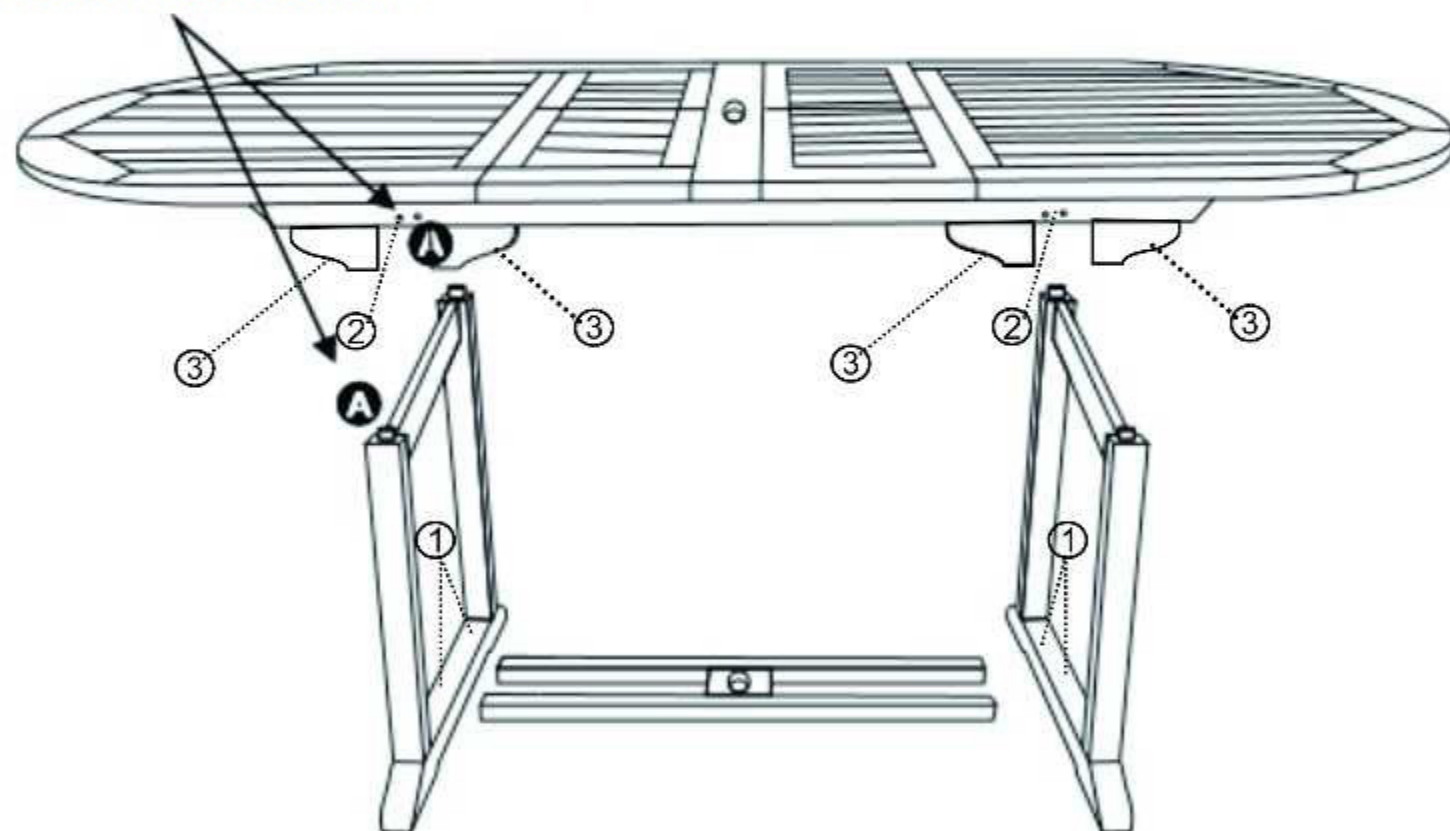

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AT180VALXL

Hardware



1. Custom Bolt 40 Mm (4 Pcs)



2. Custom Bolt 25 Mm (4 Pcs)



3. Screw 40 Mm (8 Pcs)

Tool



Socket Wrench 4m/m Rt

Total Section

4 Section