



ASSEMBLY INSTRUCTIONS

FULL BED WITH TRUNDLE



















WF301863


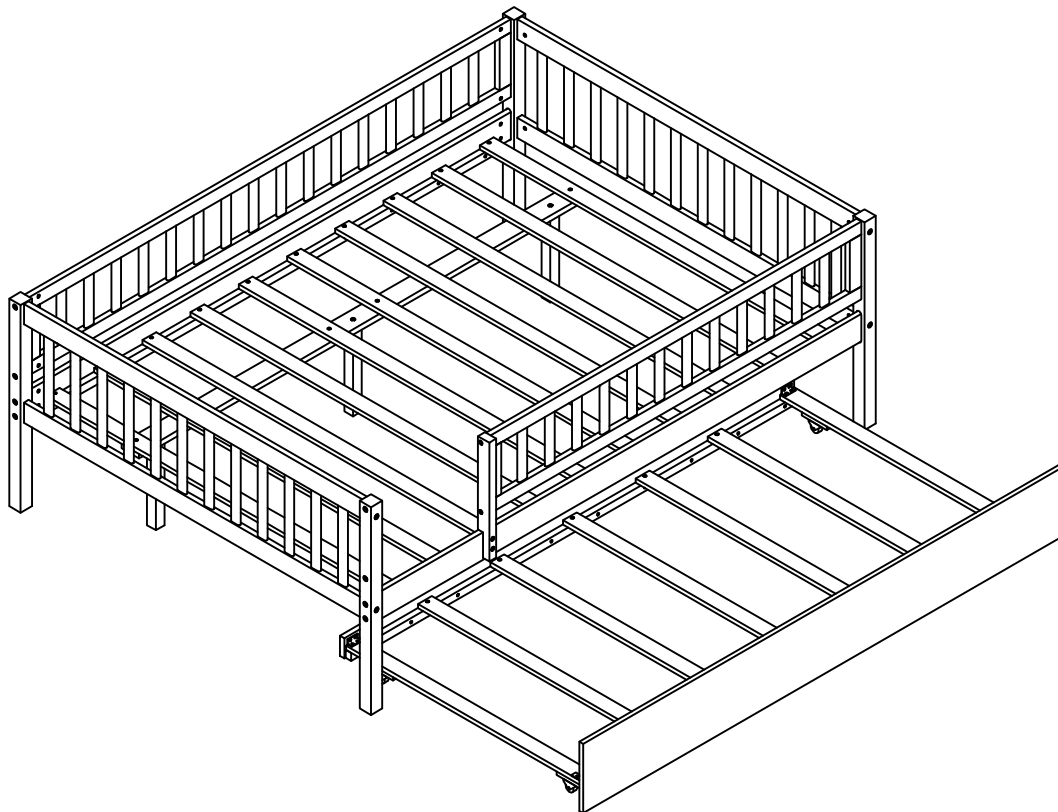


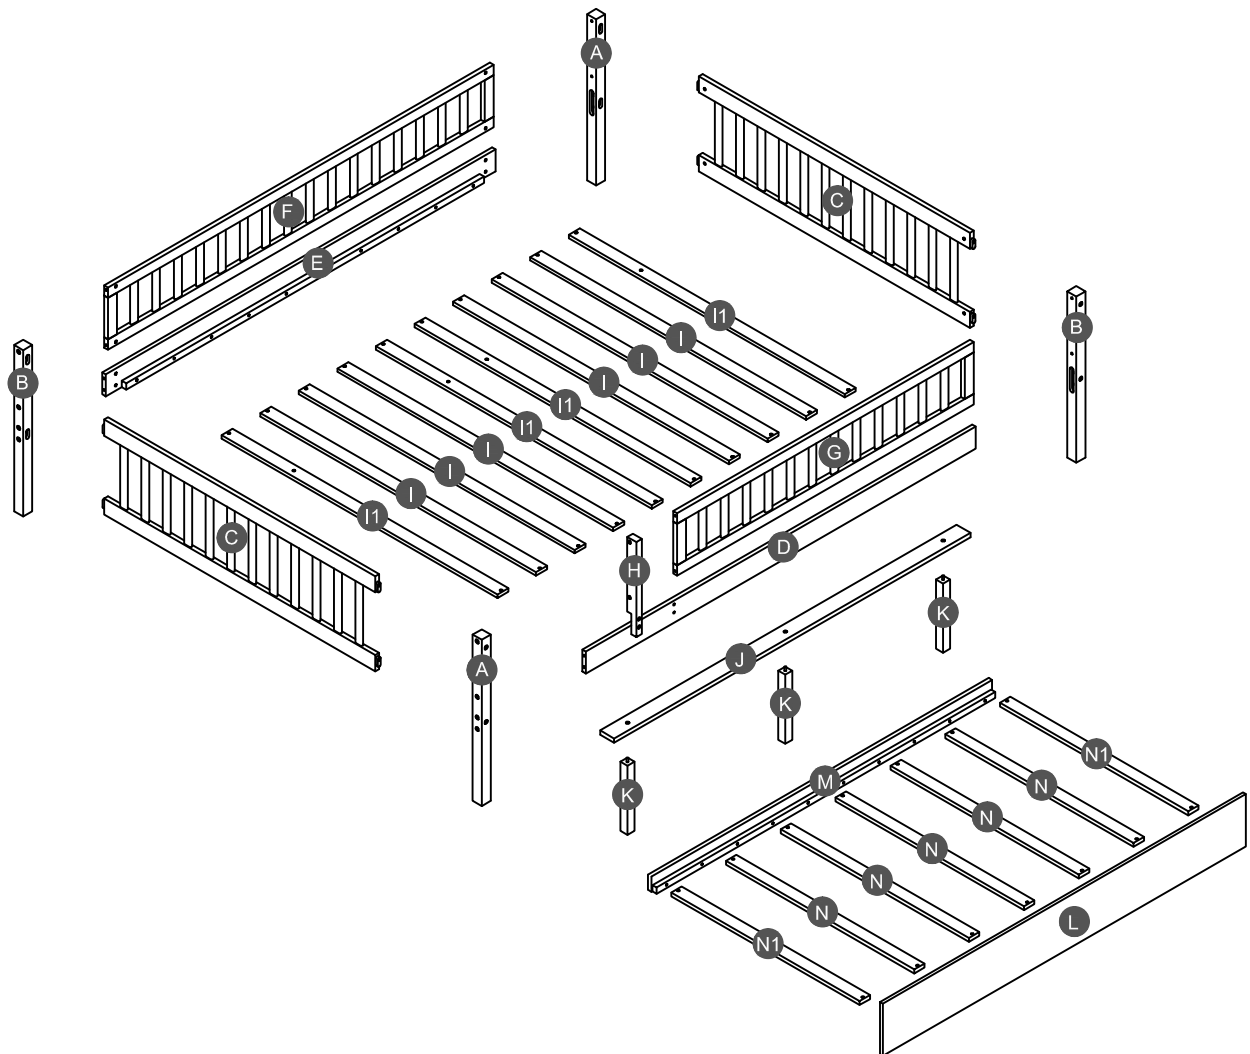






Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Frame HB/FB - 2pcs
D  Side rail (Front) - 1pc	E  Side rail (Back) - 1pc	F  Long guard rail (Back) - 1pc
G  Short guard rail (Front) - 1pc	H  Support guard rail(Left) - 1pc	I  Slats - 6pcs
I1  Slats - 4pcs	J  Lower support slat - 1pc	K  Leg support - 3pcs
L  Front panel of Trundle - 1pc	M  Back panel side rail of Trundle -1pc	N  Slats - 5pcs
N1  Slats - 2pcs		

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	3  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(24pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  Ø4*30mm Wood screws (50pcs)
7  Ø3.5*15mm Wood screws (16pcs)	8  95*95*18*3mm Metal bracket (2pcs)	9  40*18*18*2mm Metal bracket (2pcs)
10  100*63*20mm Wheels (4pcs)	11  70*35*19 mm Trundle stopper (2pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

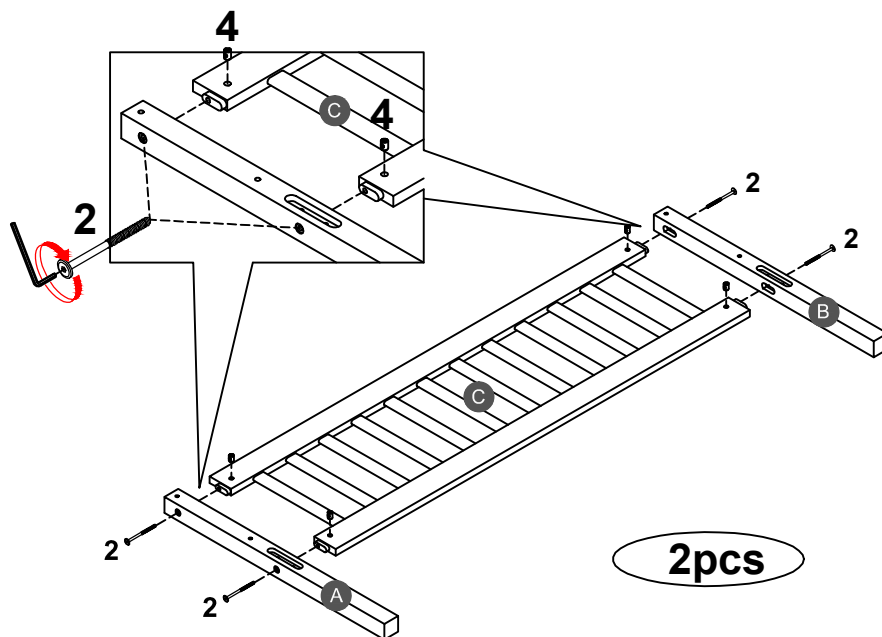


2	
8PCS	
4	
8PCS	

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

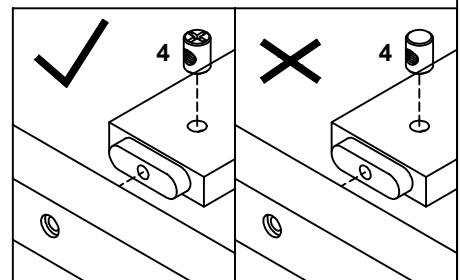

STEP 2:

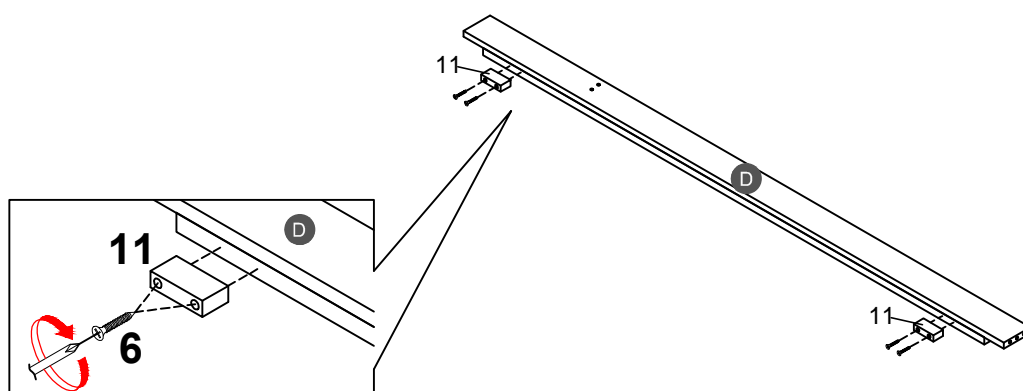


6		11	
4PCS		2PCS	


Trundle stopper (11) with lower side rail front (D) by using screw (6).

[illegible]

STEP 4:

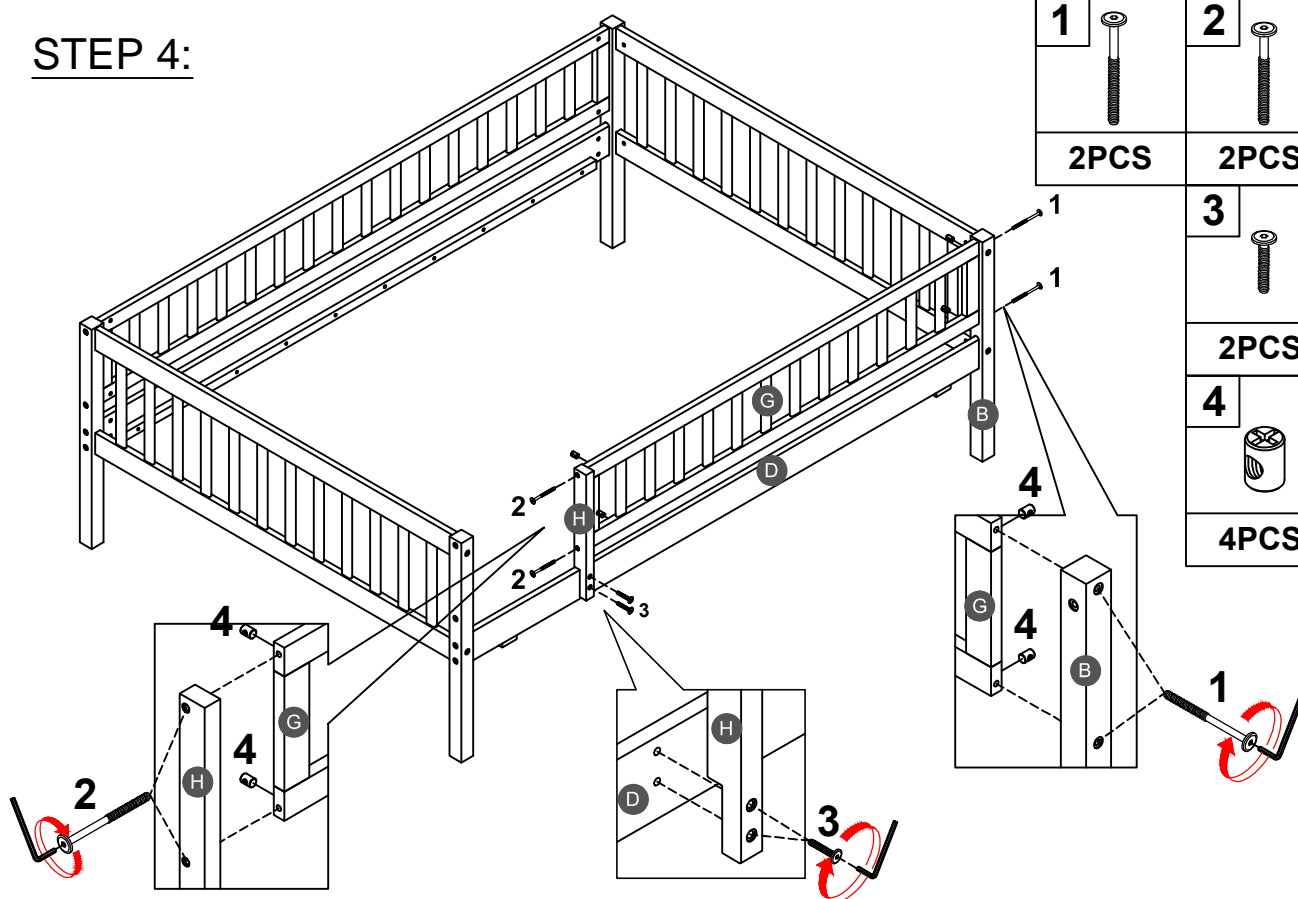

STEP 5:



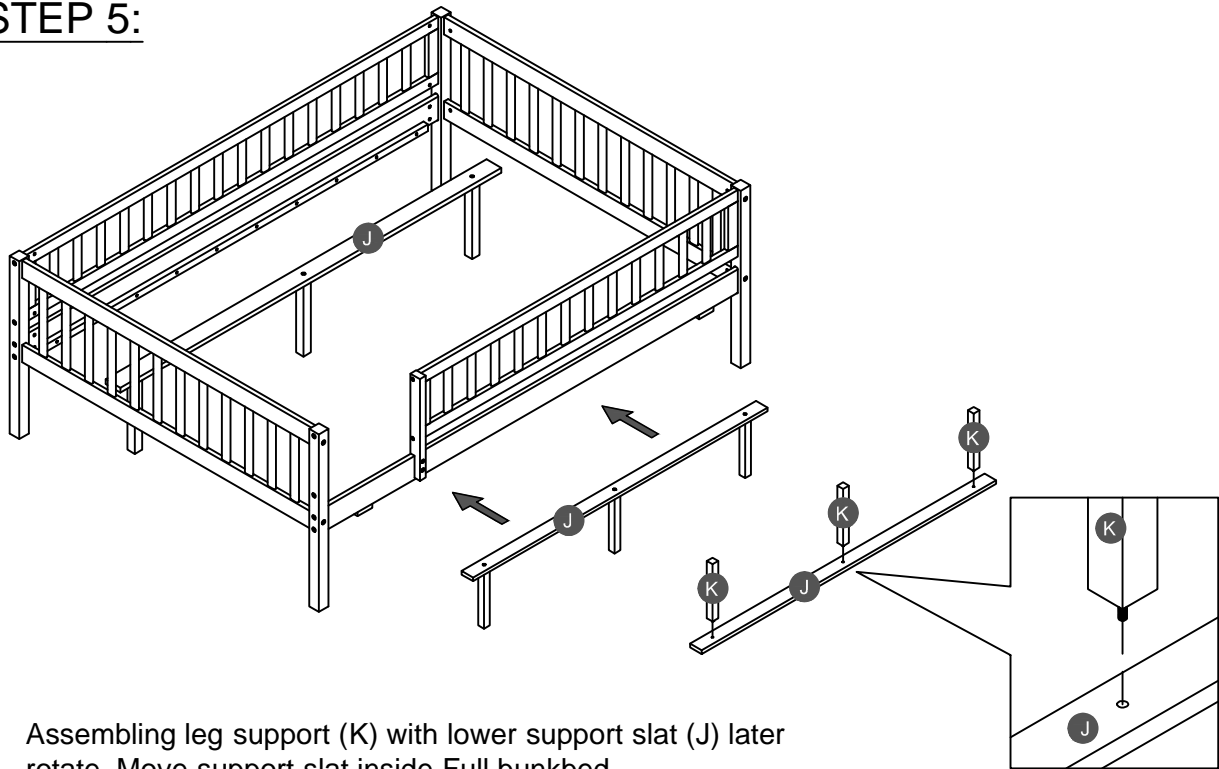


STEP 6:

6




24PCS

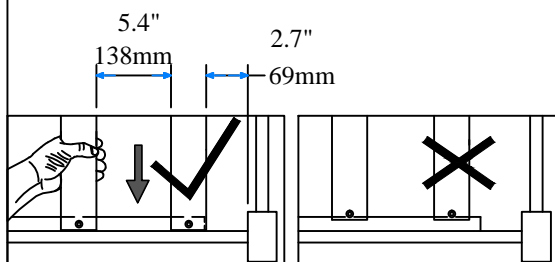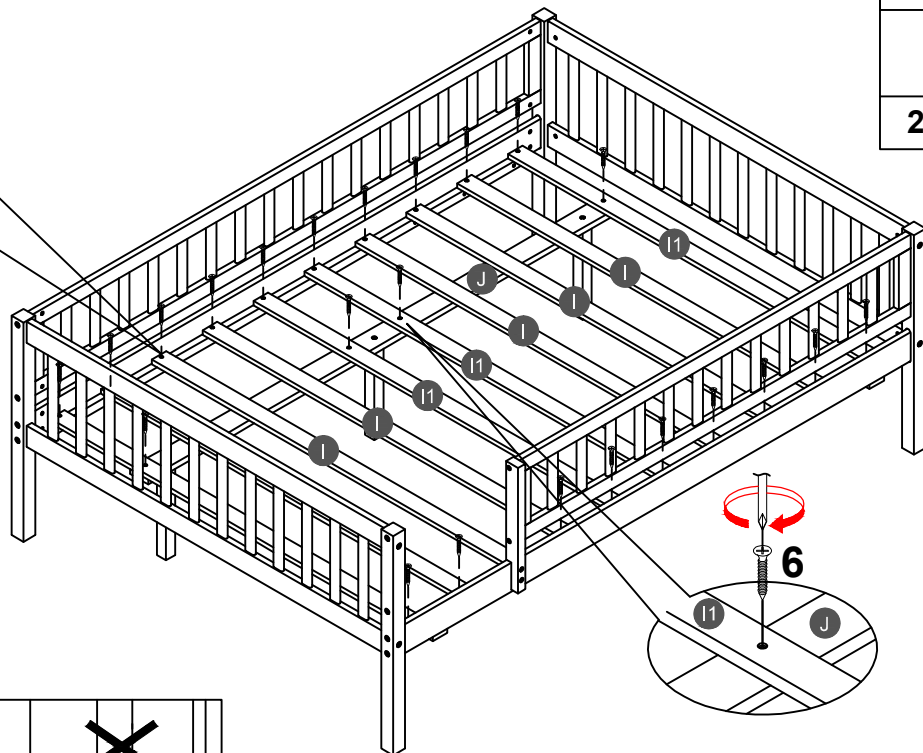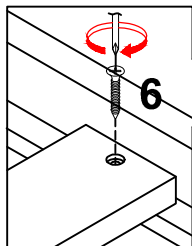


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 7:


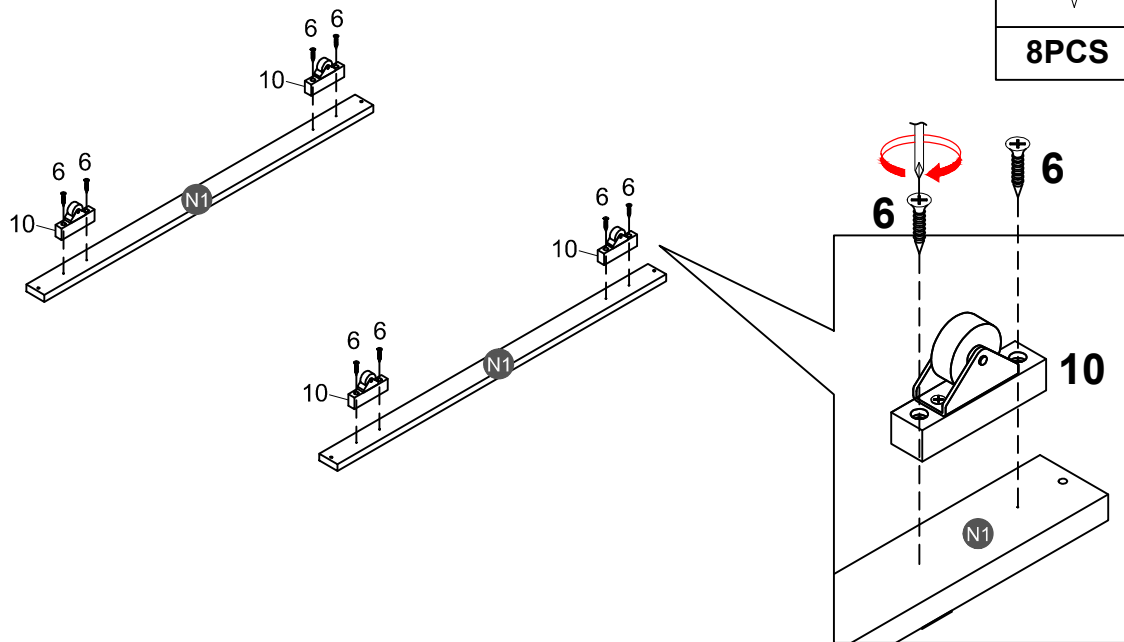


6		10	
8PCS		4PCS	

STEP 8:

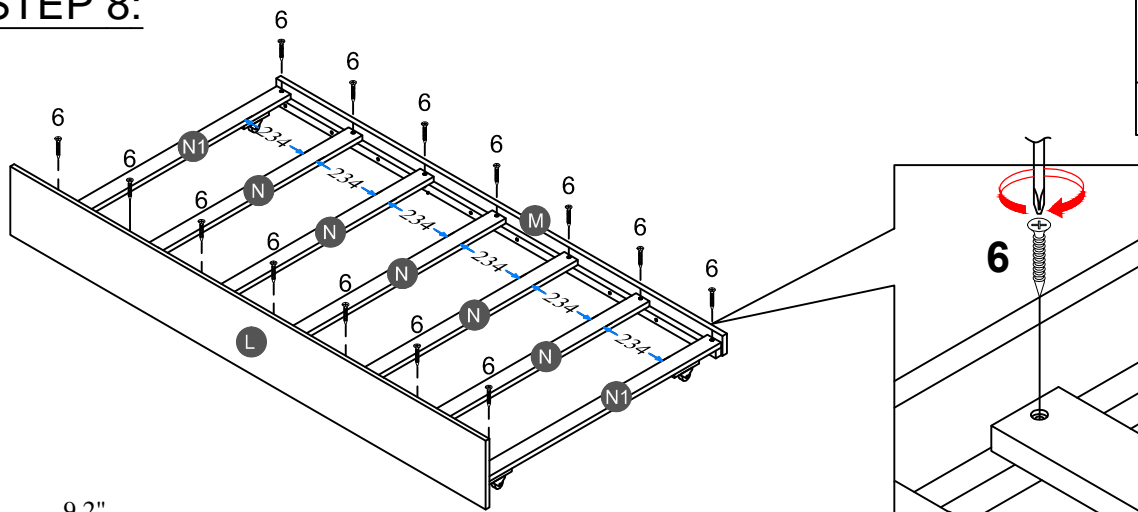


6	
14PCS	

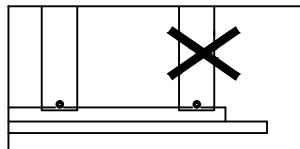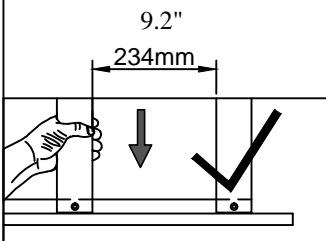


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 9:

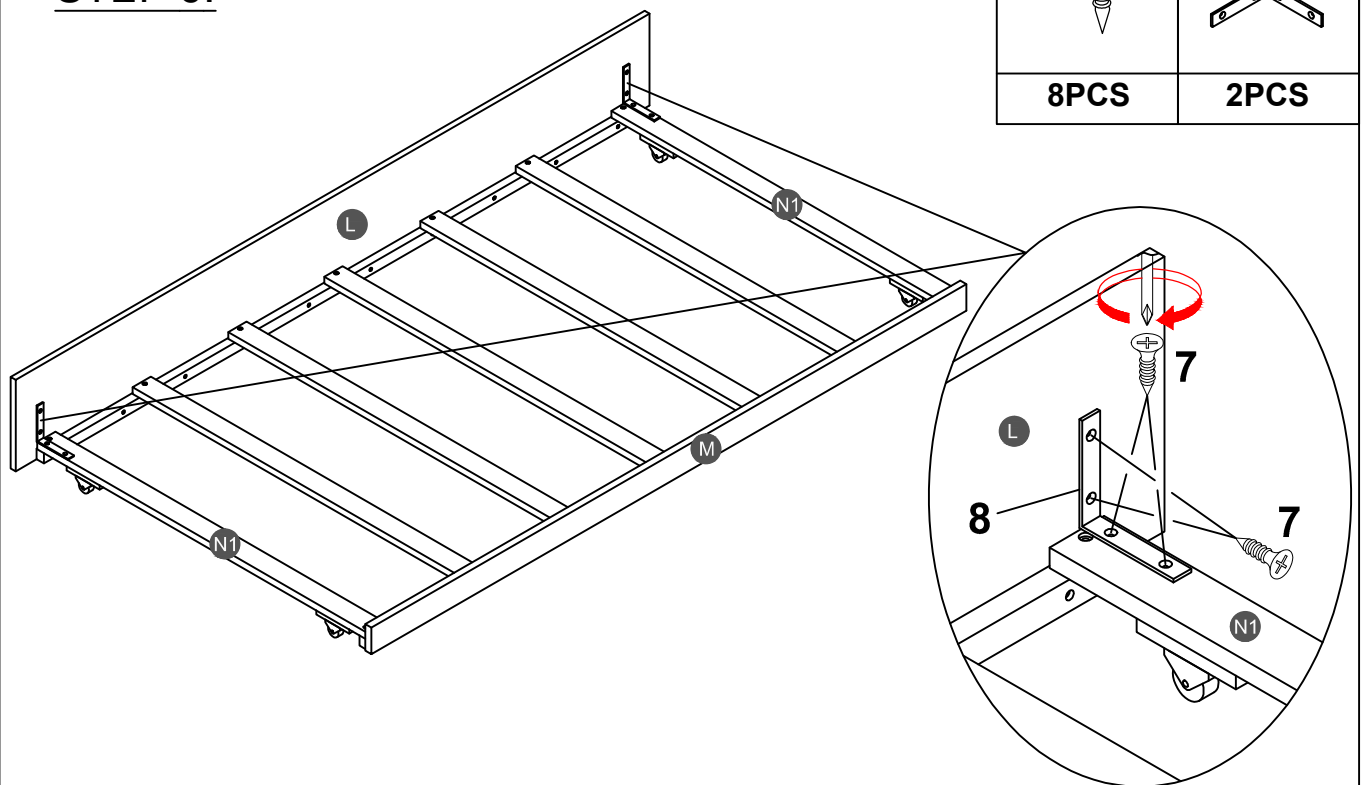

STEP 10:

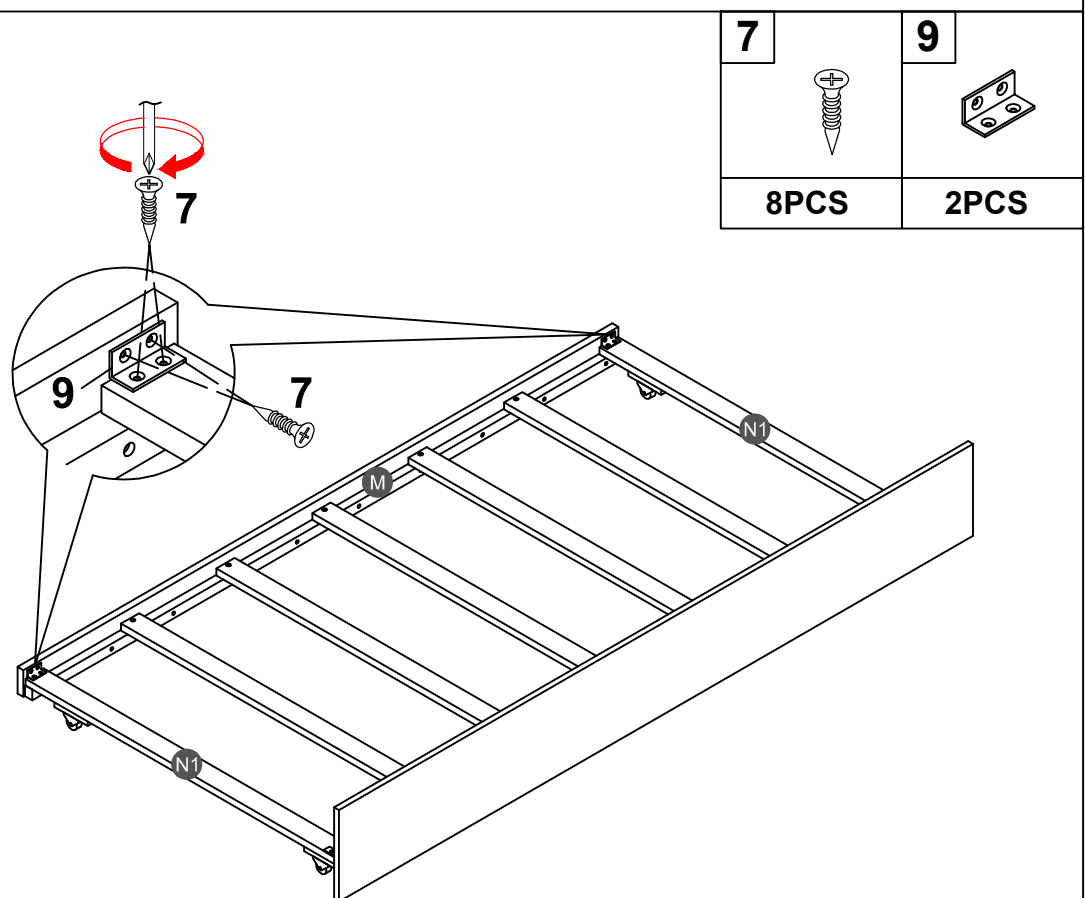

STEP 11:

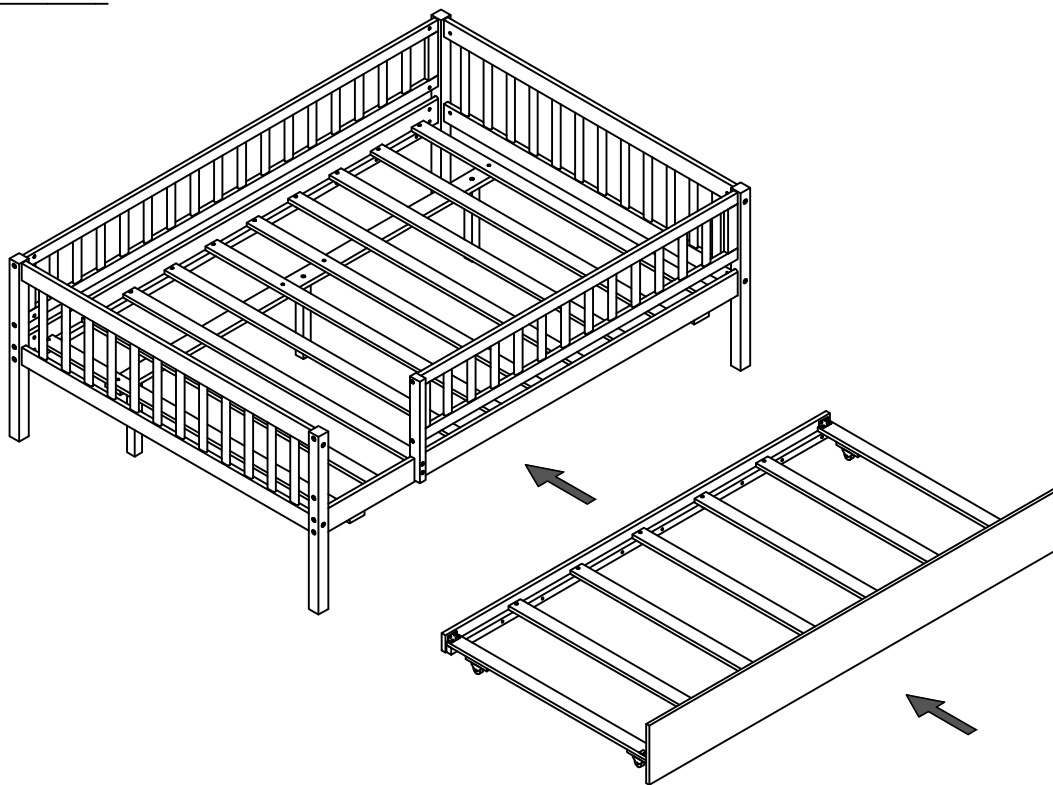

Push Trundle and Drawer under the bottom of Bunkbed.

