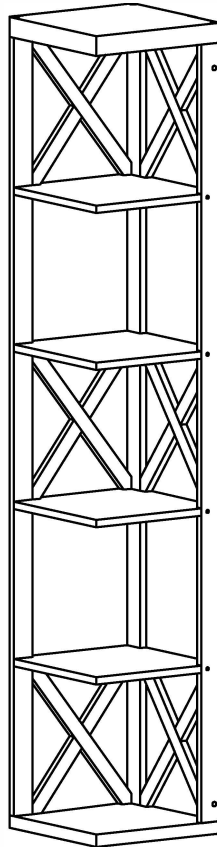









# ASSEMBLY INSTRUCTIONS



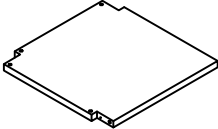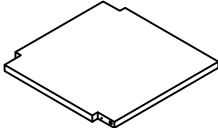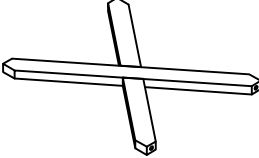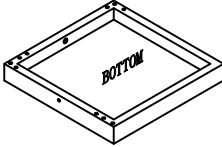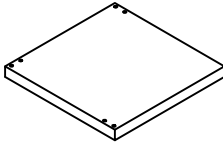



## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.

## Part list :

			
A1. Middle Panel Qty: 2	A2. Middle Panel Qty: 2	A3. Leg Qty: 3	
			
A4. Cross Bar Qty: 6	A5. Top Panel Qty: 1	A6. Bottom Panel Qty: 1	

## Hardware list :

			
B1. Screw Qty: 12	B2. Wood Dowel Qty: 42	B3. Bolt and Nut Qty: 6	B4. Screw and Anchor Qty: 2

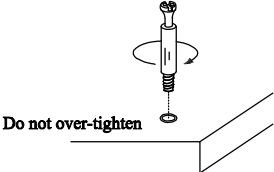

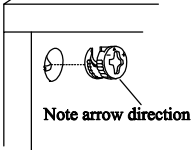
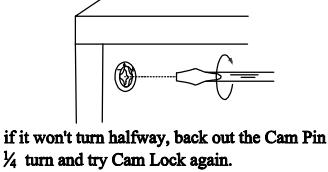
### Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


### To use Dowels:

1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

### To use Cam Locks:

<b>1. Insert Cam Pin until snug</b> 	<b>2. Set boards together</b> 	<b>3. Insert Cam Lock</b> 	<b>4. Turn Cam Lock clockwise (half a turn)</b> 
---	--	---	--


## Step 1

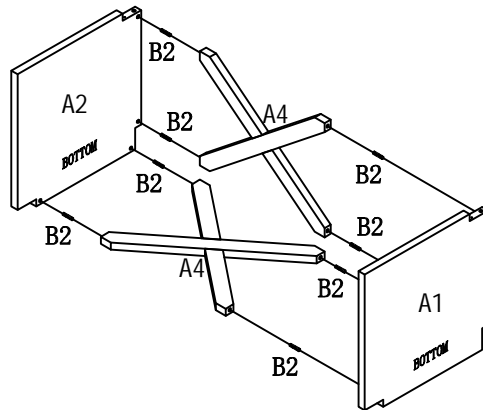

B2 8PCS

Insert wooden Dowel B2 into the holes on the Middle Shelves A1 & A2. Then attach the Middle Shelves A1&A2 to the Cross Bars A4.


## Step 2

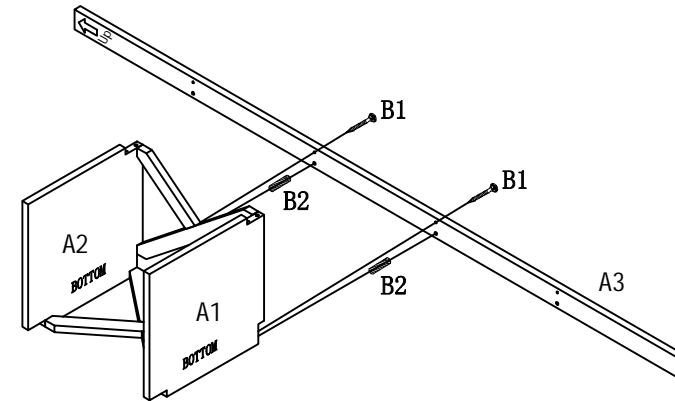

B1 2PCS  
B2 2PCS

Insert the Wooden Dowels B2 into the holes on the sides of the Middle shelves A1 & A2. Then attach the Middle Shelves A1 & A2 to the leg A3 with screws B1 as above drawing shown.


## Step 3

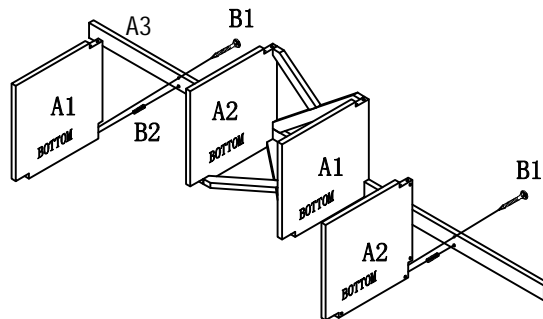

B1 2PCS  
B2 2PCS

Insert the Wooden Dowels B2 into the holes on the sides of the other two Middle shelves A1 & A2. Then attach the Middle Shelves A1 & A2 to the leg A3 with screws B1 as above drawing shown.


## Step 4

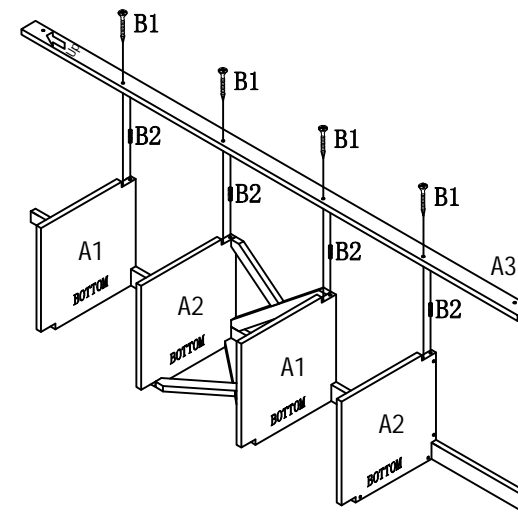

B1 4PCS  
B2 4PCS

Insert the Wooden Dowels B2 into the holes on the sides of Middle shelves A1 & A2. Then attach another leg A3 to Middle Shelves A1 & A2 with screws B1.


## Step 5

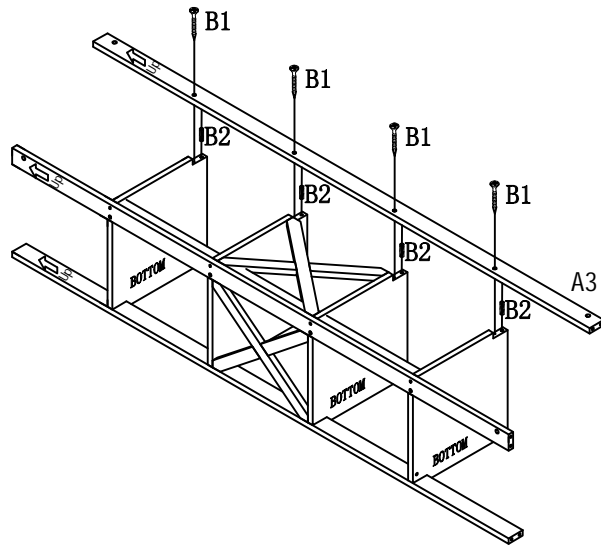

B1 4PCS  
B2 4PCS

Insert the Wooden Dowels B2 into the holes on the sides of Middle shelves A1 & A2. Then attach the rest of leg A3 to Middle Shelves A1 & A2 with screws B1.


## Step 6

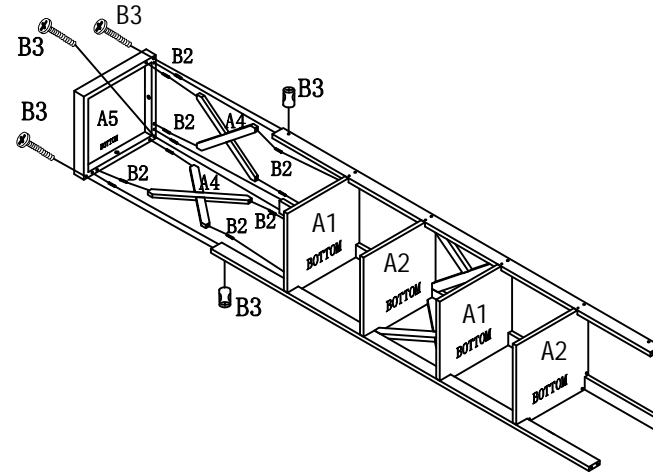

B2 22PCS  
B3 6PCS

- 1.) Insert the Wooden Dowels B2 into the holes on another two Cross Bars A4. Then attach the Cross bars A4 to the Middle Shelves A1.
- 2.) Attach the Top Panel A5 to the Cross Bars A4 and legs A3 with wooden dowels B2.
- 3.) Then tighten the Top Panel and legs using Bolts B3 with included nuts.


## Step 7

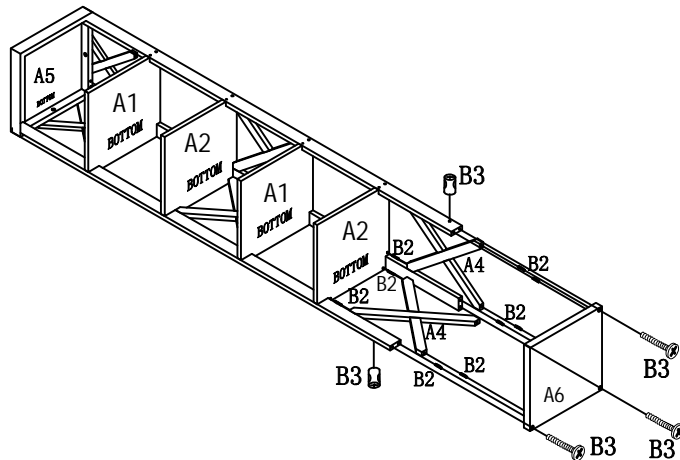


- 1.) Insert the Wooden Dowels B2 into the holes on the rest of two Cross Bars A4. Then attach the rest of Cross bars A4 to the Middle Shelves A2.
- 2.) Attach the Bottom Panel A6 to the Cross Bars A4 and legs A3 with wooden dowels B2.
- 3.) Then tighten the Bottom Panel and legs using Bolts B3 with included nuts.

## Step 8

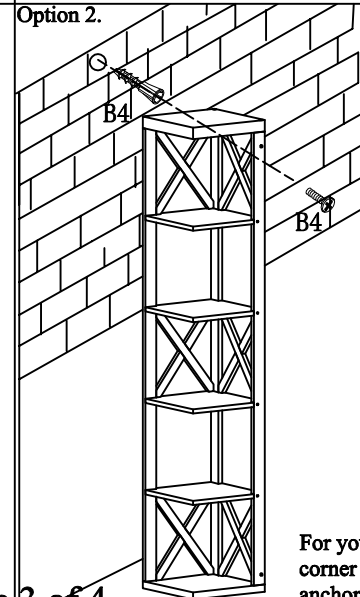Option 2.



Option 1.

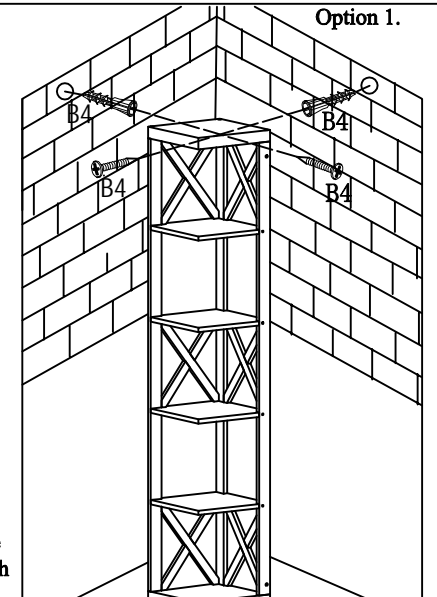

For your safety, please attach the corner bookcase to the wall with anchors and screws B4.