


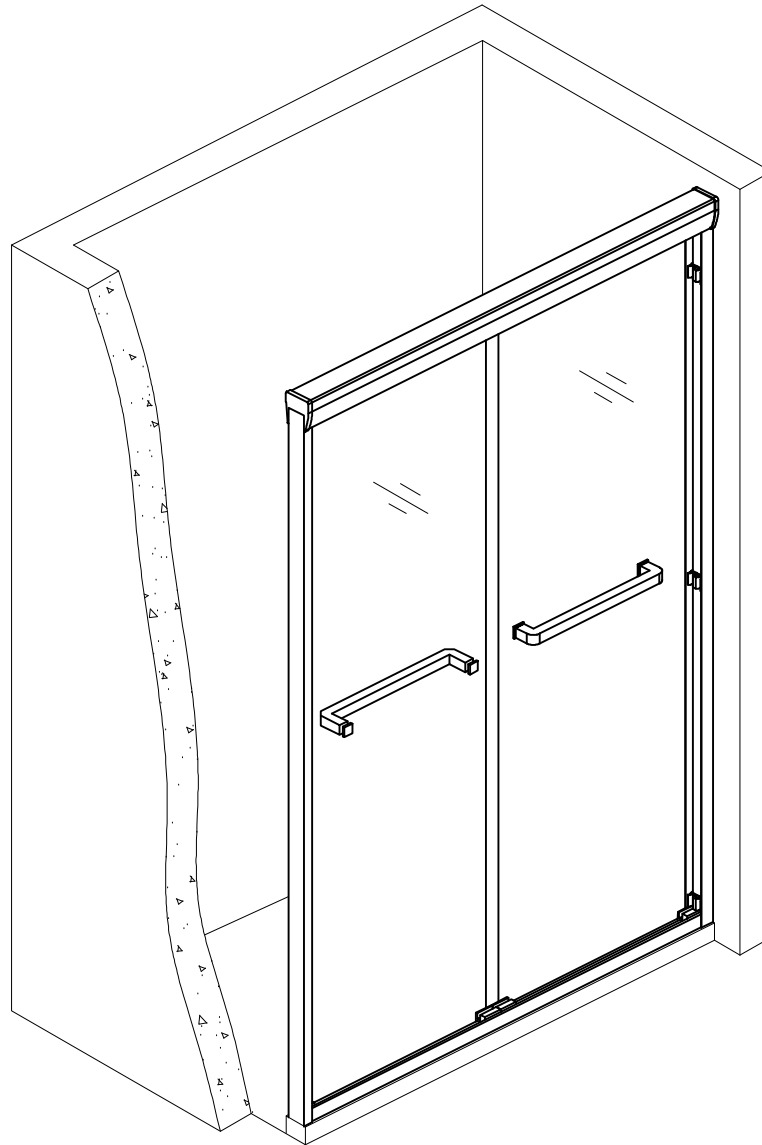
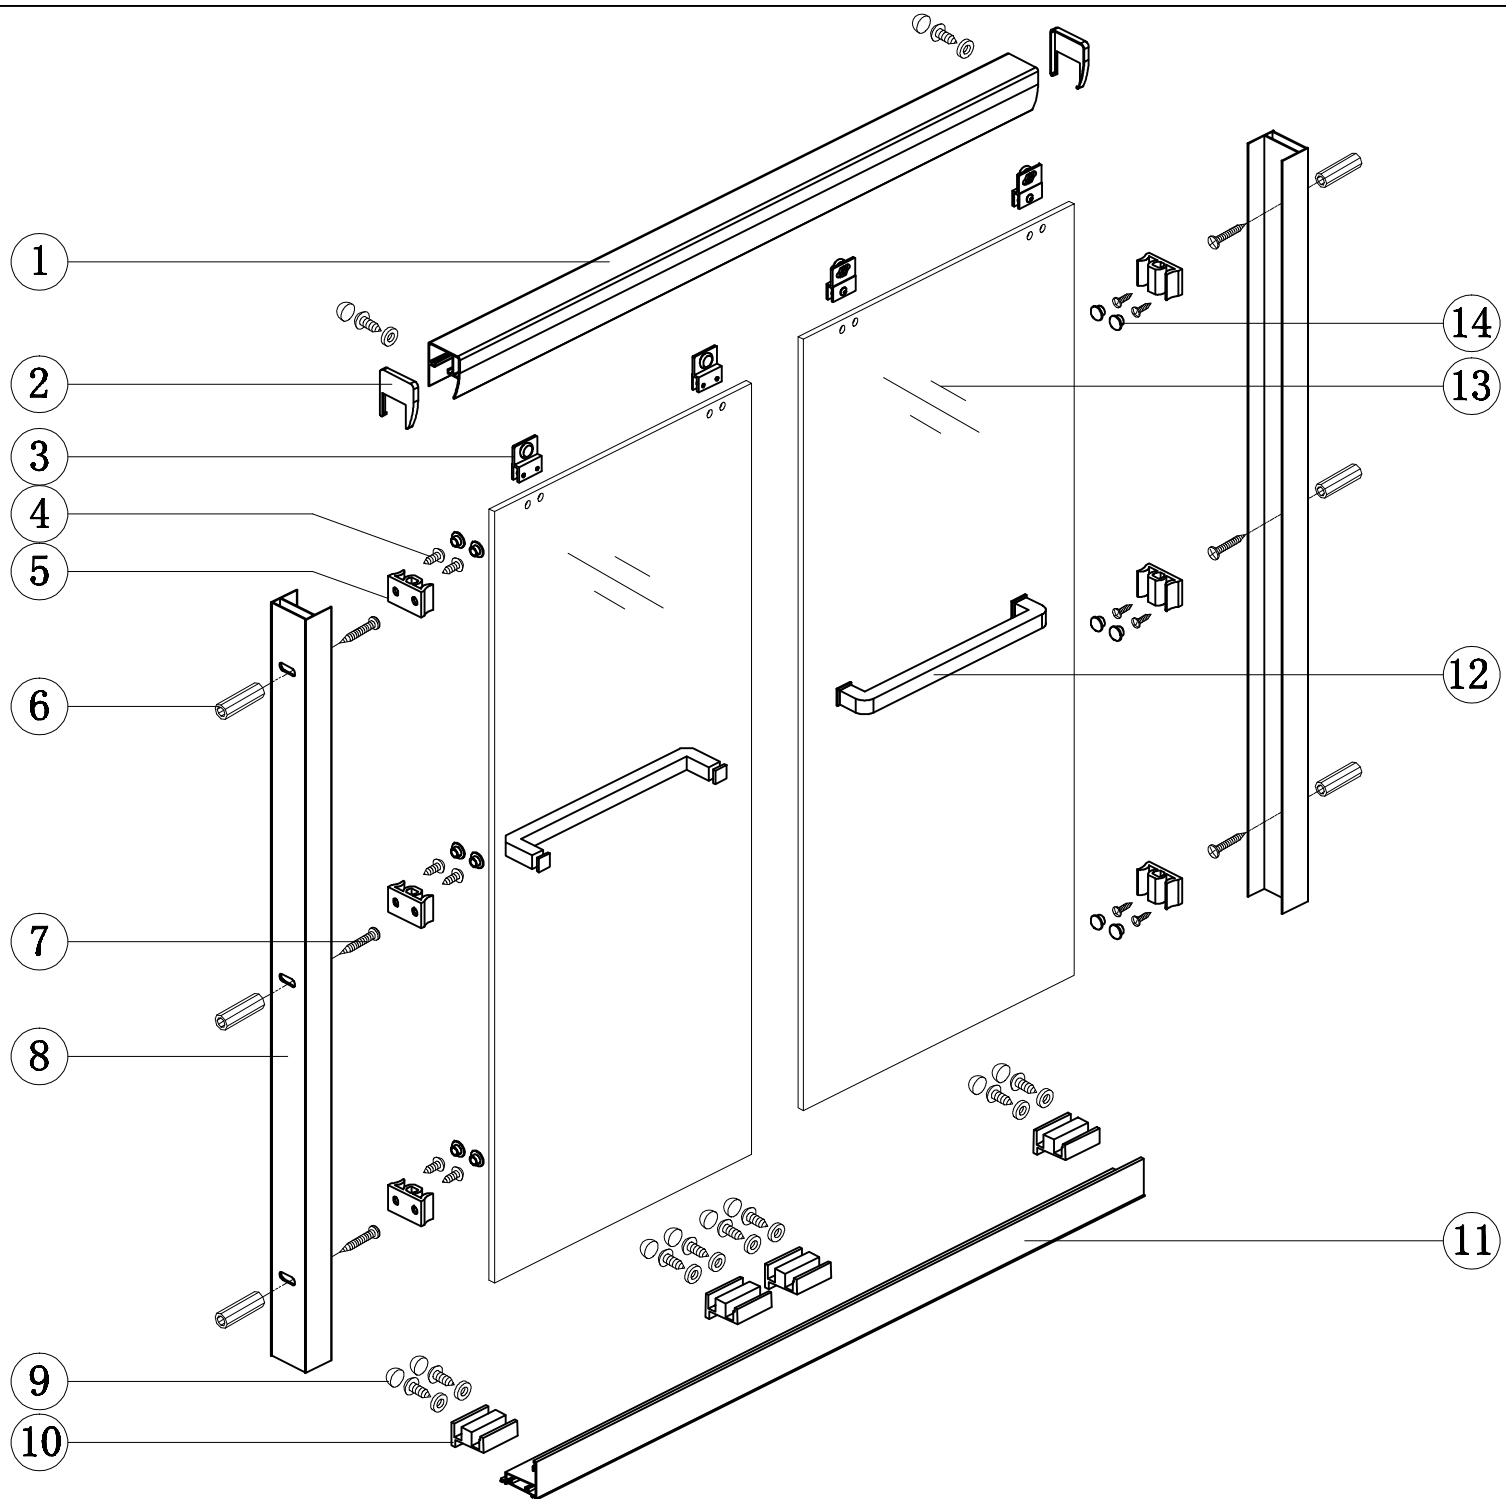
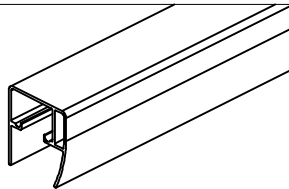
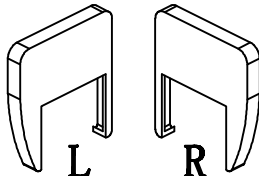
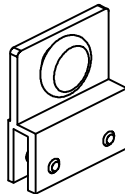
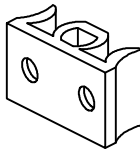


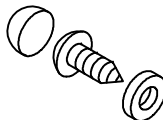



INSTALLATION MANUAL

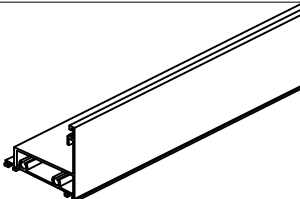


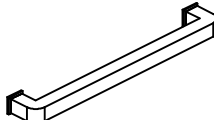

1		2	 L R	3		4	ST4x16 	5		
	1Pc		1Pair		4Pcs		12Pcs		6Pcs	
6	Ø6x30 	7	ST4x30 	8		9	ST4x16 	10	L R 	
	6Pcs		6Pcs		2Pcs		10Pairs		2Pair	
11		12		13		14		Tools:		
	1Pc		2Pcs		2Pcs		12Pcs			

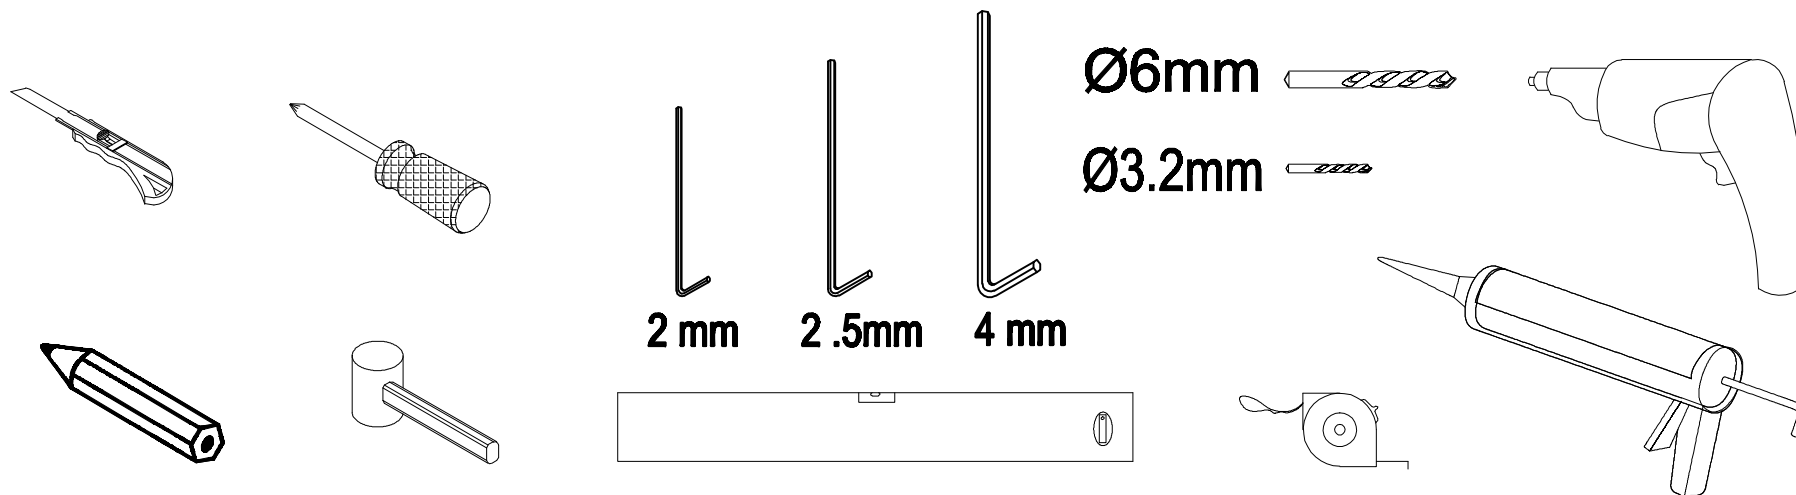

1

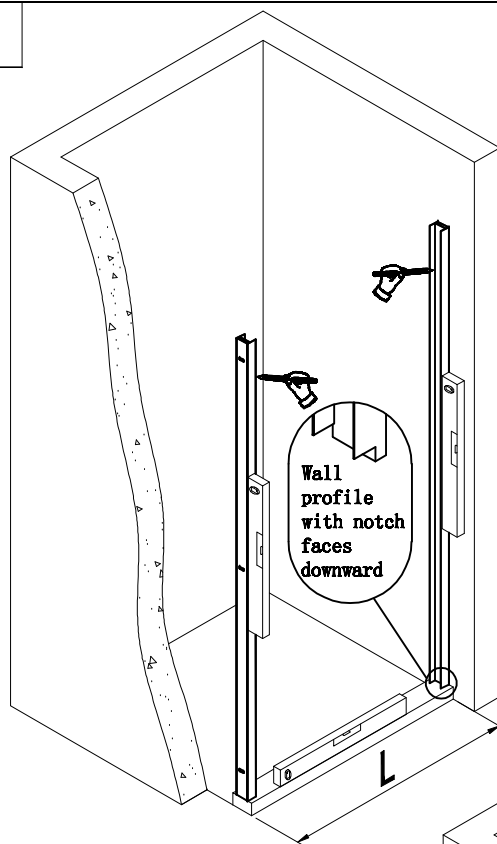



1219

L

1209 - 1219

The top and bottom rail can be cut short according to the actual situation (the bottom rail needs to cut of both ends) when the installation space is less than 1209mm

Wall profile with notch faces downward

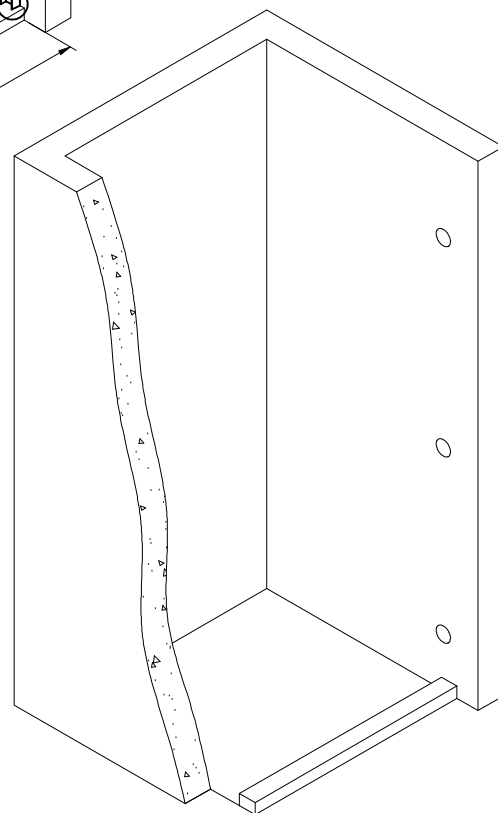

1-1


8x2

1-2


Ø6x30mm

1-3

6x6



2

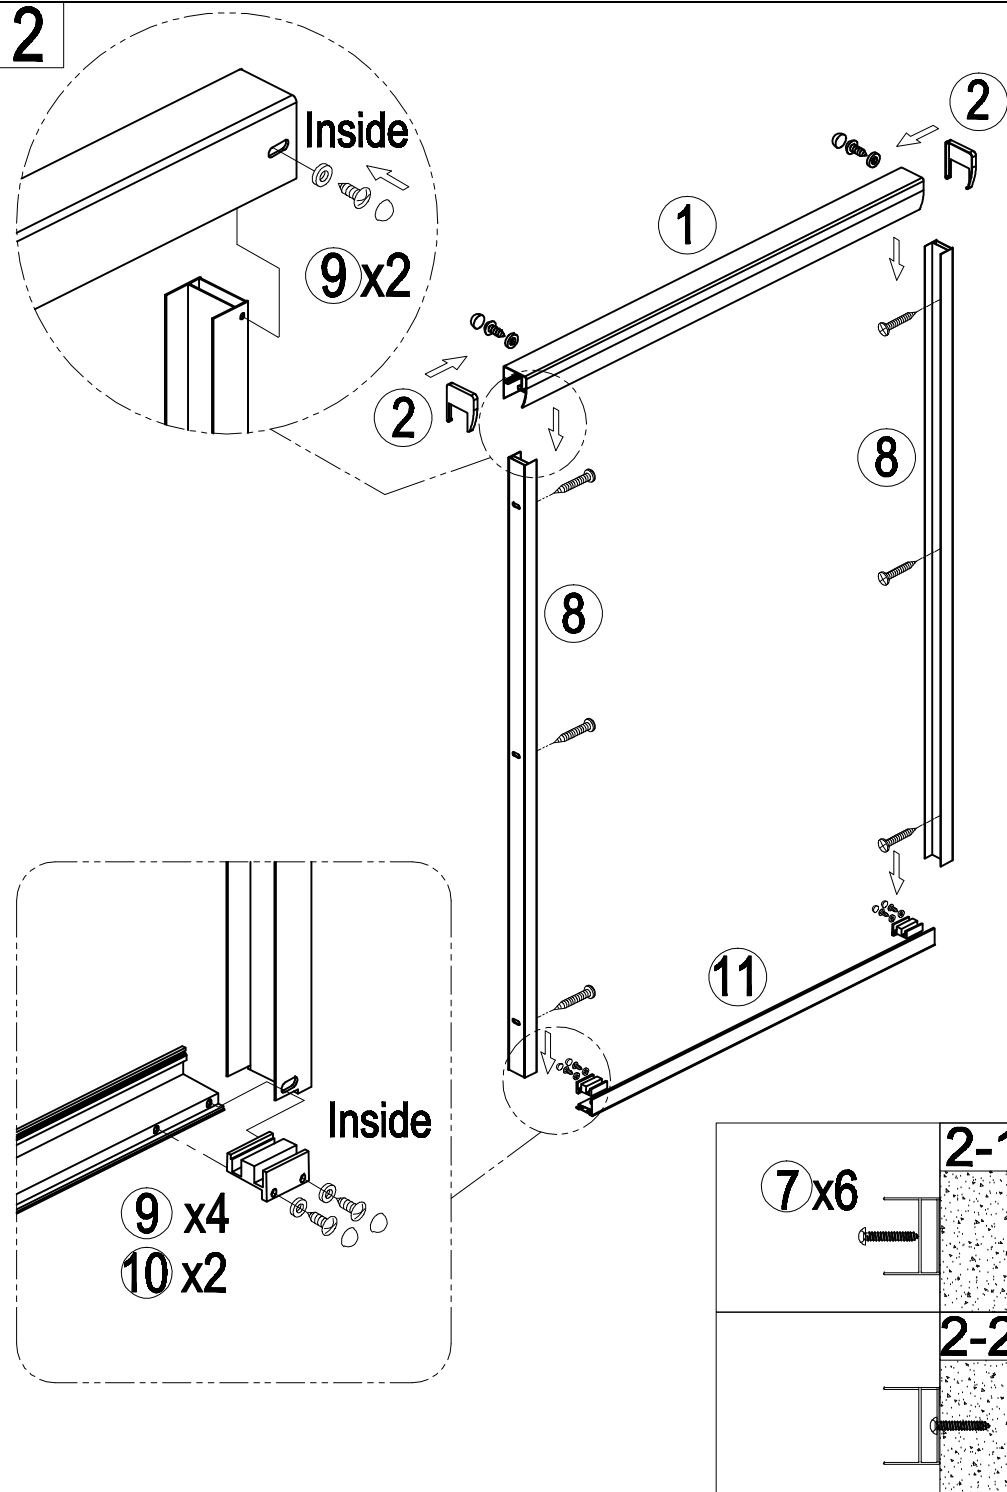

Inside

9x2

2

1

2

8

8

11

Inside

9x4


10x2

7x6

2-1


2-2

3


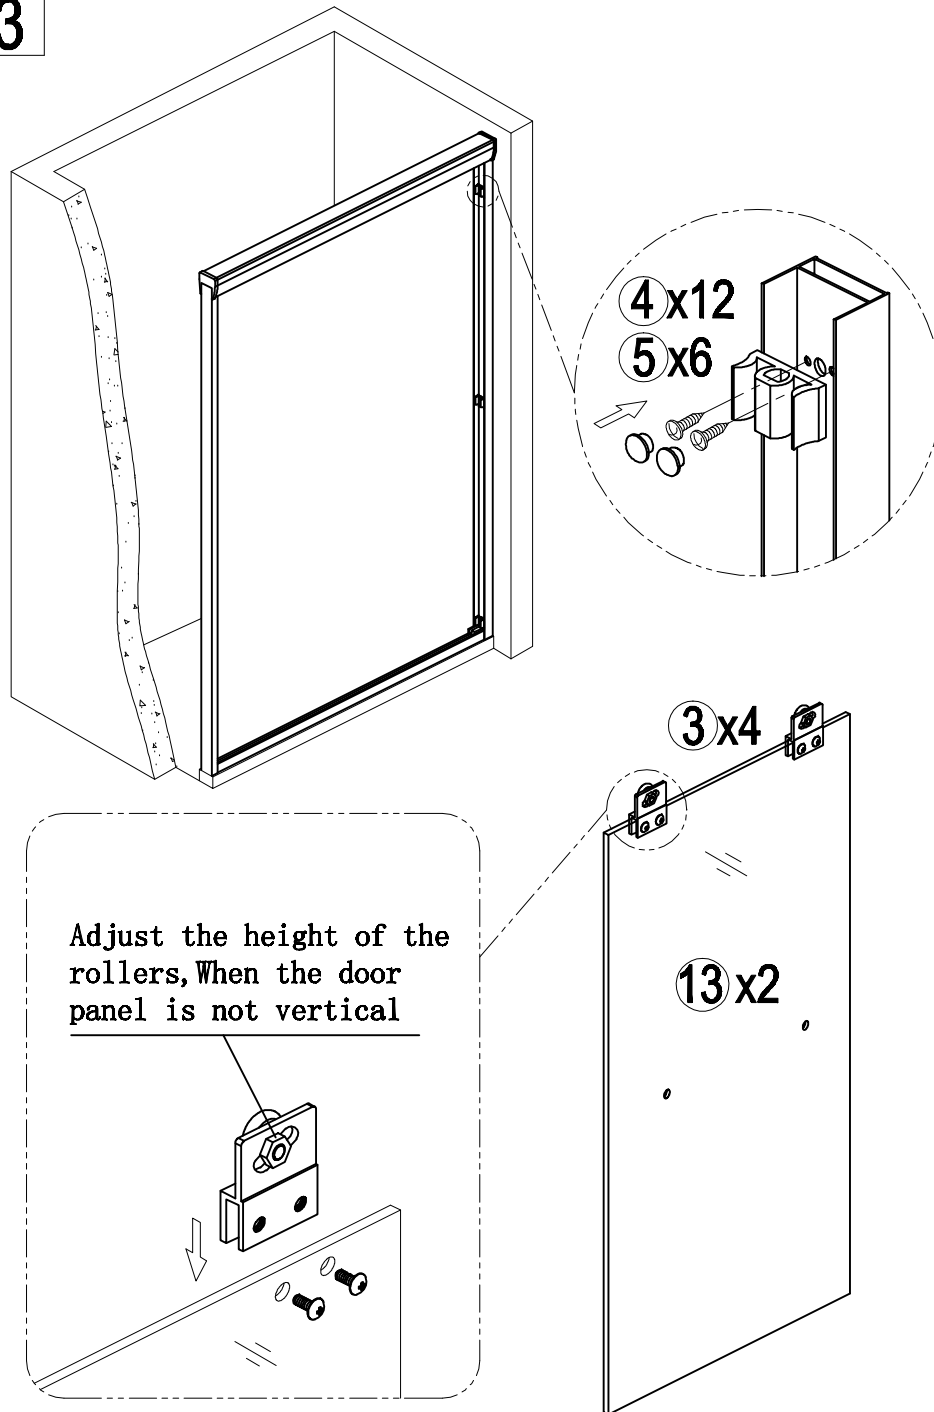


4

Easy cleaning face inside

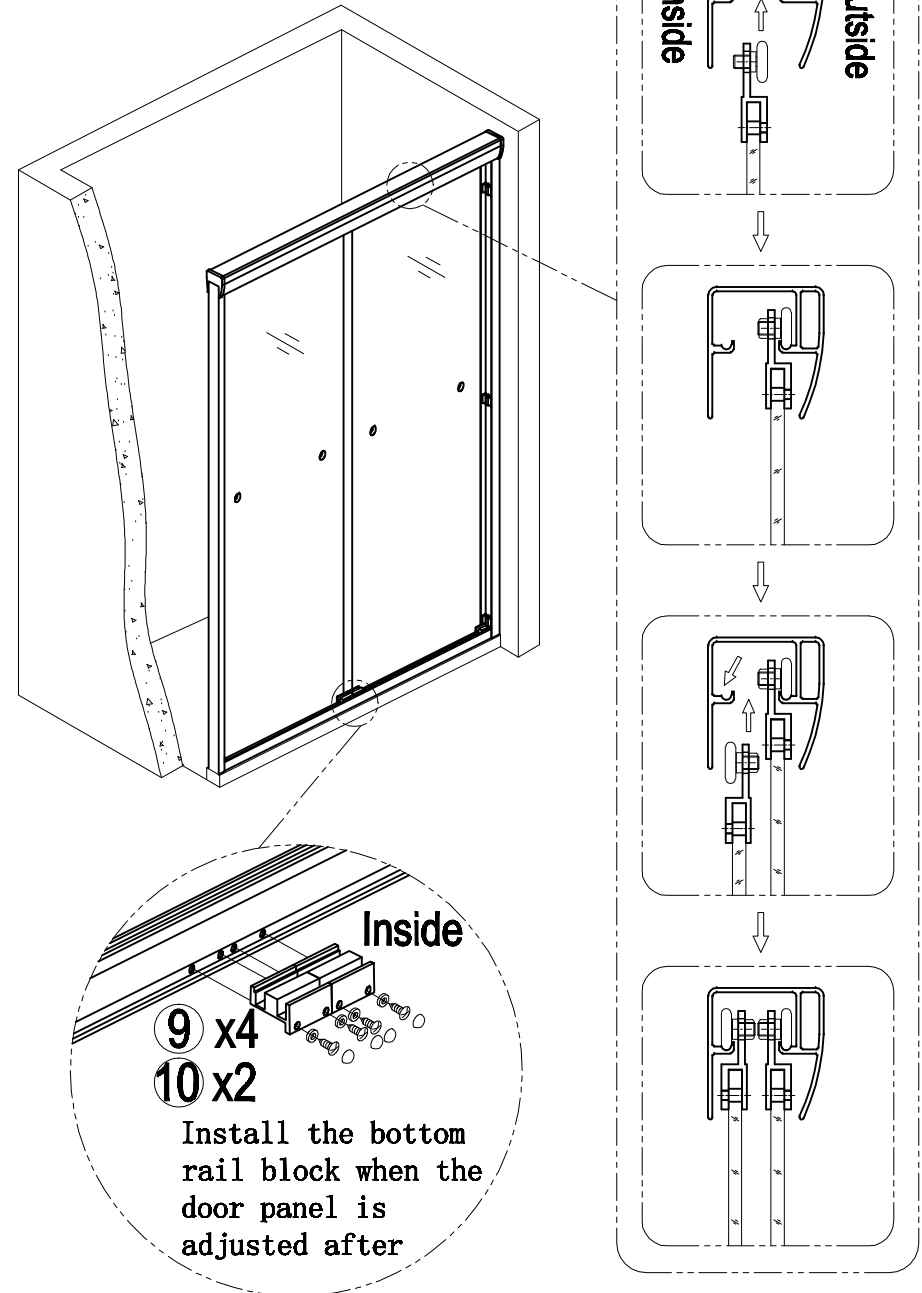

5

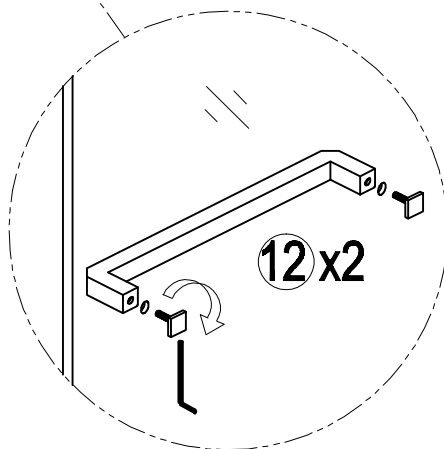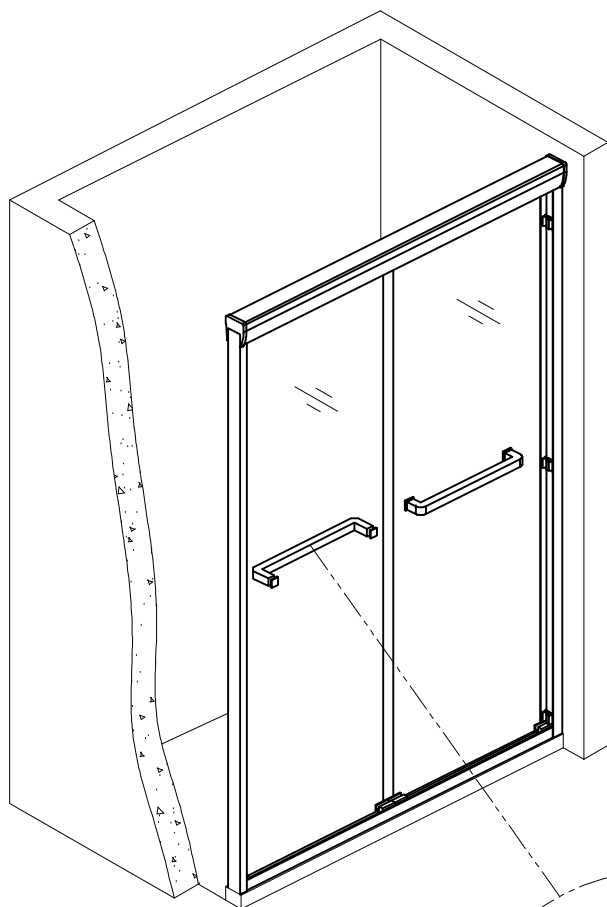

6

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

