


# Assembly Instruction

Item No.:500210-36

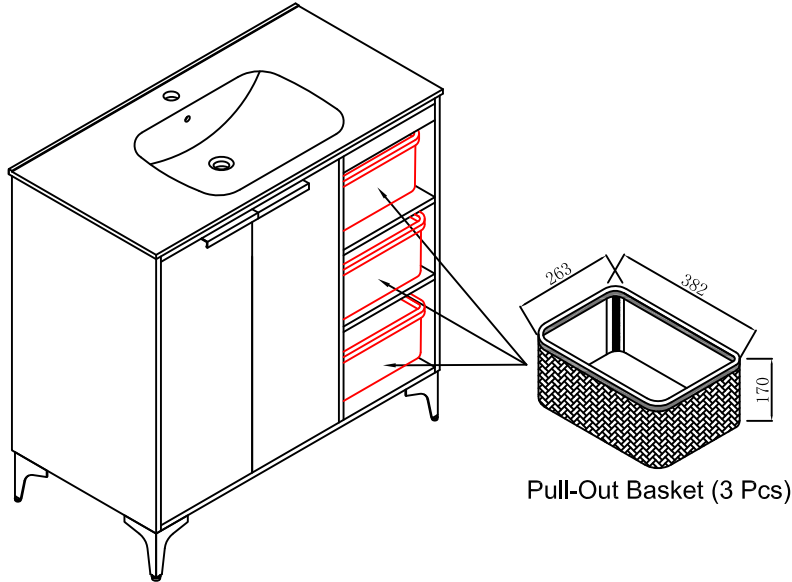


## Hardware

NO.	Draw	QTY
A	Screws Ø4x14mm	44
B	Two-in-one connector	38
C	Two-in-one connector	38
D	Wood plug	11
E	Bracket (53x70x44mm)	2
F	Plastic anchor(Ø10mm)	2
G	Screws for fix on the wall	2
H	Door stopper	2
I	Bracket (19x19x35mm)	2


NO.	Draw	QTY
J	Hinges ( Internal hiding )	4
K	Handle ( Screws Ø4x14mm)	2
L	Screws Ø4x25mm	2
M	Movable laminate support	4
N	Metal Feet	4
O	Screws M4x14mm	16
P	Anti-collision gasket	2
Q	Screwdriver	1

Page 1


## Components

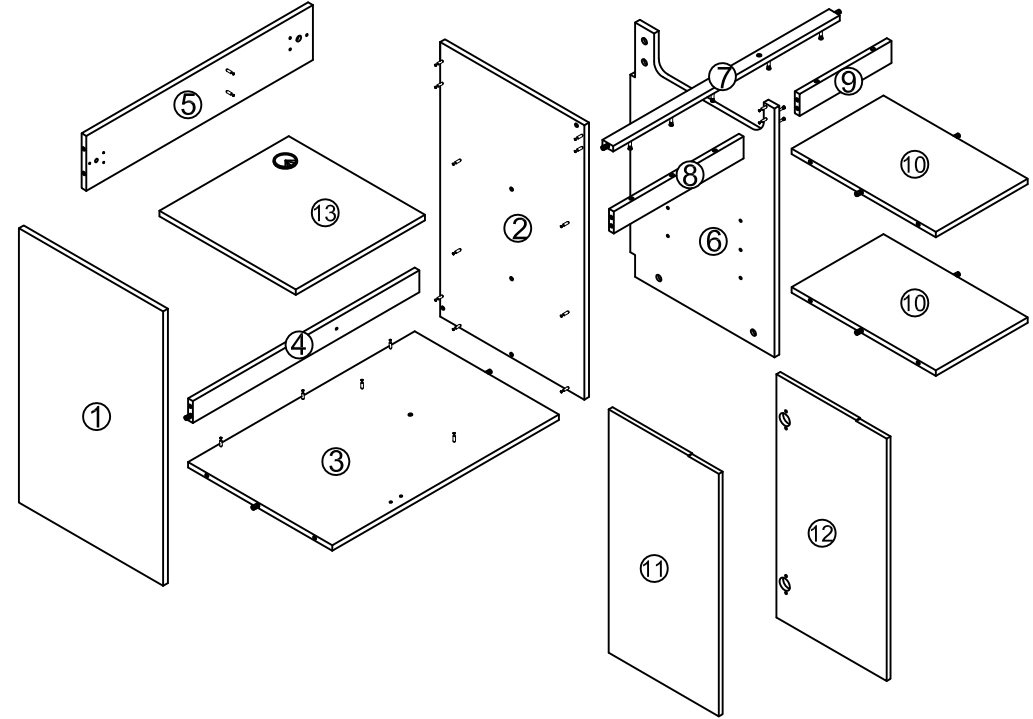

## Recommended tools You Will Need-Outils Requis

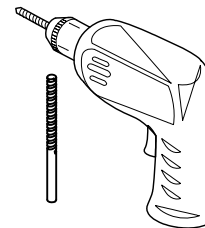

Power drill

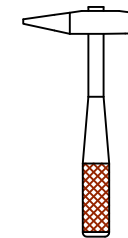

Hammer



Silicone



Pencil



Screwdriver

Page 2

# Step 1

- x3
- x3
- x1
- x1

Attention: Cam lock arrow point to the steel rod.

Notes: Screw installation depth as shown

# Step 3

- x4
- x4
- x1
- x1

# Step 2

- x4
- x4
- x1
- x1
- x1
- x1
- x1
- x1

Note: The D parts are used for this hole.

first step


second step

third step

# Step 4

- x5
- x5
- x1
- x1
- x1
- x1
- x1


## Step 5

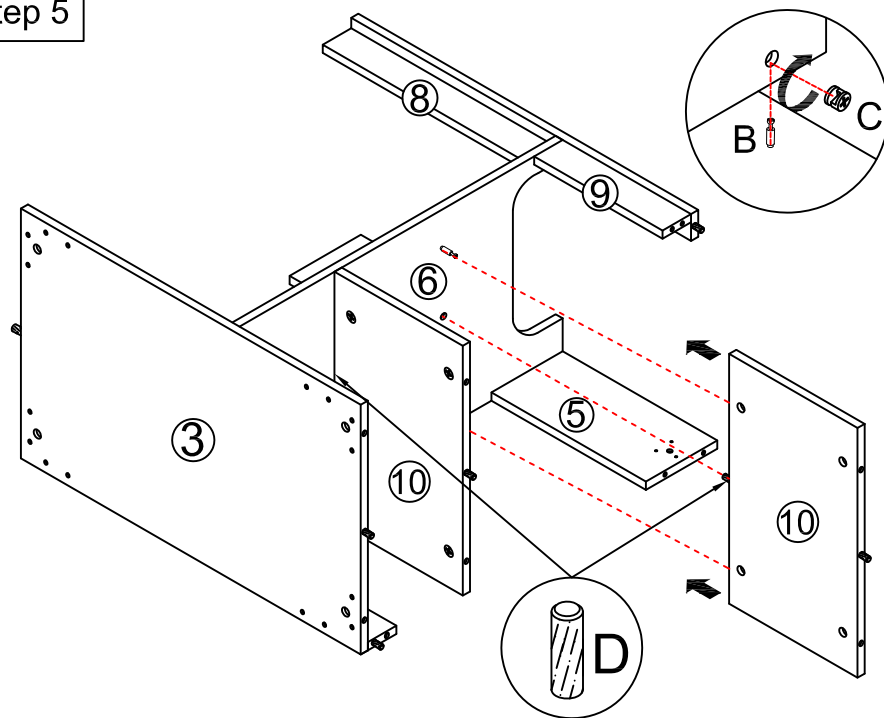

Note: The D parts are used for these two holes

	x4
B	
	x4
C	
	x2
D	
	x1
Q	


## Step 7

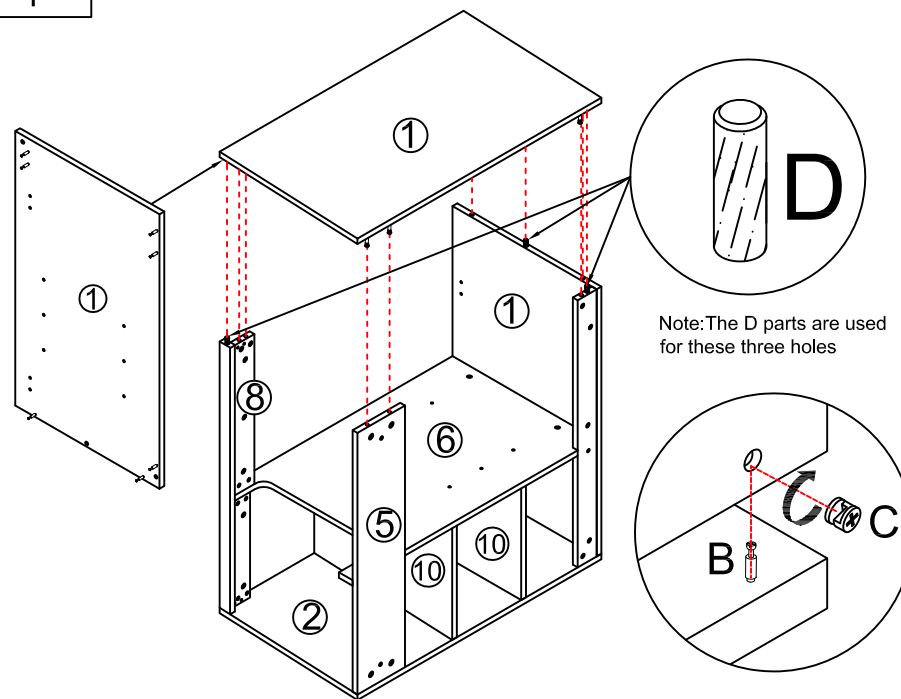

Note: The D parts are used for these three holes

	x7
B	
	x7
C	
	x3
D	
	x1
Q	


## Step 6

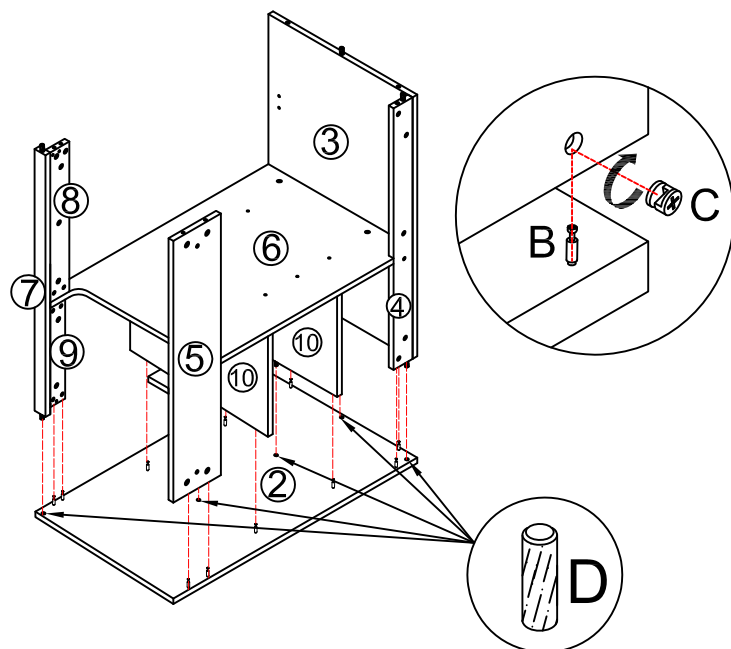

Note: The D parts are used for these five holes.



	x11
B	
	x11
C	
	x5
D	
	x1
Q	

## Step 8



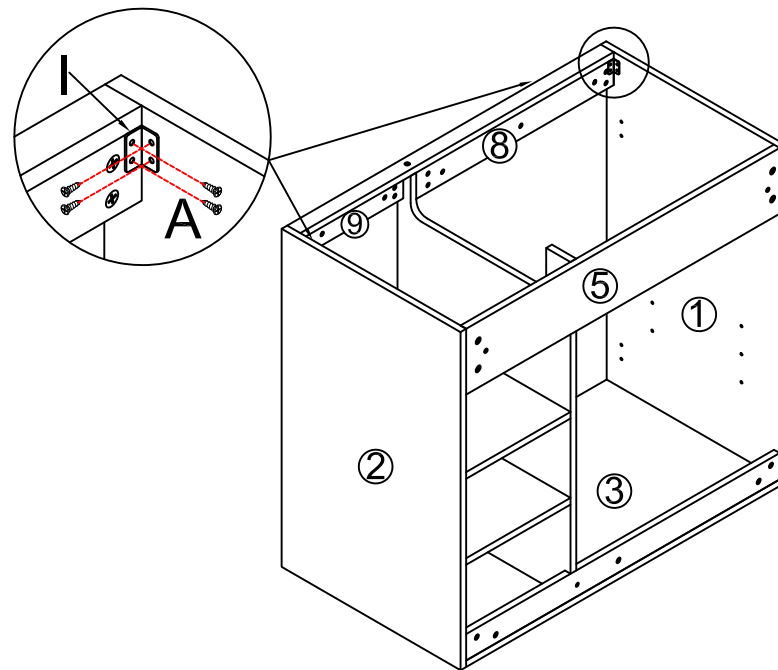


	x2
I	
	(ø4 x 14mm) x8
A	
Tool	



## Step 9

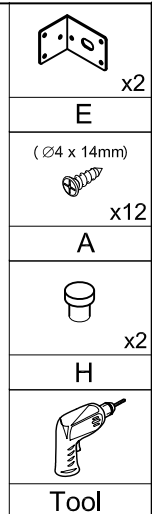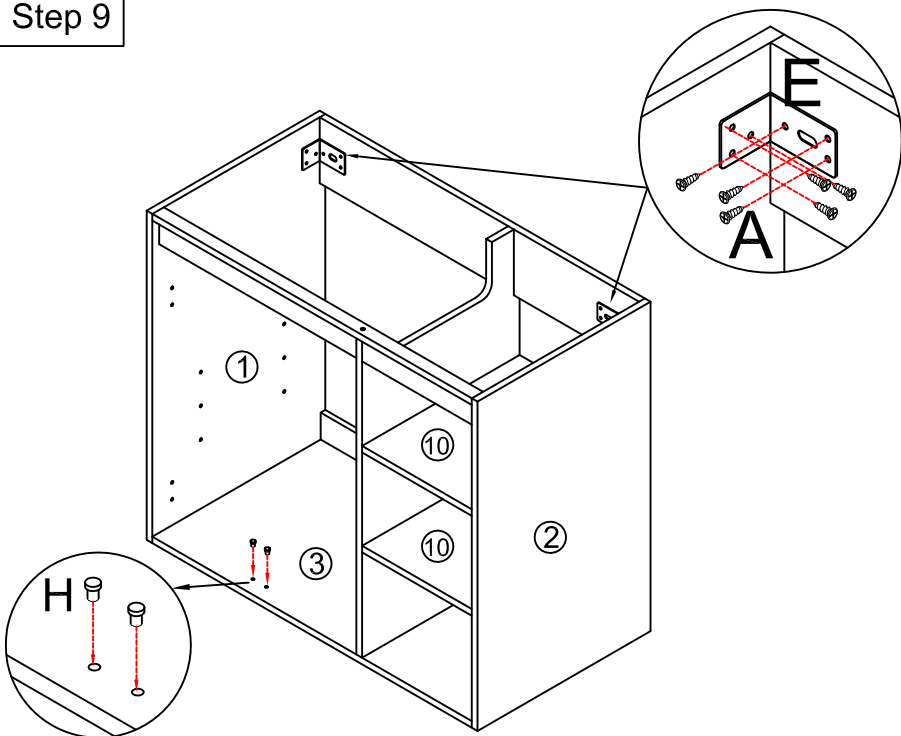


## Step 10

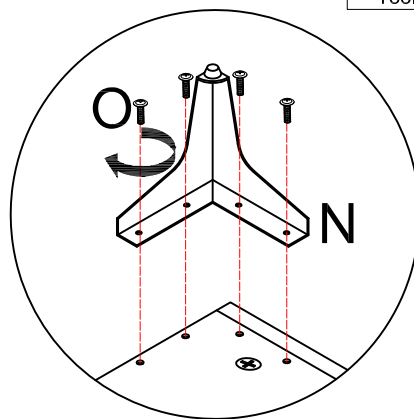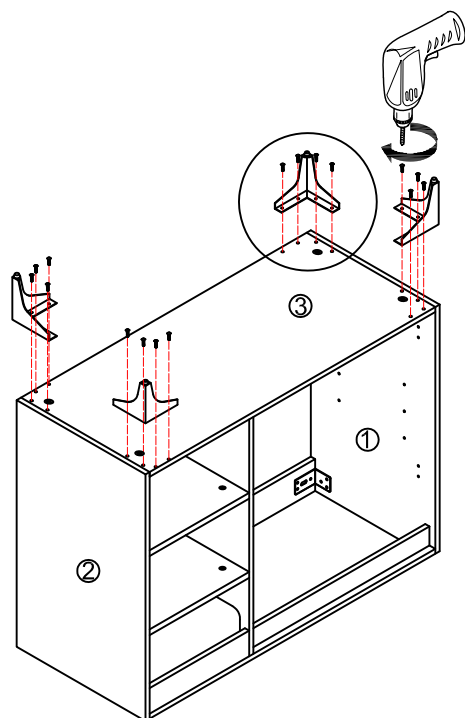


## Step 11

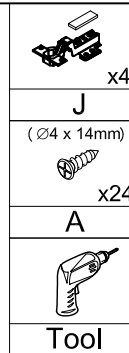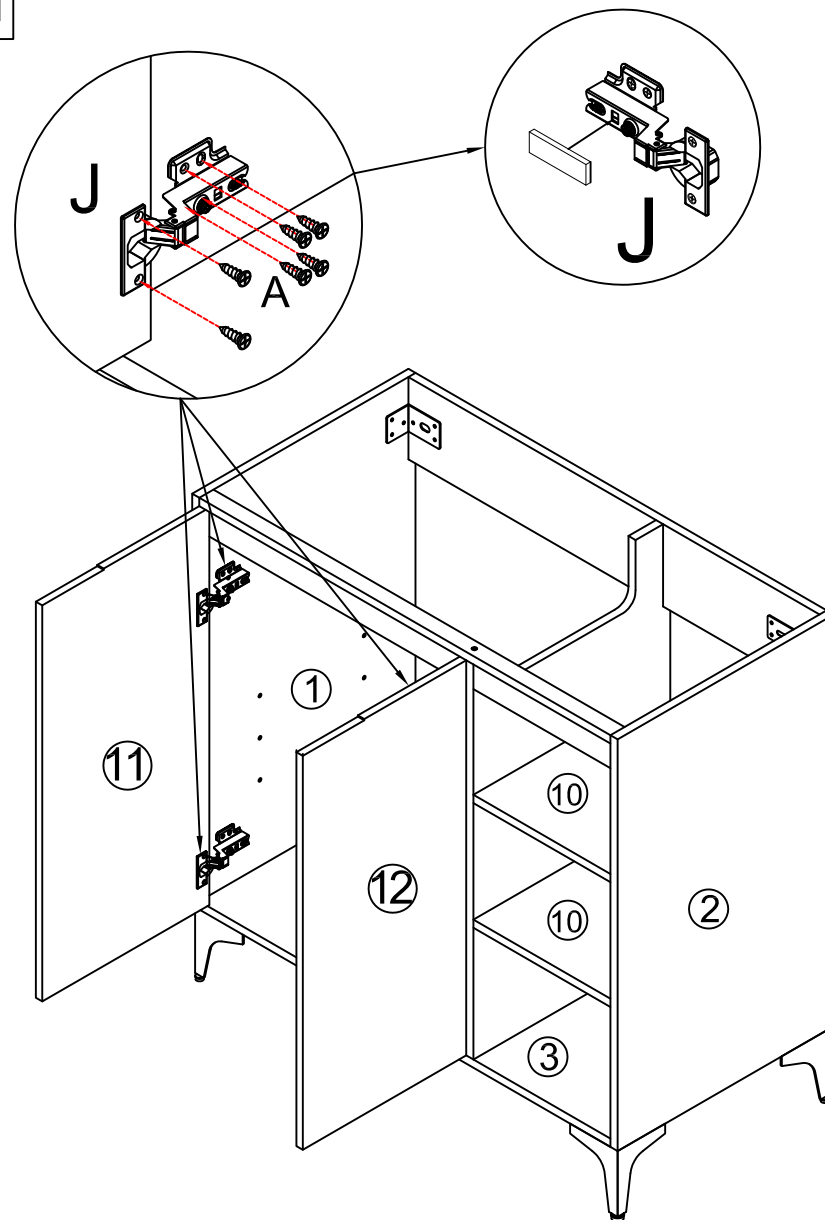

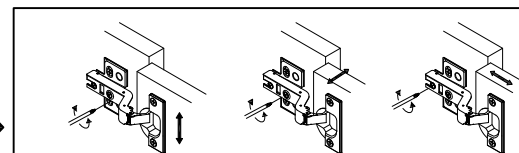


You can adjust the doors by tightening or loosening the screws on the hinge. ➔

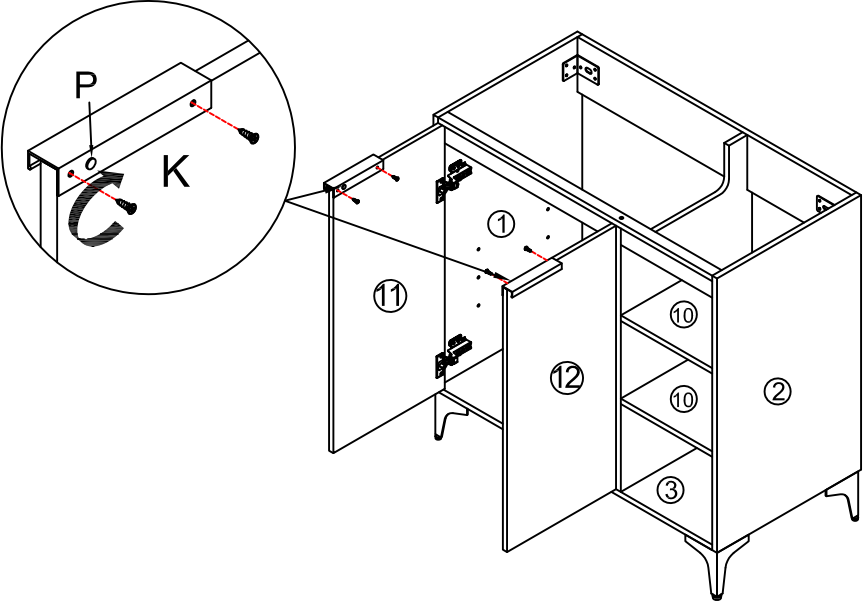




Step 12




-  x2
- K
-  x2
- P
-  Tool


Step 15

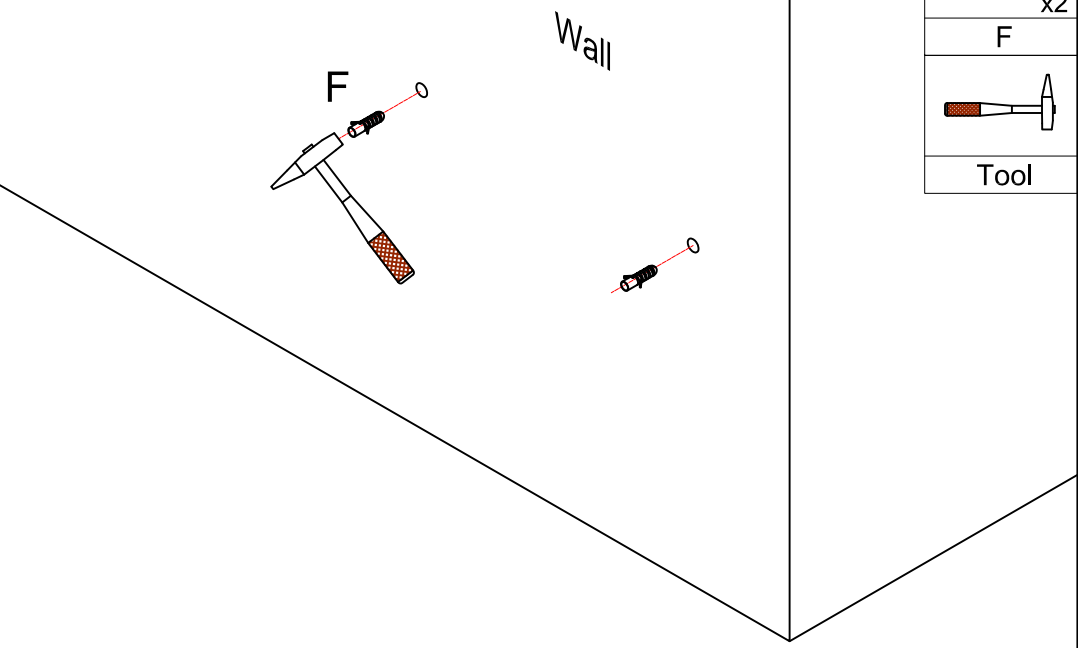


-  x2
- F
-  Tool

Step 13

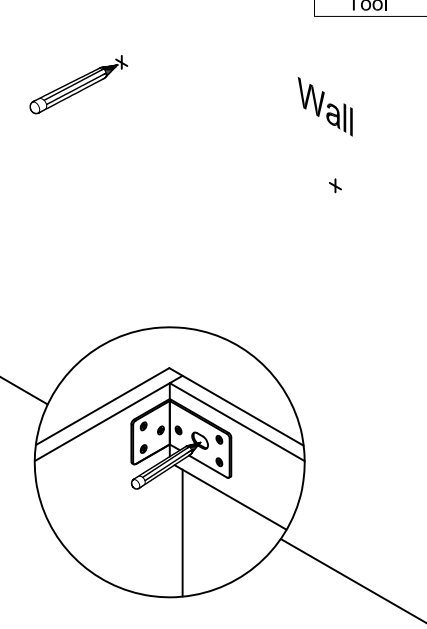


-  Tool



Step 14

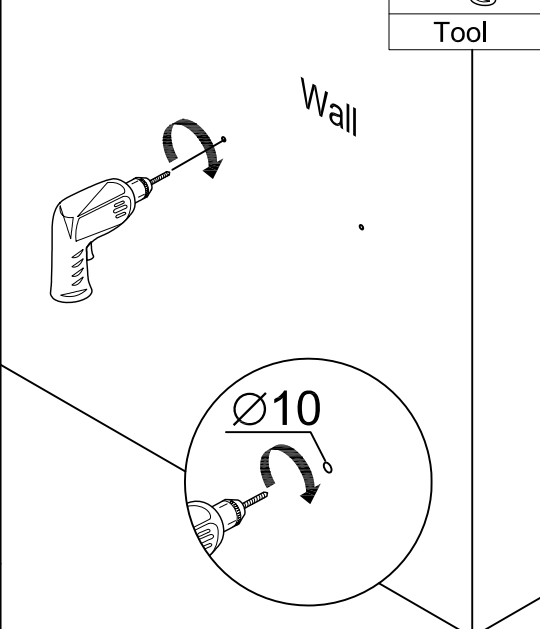


-  Tool

Step 16

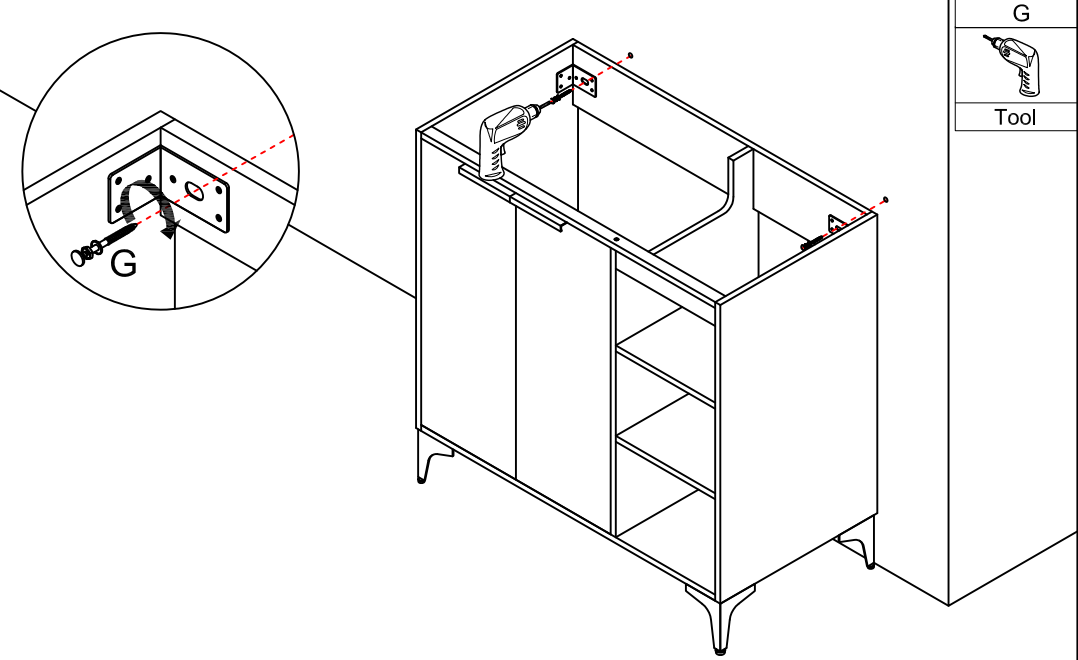


-  x2
- G
-  Tool

## Step 17

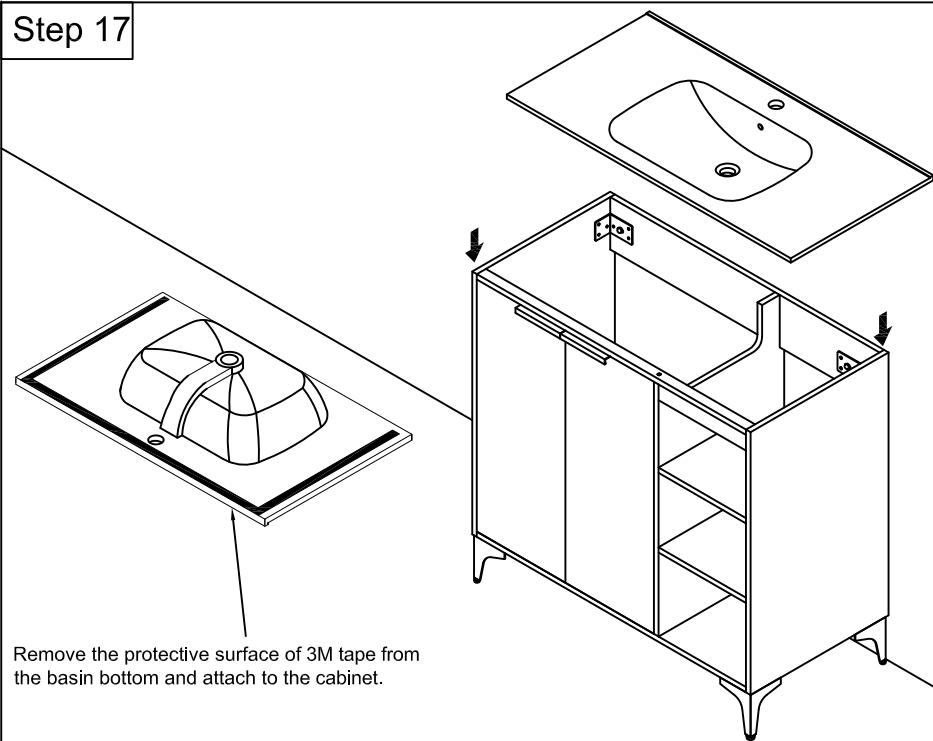


## Step 19

Lift the basket and straighten the support strip.

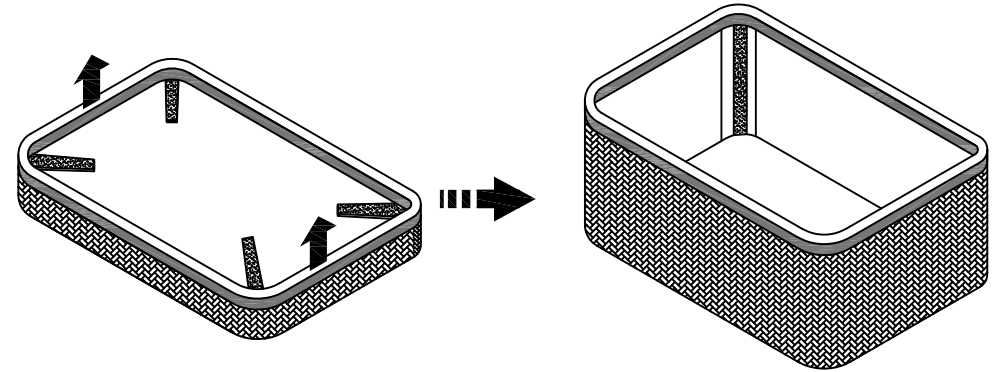

Pull-Out Basket (3 Pcs)

## Step 18

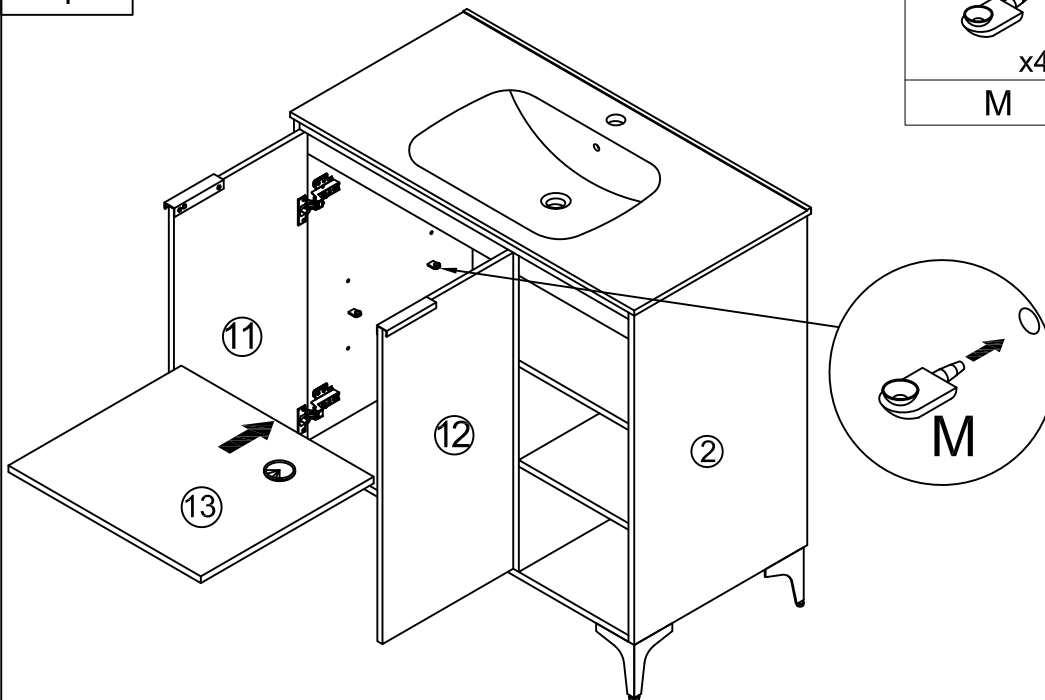

x4

M

## Finished

