




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

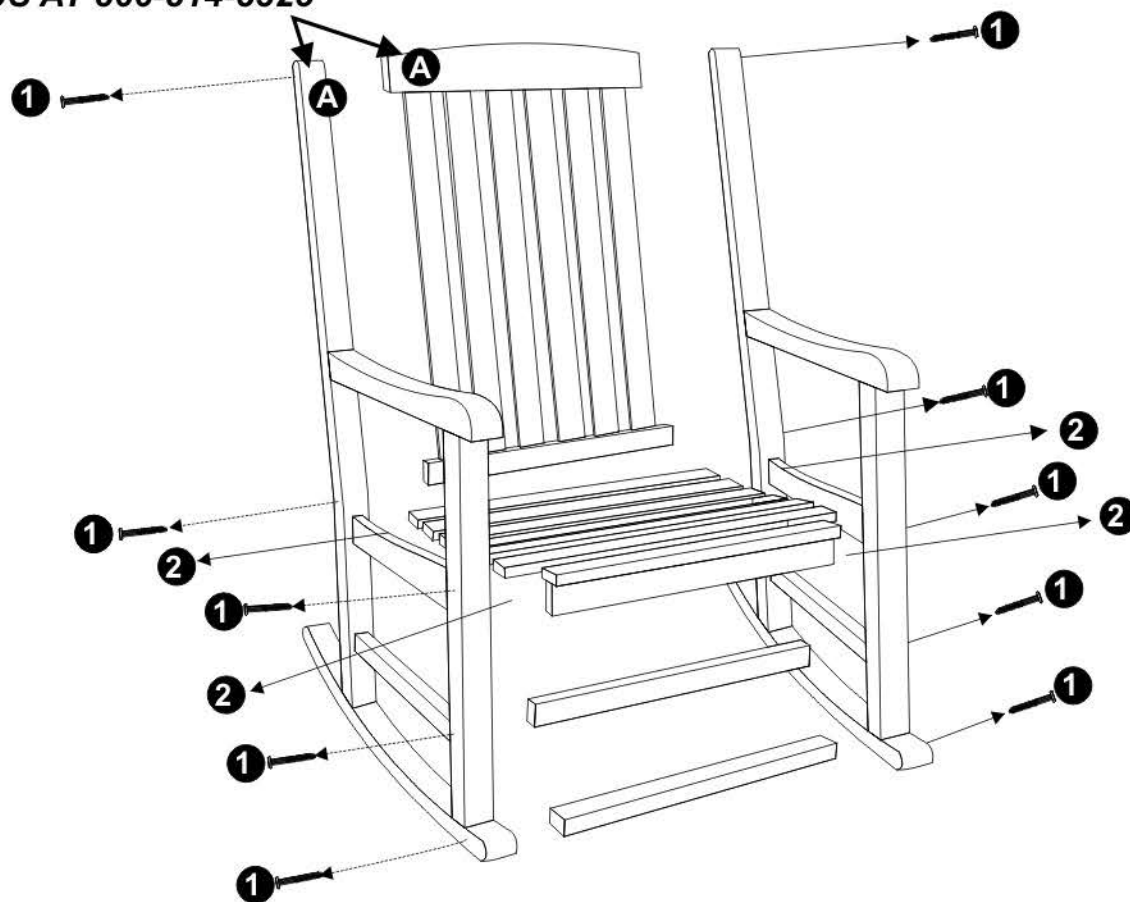

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code


WJ117

Hardware



- 1. F. BOLT (10 pcs)
- 2. SCREW (4 pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

6 Section