

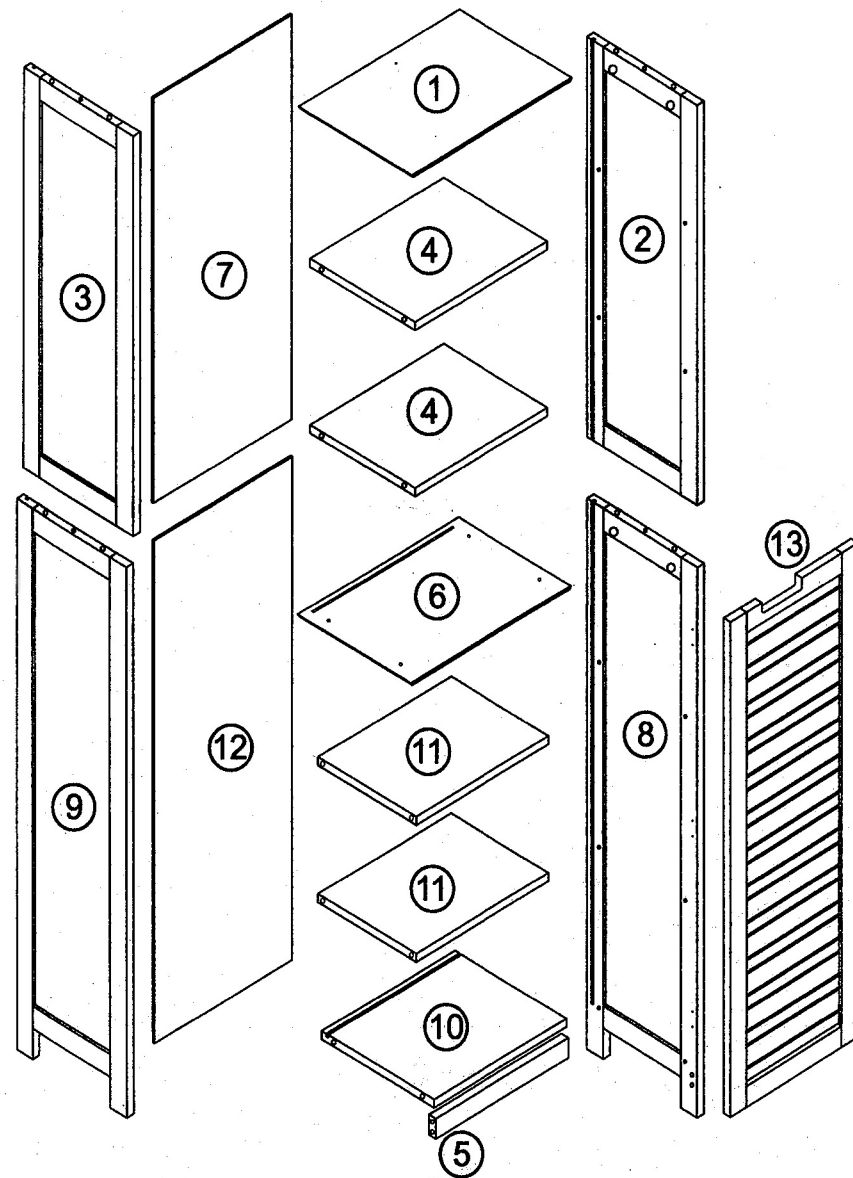
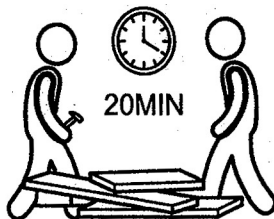

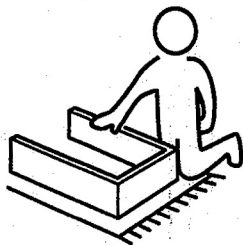
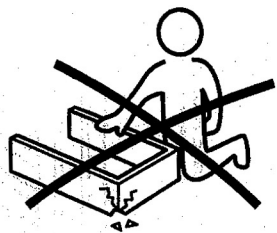
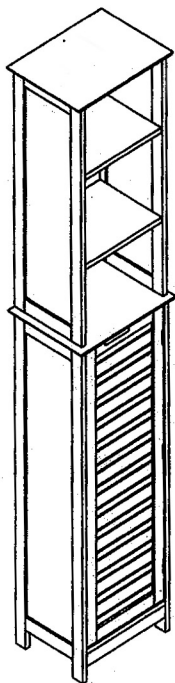


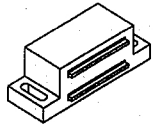




9901-300



Ax28  6x35mm	Bx28  15x12mm	Cx8  6x30mm
Dx1  	Ex10  3x14mm	Fx3 
Gx13  3x12mm	Hx1  	Ix5  4x35mm
Jx1  	Kx1  	Lx8 
Mx1  	Nx8  	

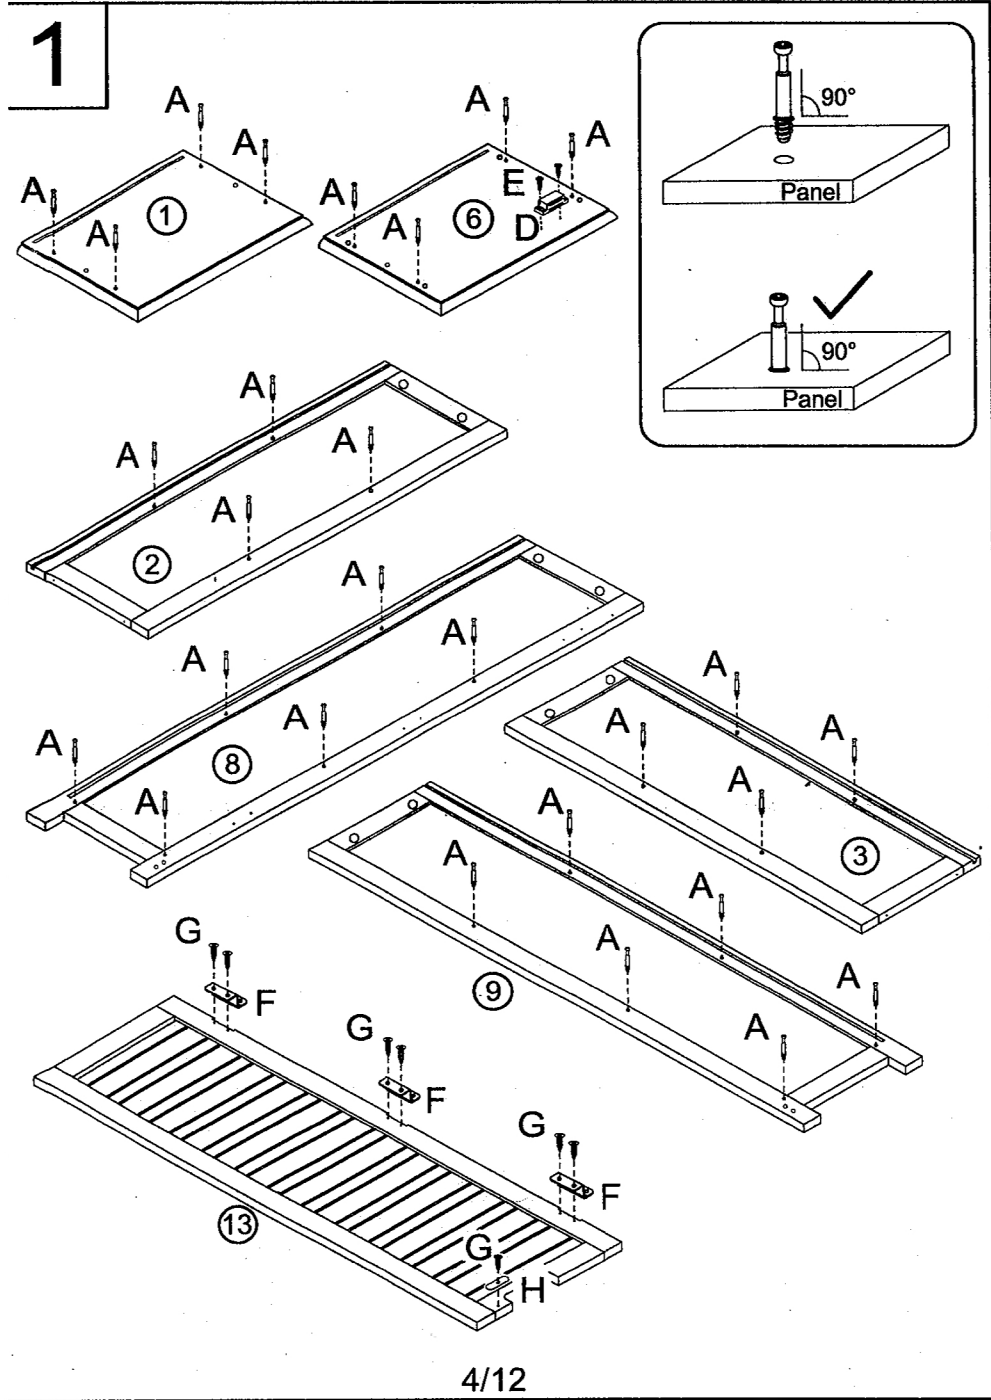


2

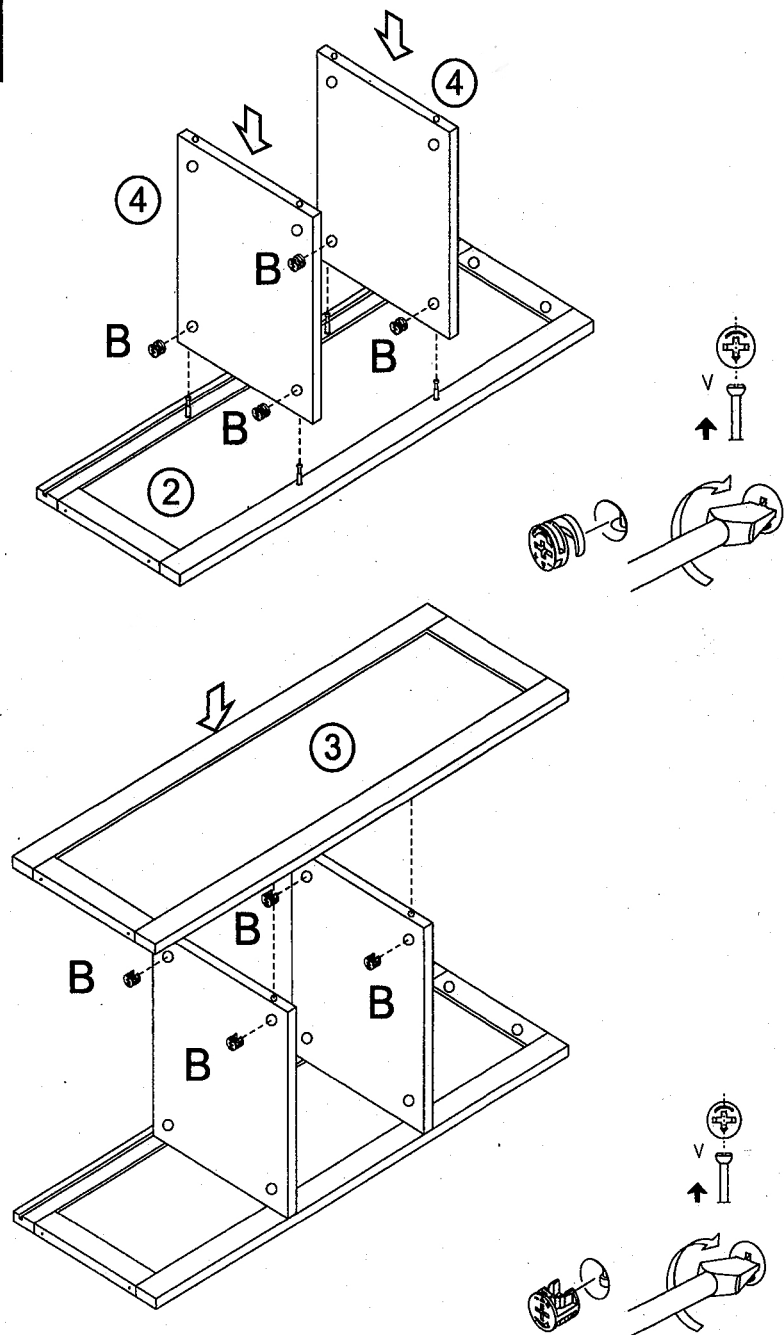


5/12

3

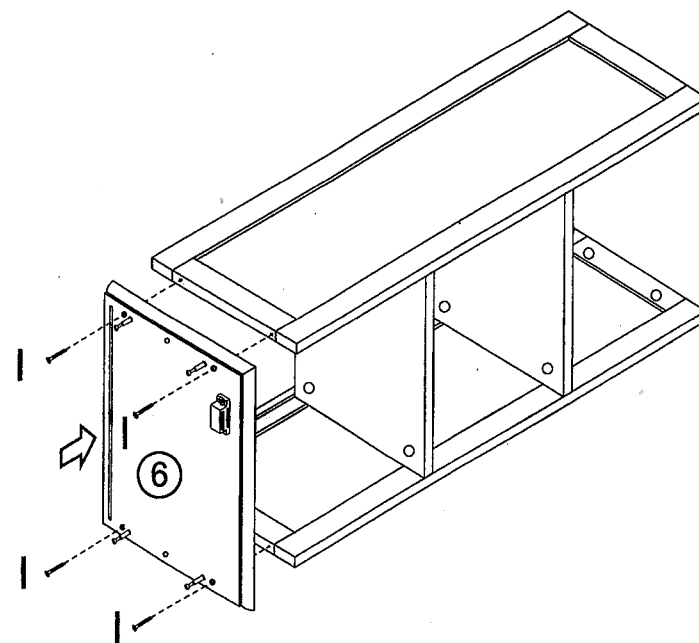


6/12

4

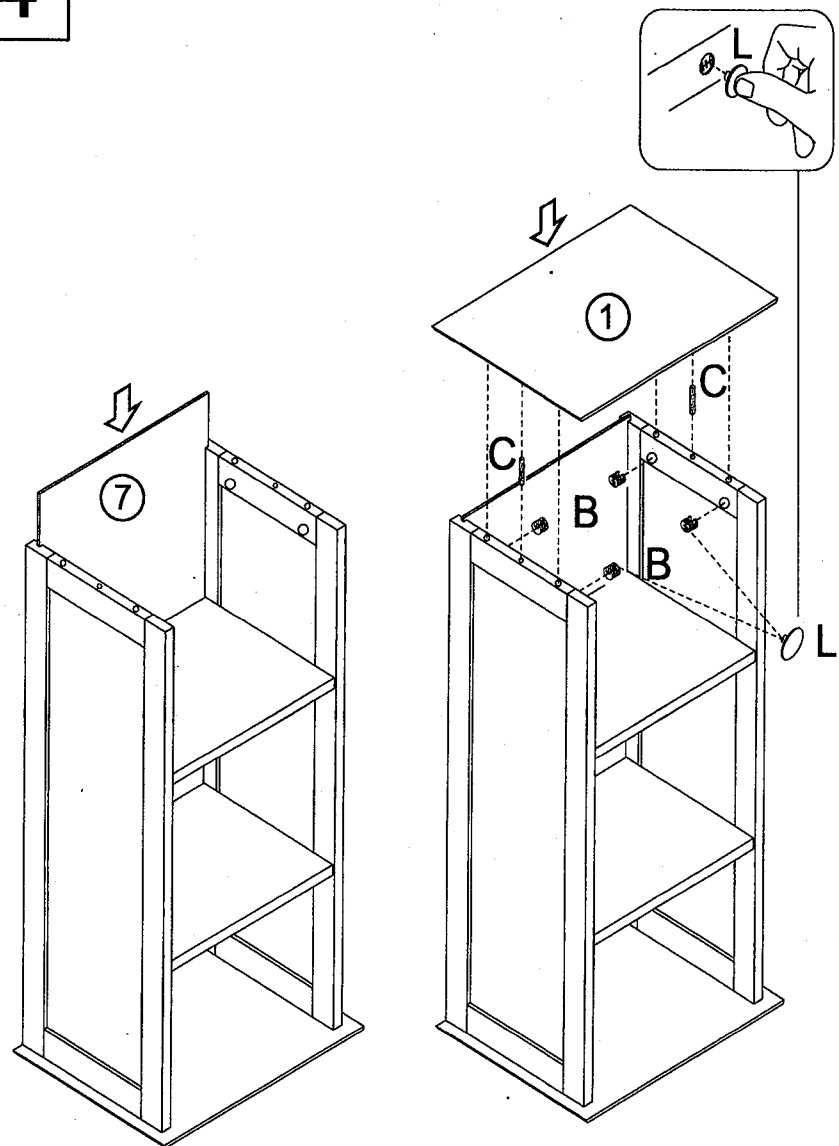


7/12

5

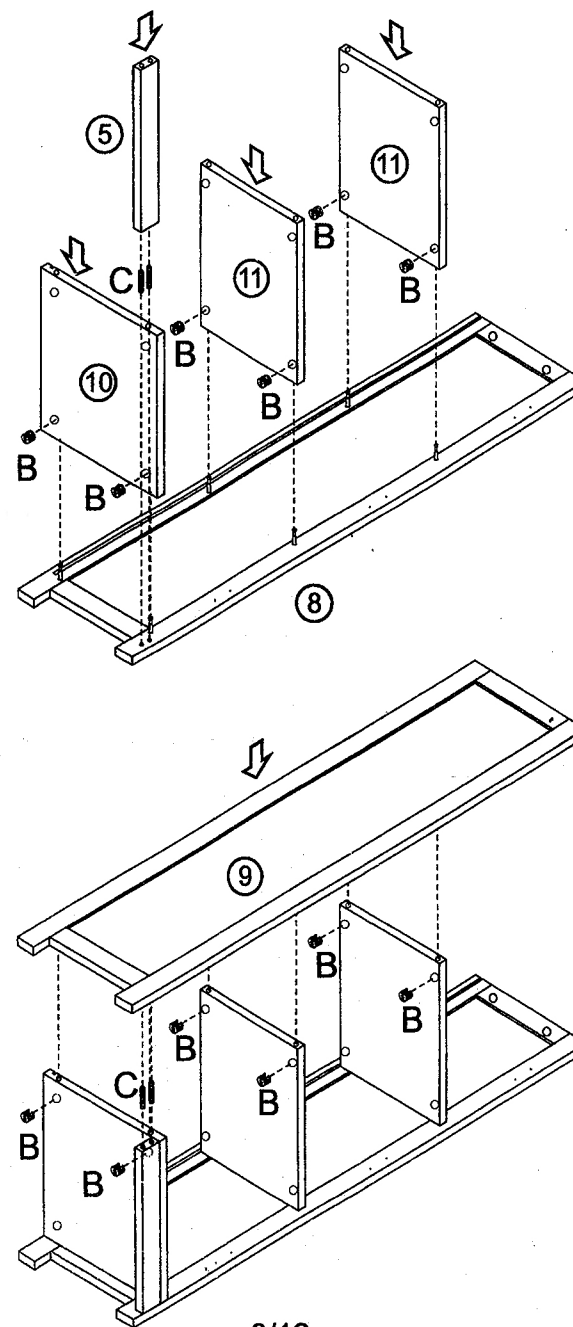


8/12

6

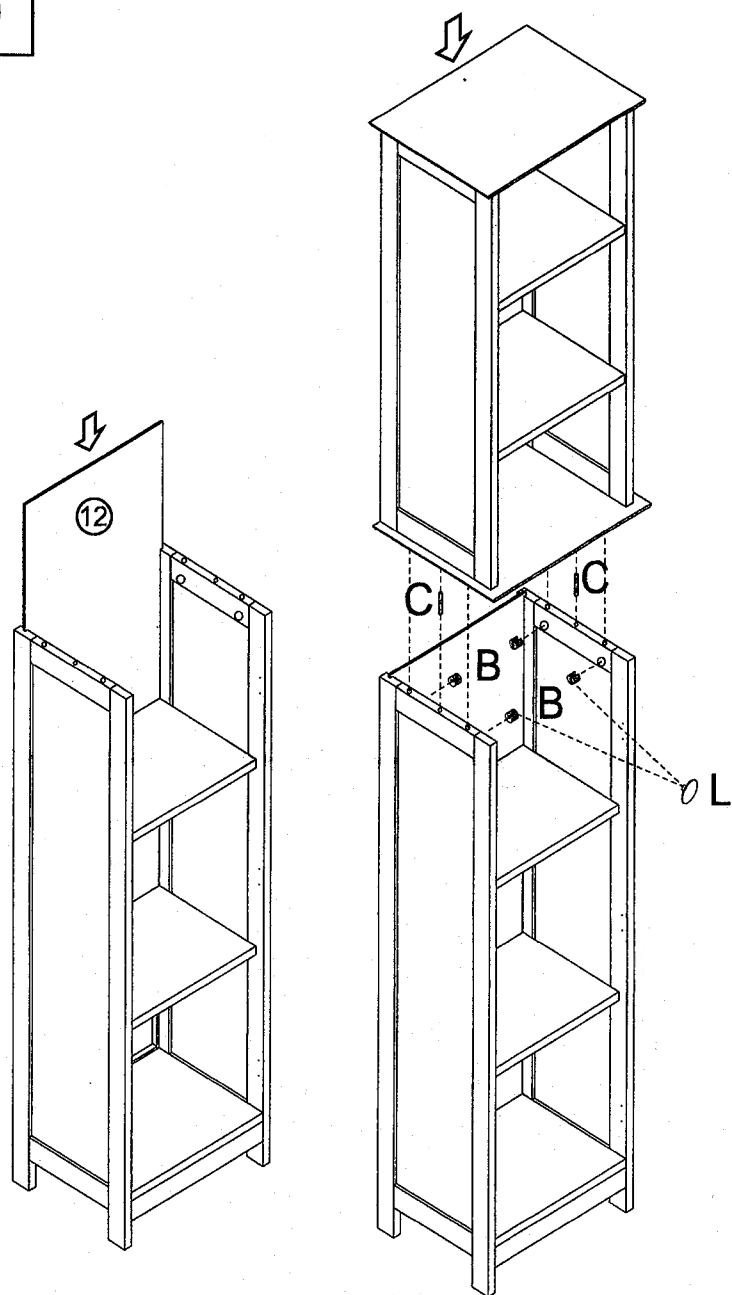

9/12


7

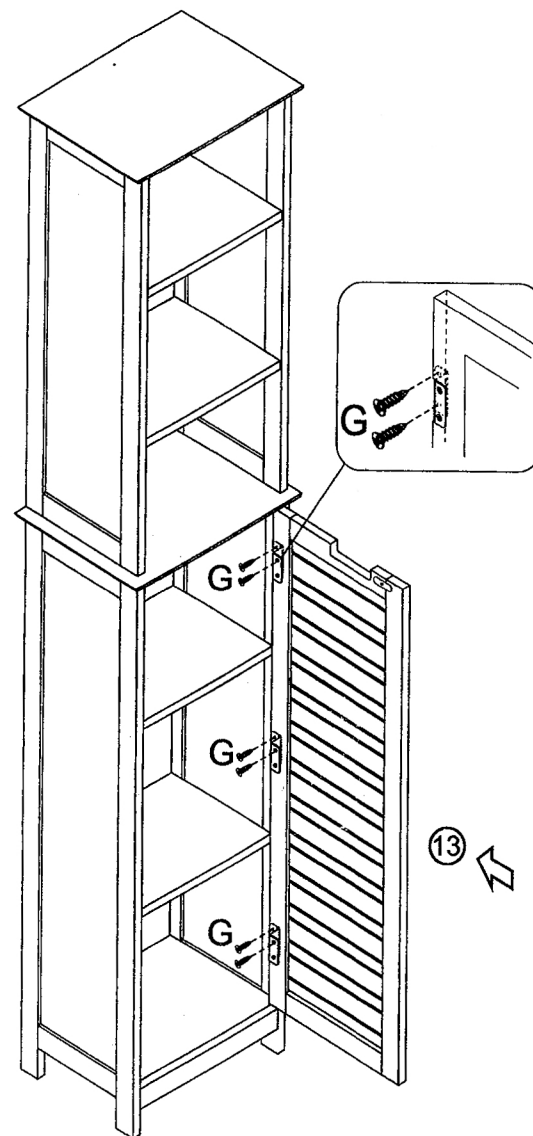

10/12






8

Avant de fixer "N", s'assurer que la dimension "XX=YY".
Before fix "N", please make sure size "XX=YY".

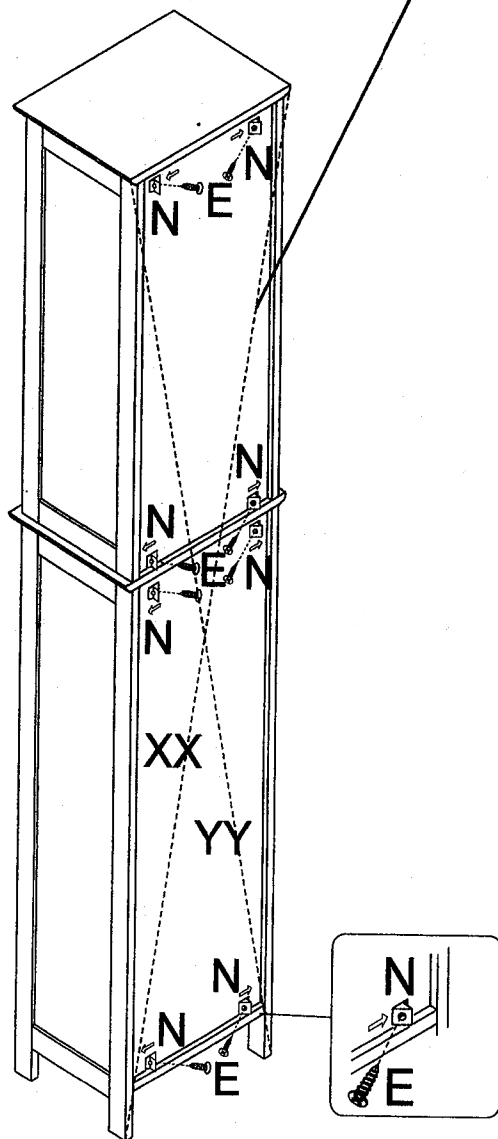

11/12

9

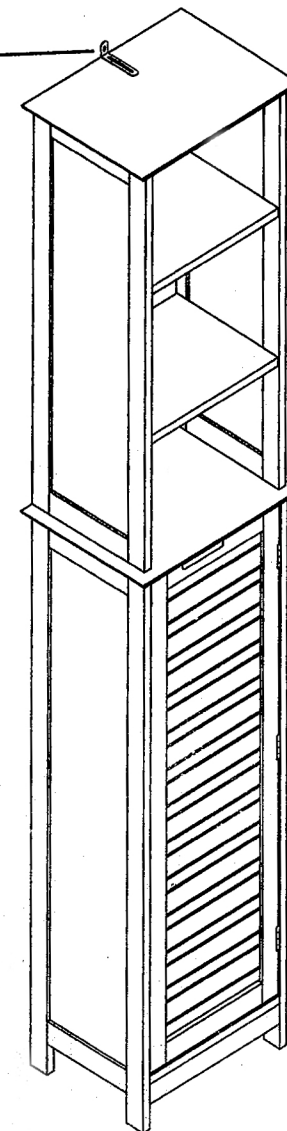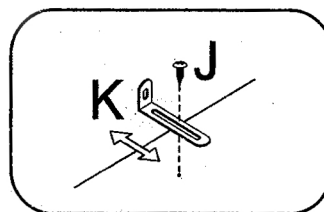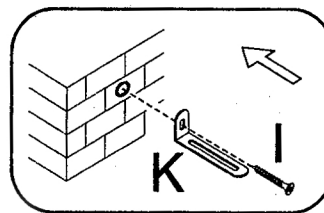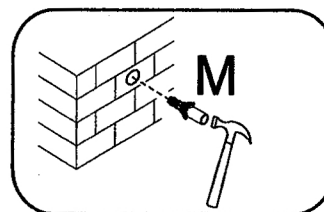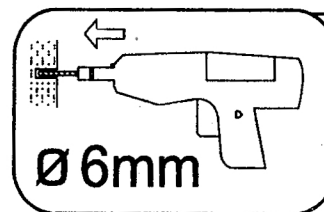

12/12