

ASSEMBLY INSTRUCTIONS

MODEL :0286A
QUEEN (5+5+5)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
D	Side Rail	2 pcs
E	Slat With Stopper	2 pcs
F	Slat W/o Stopper	3 pcs
G	Slat Support (M6x18mm E-Nut x2)	5 pcs
H	Concealed Panel	5 pcs


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	ALLEN KEY m4x65mm Blk	1 pc
2	JCBC M6 x 35mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4"ID x 13mmOD Blk	6 pcs

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (2)with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (1) .

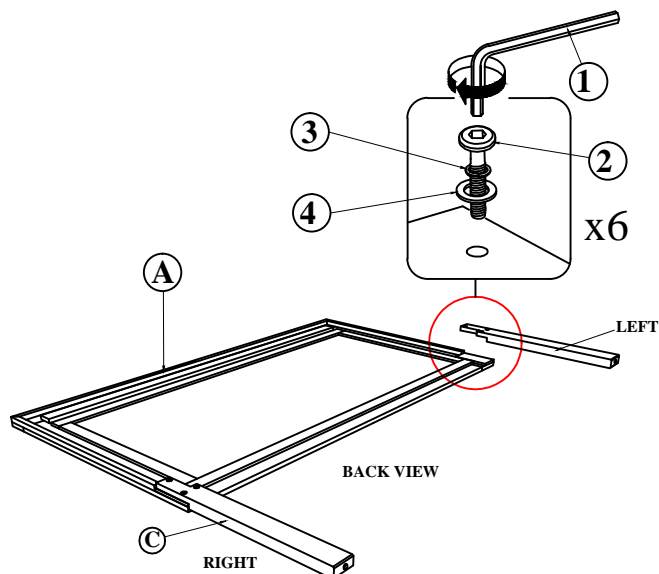


STEP 2 : Hook SIDE RAIL (D) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

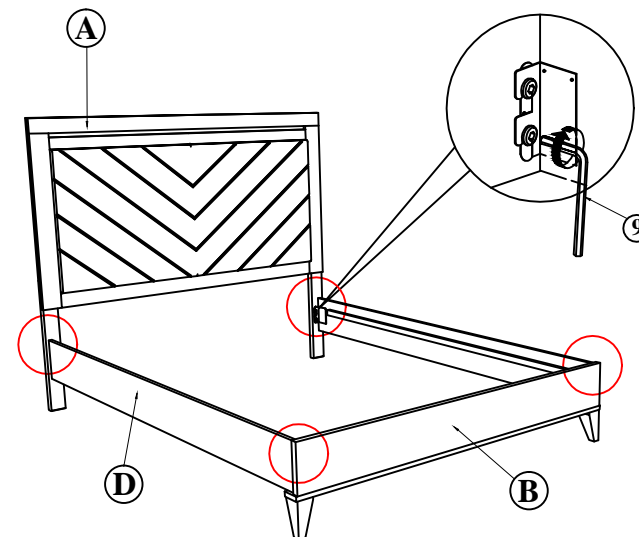

STEP 3 : Tighten the 4 Corner with Allen Key (9).Fix the Bed Slat Support Leg (G), to Bed Slat (E)&(F) using JCBC (6) as shown . Install the bed slat to side rail (D) and tighten with Csk Screw (5) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

STEP 3.2 :

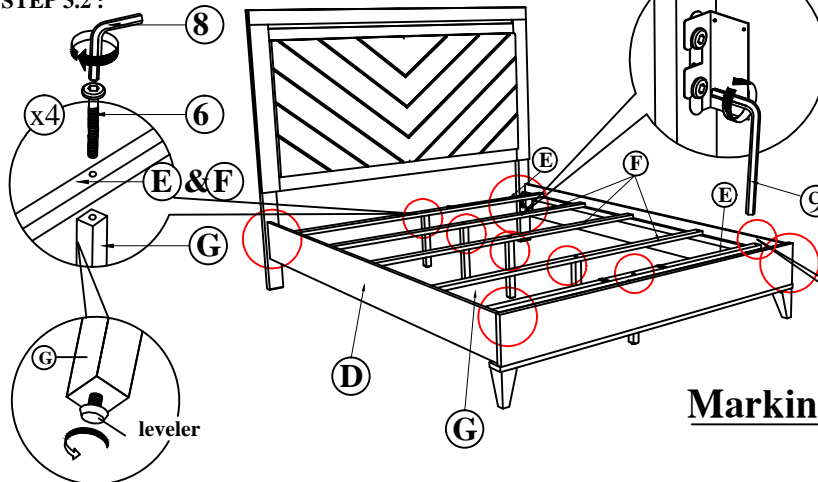


STEP 3.1 :

Push the side rail(D) meet with wooden slat (E)&(F) by follow the marking line provided and fix the CSK screw (5) by using the Screw Driver.

Marking Line

STEP 3.4 :

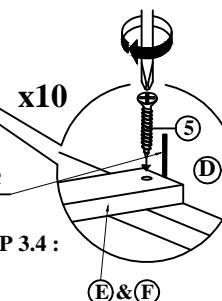

(Box 2)
HARDWARE LIST

No	ITEM	Qty
5	Csk M4 x 32mm	10 pcs
6	JCBC M6 x 50mm	5 pcs
7	Pan Head Chipboard Screw m3.5x20mm	25 pcs
8	ALLEN KEY m4x65mm Blk	1 pc
9	ALLEN KEY m5x65mm Blk	1 pc


STEP 3.3 :

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 1 OF 2


ASSEMBLY INSTRUCTIONS

STEP 4 : Attention! Screw on this markings on concealed panel slat (H).

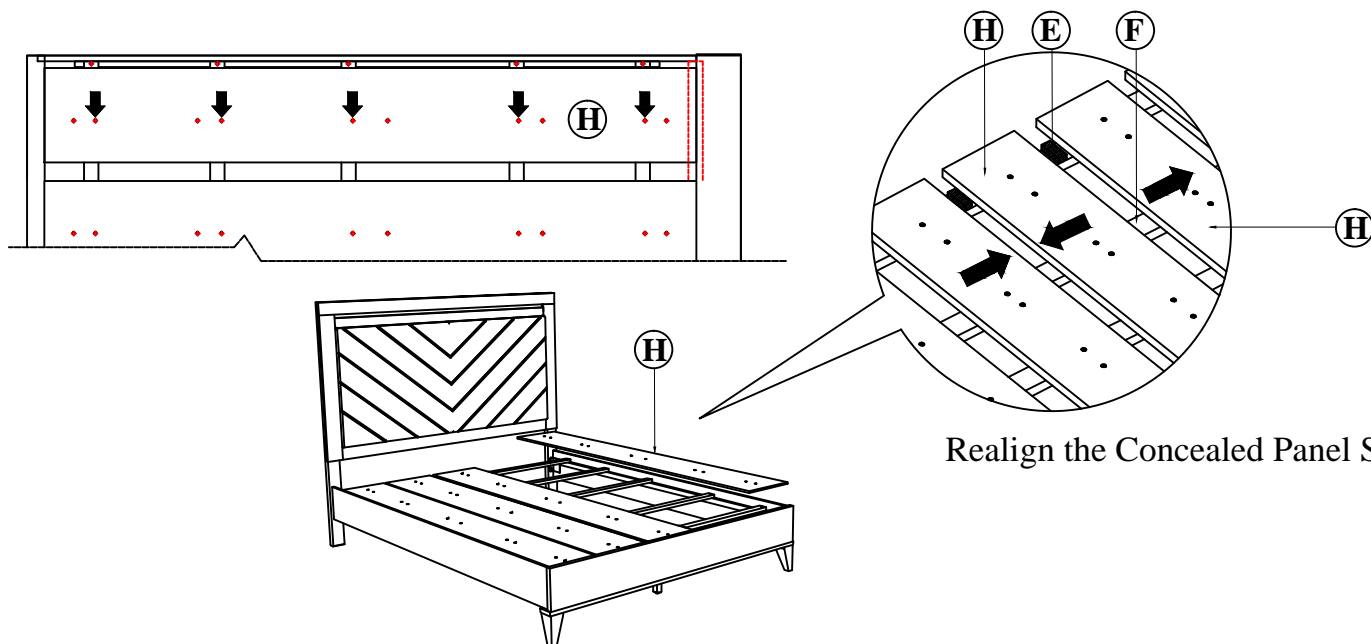

Realign the Concealed Panel Slat (H) as shown.

STEP 4 : Attach Concealed Panel (H) over the Bed Slat (E)&(F) using Panhead Screw (7) and tighten with Screw Driver. (Not included)

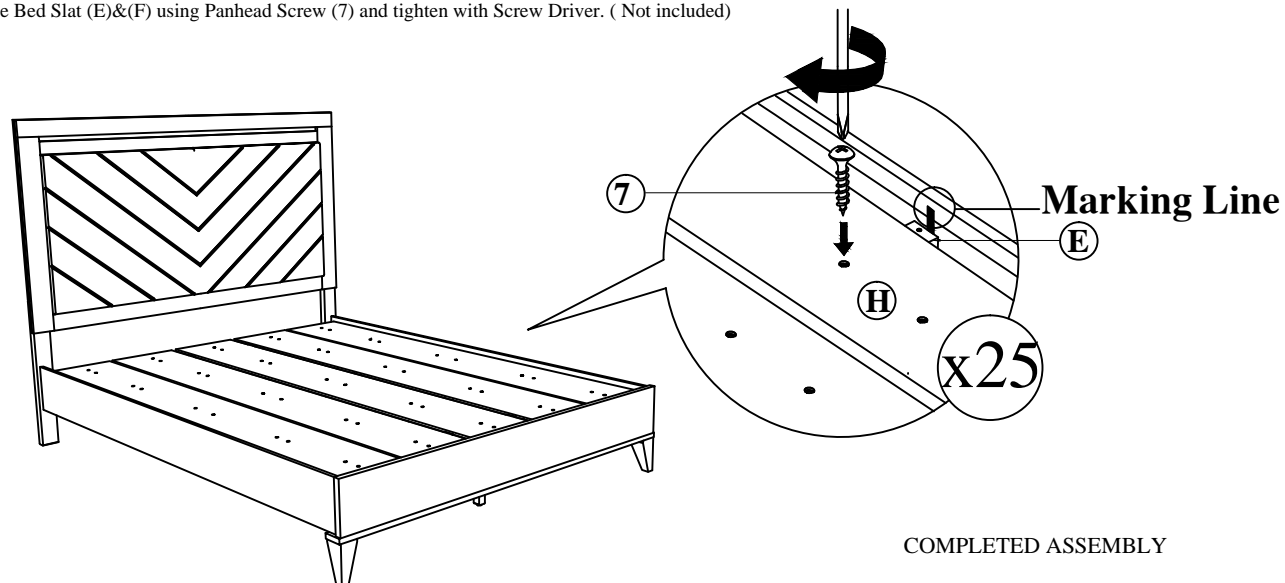

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 2 OF 2

ASSEMBLY INSTRUCTIONS

MODEL :0286A
EASTERN KING (5+6+10)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
D	Side Rail	2 pcs
E	Slat With Stopper	2 pcs
F	Slat W/o Stopper	3 pcs
G	Slat Support (M6x18mm E-Nut x2)	10 pcs
H	Concealed Panel	6 pcs


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	ALLEN KEY m4x65mm Blk	1 pc
2	JCBC M6 x 35mm	6 pcs
3	SPRING WASHER Rbw 1/4"	6 pcs
4	Flat Washer 1/4"ID x 13mmOD Blk	6 pcs

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (2)with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (1) .

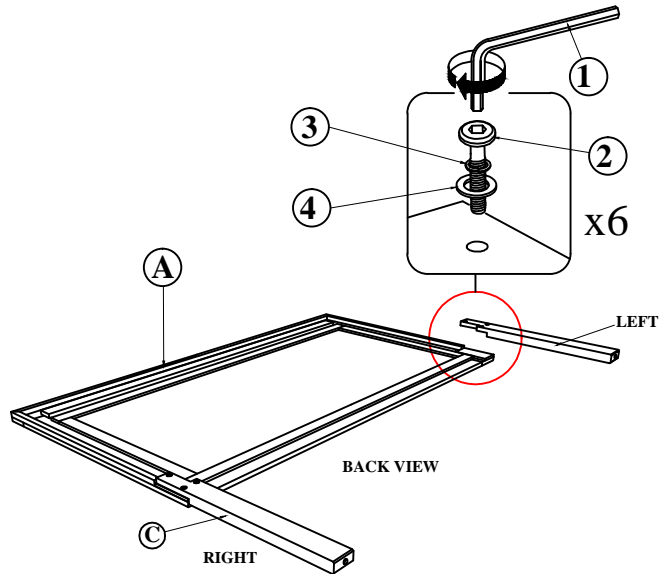


STEP 2 : Hook SIDE RAIL (D) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

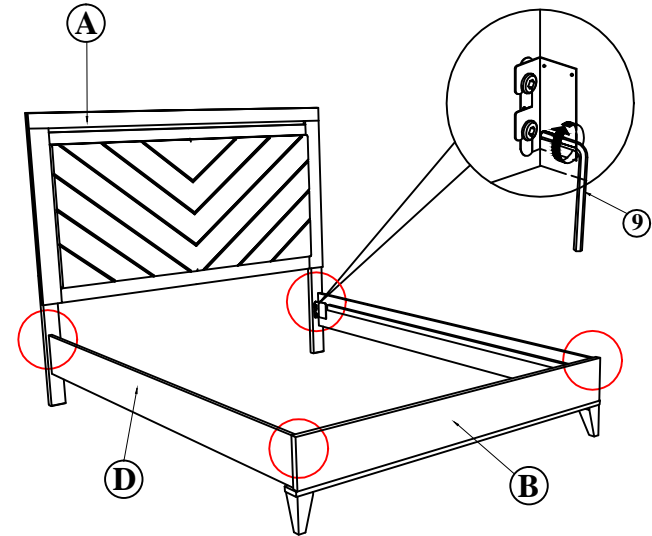

STEP 3 : Tighten the 4 Corner with Allen Key (9).Fix the Bed Slat Support Leg (G), to Bed Slat (E)&(F) using JCBC (6) as shown . Install the bed slat to side rail (D) and tighten with Csk Screw (5) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

STEP 3.2 :

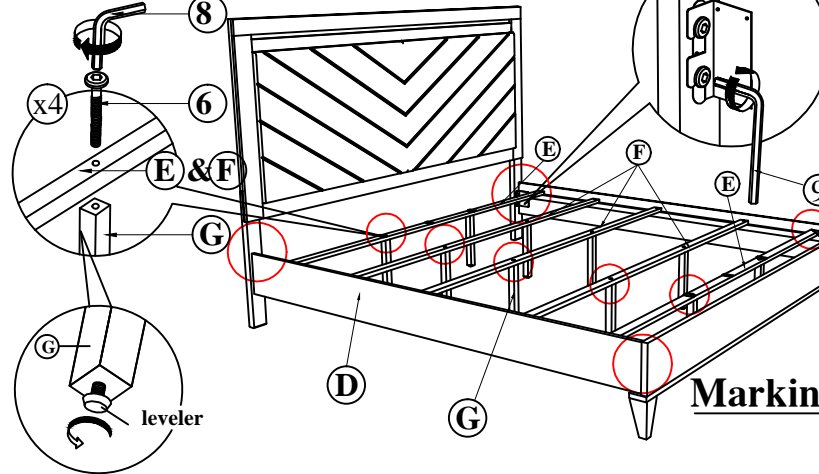


STEP 3.1 :

Push the side rail(D) meet with wooden slat (E)&(F) by follow the marking line provided and fix the CSK screw (5) by using the Screw Driver.

STEP 3.3 :

Marking Line

STEP 3.4 :

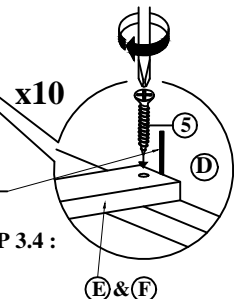

(Box 2)
HARDWARE LIST


No	ITEM	Qty
5	Csk M4 x 32mm	10 pcs
6	JCBC M6 x 50mm	10 pcs
7	Pan Head Chipboard Screw m3.5x20mm	30 pcs
8	ALLEN KEY m4x65mm Blk	1 pc
9	ALLEN KEY m5x65mm Blk	1 pc

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


PAGE 1 OF 2

ASSEMBLY INSTRUCTIONS

STEP 4 : Attention! Screw on this markings on concealed panel slat (H).

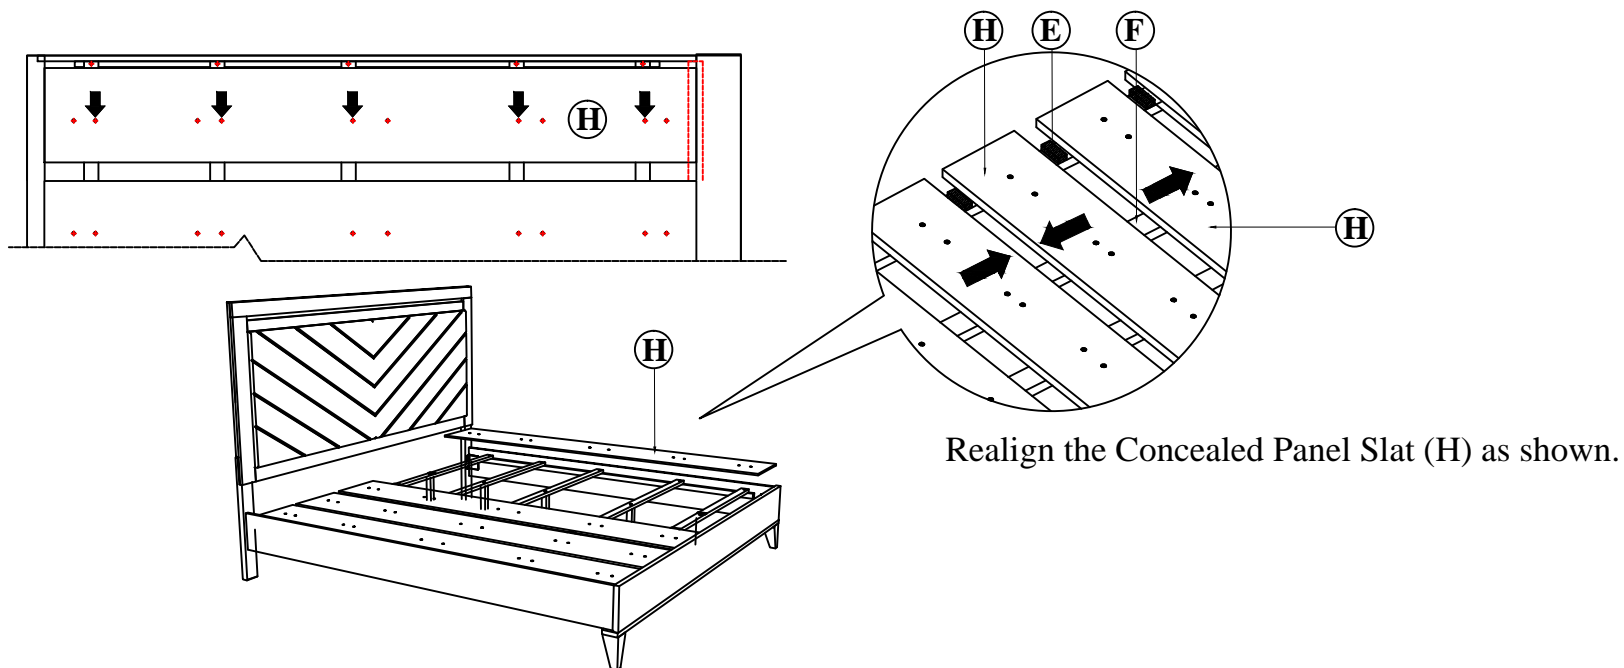

STEP 4 : Attach Concealed Panel (H) over the Bed Slat (E)&(F) using Panhead Screw (7) and tighten with Screw Driver. (Not included)

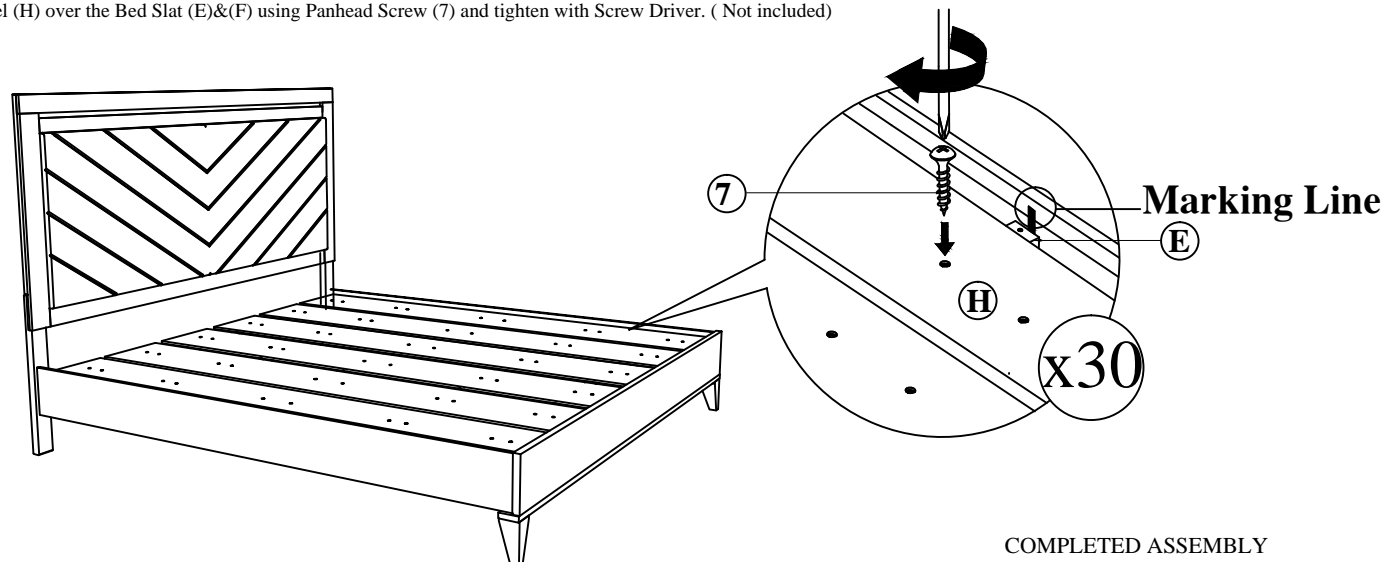

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 2 OF 2

ASSEMBLY INSTRUCTIONS

**MODEL : 0286A
DRESSER**

(BOX 1)

BOX OF DRESSER

NO	ITEM	QTY
A	DRESSER	1 pc
B	BUN FOOT	4 pcs
C	BOTTOM CENTER LEG (30 x 30 x 125MM)	1 pc


(BOX 1)

HARDWARE LIST

NO	ITEM	QTY
1	JCBC Bolt m6x100mm Blk	4 pcs
2	Spring Washer 1/4" Blk	4 pcs
3	Flat Washer 1/4"IDx13mmOD Blk	4 pcs
4	Allen Key m4x110mm With Ball Blk	1 pc

STEP 1 : Pull the bottom drawer and take out the Bunfoot carton (B). Assemble the Bun Foot (B) with JCBC Bolt (1),Spring washer (2),Flatwasher (3) and securing with Allen Key (4) as shown.


Hardware Pack

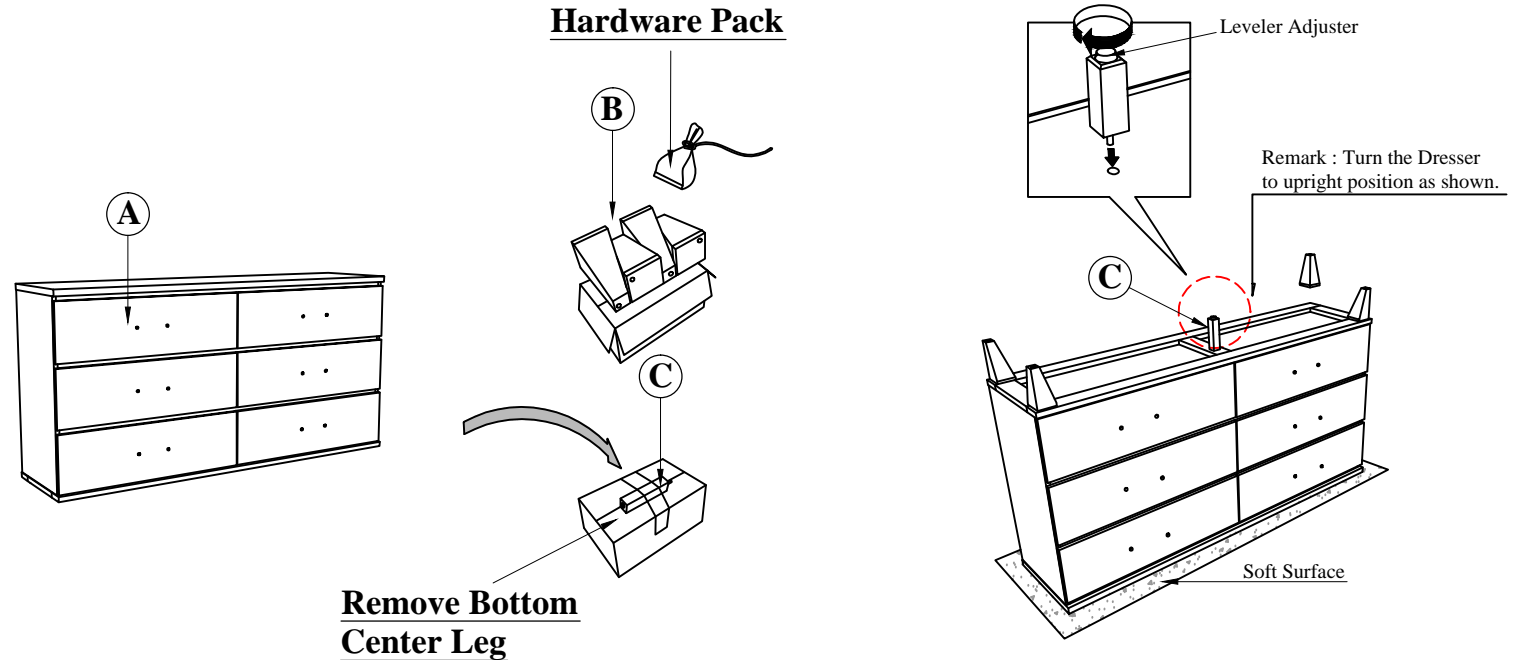


Remove Bottom Center Leg

STEP 2 : Reinstall the Handle from Inside to outside Drawer Front as shown.

Step 2.1

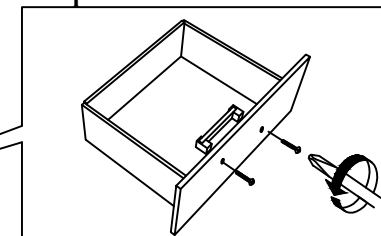

Step 2.2

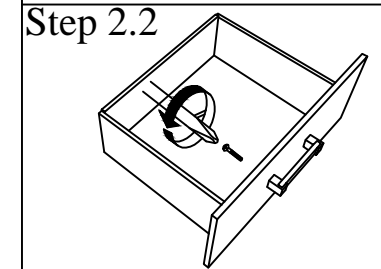

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

MODEL : 0286A DRESSER & MIRROR

(Box 1)
BOX OF MIRROR

NO	ITEM	QTY
A	MIRROR	1 pc
B	MIRROR SUPPORT RAIL	2 pcs


(Box 2)
BOX OF DRESSER

NO	ITEM	QTY
C	DRESSER	1 pc


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	JCBC M6 x 35mm	4 pcs
2	JCBC M6 x 40mm	4 pcs
3	Spring Washer 1/4" Rbw	8 pcs
4	Flat Washer 1/4" ID x 19mm OD Blk	8 pcs
5	ALLEN KEY m4x65mm Blk	1pc

STEP 1 : Take out mirror support (B) from the carton box .

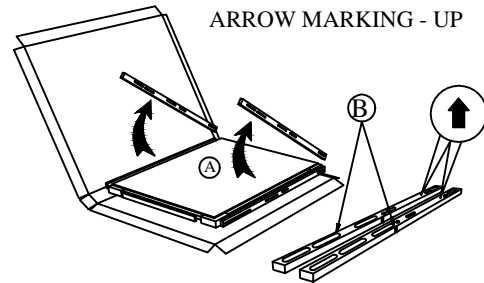

STEP 3 : Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using long JCBC bolt (2) , spring washer (3) & flat washer (4) THENFULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY (5).

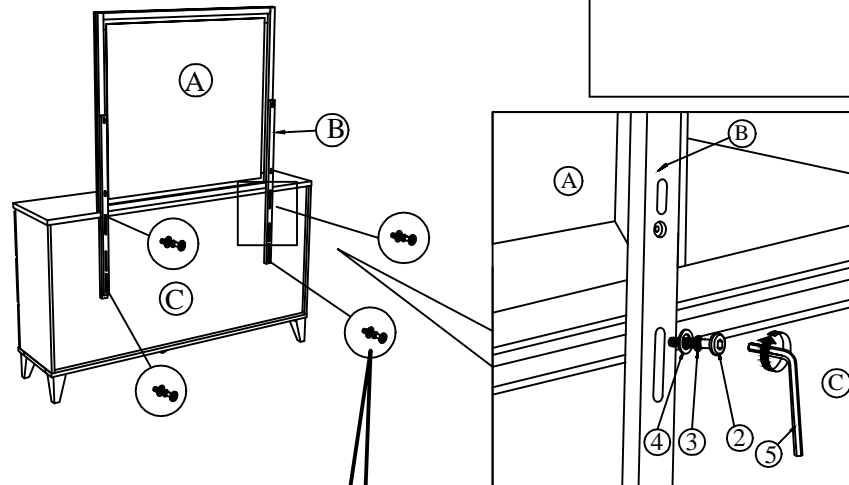


WARNING!
USE LONG BOLT M6 x 40mm




STEP 2 : Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt(1),spring washer (3) & flat washer (4). DO NOT FULLY TIGHTEN AT THIS STEP.

Note : Make sure arrow marking of the mirror support (C) is aligned up.

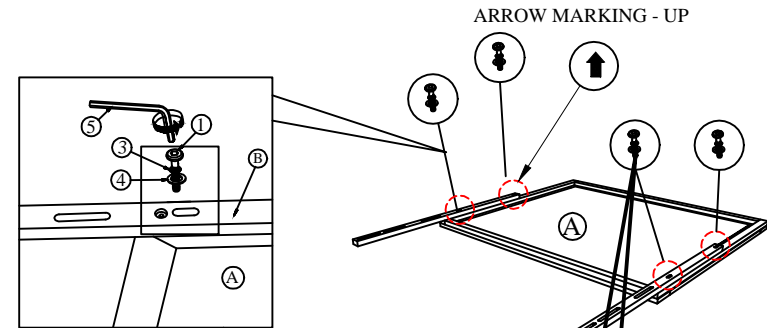

**BACK VIEW

WARNING!
USE LONG BOLT M6 x 35mm

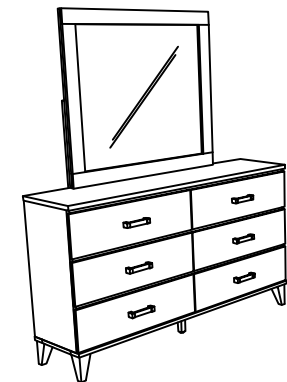

COMPLETED
ASSEMBLY



NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

**MODEL : 0286A
CHEST**





(BOX 1)

BOX OF CHEST


NO	ITEM	QTY
A	CHEST 	1 pc
B	BUN FOOT 	4 pcs

(BOX 1)

HARDWARE LIST

NO	ITEM	QTY
1	JCBC Bolt m6x100mm Blk 	4 pcs
2	Spring Washer 1/4" Blk 	4 pcs
3	Flat Washer 1/4"IDx13mmOD Blk 	4 pcs
4	Allen Key m4x110mm With Ball Blk 	1 pc

STEP 1 :

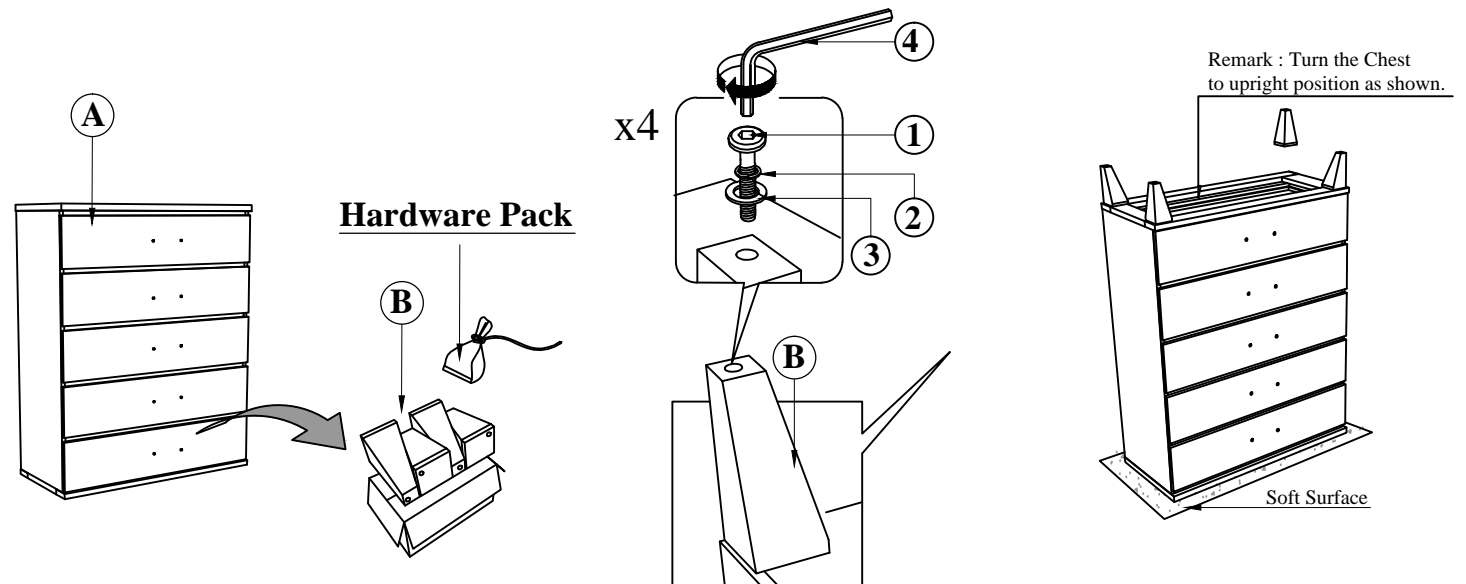


STEP 2 : Reinstall the Handle from Inside to outside Drawer Front as shown.




COMPLETED ASSEMBLY

Step 2.1

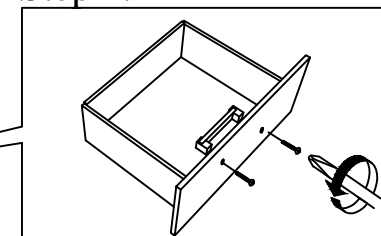

Step 2.2

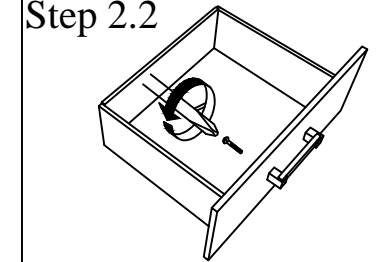



NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

**MODEL : 0286A
NIGHT STAND**





(BOX 1)

BOX OF NIGHT STAND


NO	ITEM	QTY
	NIGHT STAND	
A		1 pc
	BUN FOOT	
B		4 pcs

(BOX 1)


HARDWARE LIST

NO	ITEM	QTY
1	JCBC Bolt m6x100mm Blk 	4 pcs
2	Spring Washer 1/4" Blk 	4 pcs
3	Flat Washer 1/4"IDx13mmOD Blk 	4 pcs
4	Allen Key m-4x110mm With Ball Blk 	1 pc

STEP 1 : Pull the bottom drawer and take out the Bunfoot carton (B).
Assemble the Bun Foot (B) with JCBC Bolt (1), Spring washer (2), Flat washer (3) and securing with Allen Key (4) as shown.

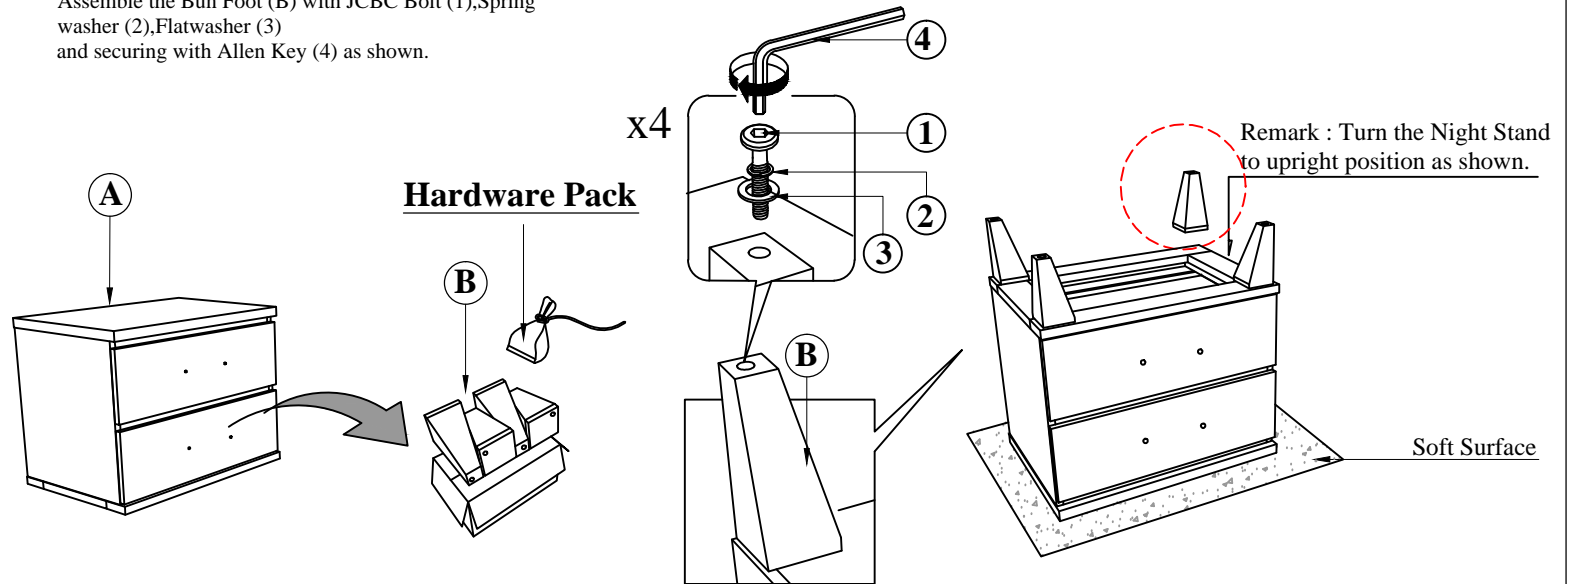


STEP 2 : Reinstall the Handle from Inside to outside Drawer Front as shown.

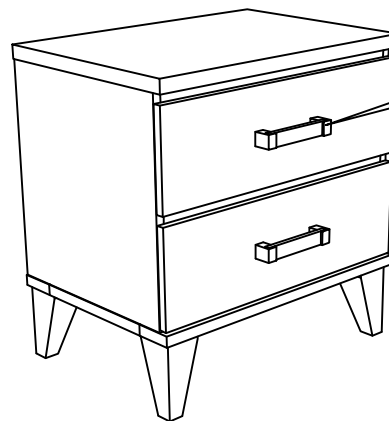


COMPLETED ASSEMBLY

Step 2.1

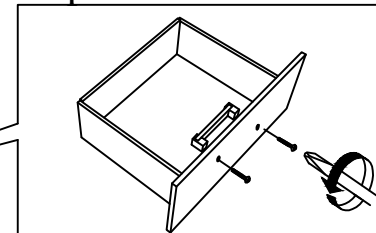

Step 2.2

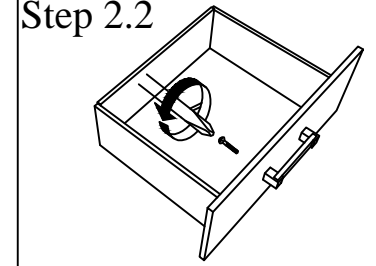

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.