

IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.


CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

TOOLS NECESSARY:

Screw gun or Phillips screwdriver and tape measure. NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.


PARTS IDENTIFICATION:

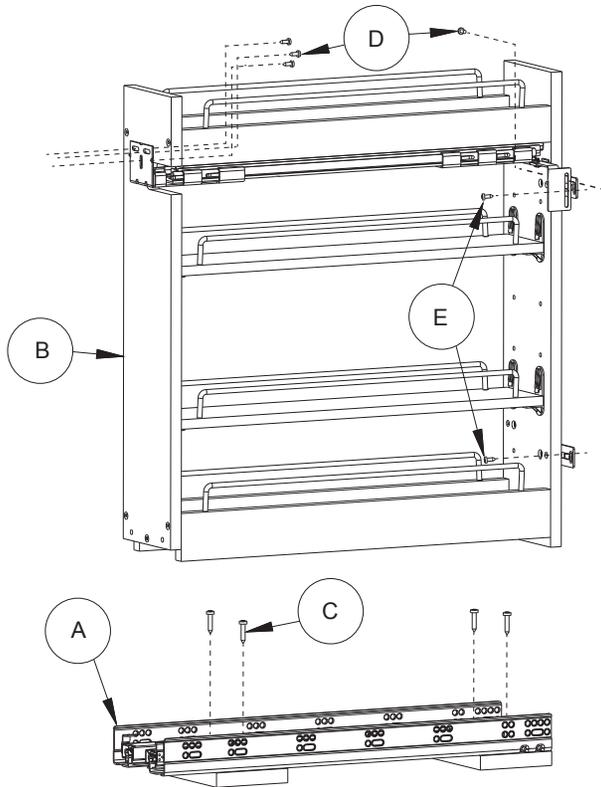


A	Mounting Base	1 pcs
B	Base Pullout Unit	1 pcs
C	#10 x 3/4" Pan Head Wood Screw	4 pcs
D	#8 x 5/8" Pan Head Wood Screw	4 pcs
E	#8 x 5/8" Flat Head Wood Screw	4 pcs

Base Pullout Installation Instructions for the BPO2 Series

hardware
resources™

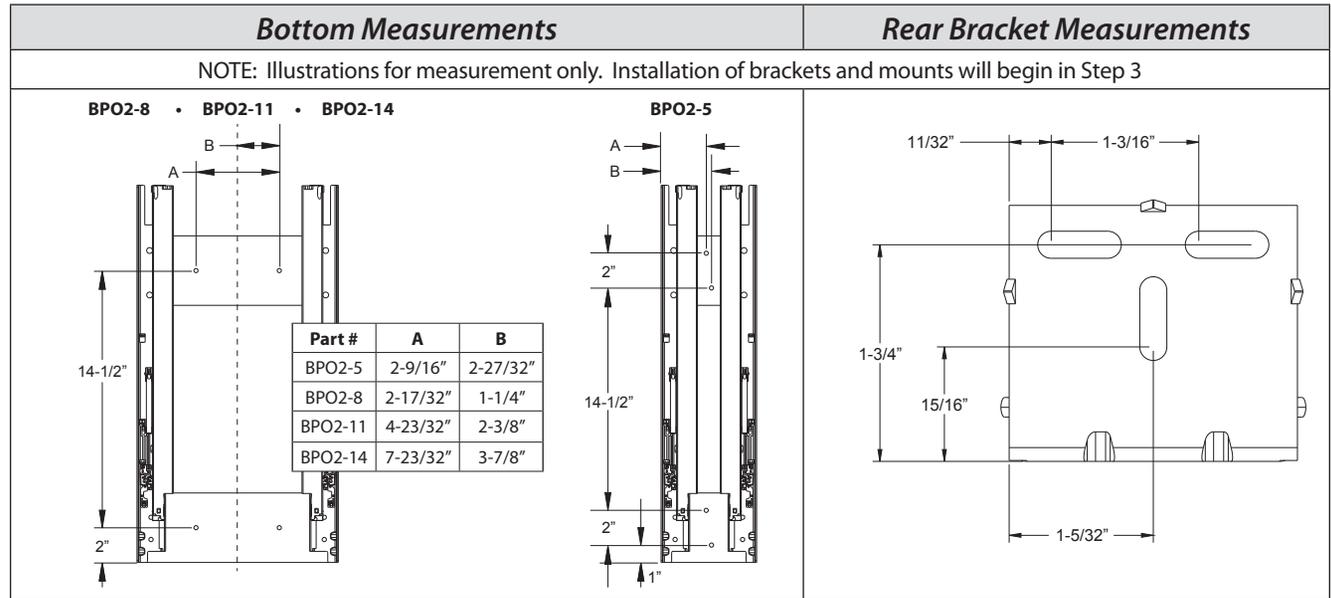


STEP 1 - Determine Mounting Location

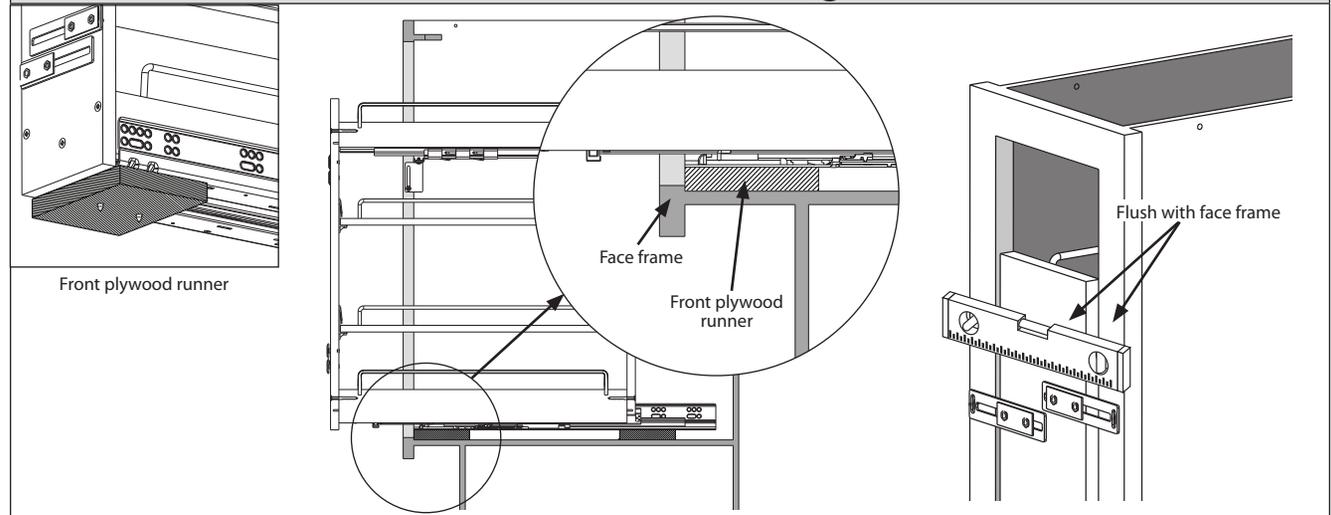


Place the entire unit into the cabinet. In framed cabinets, center the unit in the opening making sure the front plywood runner is pulled tight against the back of the face frame. For frameless cabinets, place the unit within 1-1/2" of the left of the cabinet and the front plywood runner needs to be set back 3/4". The top of the unit should be flush with the face frame. If the unit is sticking out or is setback by more than 1/4", place a shim under either the front or the back plywood runner to make it flush.

STEP 2 - Mark Rear Mounting Bracket

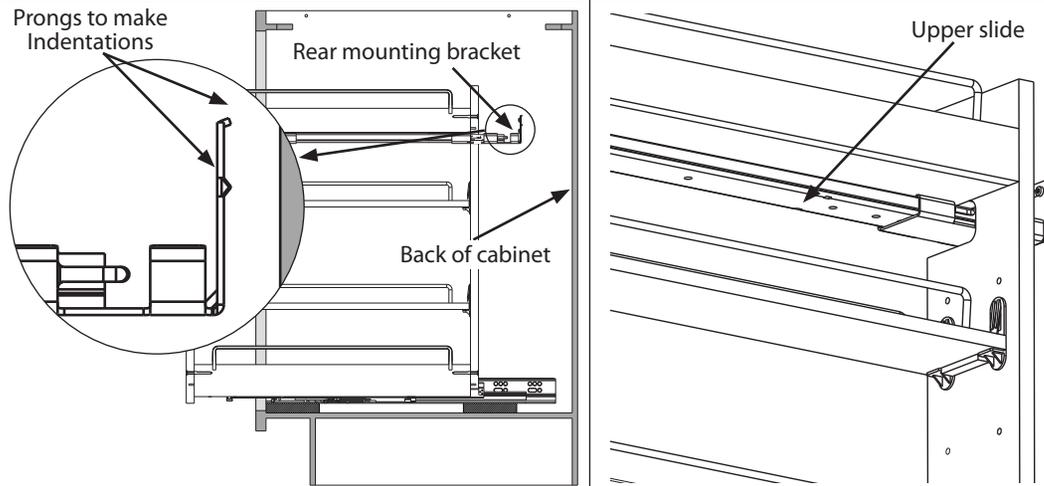


Once the unit is centered and leveled, mark the base location of the unit. With one hand holding the undermount slide, carefully pull the organizer partially open to gain access to the upper slide. Firmly grasping the upper slide, tap it against the back of the cabinet. The rear bracket should make small indentations in the back of the cabinet.

STEP 3 - Install Rear Mounting Bracket

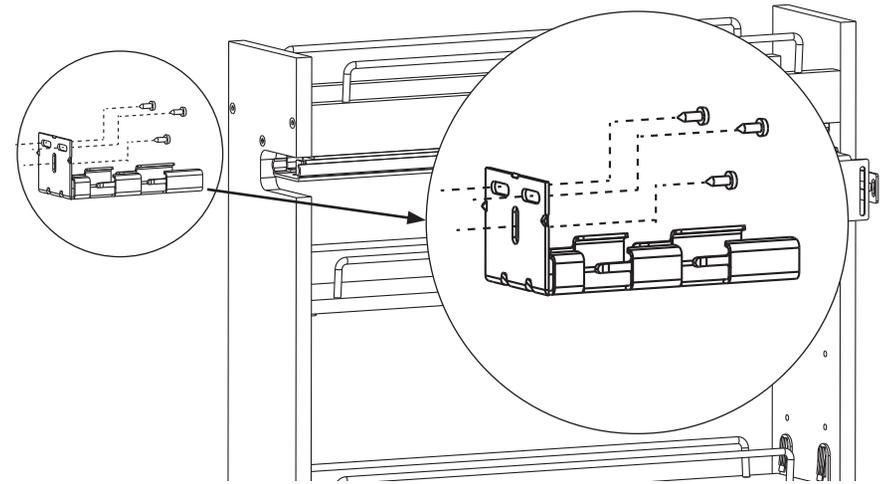


Taking the unit from the cabinet, remove the rear mounting bracket for installation. Align the rear bracket prongs with the indentation marks on the rear of the cabinet and secure with three (3) #8 x 5/8" Pan Head Wood Screws in the slots as shown.

STEP 4 Install Base

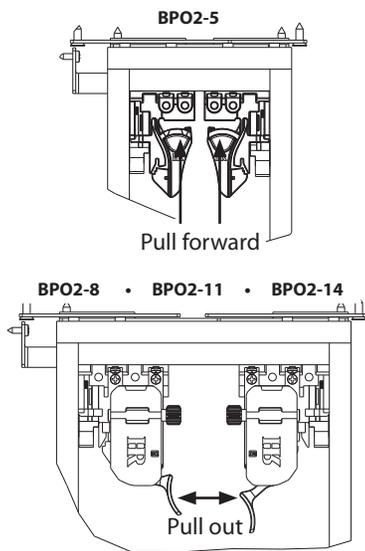


Remove the base from the unit by releasing the slide clips. Place the base back into the cabinet in the previous location. Install with the four (4) #10 x 1-1/4" Pan Head Wood Screws provided in the four pre-drilled holes in the runners.

STEP 5 Install Pullout Unit

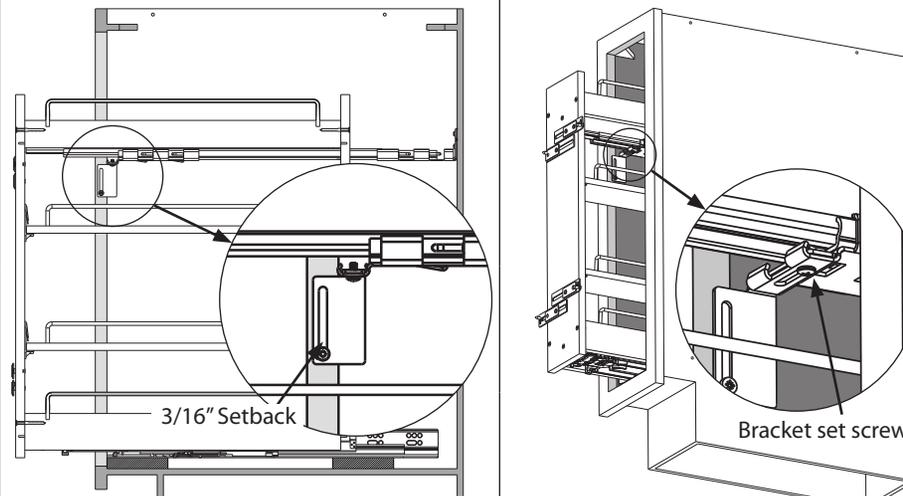

Re-install the unit onto the slides, making sure as you push it in the cabinet, that the top slide is properly seated into the rear mounting bracket. Operate the unit to make sure the undermount slides are working properly. Then pull the top front mounting bracket into position on the side of the face frame allowing for a 3/16" setback (shown left above). Firmly secure with one (1) #8 x 5/8" Pan Head Wood Screw. Make sure the gap between the unit and the side of the face frame is equal from top to bottom. Adjust accordingly and then securely tighten the bracket set screw (shown right above). Operate the unit and make adjustments as necessary for the slides to operate smoothly.

STEP 6 Door Mounting Adjustments

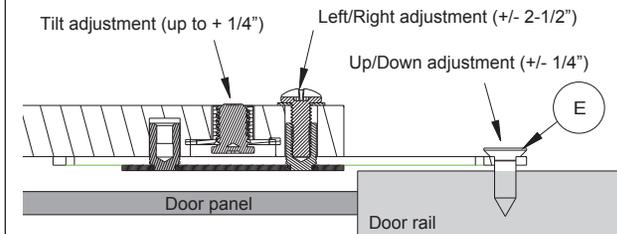

Attach the door panel and adjust as shown. (NOTE: four (4) #8 x 5/8 Flat Head Phillips Wood Screws are provided. Determine door panel rail thickness before using.)