


**Model:** XDA1412001


**Mona Double Clawfoot Slipper Tub**

- Note:**
- Freestanding acrylic tub
  - Smooth interior and exterior finish
  - Includes drain assembly
  - Glossy White clawfoot double slipper tub

Top

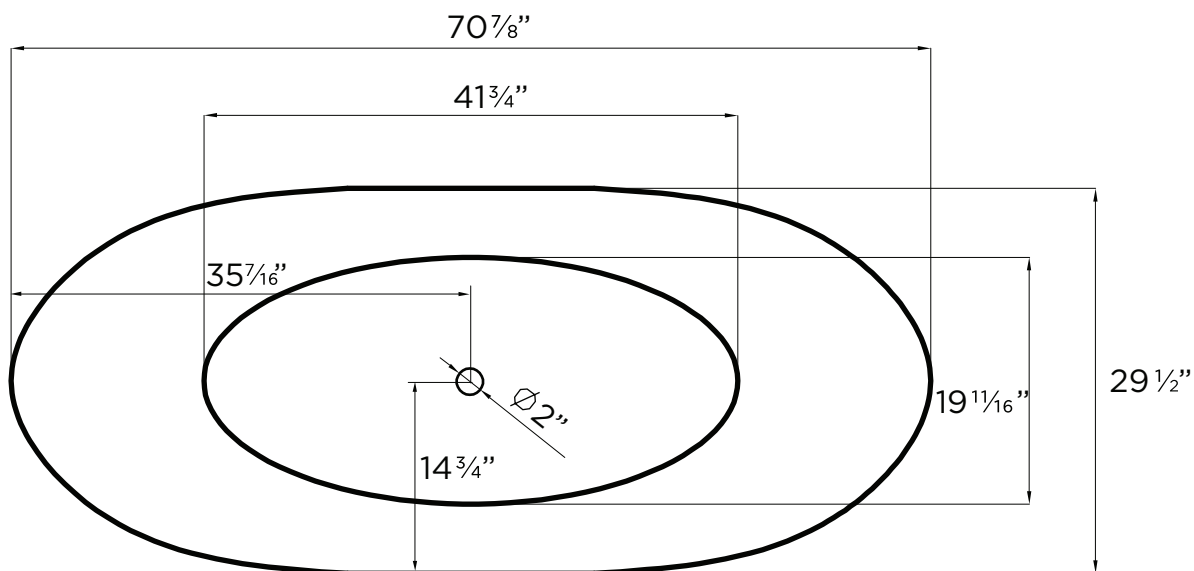

Front

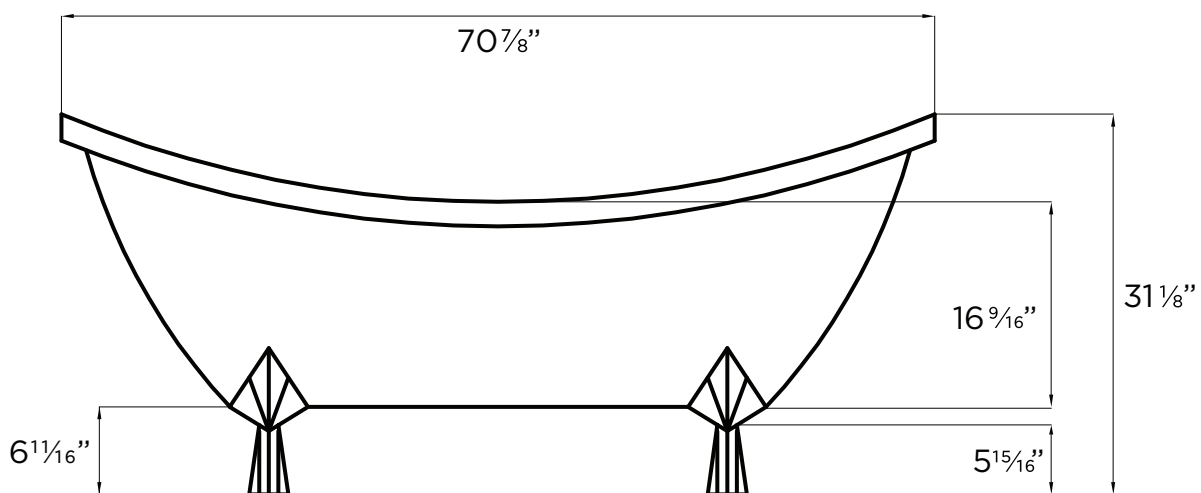



Overall Dimensions  
Overall Water Capacity  
Net Weight of Tub

$70\text{-}7/8\text{'L} \times 29\text{-}1/2\text{'W} \times 31\text{-}1/8\text{'H}$   
47.55 Gallons  
88.18 lbs

All measurements are approximate and may vary  $\pm 1/4"$

Model: XDA1412001/XDA1413002

Front

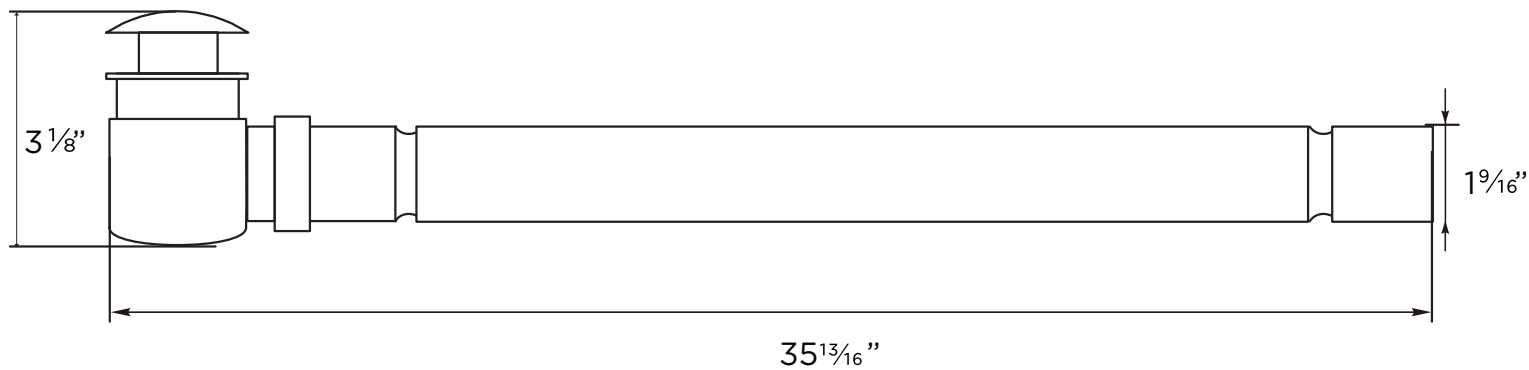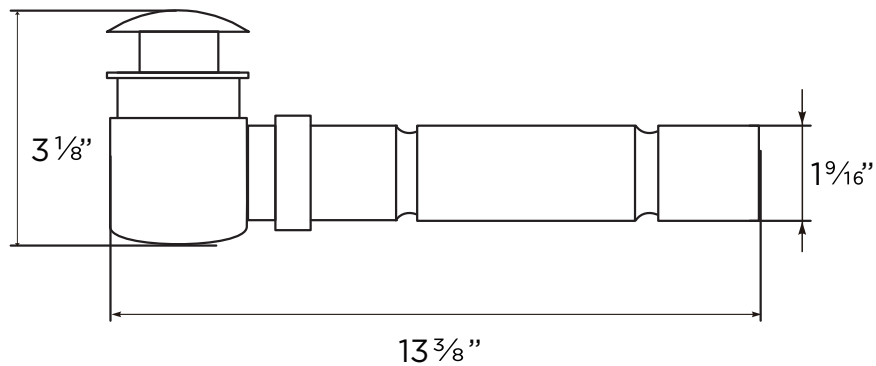

All measurements are approximate and may vary +/- 1/4"

# Maykke

[www.maykke.com](http://www.maykke.com)

## **Installation, Care Guide and Warranty**



Cast Iron Clawfoot Tub

### IMPORTANT:

**Observe all state and local building codes.**

**Carefully read all installation and care instructions before proceeding.**

**NOTICE:** Do not change or modify the product in any way. Doing so may compromise the products structural integrity and will void the warranty.

**NOTICE:** Installation instructions must be followed. Any diversion may risk property damage and will void the warranty.

**NOTICE:** When moving your tub be sure to **lift**, never slide or pull, doing so may result in damage to the product or surrounding area.


**NOTICE:** If you are unfamiliar with tub installation please consult a professional.

**NOTICE:** Due to weight of cast iron tubs, be sure that your floor structure can support the total weight of your filled tub (reference the table on page 2)


**CAUTION:** AS CAST IRON TUBS ARE EXTREAMLY HEAVY IT IS RECOMMENDED TO USE EXTRA PERSONEL FOR INSTALLATION.

**CAUTION:** AFTER INSTALLATION MAKE SURE THERE ARE NO LEAKS BY FILLING TUB WITH WATER AND DRAINING


### REQUIRED TOOLS:

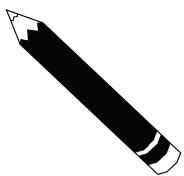

PENCIL

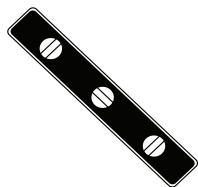

LEVEL

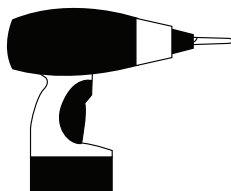

DRILL



SABER SAW




MEASURING TAPE




PIPE WRENCH



JUSTABLE WRENCH

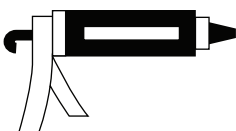

SILICONE

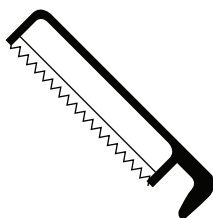


HACKSAW



FLATHEAD SCREWDRIVER



PHILLIPS SCREWDRIVER

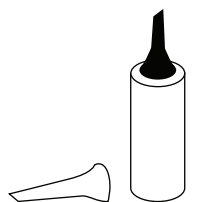

PLUMBERS' PUTTY


Note: If feet are pre-installed continue to Tub Installation Section

### FEET INSTALLATION


Parts Included:

- 4x feet
- 4x bolts
- 4x flat washes
- 4x split lock washed
- 4x nuts


1. Remove the tub from packaging and place upside down on a protective surface, such as a blanket or a mat. Insure that the bottom of the tub is clean and free of debris.

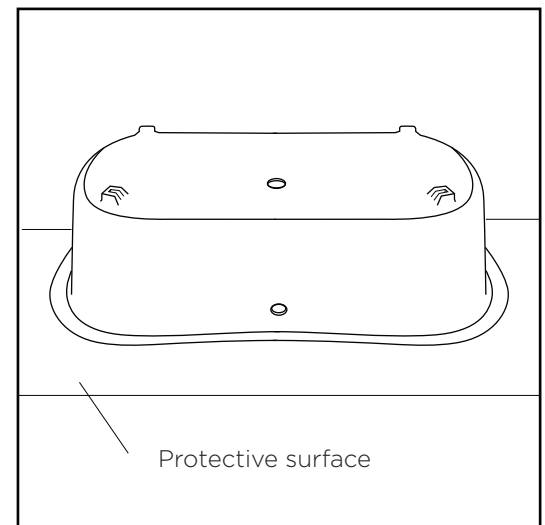


2. Slide the threaded bolts into the tub legs.

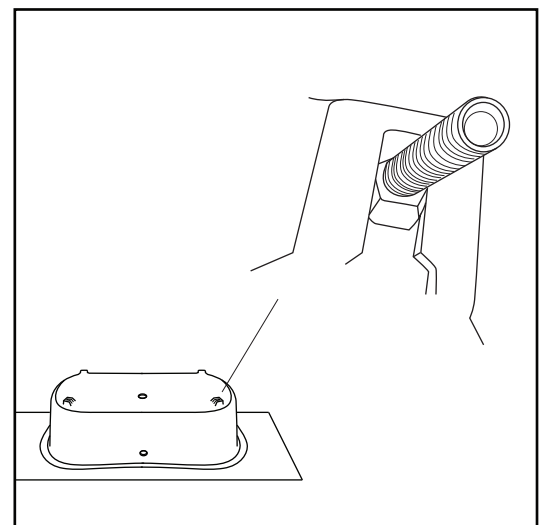


3. Match the feet to the corresponding letters on the bottom of the tub (failure to do so will result in feet that do not line up to the tub properly).

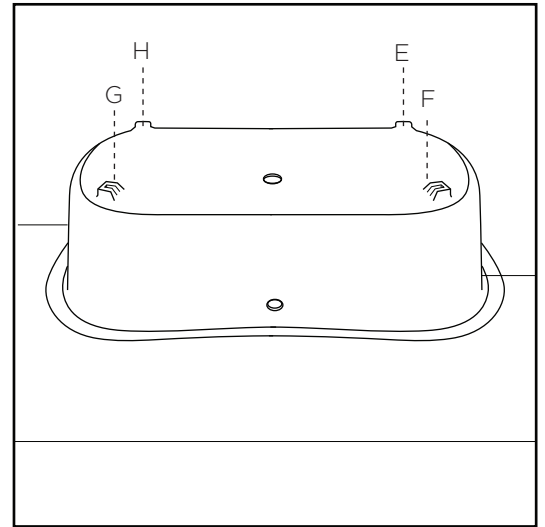


5. Taking the first foot, thread the bolt through, making sure to adjust the foot as need to light up properly to the tub.

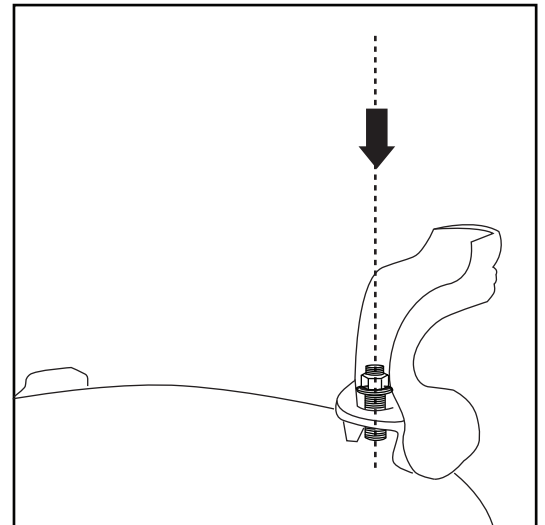


6. Place the washer, split lock washer, and nut on the bolt in order and tighten the nut.

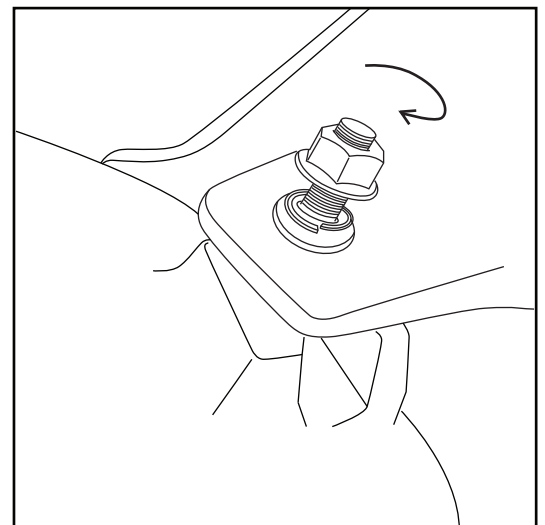

7. Repeat steps 5-6 until all feet are inplace.

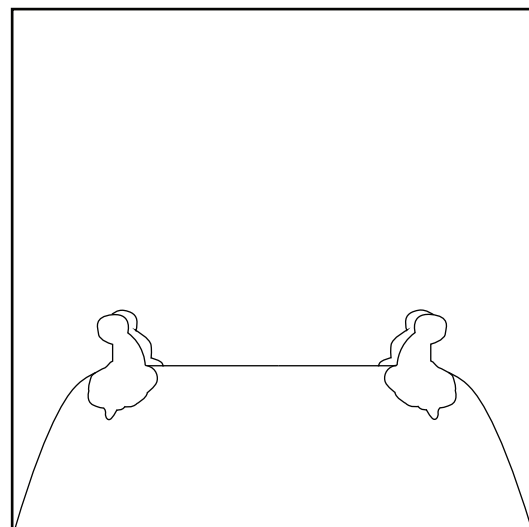


8. Carefully flip the tub upright and continue on to Tub Installation.

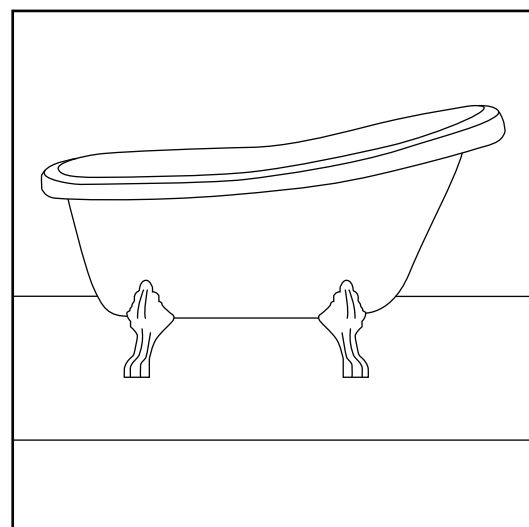

**Continue to Tub Installation**

### TUB INSTALLATION

1. Determine the location of the drain pipe on the floor by measuring the drain and waste location under the tub. (This will vary on each tub)
2. Carefully set the tub into position and connect the pre-installed drain to the waste water pipe.
3. Fill the tub to check for any leaks in waste connections below. (access below the floor will be necessary)
4. For faucet installation consult the manufacturer's instructions.

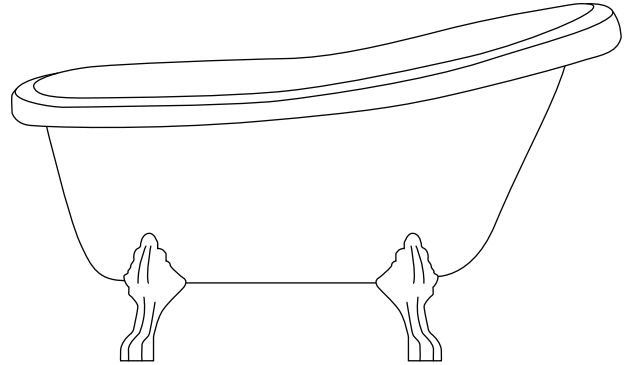

### CARE GUIDE:

Care: Rinse thoroughly and use a soft cloth to wipe the product dry after each use to prevent hard water stains.

Cleaning: Use a non-scratch sponge or a soft, microfiber cloths with non-scratch cleaners.

### WARRANTY

Please visit [Maykke.com](http://Maykke.com) for warranty information

Contact [support@maykke.com](mailto:support@maykke.com) or call toll free 1 (877) 659-2858 M-F 7:30am - 4:30pm (PST) with any questions or warranty concerns