


ASSEMBLY INSTRUCTION

HOW TO ASSEMBLY:

STEP 1:

Assemble the Metal Legs (C) with stretcher (B) Using the JCBC Bolt 40 (1) and Nut Bolt (2). Securely tighten with Allen Key 5 (6) as provided.

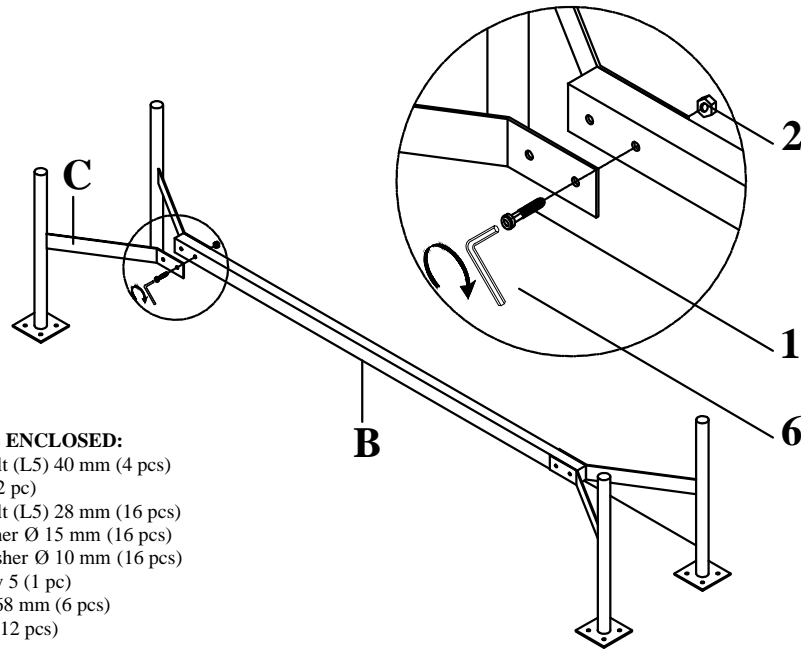

HARDWARE ENCLOSED:


1. JCBC Bolt (L5) 40 mm (4 pcs)
2. Nut M6 (2 pc)
3. JCBC Bolt (L5) 28 mm (16 pcs)
4. Flat Washer Ø 15 mm (16 pcs)
5. Lock Washer Ø 10 mm (16 pcs)
6. Allen Key 5 (1 pc)
7. Handle 168 mm (6 pcs)
8. Bolt M4 (12 pcs)

PARTS ENCLOSED:

- A. BODY
- B. STRETCHER (1 pc)
- C. METAL LEGS (4 pcs)

STEP 2:

Assemble the Metal Legs (C) and Stretcher (B) to Body Using the JCBC Bolt 28, Flat Washer (4), Lock Washer (5). Securely tighten with Allen Key 5 (6) as provided.

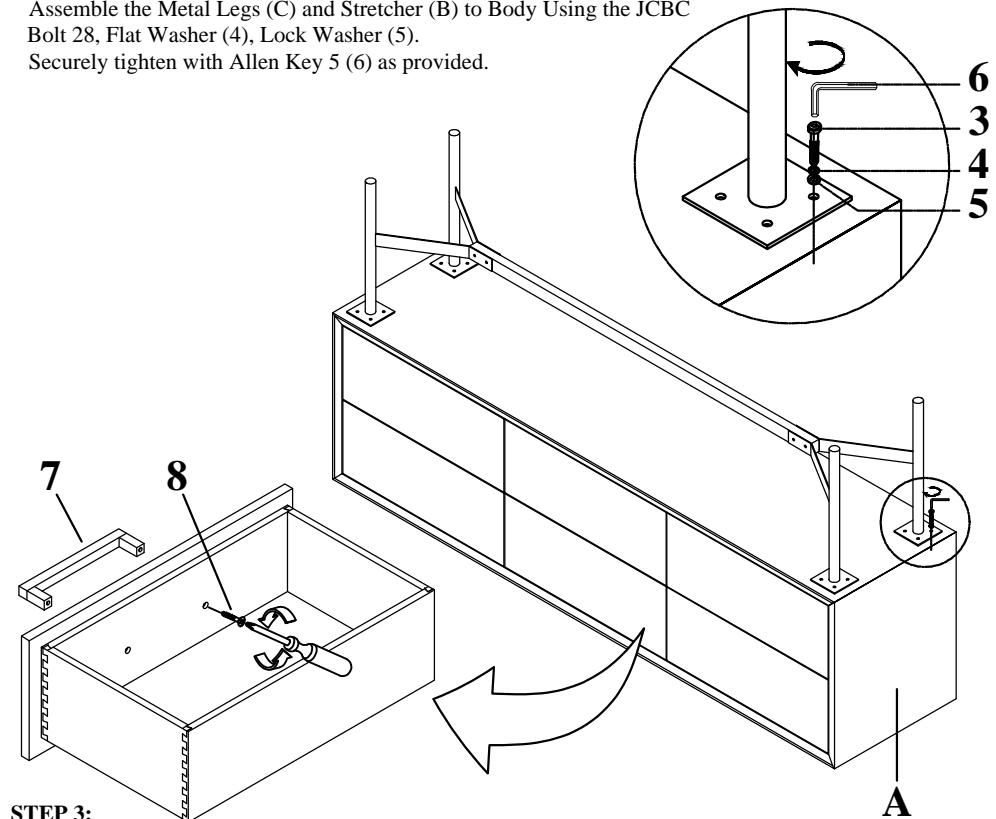

STEP 3:

Attach the Handle (7) from the outside of the face drawer and the Bolt M4 (8) from the inside drawer, Securely tighten with a screwdriver as provided.