




Assembly Intruction

INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING


NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

1

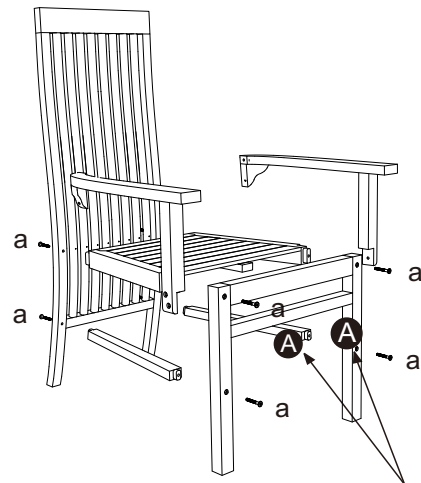


**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

3

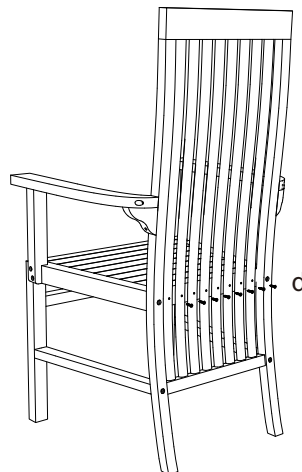


Make sure to use Gorilla Glue (Included)
on all wood joints before assembly

2

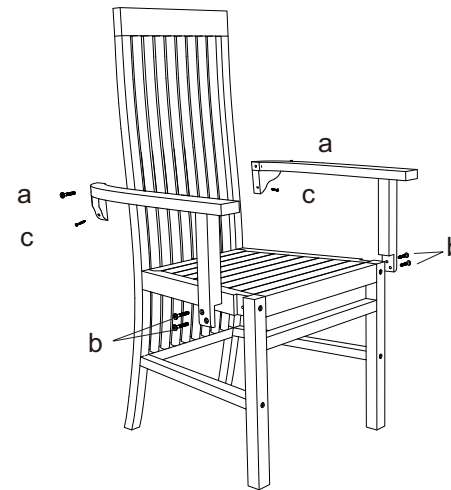

4

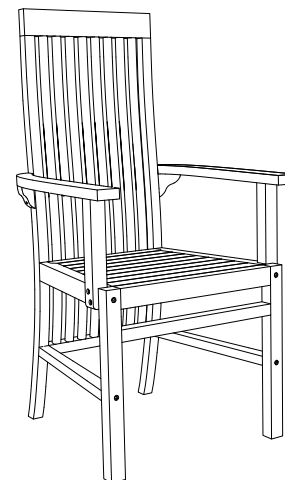

Code

KBA3AC

Hardware

- a Bolt 2' (10 pcs)
- b Bolt 1,2' (4 pcs)
- c Screw 1,2' (2 pcs)
- d Screw 0,78' (8 pcs)

Tool



Socket Wrench 4mm

Total Section

7 Section