

## CARE AND MAINTENANCE







Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

**SAFAVIEH**  
COUTURE

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening
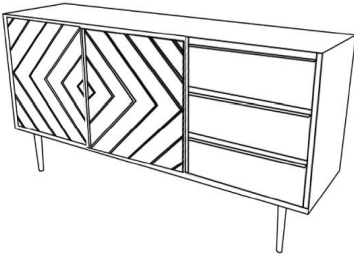
## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	
A	Cabinet		1X	<p>Item# SFV5702A Product dimensions: 57.87"W* 16.14"D* 29.52"H</p>  <p>Weight Capacity: 60lbs WARNING : DO NOT STAND ON SIDE BOARD WARNING : DO NOT OVER TORQUE BOLTS/SCREWS</p>
B	Leg		4X	
H1	Allen bolt 16x6 mm		12X	
H2	Flat washer 16 mm		12X	
H3	Allen key 4 mm		1X	

**The legs and hardware are located under the drawer**





## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key

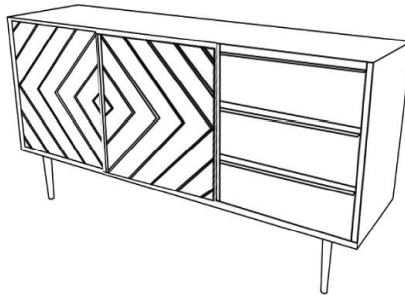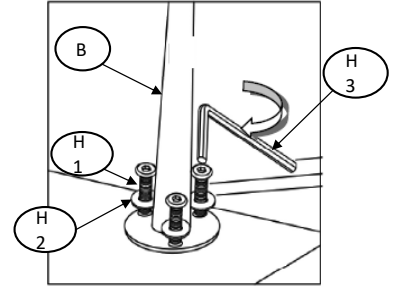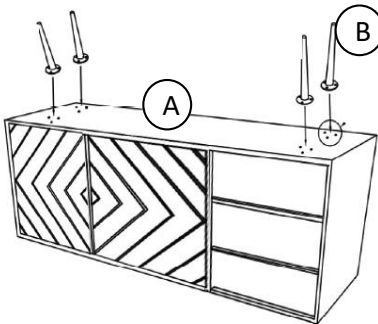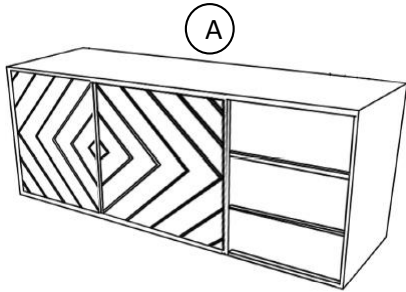

**STEP1** OPEN THE ZIPPER ON THE INSIDE OF THE DRAWER AND TAKE OUT LEGS AND HARDWARE

**STEP2** PUT THE WASHERS (H2) ON THE ALLEN BOLT (H1) IN THE ORDER SHOWN IN THE PICTURE

**STEP3** INSERT INTO THE HOLE OF BOTTOM PANEL AND TIGHTEN WITH ALLEN KEY (H3).

**The legs and hardware are located under the drawer**

## Safety Strap Attachment


1. Mark the location of the hole on the wall using bracket (A) approx 1" below the top of furniture. Predrill the holes at marked location & insert wall **plug** (E). Align bracket (A) onto wall **plug** (E) & secure using long screws (C).

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket (A) on the mark. Mark and drill holes for the screws using a 3/32" drill bit. Attach the bracket to the furniture using the short screws (C).

3. Move the furniture to its final position, and align the bracket on the furniture with the bracket on the wall. Thread the strap (D) through the bracket as shown, and tighten until snug. Do not overtighten.

**Important:** Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

### A 2 x Bracket




### B 2 x Long Screw



### C 2 x Short Screw



### D Strap

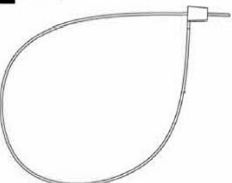

### E 2 x Wall plug

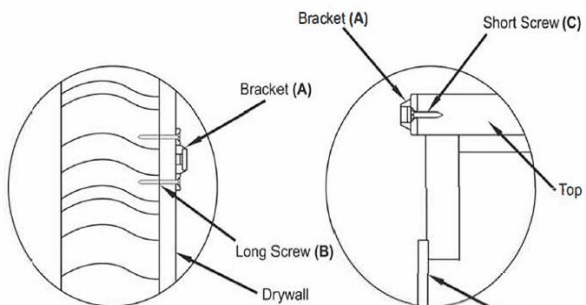


Figure A

Figure B

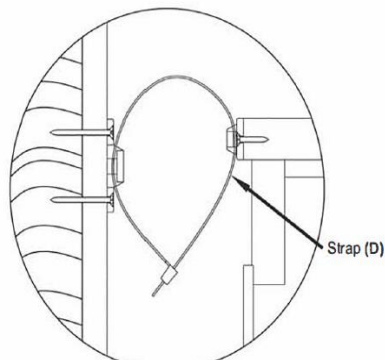


Figure C