


MAKE SURE THE LETTERS

MATCH BEFORE ASSEMBLING NEED ASSEMBLY ASSISTANCE?

Assembly Instruction

INSTRUCTION DE MONTAGE MONTAGEANLEITUNG SAMLEVEJLEDNING

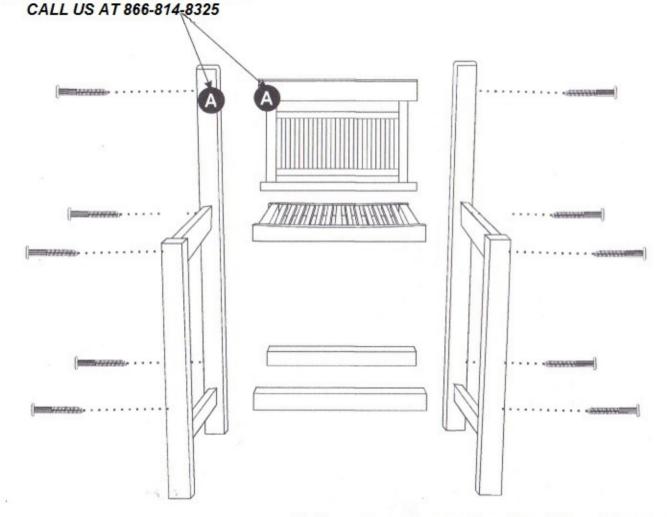

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly

Code

HJ402DC

Hardware



F. BOLT (10 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

6 Section