


JONATHAN ADLER

FURNITURE


Claridge Sofa

Parts Included:

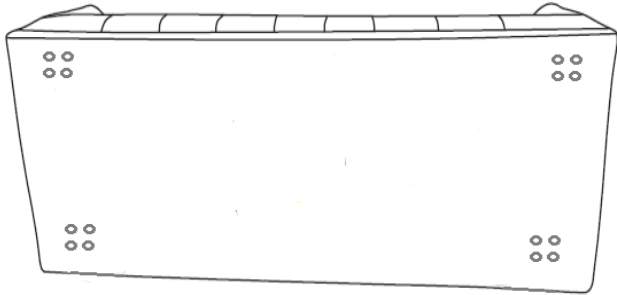



- Sofa Base (A) – 1 Pc

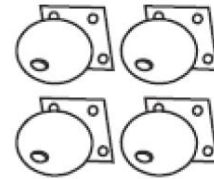

- Legs (B) – 4Pcs

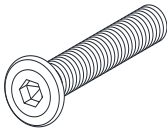

Assemble Hardware Enclosed :

(1)	<div>Allen Bolt</div> 	16Pcs	(2)	<div>Flat Washer</div> 	16Pcs
(3)	<div>Spring Washer</div> 	16Pcs	(4)	<div>Allen Key</div> 	1Pcs



For easy assembly two people are recommended.

JONATHAN ADLER

FURNITURE


Assemble Instruction:

Step 1: Assemble Legs

Carefully place the **Sofa Base (A)** on its back on a carpet or non-marring surface.

Attach the **Leg (B)** in placed at bottom of **Sofa Base (A)** using **Allen Bolt (1)**, **Flat Washer (2)**, **Spring Washer (3)**, and **Allen Key (4)**.

Repeat this step for the remained legs.

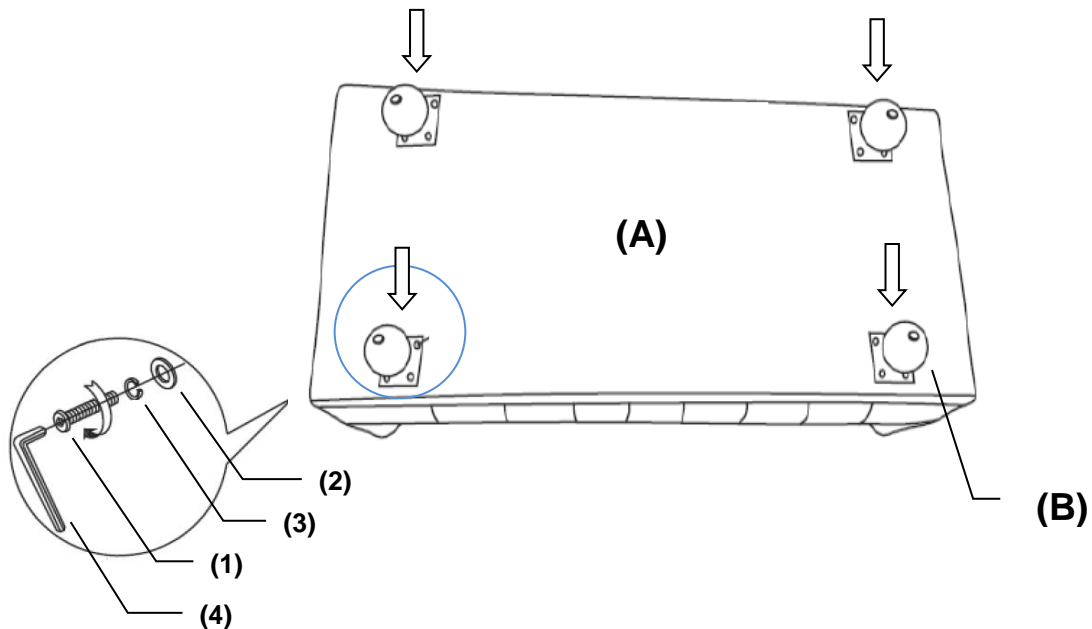

Step 2:

Place the item in standing position.

The **Claridge Sofa** is ready to use.

