


CONVENIENCE CONCEPTS

French Country Two Slide Door TV Stand

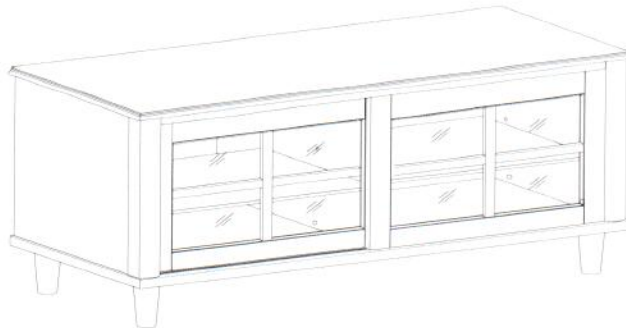

Item No. 6042180

6042180W

HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	WOOD DOWELS (Φ8*30mm)		16PCS
B	CAM LOCKS (Ø15x9mm)		16PCS
C	CAM BOLTS (Φ6.5*35mm)		16PCS
D	SCREWS (14mmL)		20PCS
E	SHELF SUPPORT		8PCS
F	WOOD GLUE		1PC
G	ALLEN WRENCH		1PC

PARTS LIST

CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	LEFT SIDE PANEL		1PC
③	RIGHT SIDE PANEL		1PC
④	LEFT SIDE STRENGTHEN PANEL		1PC
⑤	RIGHT SIDE STRENGTHEN PANEL		1PC
⑥	NEUTRALITY BOARD		1PC
⑦	LEG		5PCS
⑧	BOTTOM PANEL		1PC
⑨	BACK PANEL		1PC
⑩	DOOR		2PCS
⑪	ADJUST ABLE SHELF		2PCS




Please do not return to the store

. Broken or Missing Hardware?

. Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at


parts@convenience-concepts.com

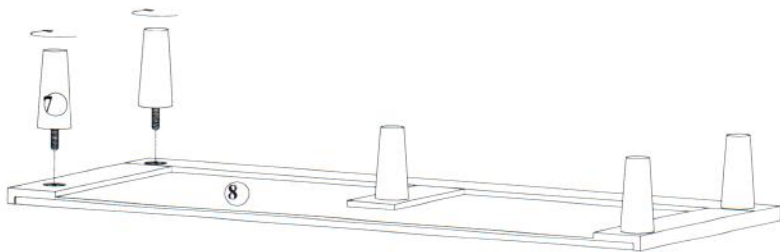


STEP 1



A × 6pcs
C × 6pcs
STEP 2

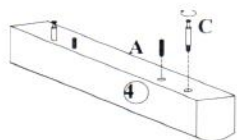


A × 2pcs
C × 2pcs
STEP 3

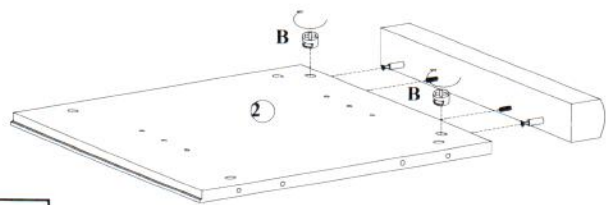


B × 2pcs

STEP 4 INSERT CAMLOCKS INTO BOARD 2 BEFORE ATTACHING SIDE PANELS 4




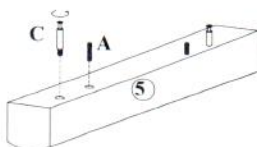



A × 2pcs
C × 2pcs
STEP 5

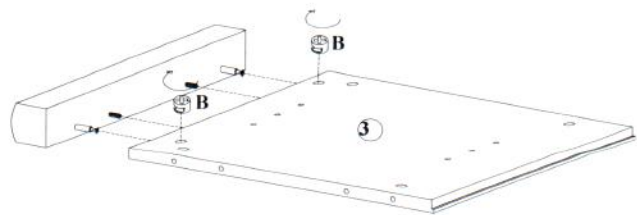

B × 2pcs
STEP 6


Assembling the unit with cam and wood dowels.

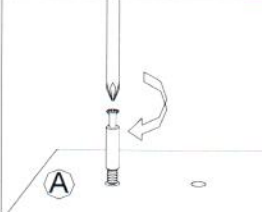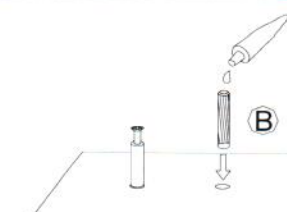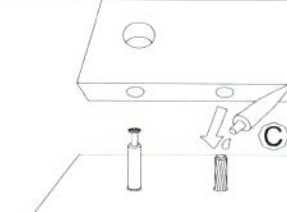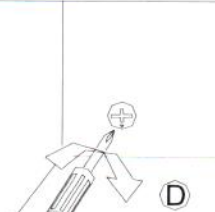 A Gently screw cam dowel into the threaded anchor.	 B Lightly glue one end of the wood dowel and tap halfway into hole. Add 2nd drop of glue to top of dowel.	 C Connect to second panel by inserting dowels into holes.	 D Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.
---	--	---	---

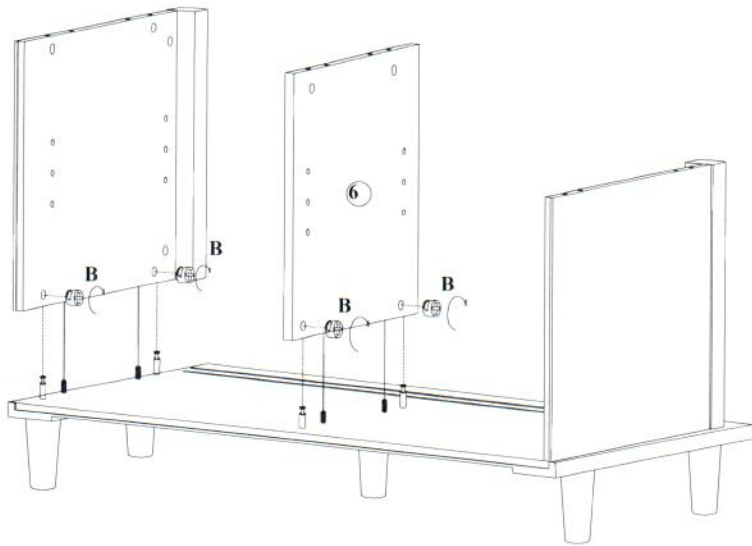


B × 6pcs
STEP 7


**INSERT CAMLOCKS BEFORE
ASSEMBLY OF SIDE AND MIDDLE BOARDS**

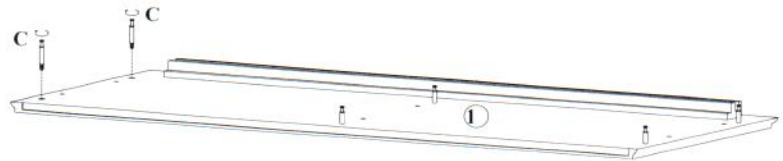


C × 6pcs
STEP 8

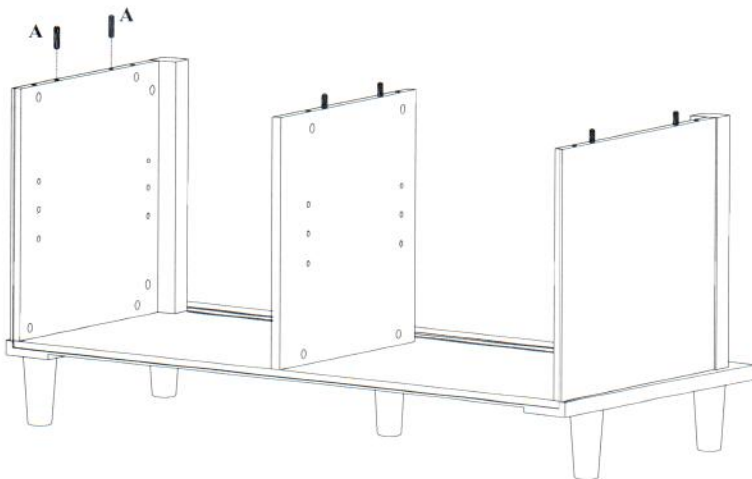


A × 6pcs
STEP 9

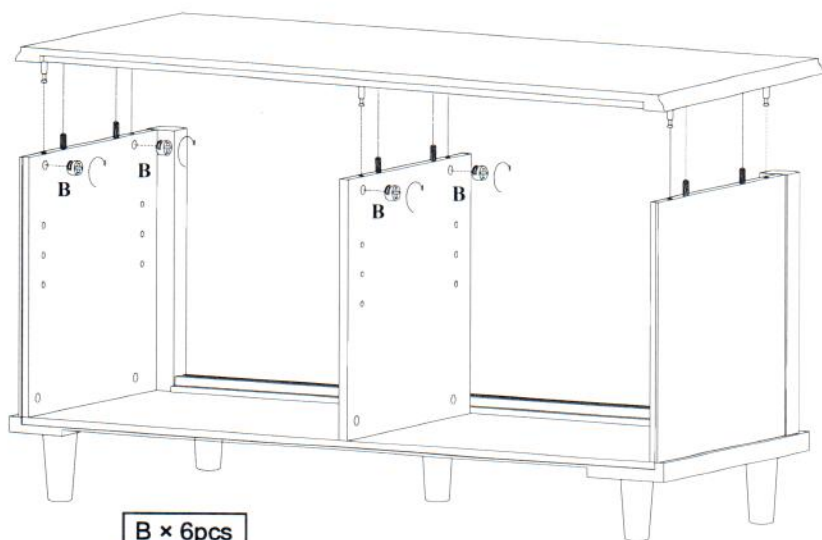


B × 6pcs
STEP 10

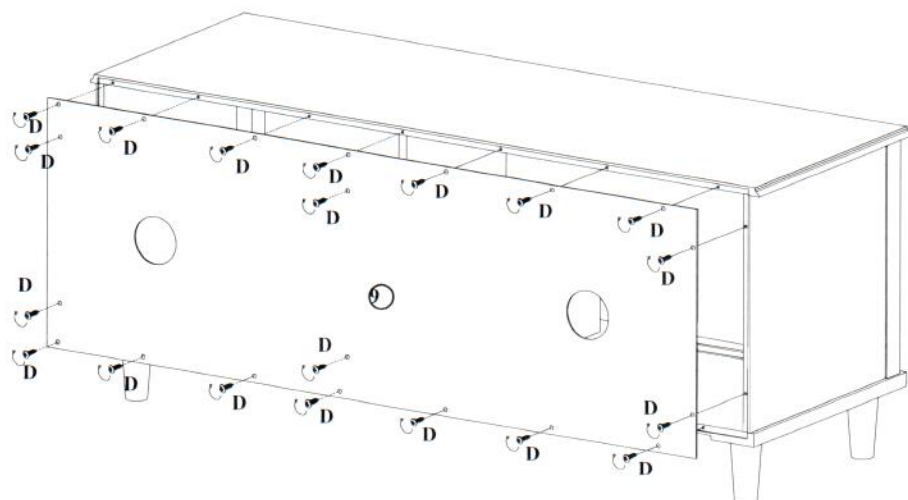


D × 20pcs
STEP 11

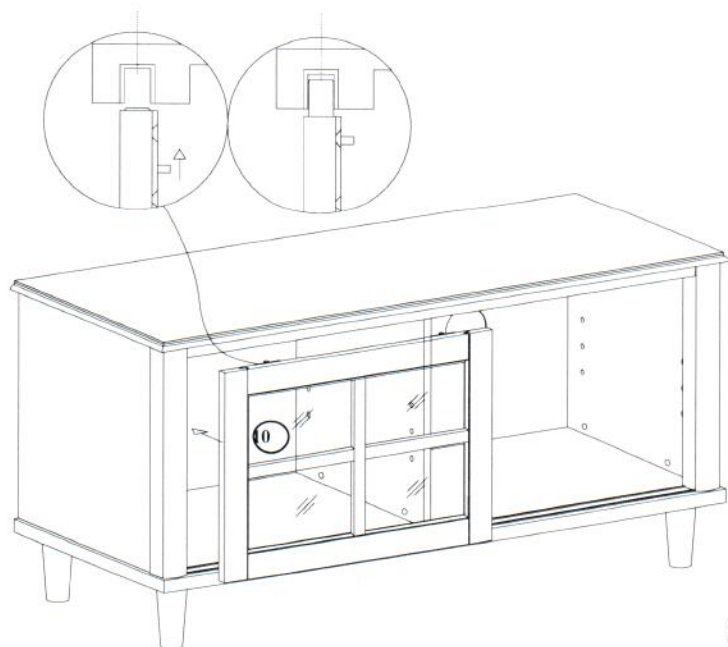

STEP 12

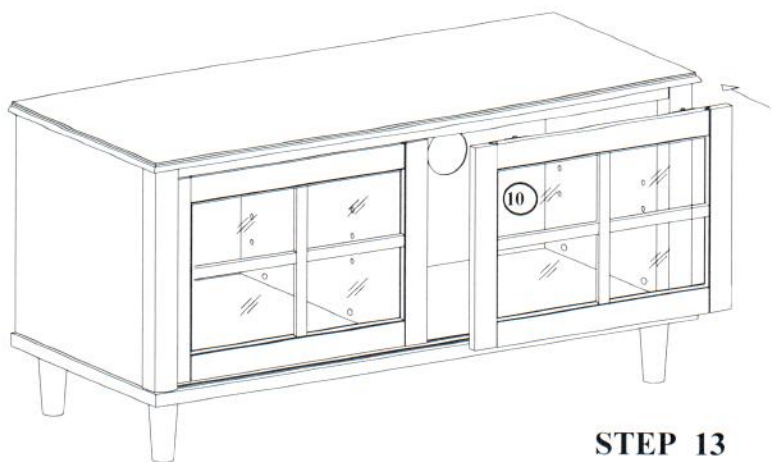

STEP 13

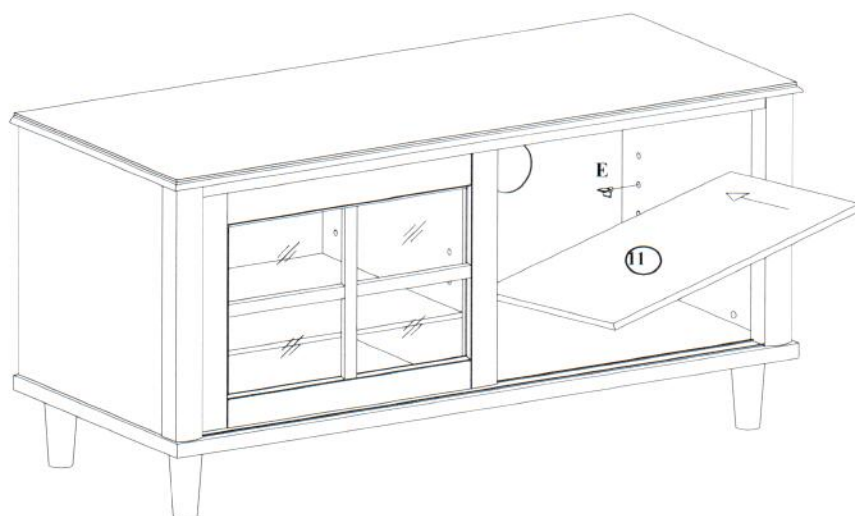

E × 8pcs

STEP 14



STEP 15