




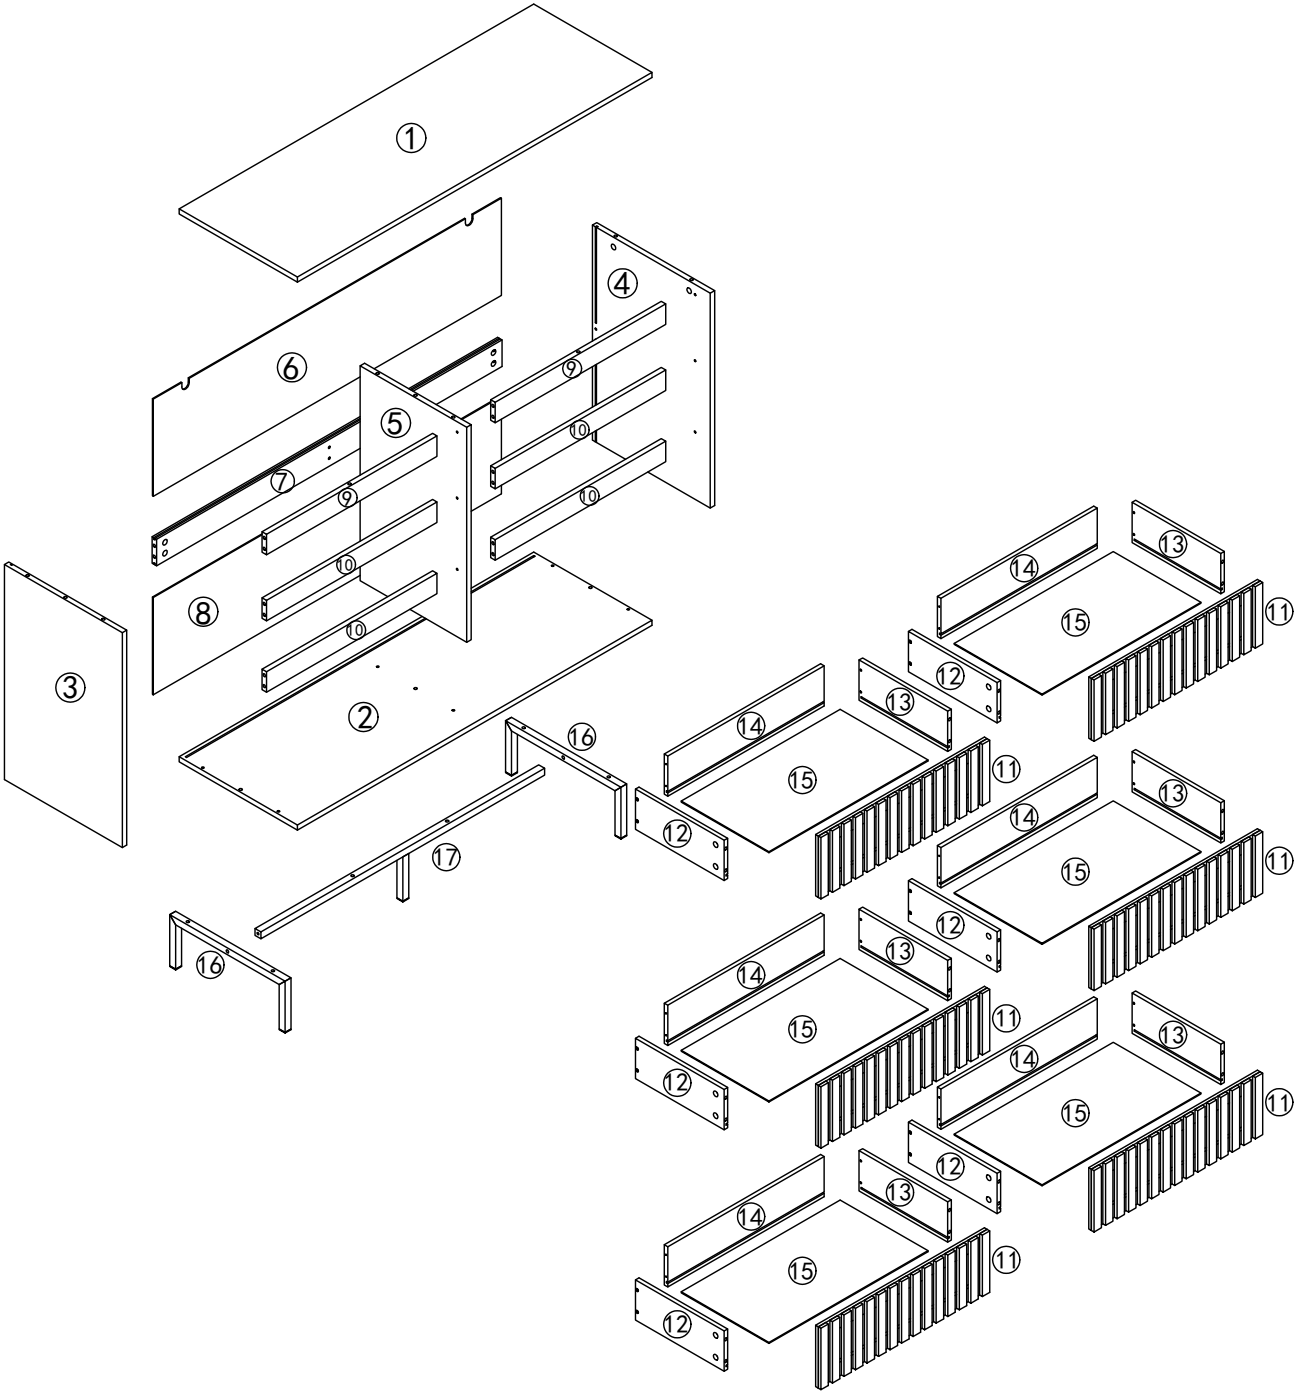


Assembly Instruction



A M6x35mm  54PCS	B Ø15x9mm  54PCS	C M3 x14mm  64PCS	D Ø8x30mm  6PCS	E M4x35mm  26PCS	F M6x40mm  2PCS	G Ø6x30mm  2PCS	H 4mm  1PC	I M5x40mm  8PCS
J  2PCS	K M4x14mm  2PCS	M  4PCS	N M6x28mm  6PCS	L  6PCS	R  6PCS			

Cam Lock FasteningSystem

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


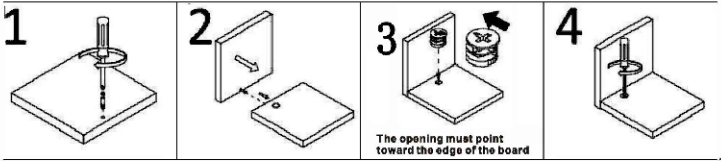


1

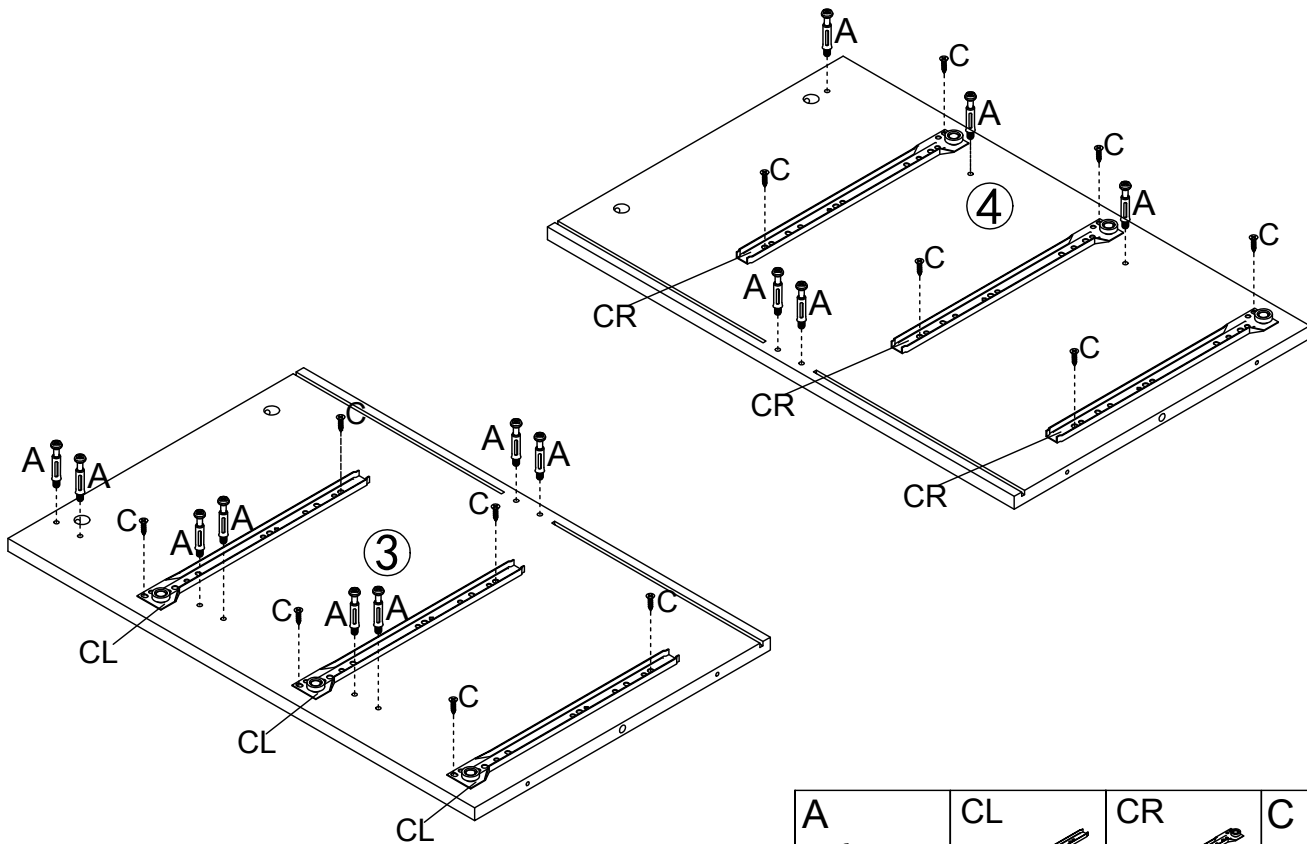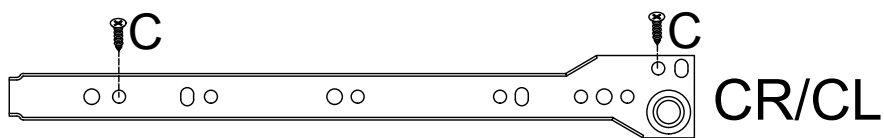

A	CL	CR	C
13PCS	3PCS	3PCS	12PCS


2

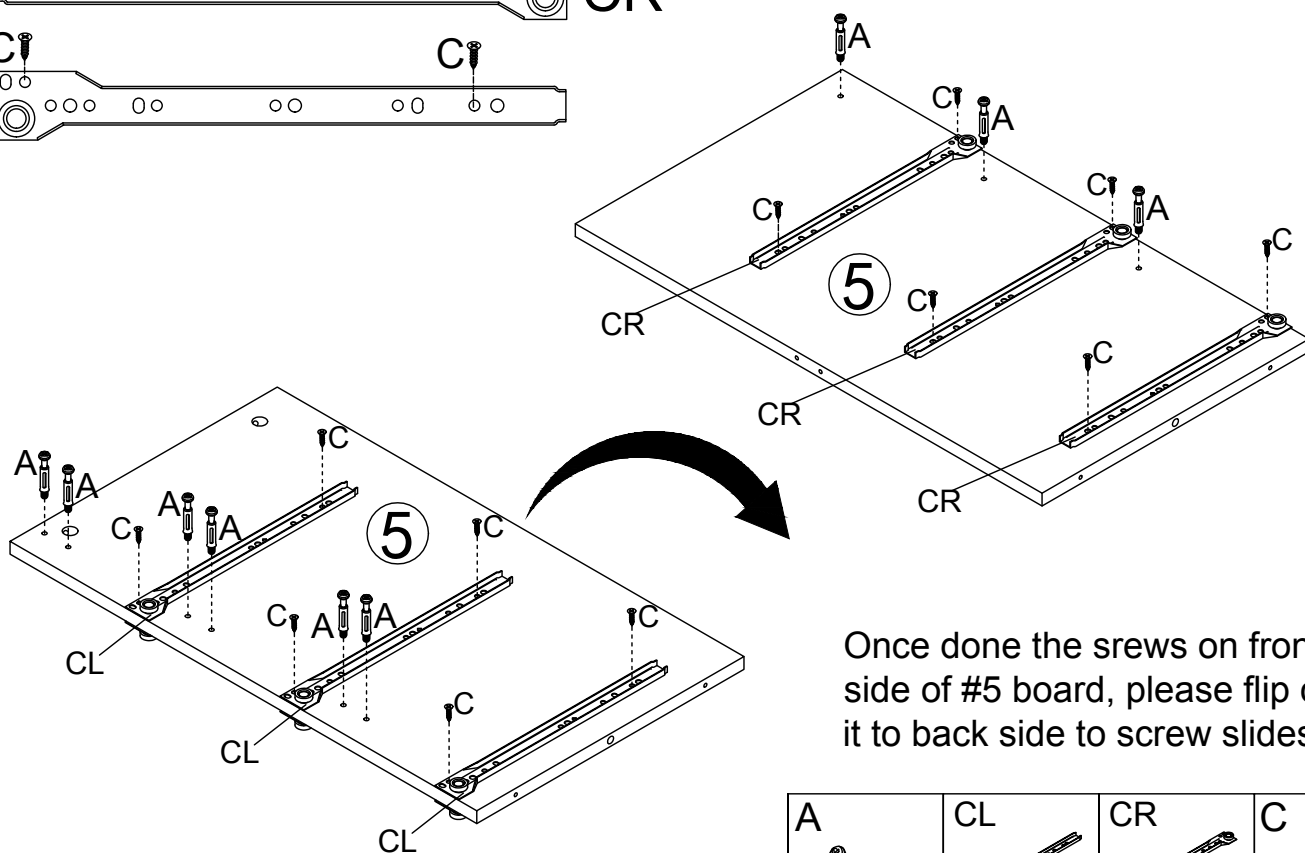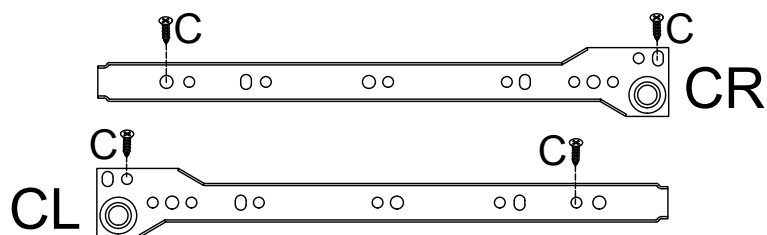

Once done the srews on front side of #5 board, please flip over it to back side to screw slides.

A	CL	CR	C
9PCS	3PCS	3PCS	12PCS

3

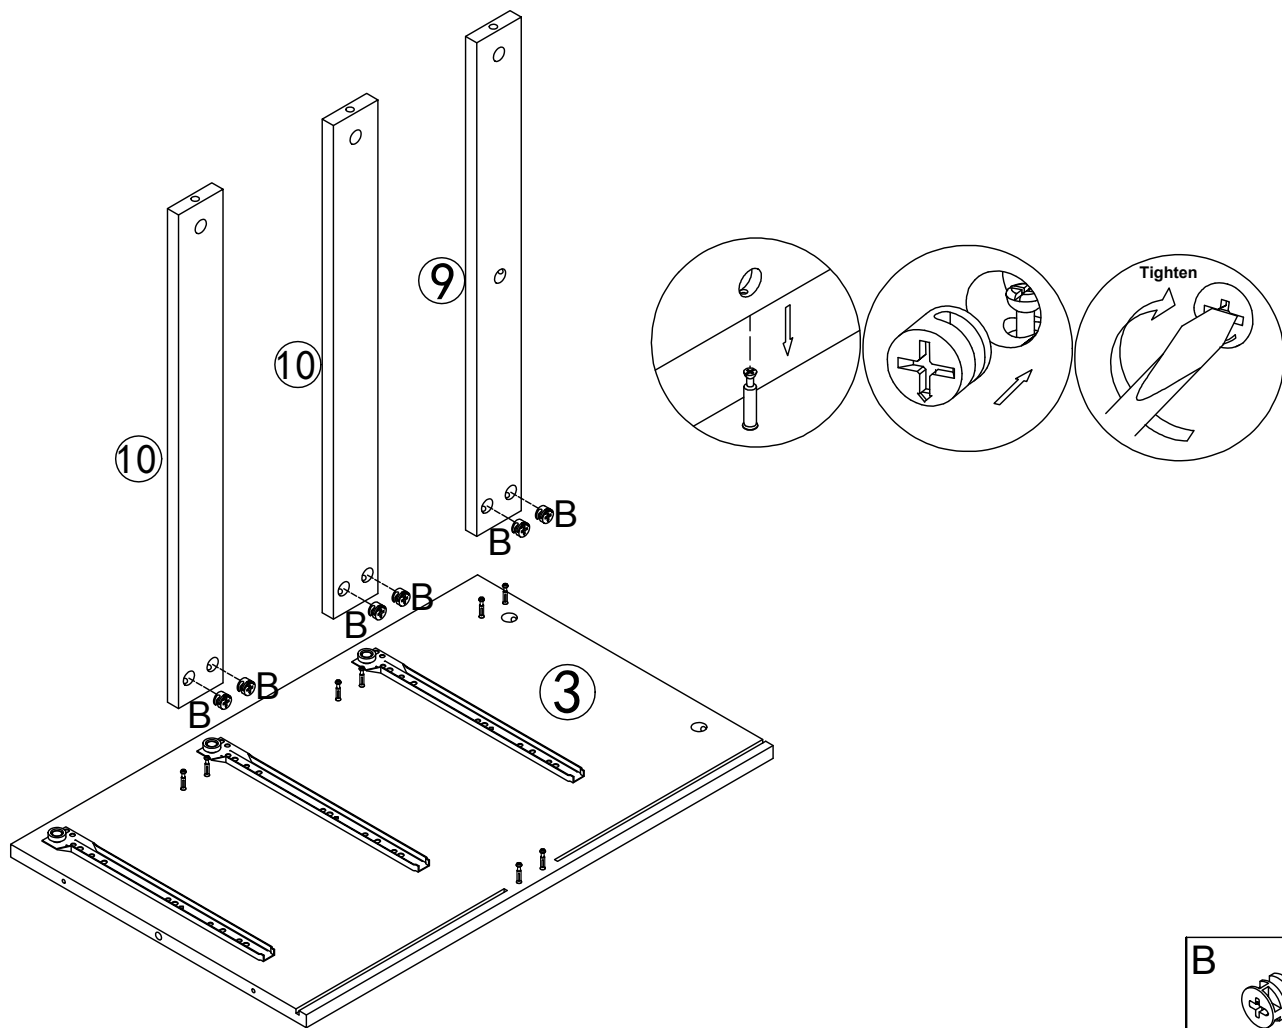


B



6PCS

4

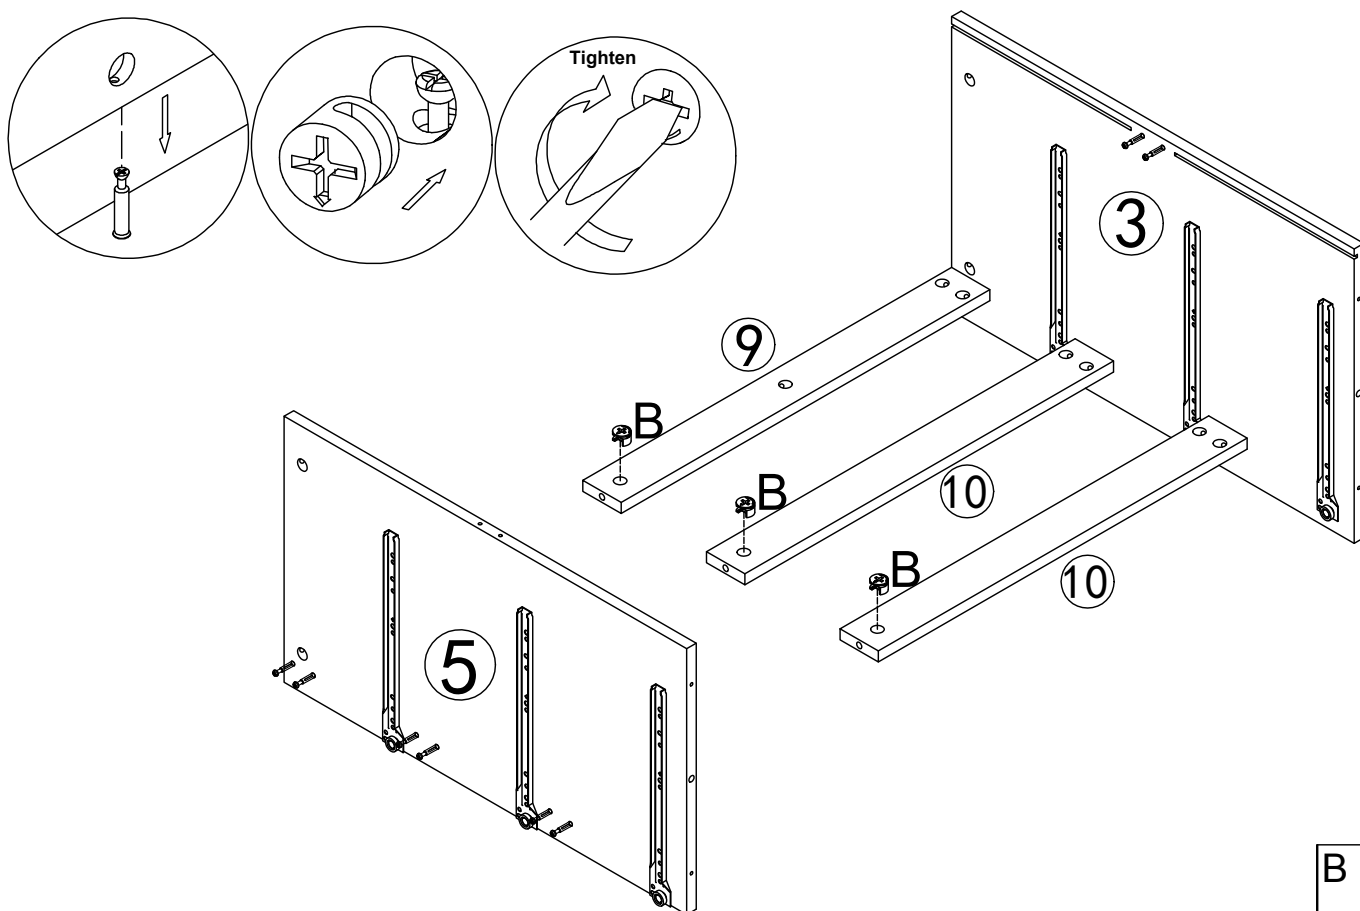


B



3PCS

5

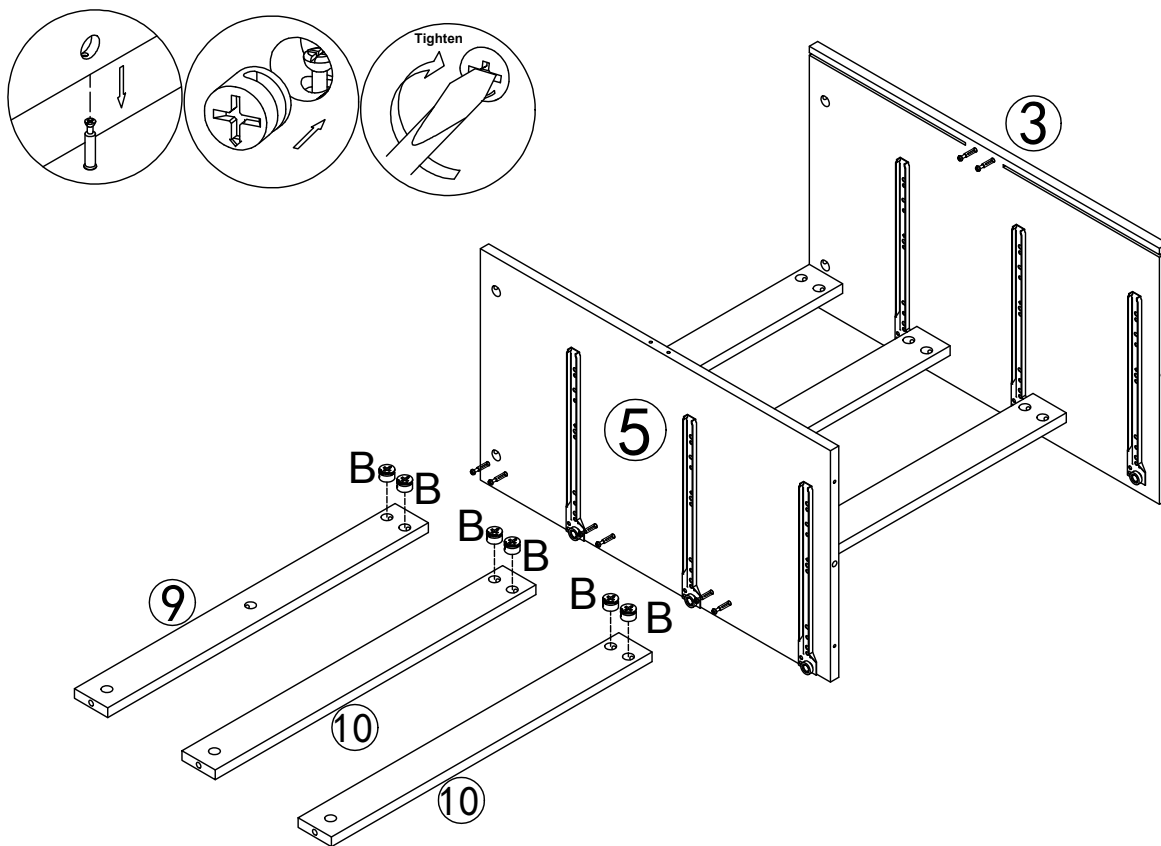


B



6PCS

6

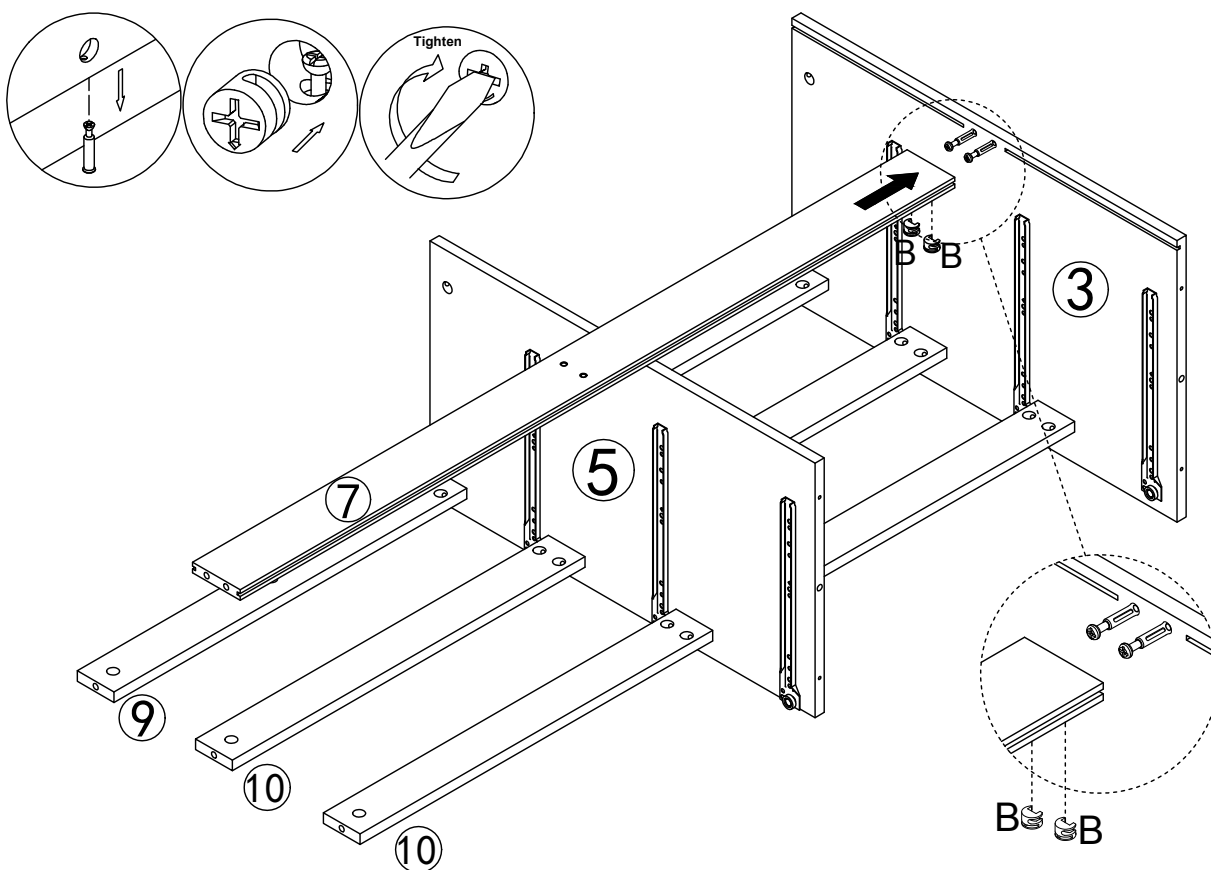


B




2PCS


7

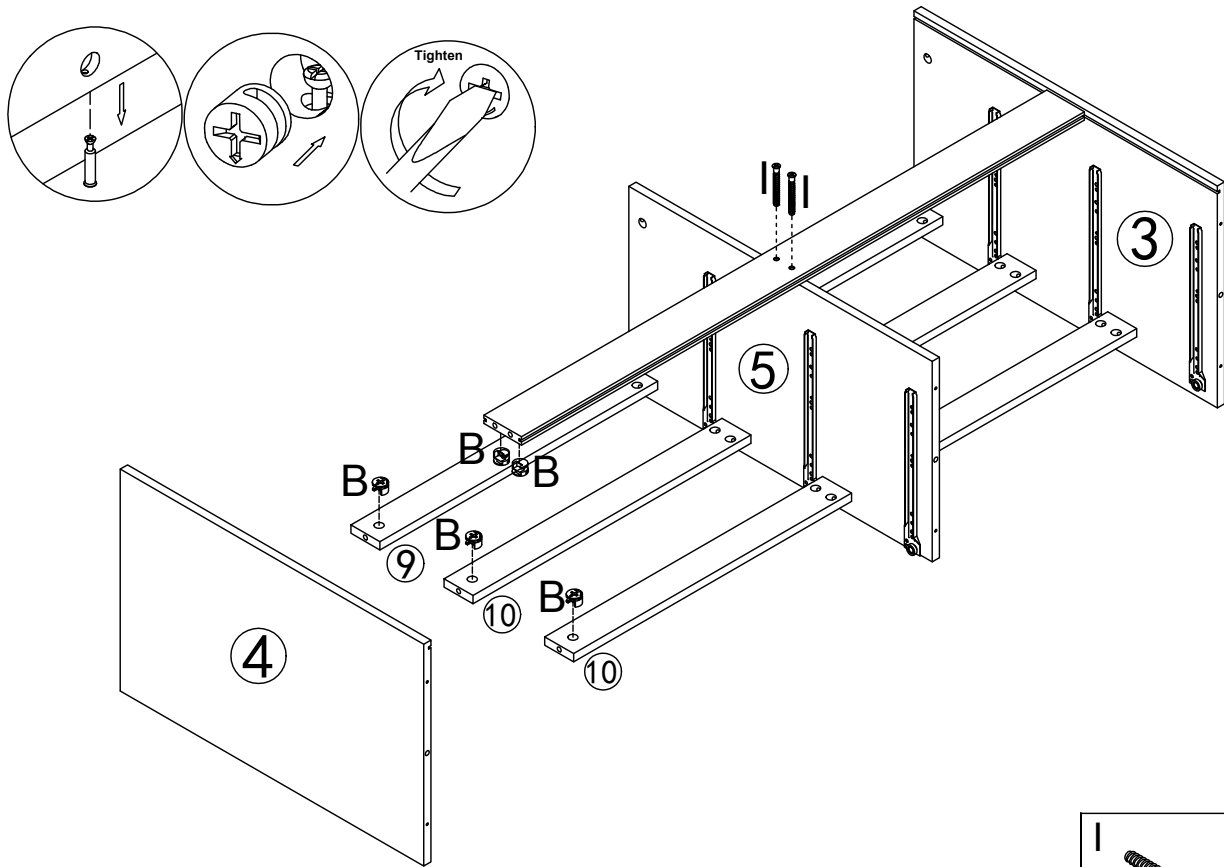


8

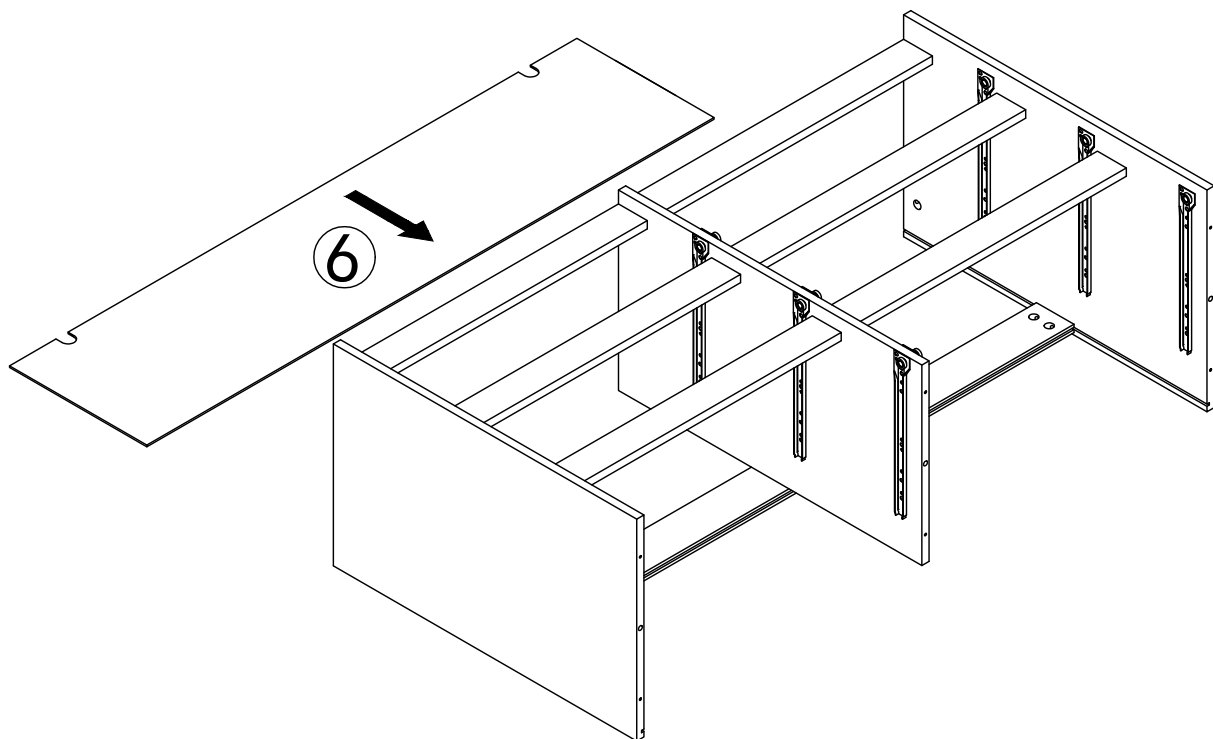


9

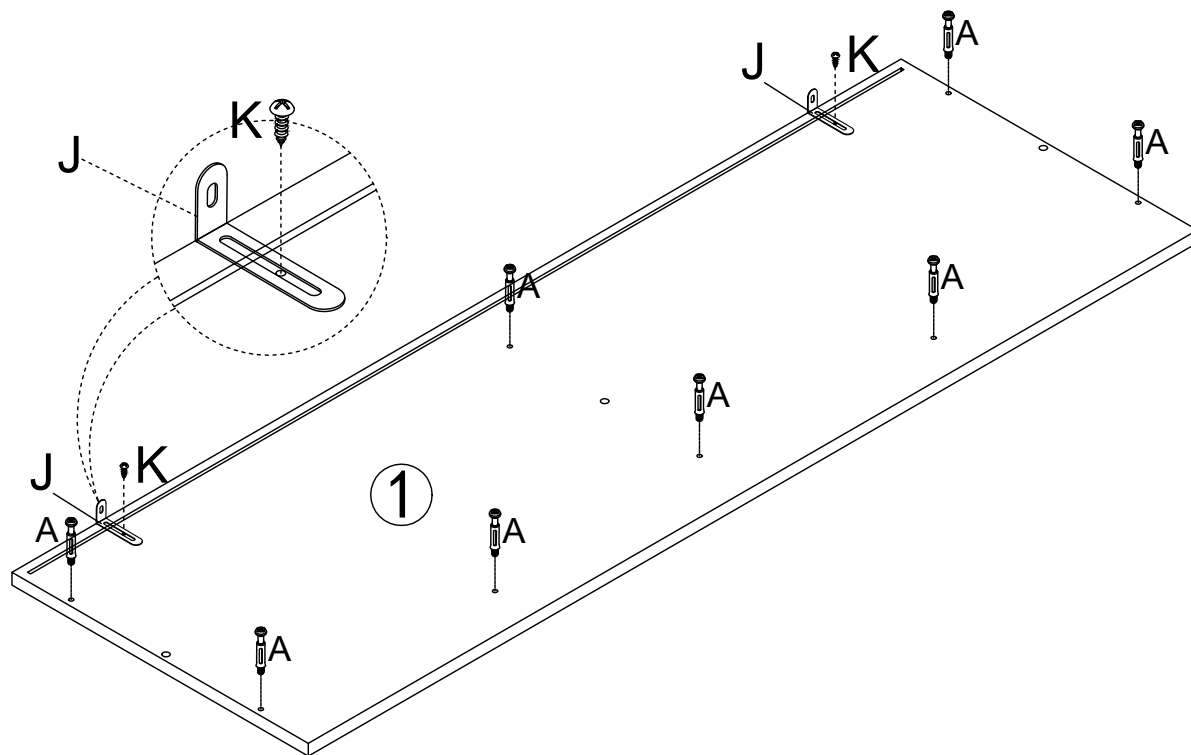


A	J	K
		
8PCS	2PCS	2PCS

10

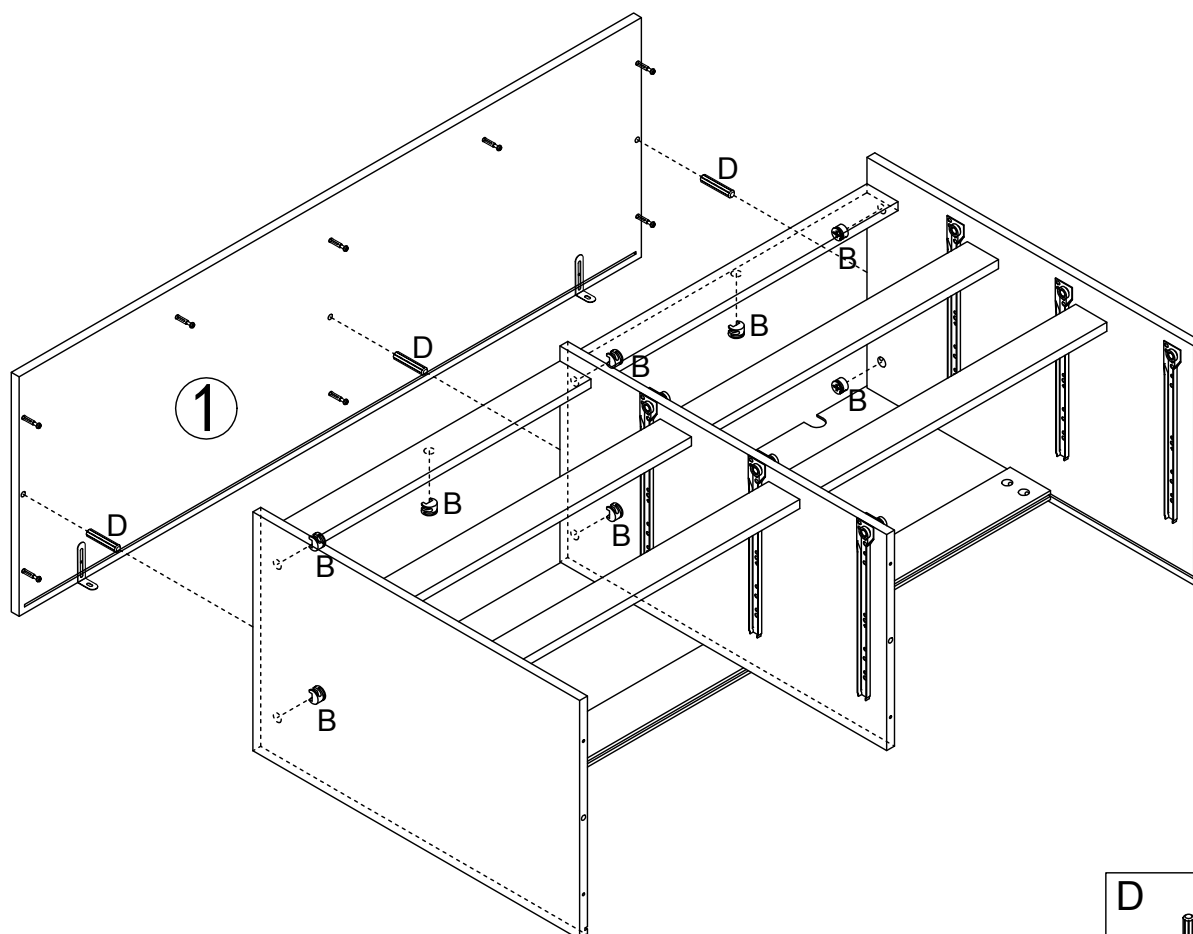


D	B
	
3PCS	8PCS

11

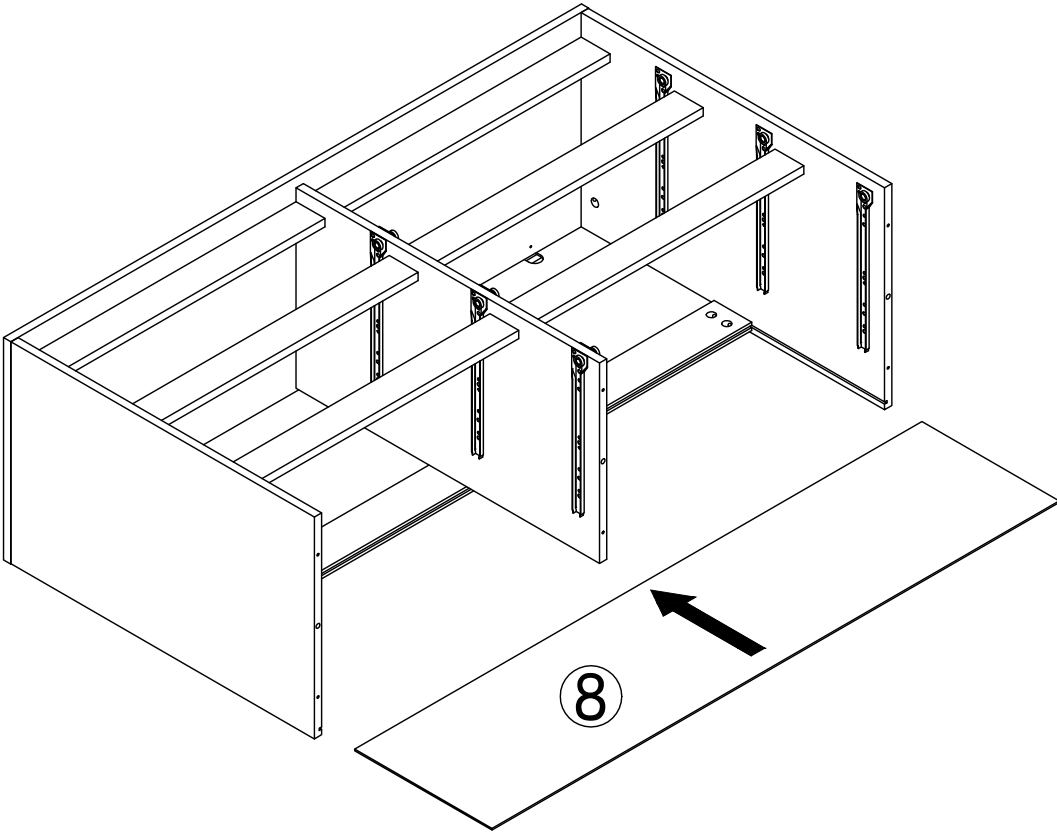


12

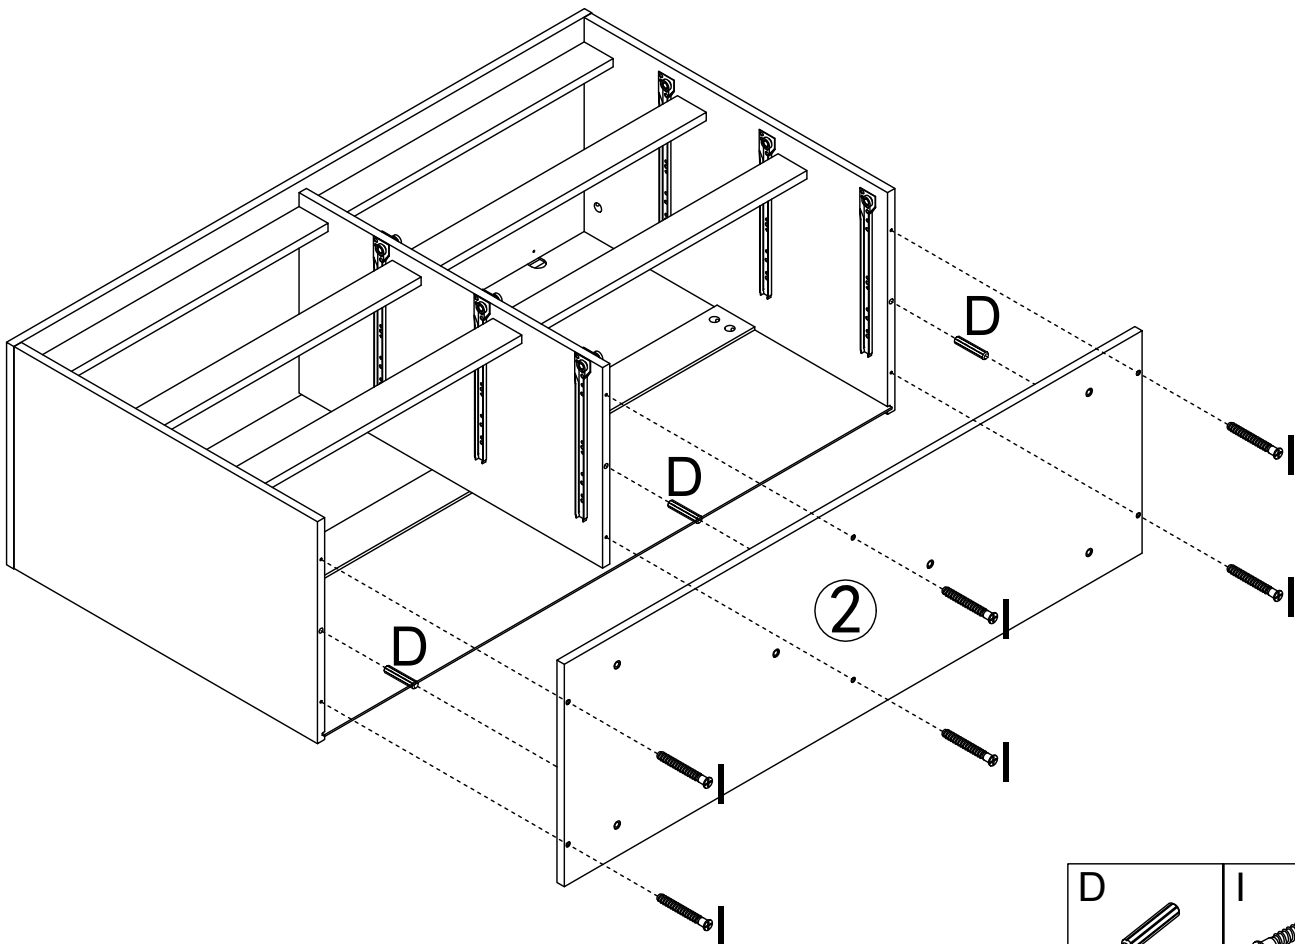

D	I
	
3PCS	6PCS

13

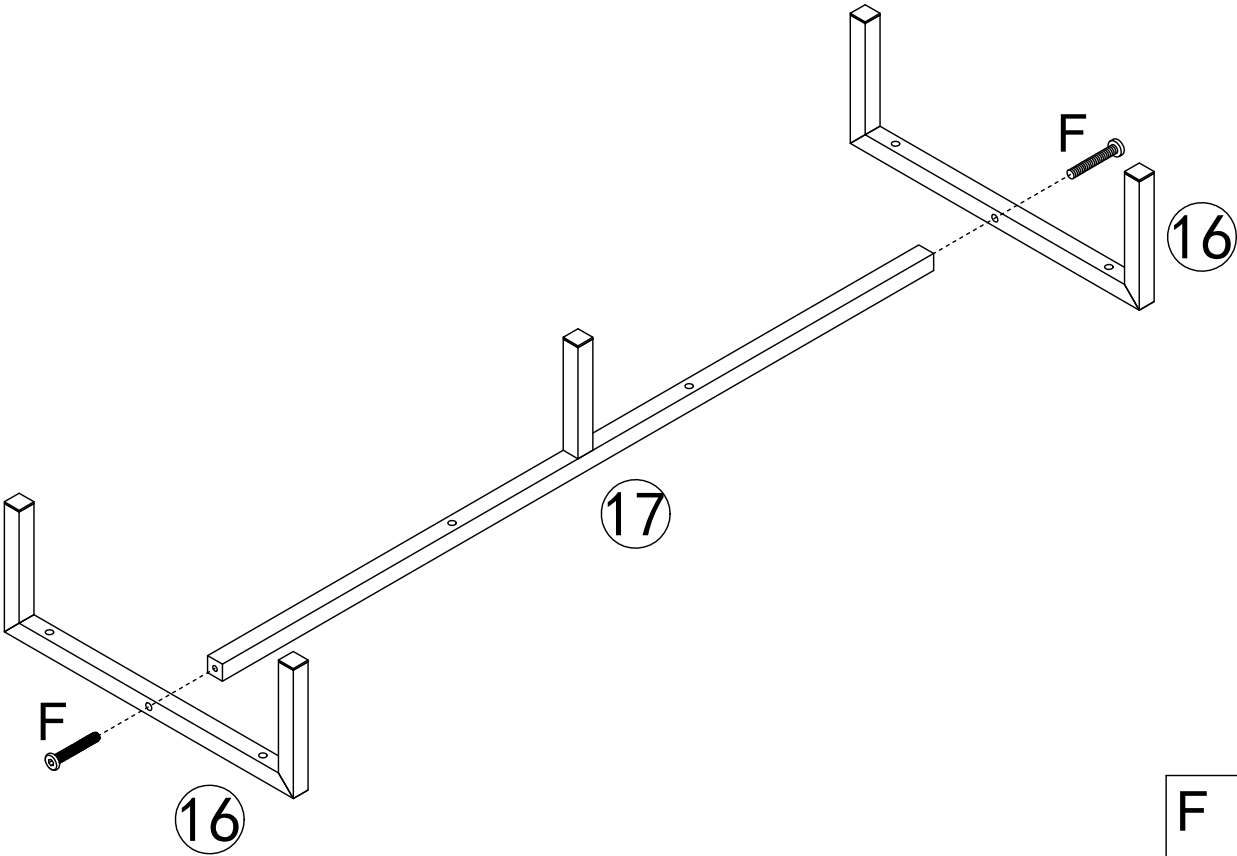


F



2PCS

14

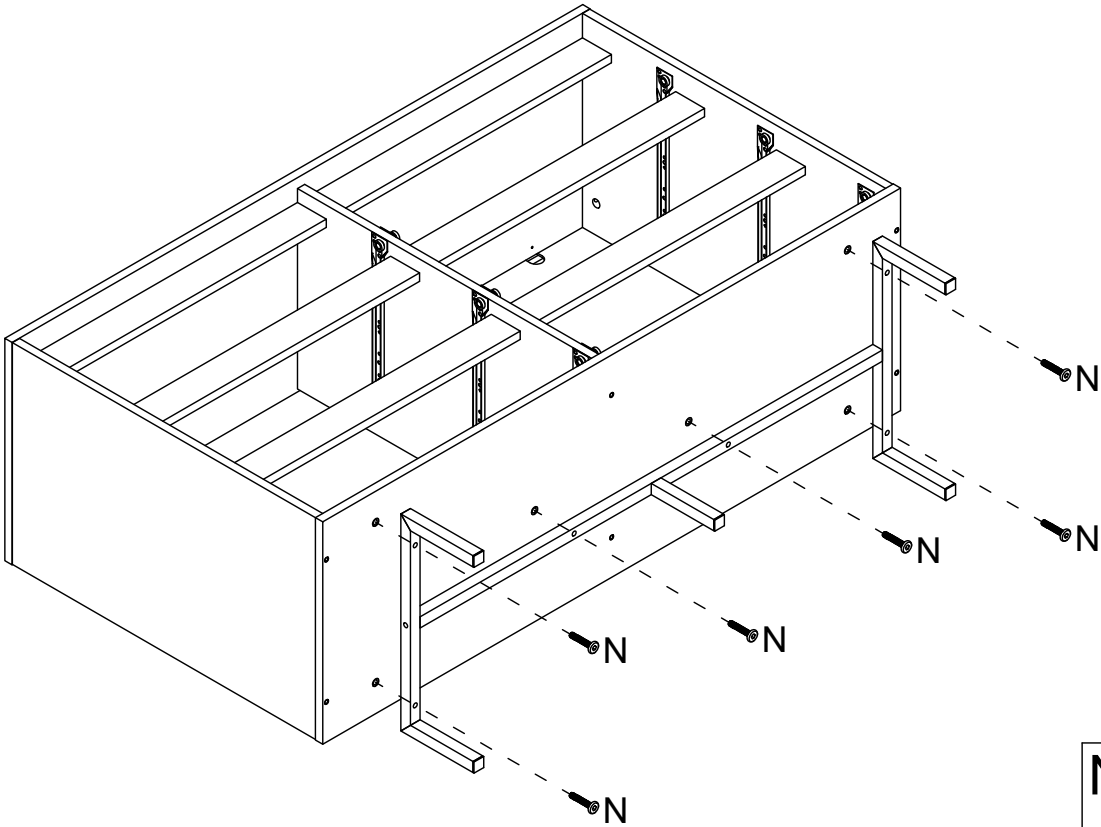


N




6PCS


15

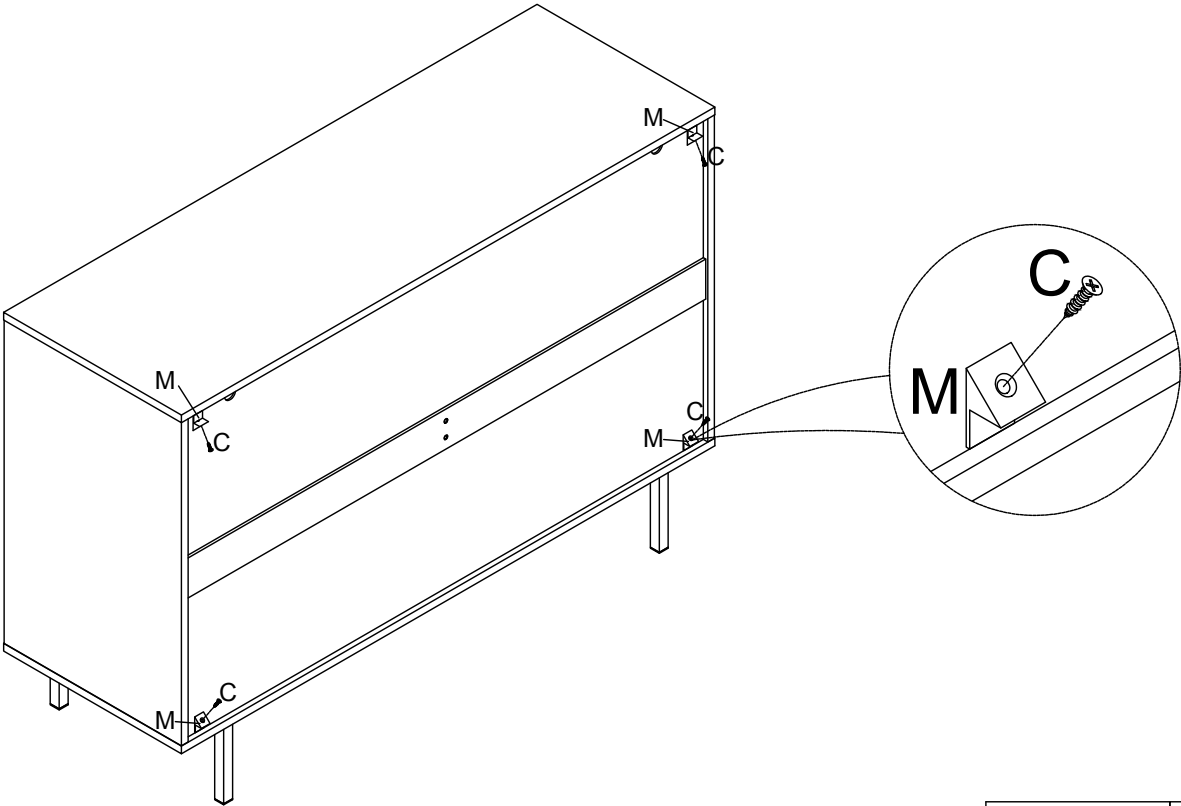



M	C
	
4PCS	4PCS

16

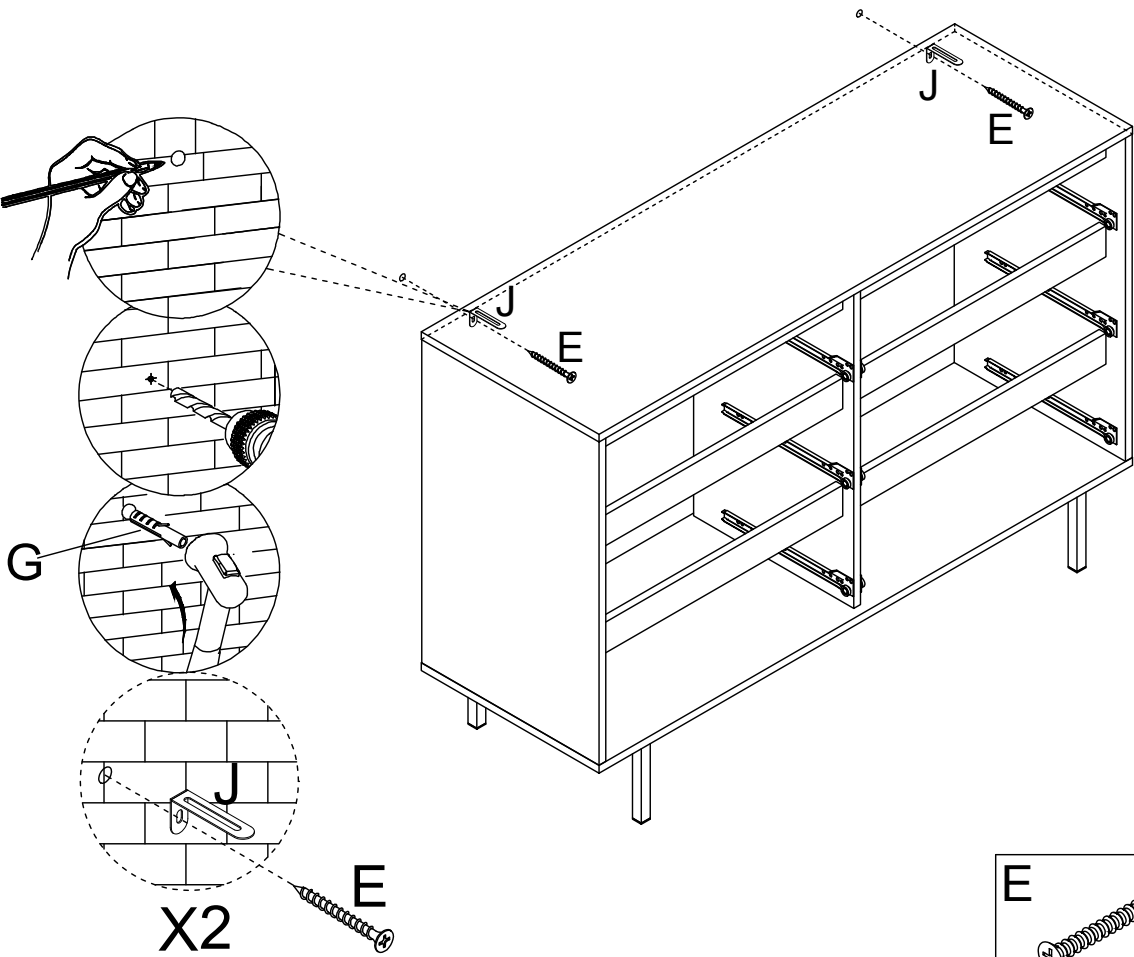


E	G
	
2PCS	2PCS




17

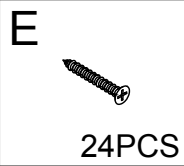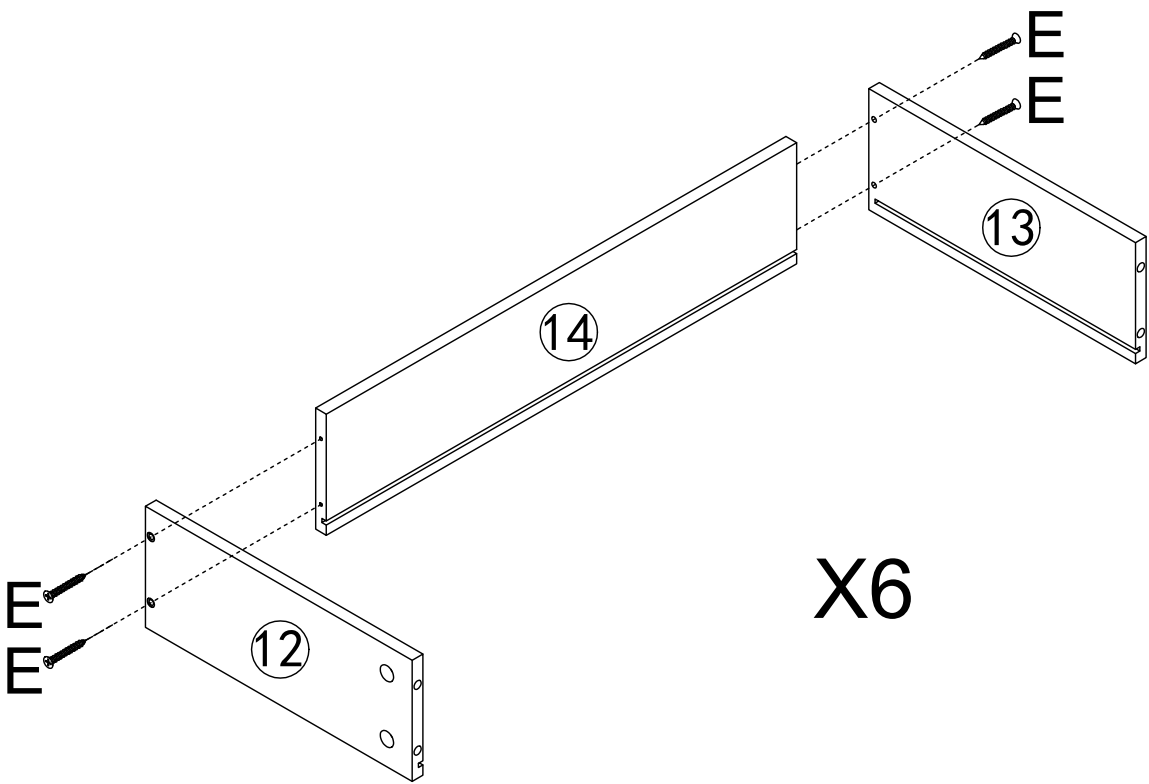

18

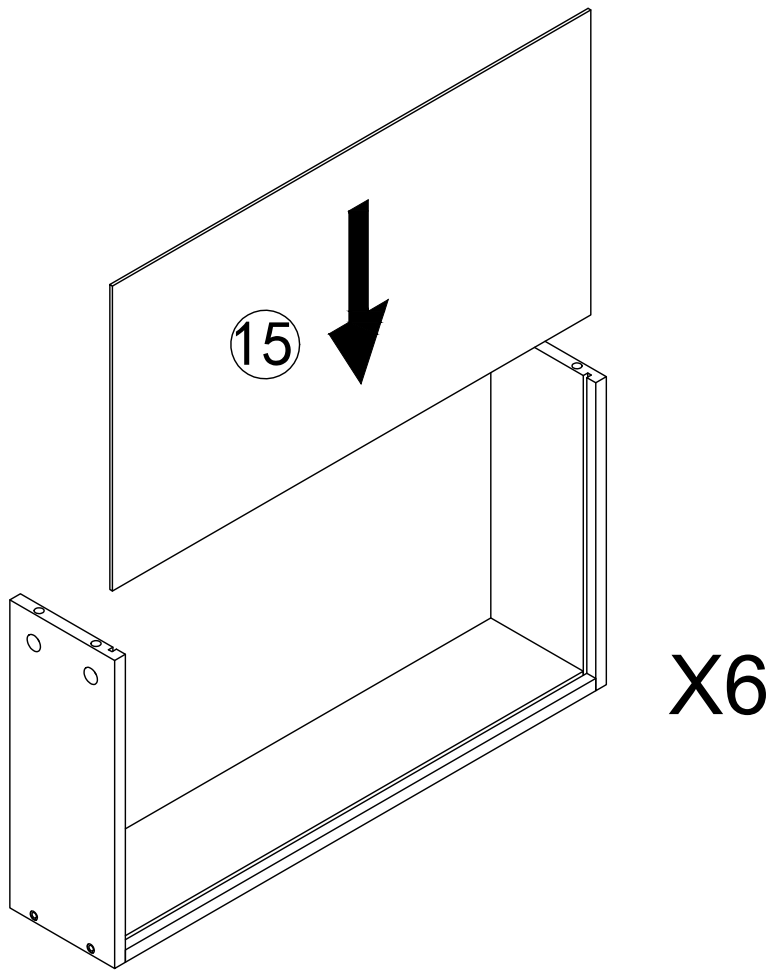


19

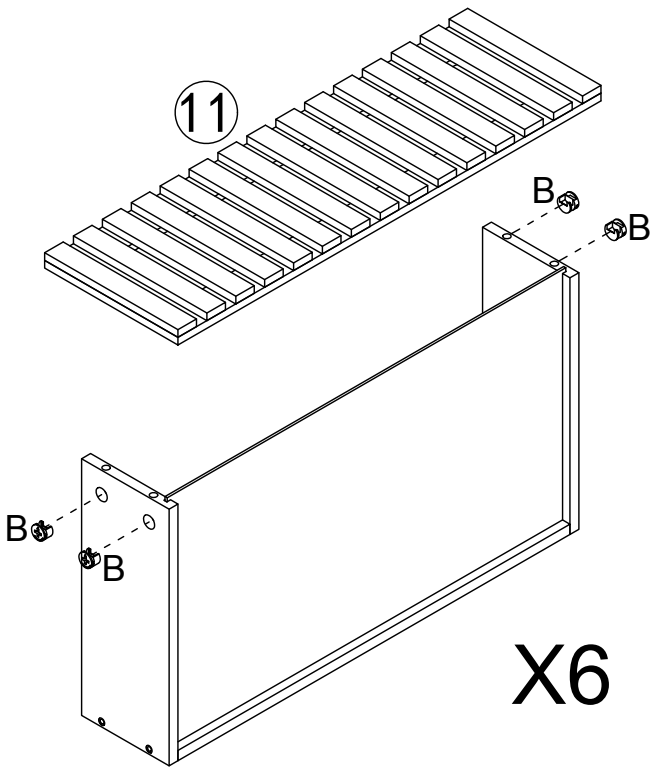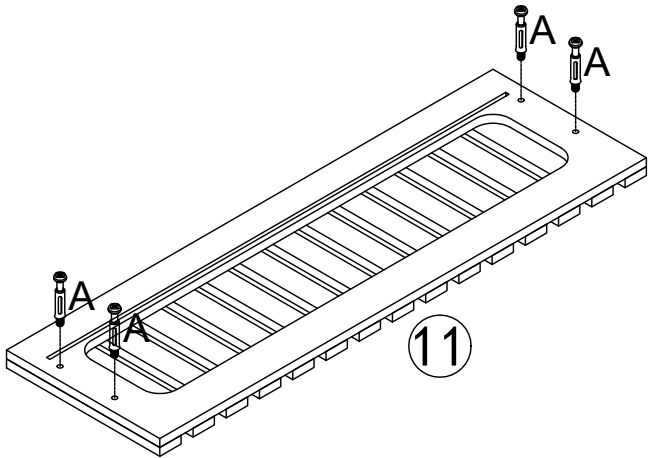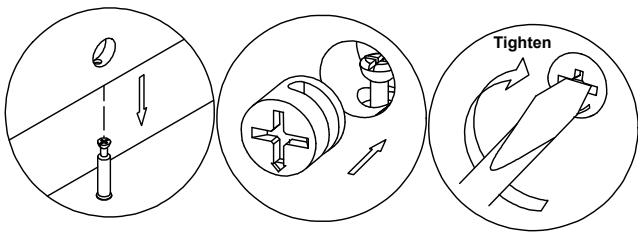


X6

A	B
	
24PCS	24PCS

20

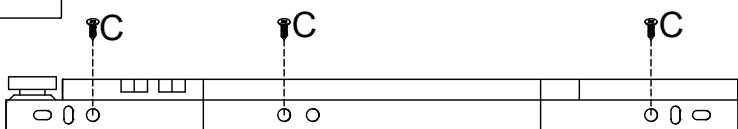


DL/DR

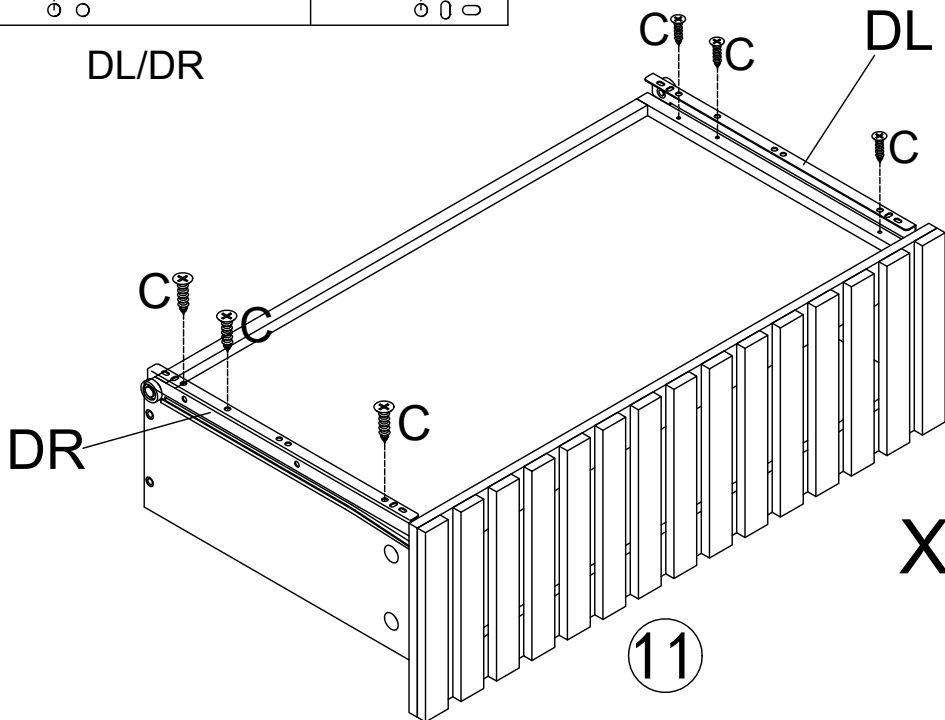

X6

DL	DR	C
		
6PCS	6PCS	36PCS

21

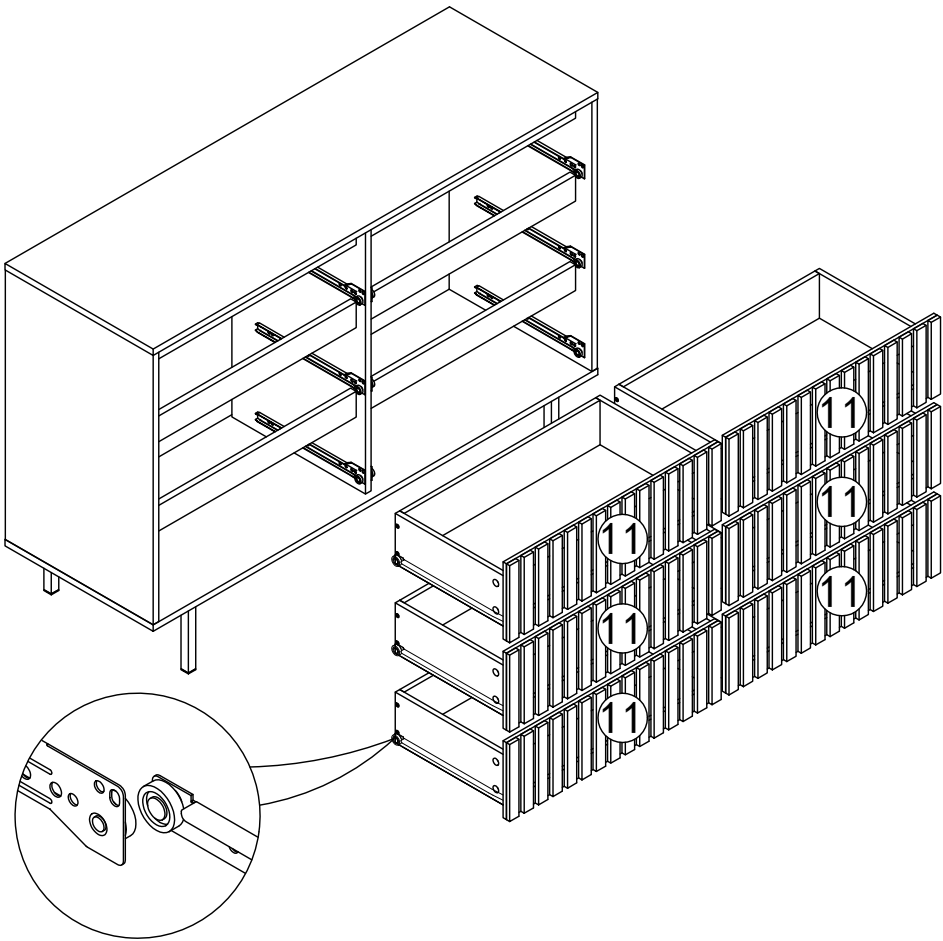

22

