


CONVENIENCE CONCEPTS

NEWPORT LILLY BOOKCASE

131596BL

131596W

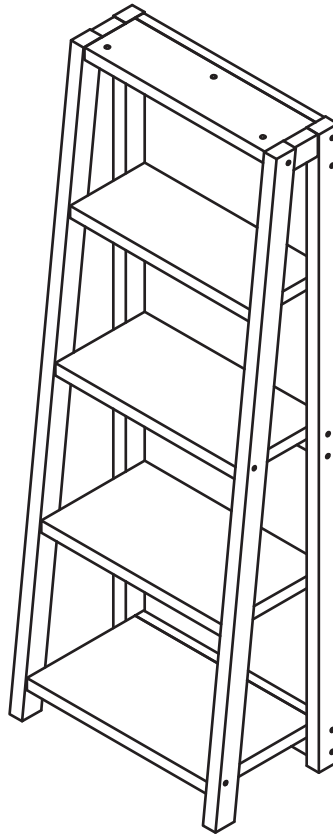

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .






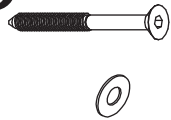










Please do not return to the store

Broken or missing parts?


Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

Hardware List





A 	B 	C 	D 	E 
Cambolt (11pcs)	Camlock (11pcs)	Wood dowel (20pcs)	Allen bolt (18pcs)	Barrel Nut (18pcs)
F 	G 	H 	I 	J 
Allen wrench (1pc)	Sticker (24pcs)	Bracket (1pc)	Screw (1pc)	Wall screw (1pc)
K 	L 	M 	N 	
Plastic anchor (1pc)	Foot pin (4pcs)	Sticker (4pcs)	Glue (1pc)	Glue : For securing please apply to wood dowel first before inserting into panel .

Panel List

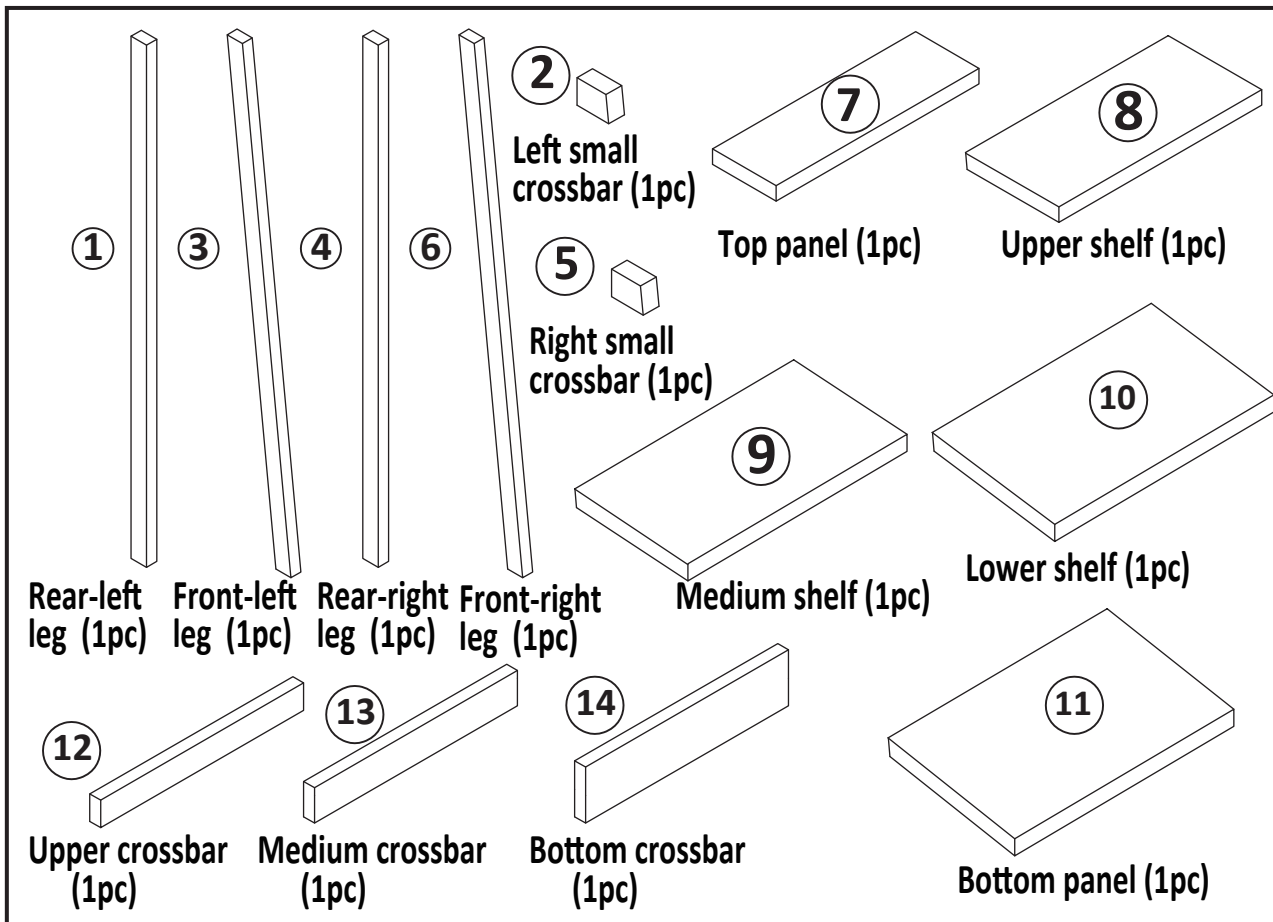


Please count and verify all parts before assembly .

Assembling the unit with camlocks and wood dowels.

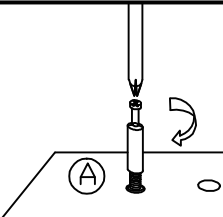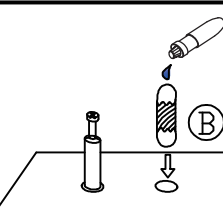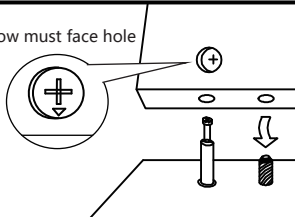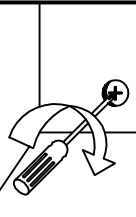			
<p>Gently screw cambolt into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>


Exploded Views

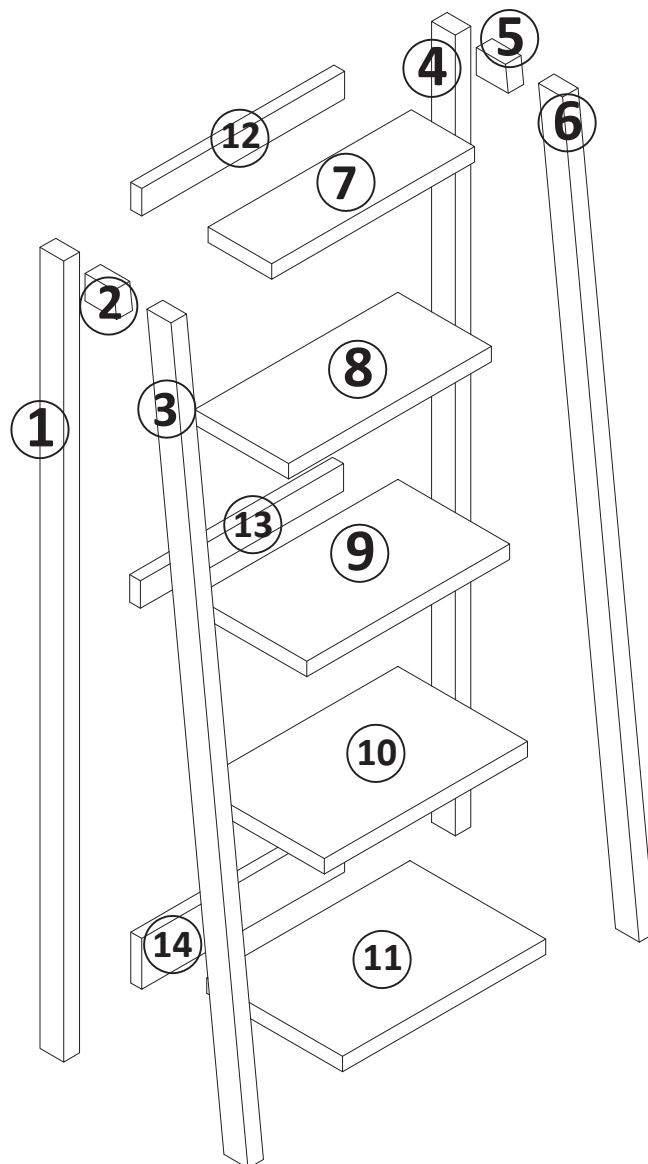

Step 1


Note: * Place item on a smooth/soft surface such as carpet or towel.

1. Screw cambolts (A) into upper crossbar (12), medium shelf (9), and bottom crossbar (14).
2. Insert wood dowels (C) into upper crossbar (12), medium shelf (9), and bottom crossbar (14).
3. Insert camlocks (B) into top panel (7), medium crossbar (13), and bottom panel (11).
4. Connect top panel (7) to upper crossbar (12), medium shelf (9) to medium crossbar (13), and bottom panel (11) to bottom crossbar (14), as shown by gently tightening camlocks.

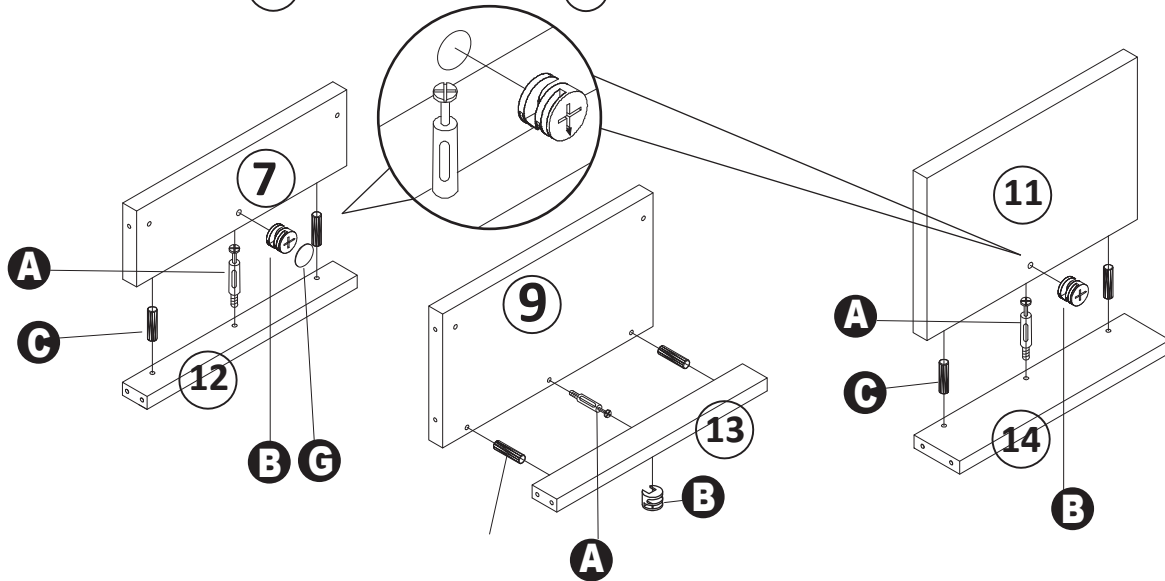


Step 2

1. Insert wood dowels (C) into legs (1), (3), (4), and (6).
2. Insert foot pins (L) into bottoms of legs (1), (3), (4), and (6).
3. Connect legs (1) and (3) to left small crossbar (2), and legs (4) and (6) to right small crossbar (5), as shown.

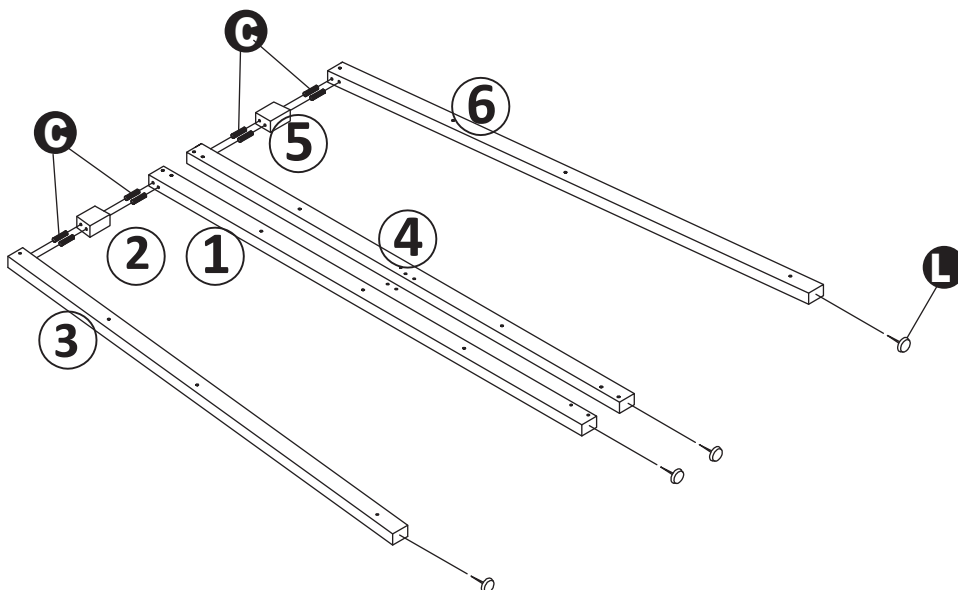


Step 3

1. Screw cambolts (A) into legs ①, ③, ④, and ⑥.
2. Insert wood dowels (C) into legs ① and ④.

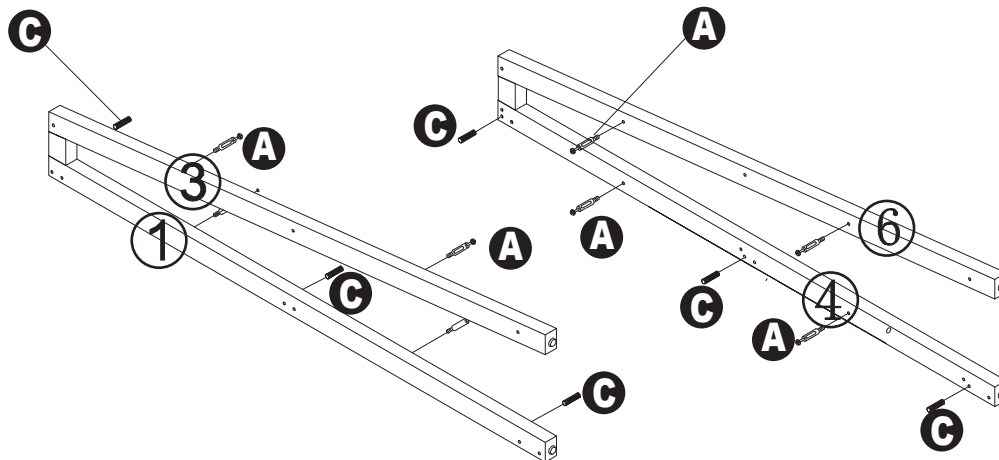


Step 4

1. Insert camlocks (B) into shelves ⑧ and ⑩.
2. Make sure that arrow on camlocks face towards bolt holes.

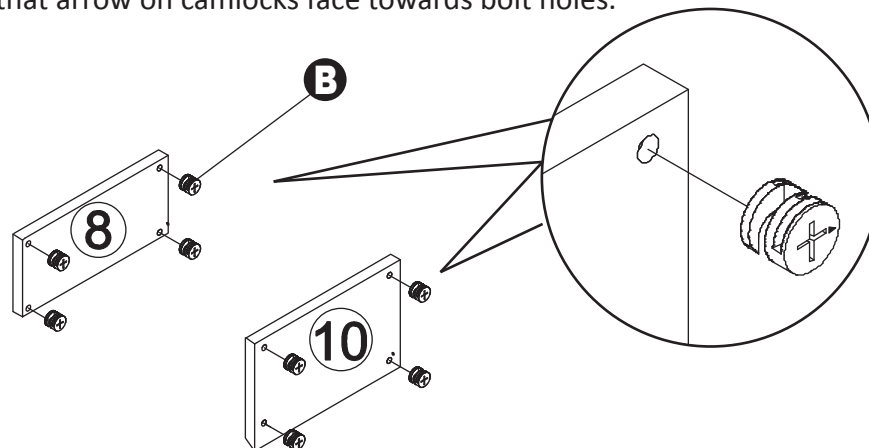


Step 5

1. Attach shelves ⑧ and ⑩ to leg assembly with parts ①, ② and ③. Gently tighten camlocks.

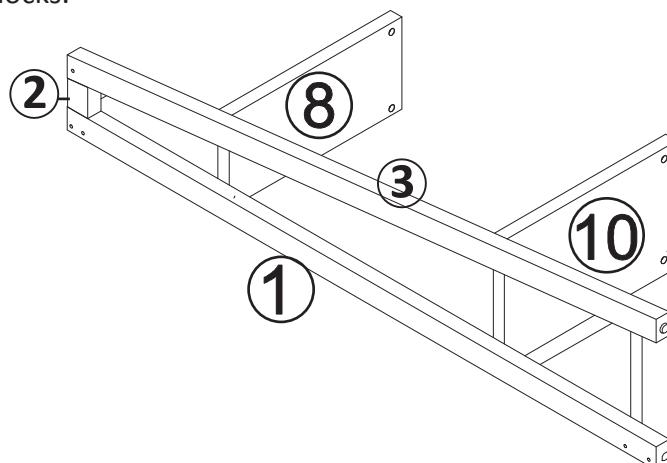


Step 6

1. Insert barrel nuts (E) into Shelf (7) and part (12). Hole in Barrel nut must be have hole facing bolt hole. A flat head screw driver may be needed to adjust Barrel nut once it is in the hole.
2. Attach shelf (7) to Leg assembly with parts (1), (2) and (3) using Allen bolt and washer (D) and allen wrench (F).
3. Repeat parts (1) and (2) using shelf (9) assembly (parts (9) and (13)) and shelf (11) assembly (parts (11) and (14)).

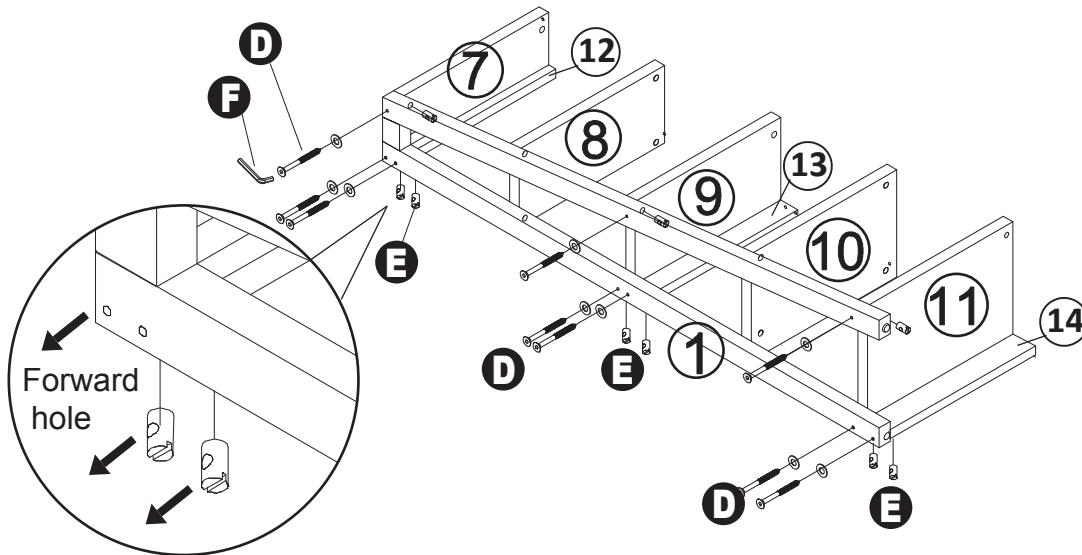


Step 7

1. Attach leg assembly with parts (4), (5), and (6) to shelf assembly. Start by tightening camlocks in shelves (8) and (10), then move on to shelves (7), (9), and (11).

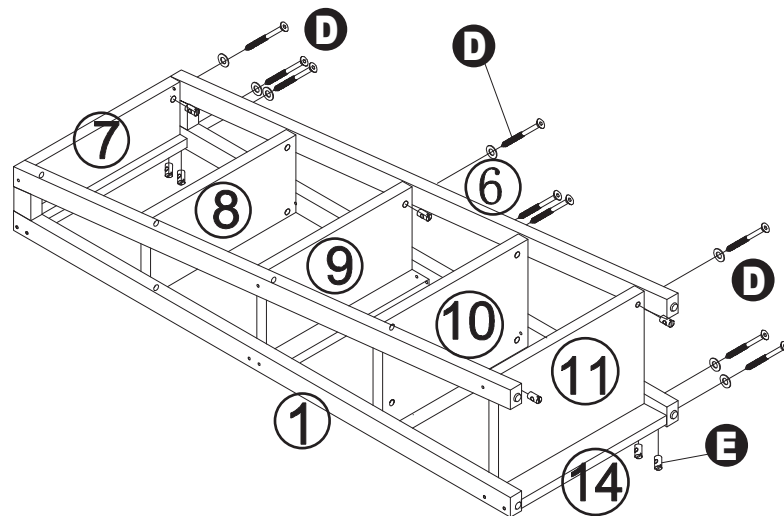

Step 8

1. Place stickers (M) over barrel nuts and stickers (G) over bolt holes and camlocks, if desired.

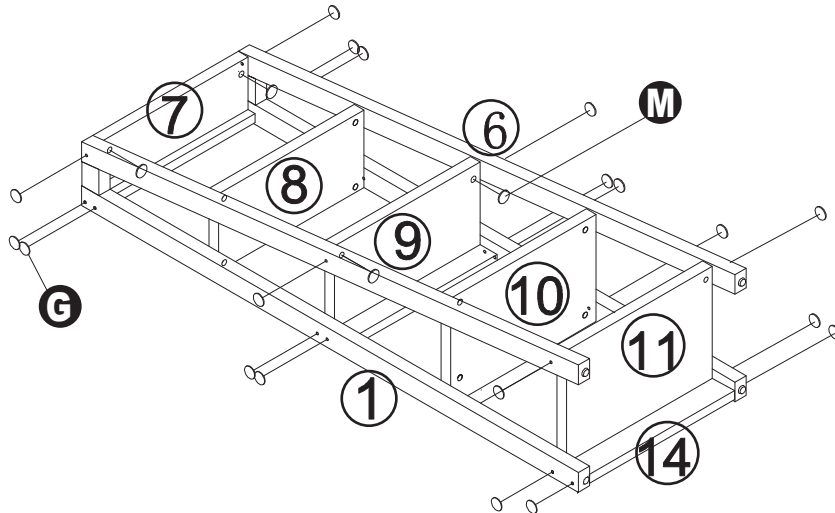

Step 9

1. Attach screw (I) through bracket (H) into top panel (7).
2. Align unit with wall and mark future hole with bracket. Drill hole and insert plastic anchor (K).
3. Attach wall screw (J) through bracket (H) into Plastic anchor (K).

Enjoy your bookcase!

