




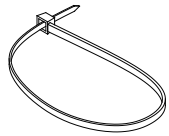

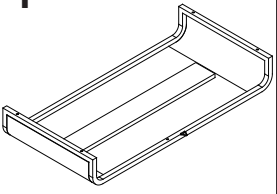


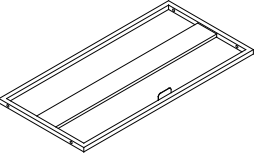

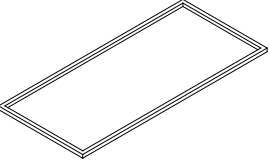
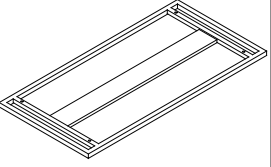
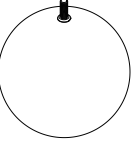


Assembly Instruction


HARDWARE LIST

A 	B  M6x25mm	C  M4x10mm	D 	E  M4x30mm
1 PC	20 PCS	2 PCS	2 PCS	2 PCS
F 	G 	H 		
1 PC	1 PC	2 PCS		


PART LIST

I 	J 	K 	L 	M 
1 PC	1 PC	1 PC	1 PC	1 PC
N 	O 	P 	Q 	R 
1 PC	1 PC	1 PC	1 PC	1 PC
S 				
4 PCS				

● Do not use power tools to assemble your furniture.
Power tools may strip or damage the parts.


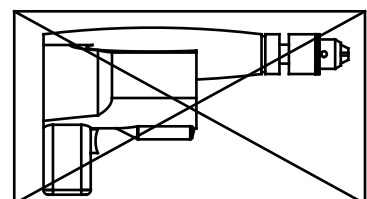


Explosive View

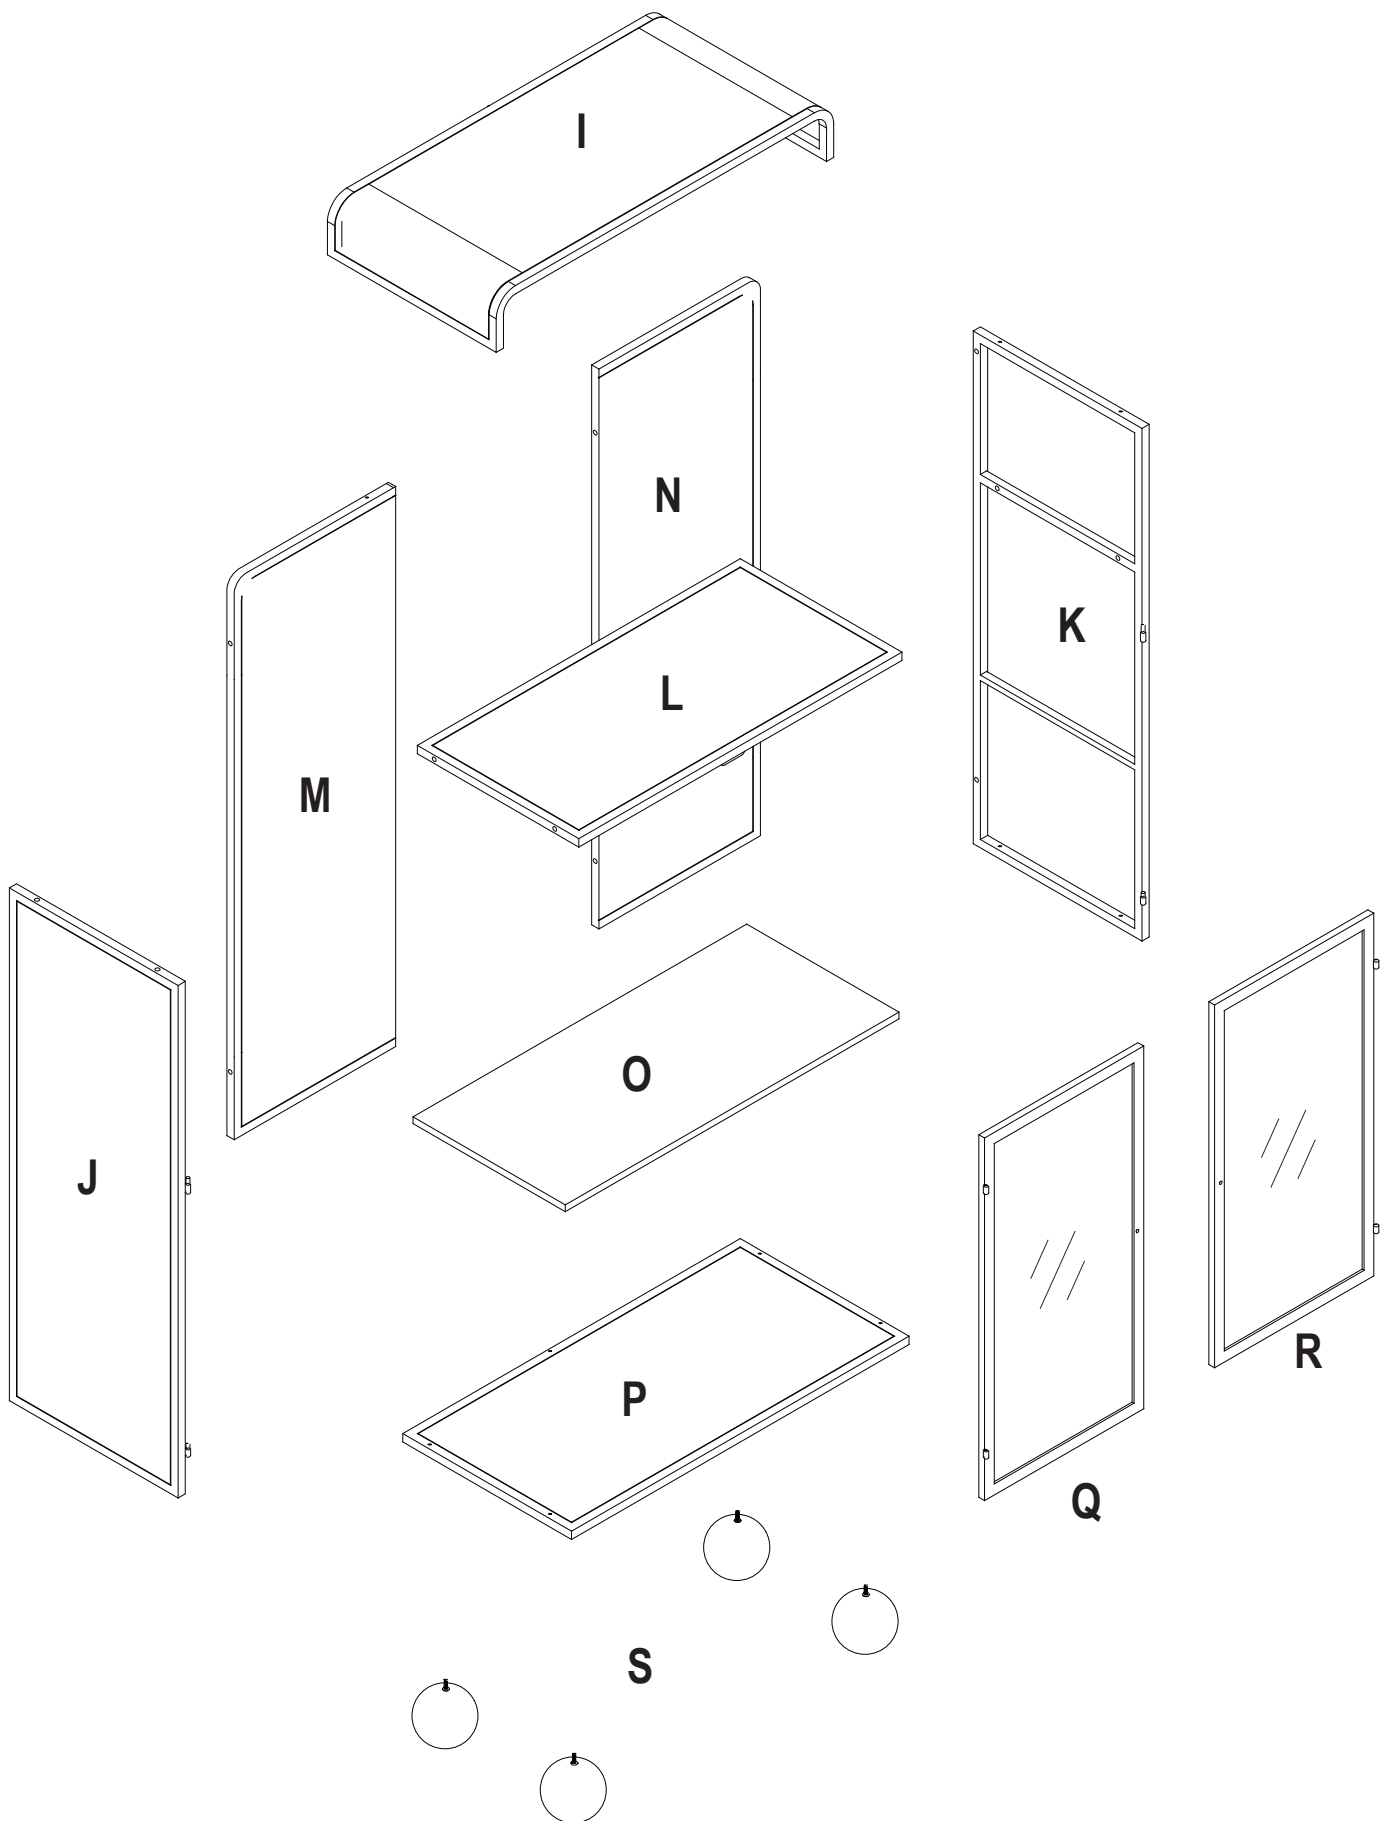

IMPORTANT NOTE: DO NOT tighten all screws and bolts until completely assembled



Step 1

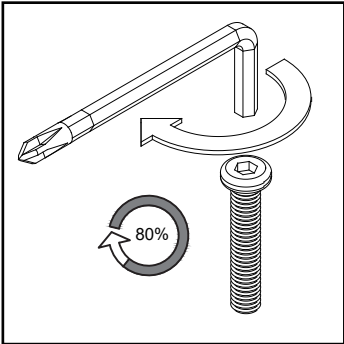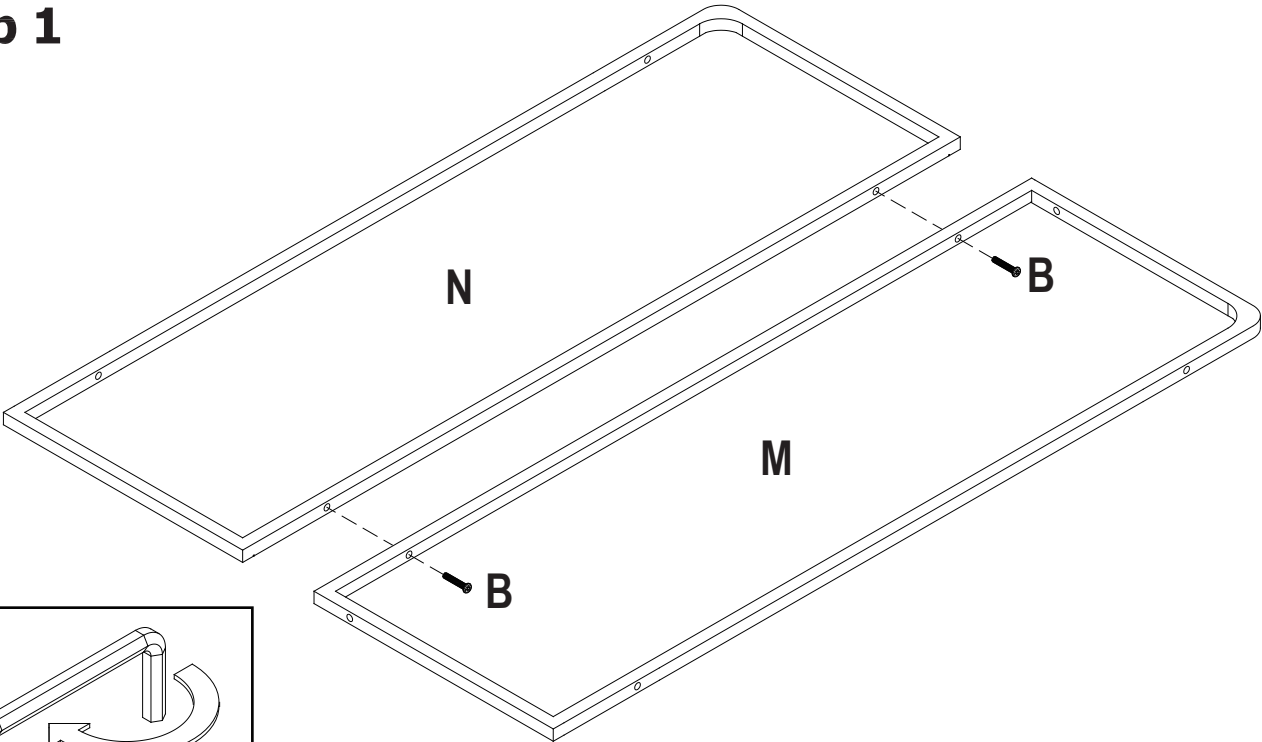

B X 2 PCS


A X 1 PC

Step 2

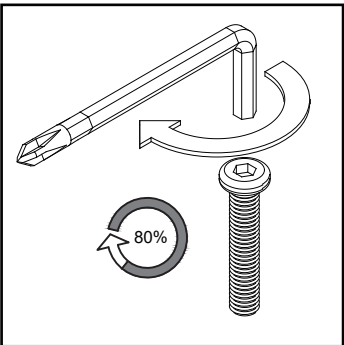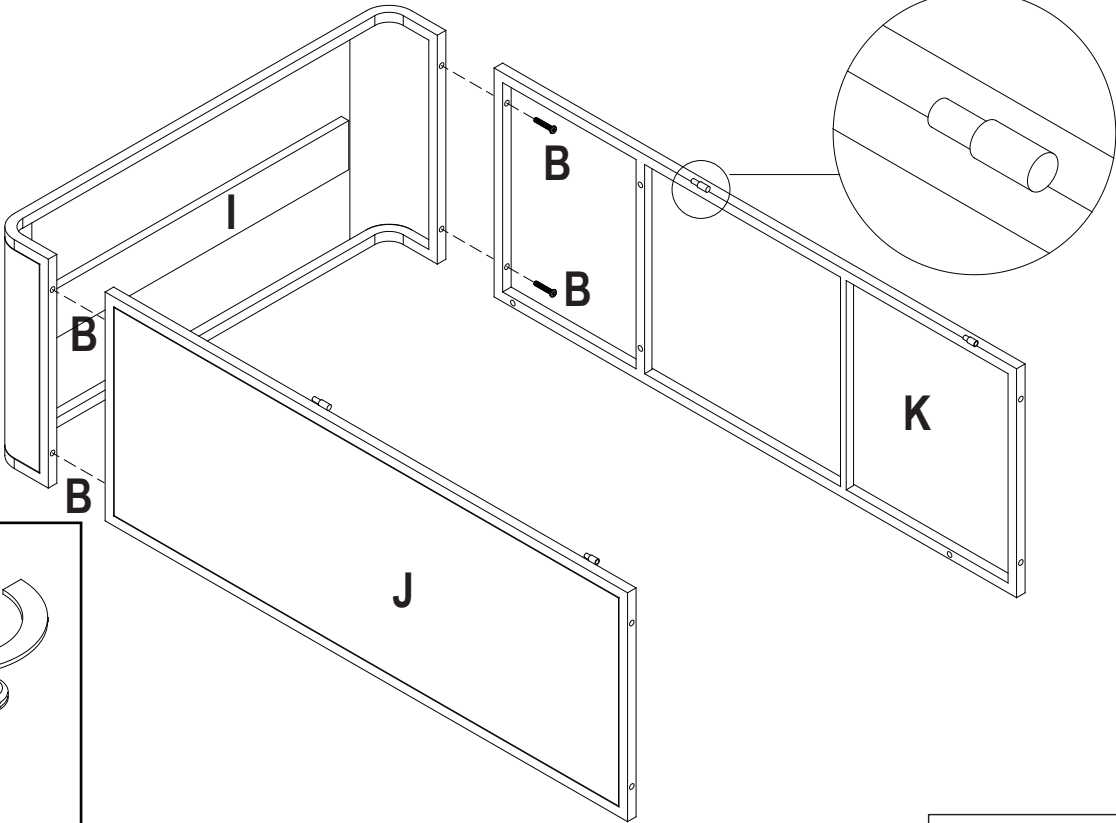



B X 4 PCS

Step 3

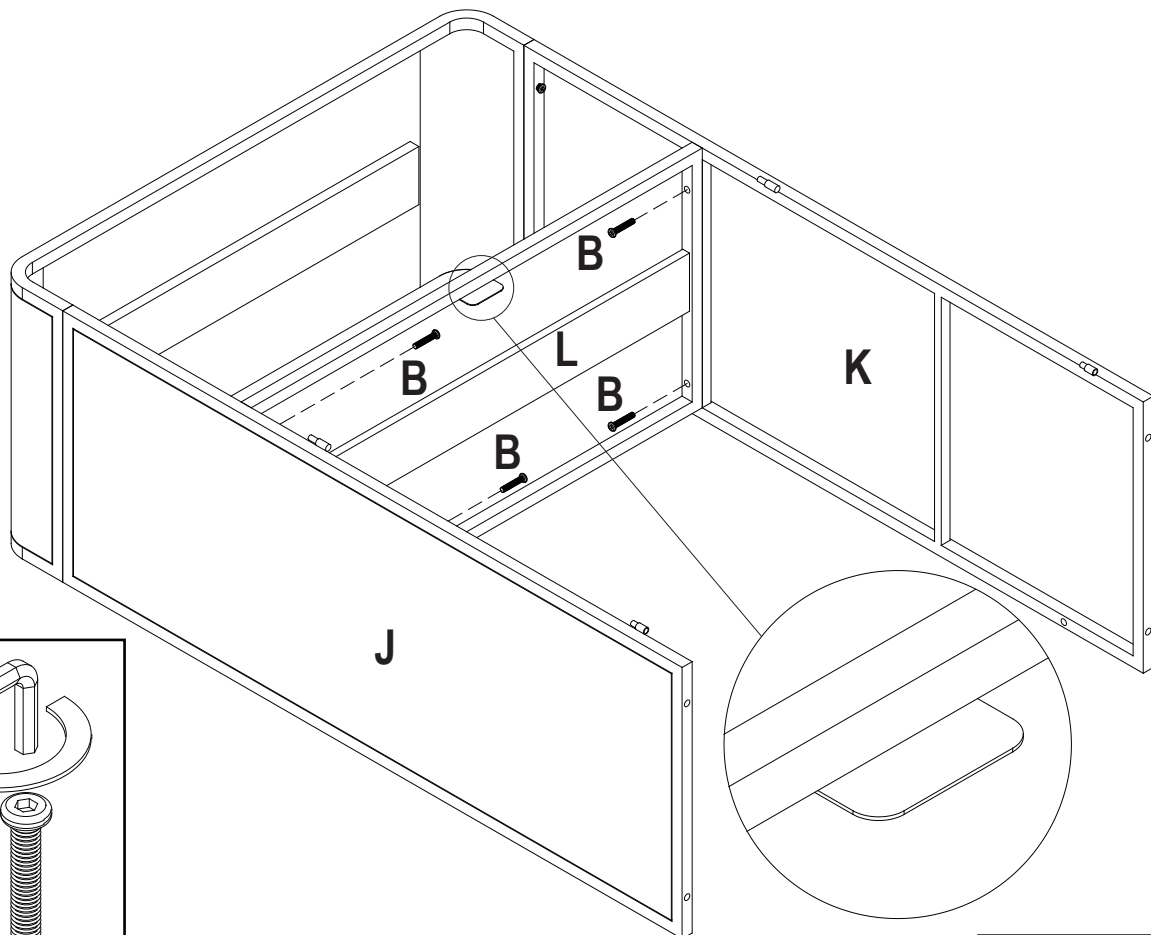


B X4 PCS

Step 4

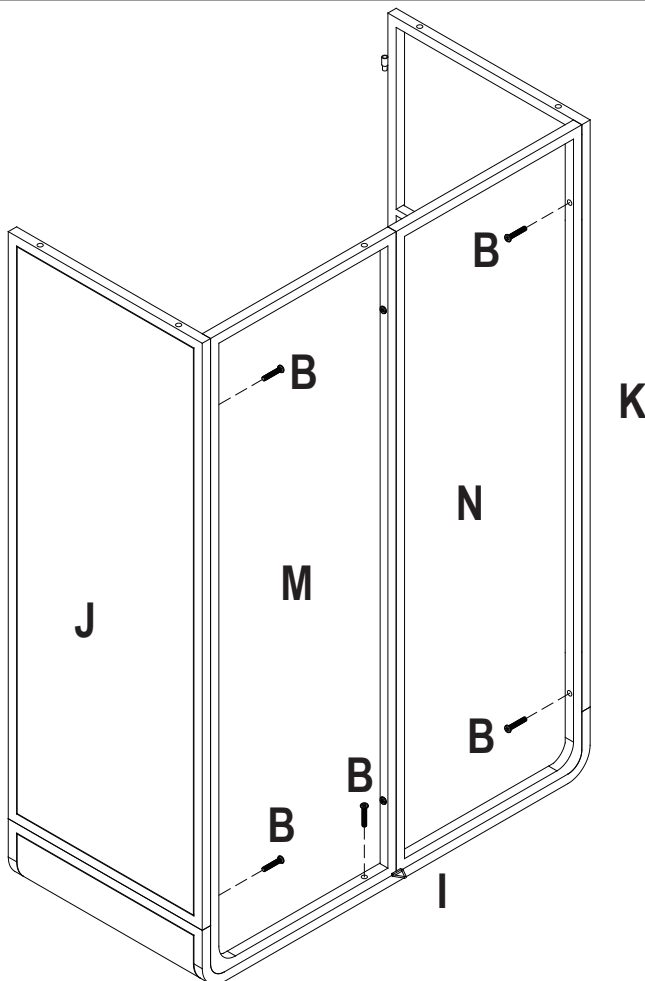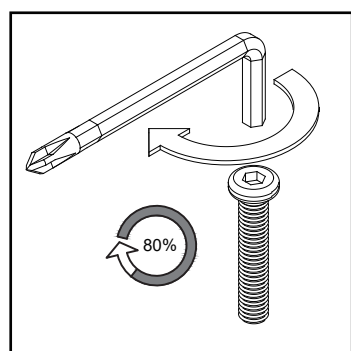


B X5 PCS


Step 5

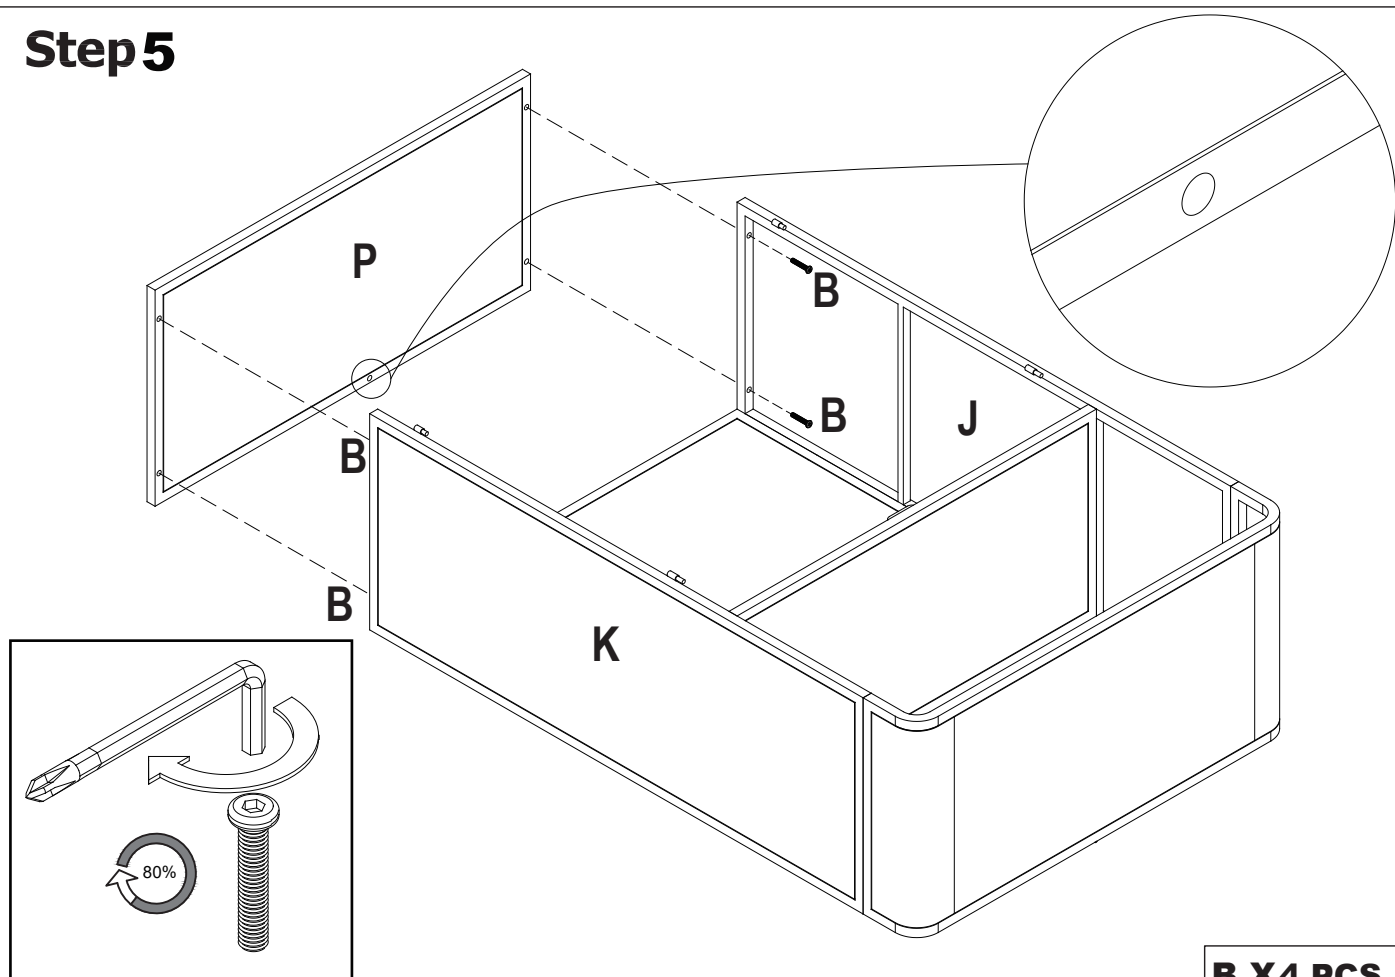


Step 6

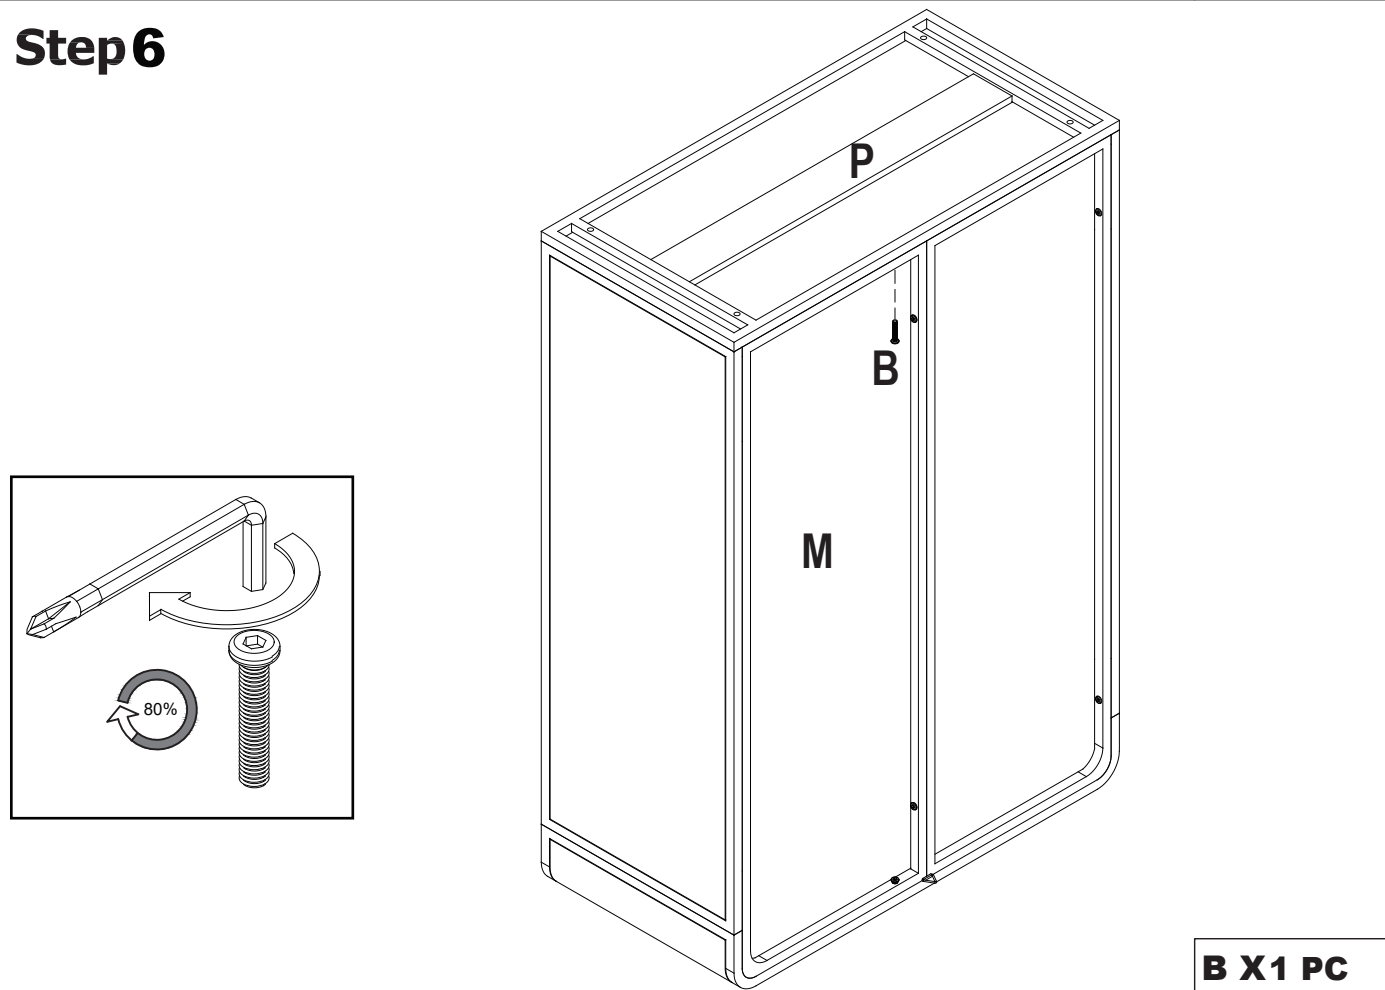



Step 7

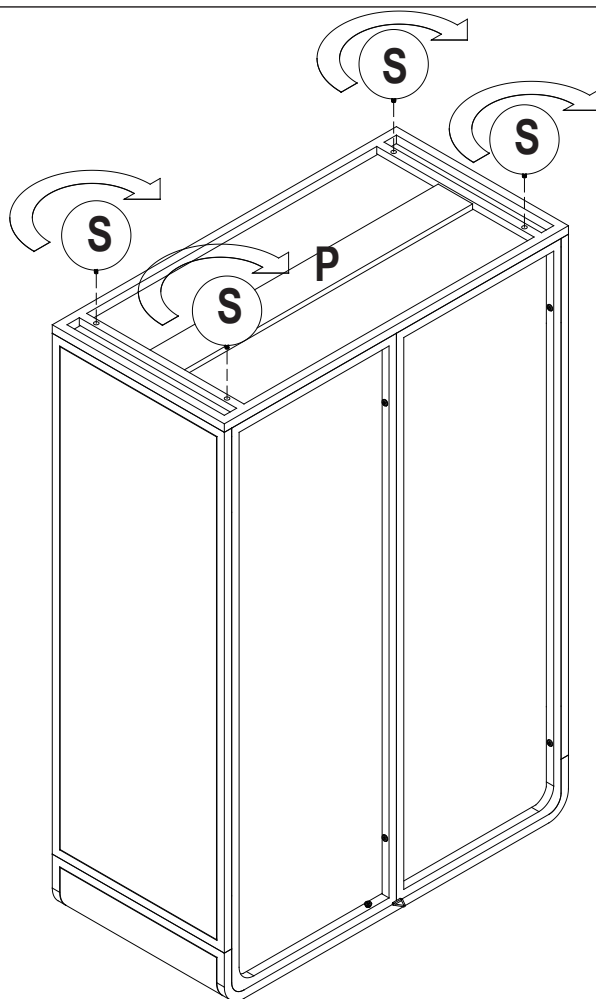

Step 8

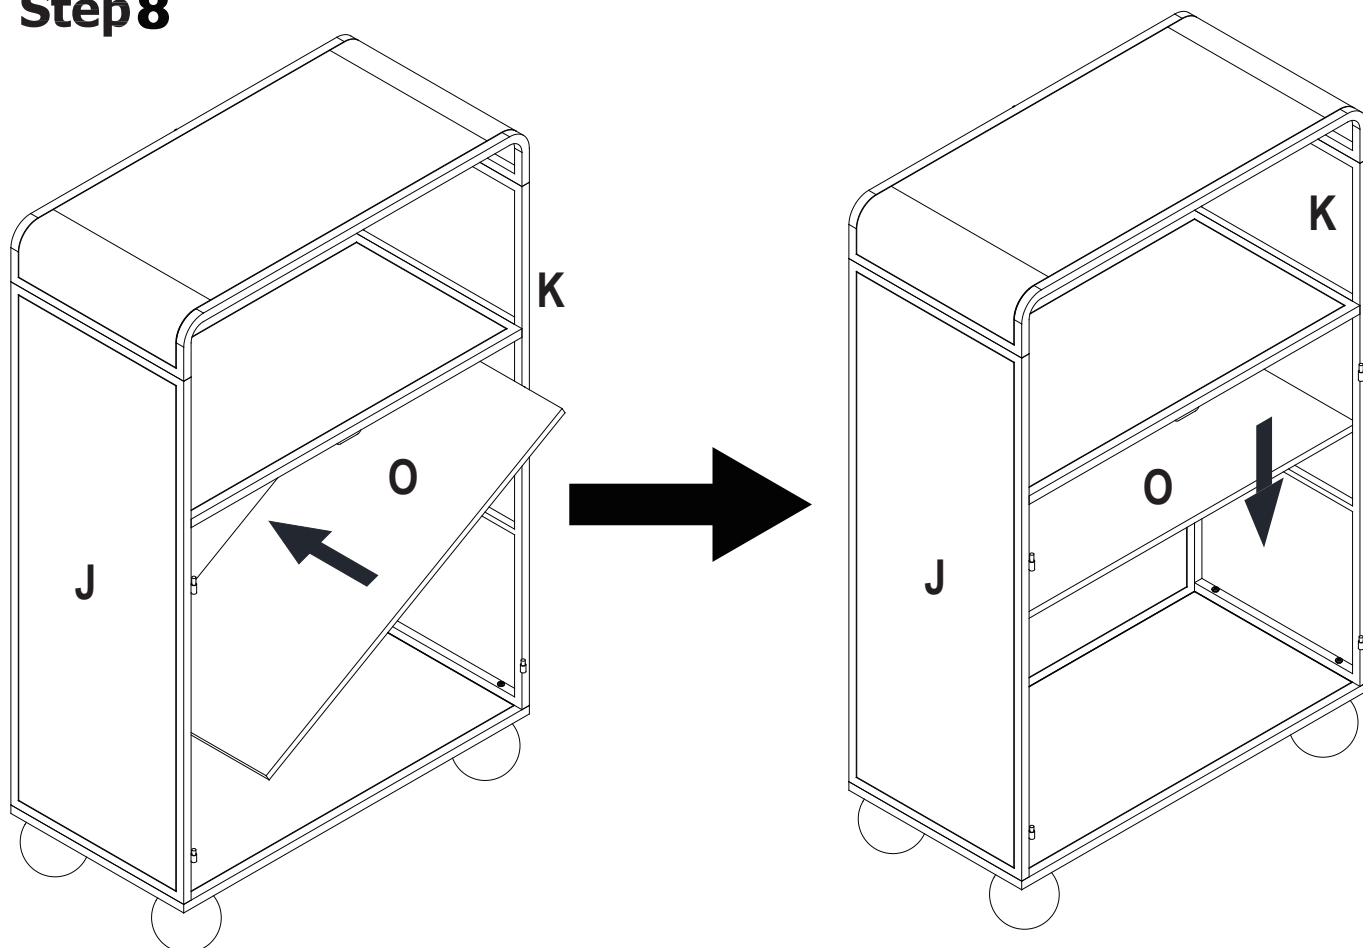



Step 9

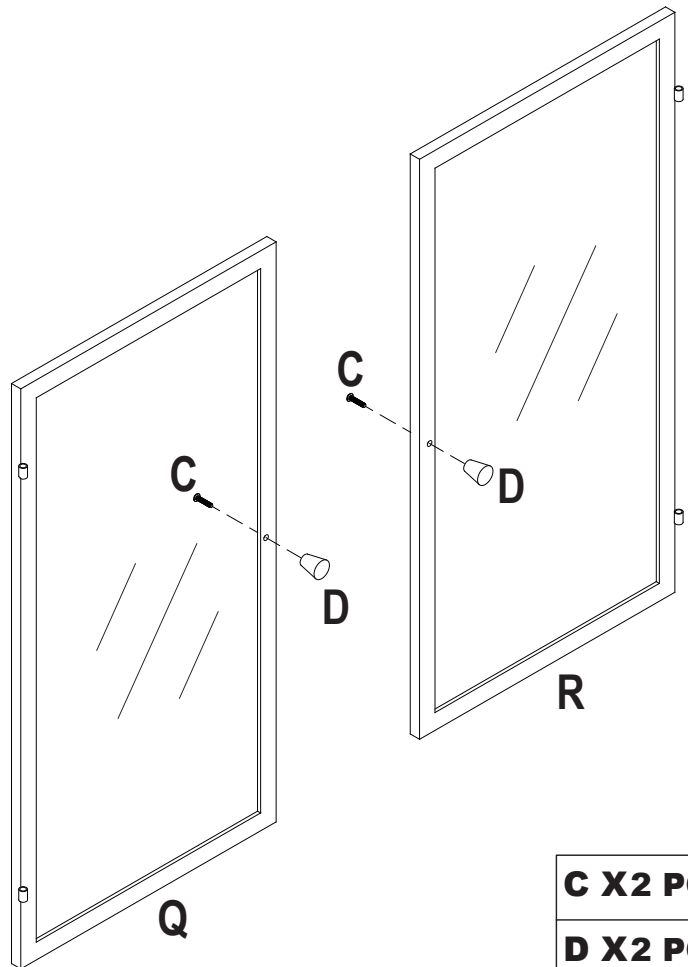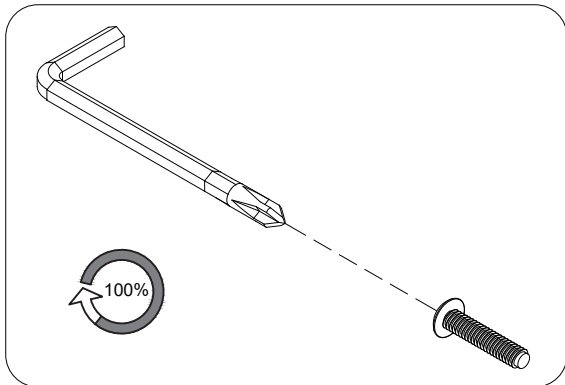



C X2 PCS

D X2 PCS

Step 10

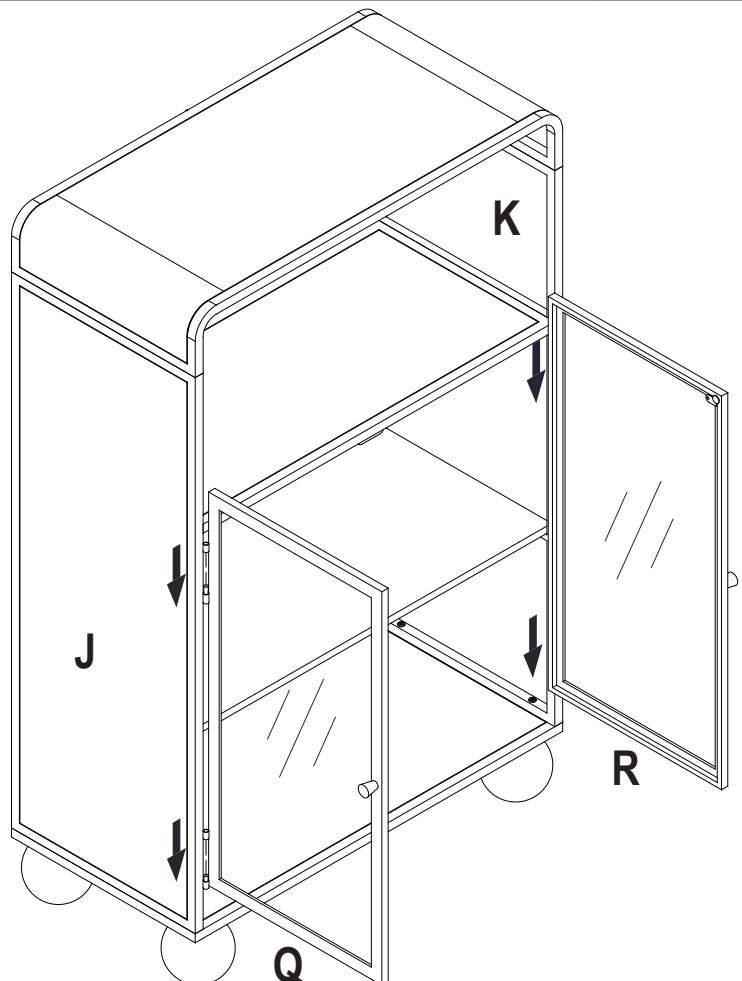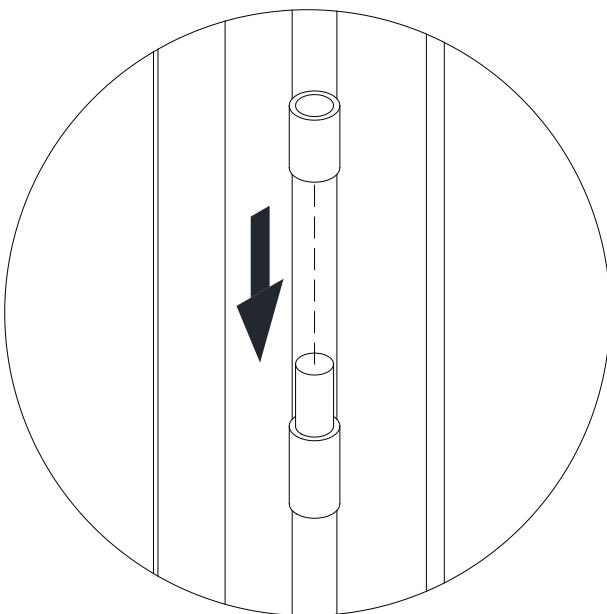


Step 11

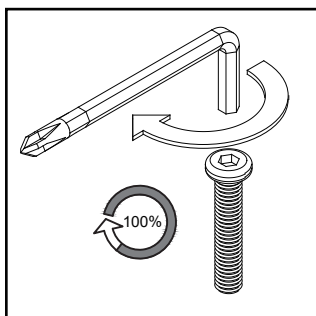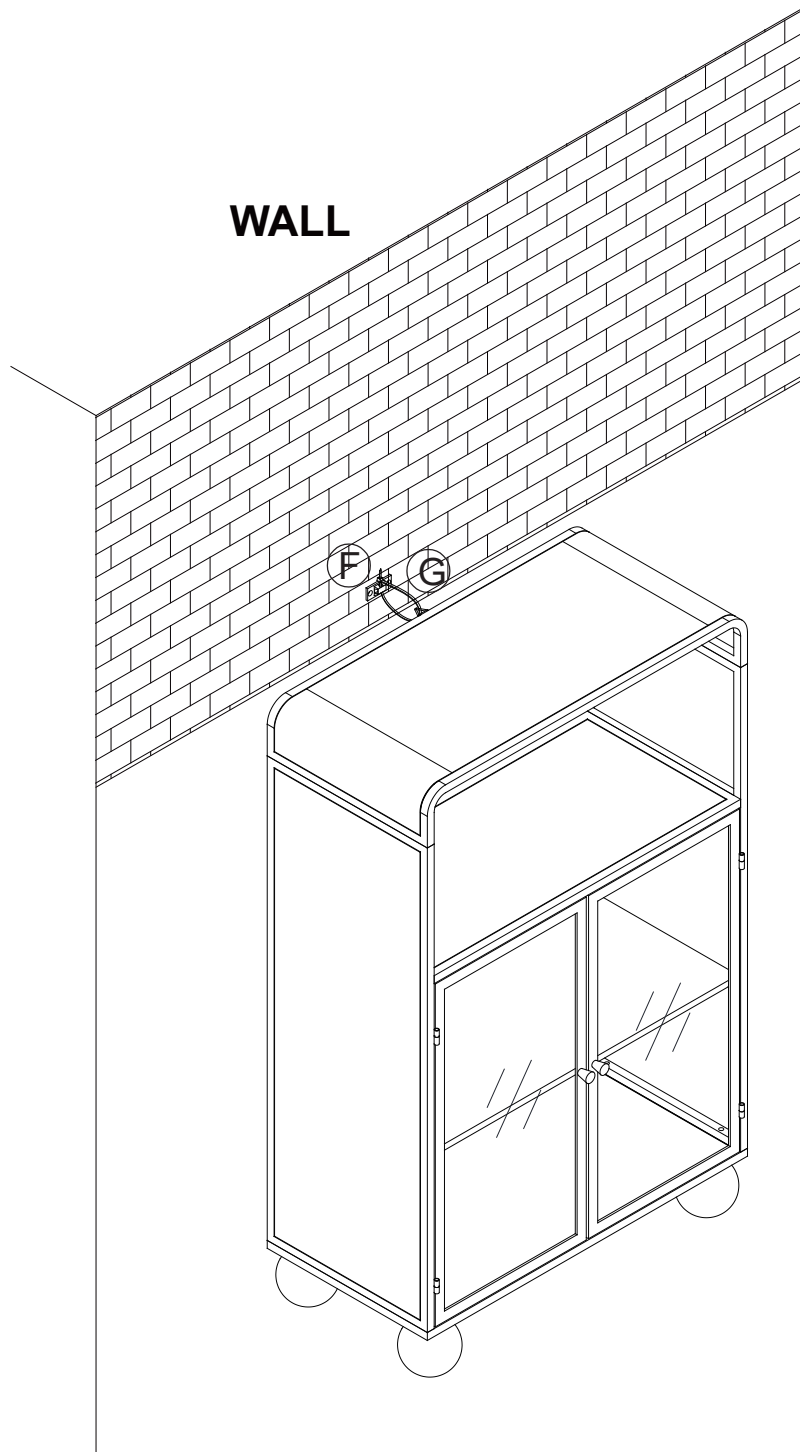


NOTE:AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

WALL

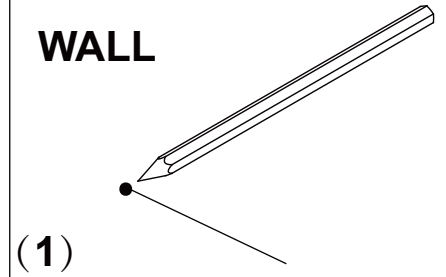


WALL



**drilling hole
Ø6x30mm**

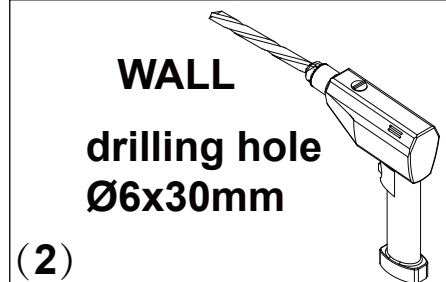

WALL

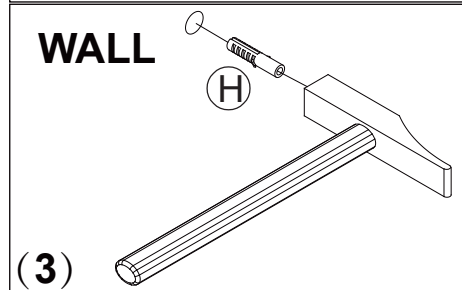

WALL

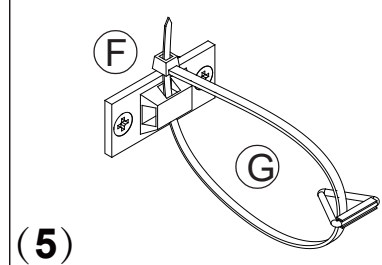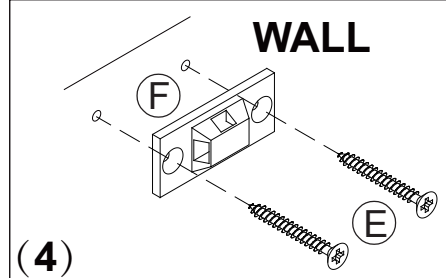

F X 1 PC

G X 1 PC

H X 2 PCS

E X 2 PCS