

Maykke

Model: YJA1000101 YJA1000102

Emrys Wall Bar

Тор

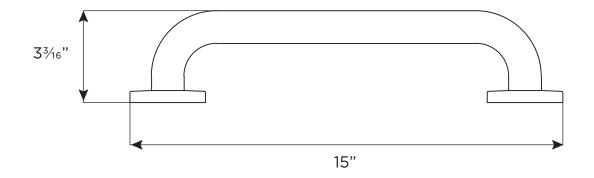

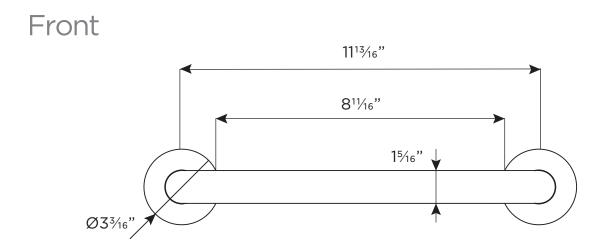

All measurements are approximate and may vary +/- 1/4"



www.maykke.com

Installation and Warranty Guide



Wall Bars

YJA1000101 YJA1000102

NOTICE: Do not change or modify the product in any way. Doing so may compromise the products structural integrity and will void the warranty.

NOTICE: Installation instructions must be followed. Any diversions from the installations instructions may risk property damage and will void the warranty.

IMPORTANT:


Observe all state and local building codes.

WARNING:

Anchors are only to be used when installing into drywall. If you are installing into a wood beam do not use the anchors. If you are installing on ceramic tiles or any surface other than drywall, please consult your local home improvement store.

PRE-INSTALLATION

Tools Required

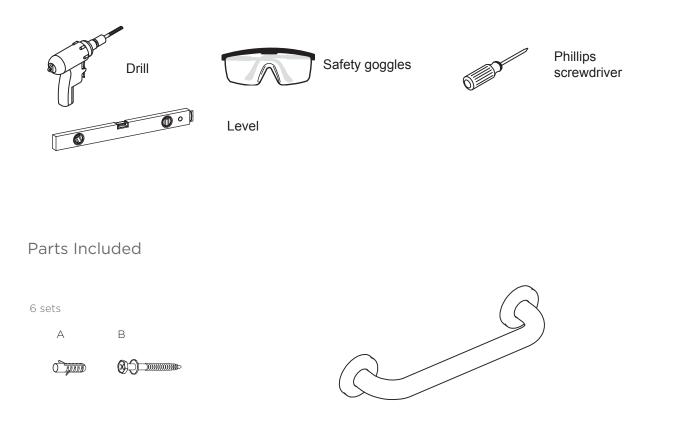




1. Mark your desired position on the wall, using a drill, drill pilot holes.

2. Insert the plastic wall anchors (part A) into the holes, making sure the anchor and the wall are even.

3. Screw part B through plate into the anchors. Place coverplate back to sesure the plate.

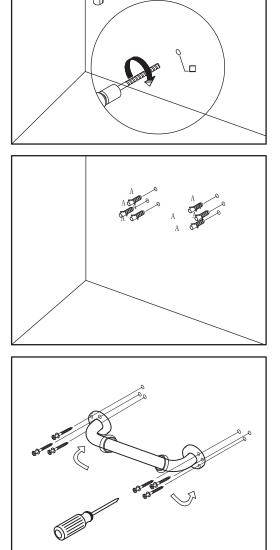

For warranty information please check <u>www.maykke.com</u>

For customer service concerns please email: support@maykke.com