

IT 1338 (SOFA)


ASSEMBLY INSTRUCTION

Before you begin,
Please follow Assembly Instruction carefully,
Then follow them step by step.


HARDWARE LIST

A		2 PCS	B		4 PCS	C		2 PCS	
	JCBC M6 X 70MM			JCBC M6 X60MM			BARREL NUT		
	1 SEATER			2 SEATER			3 SEATER		
	4 PCS			8 PCS			12 PCS		
D	CSK SCREW M4 X 38MM		E		1 PC	F		6 PCS	
				ALLEN KEY M4			WOOD BUTTON		


1

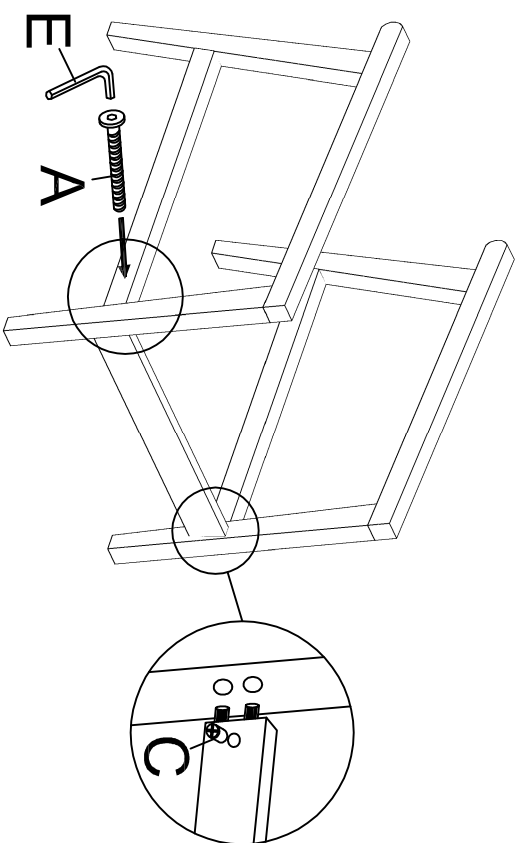

2

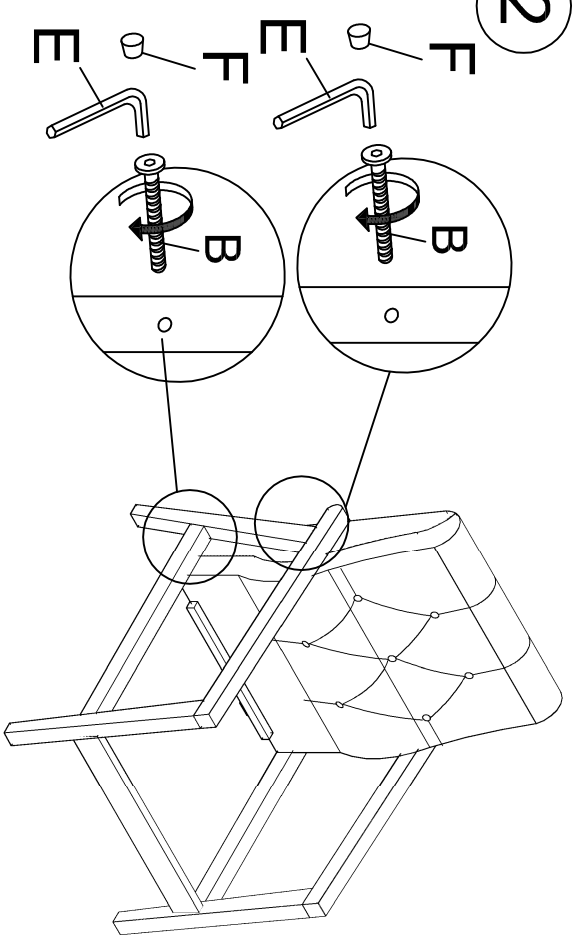

3

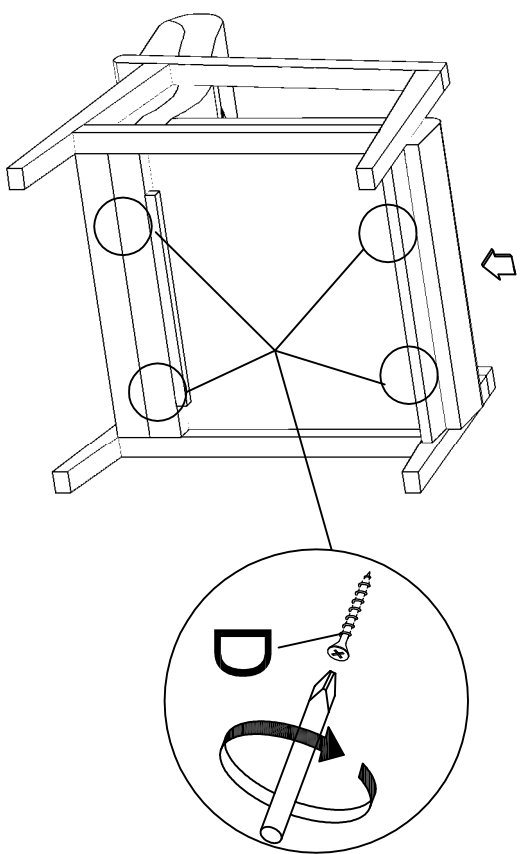

Assembly completed

