



V8045 24

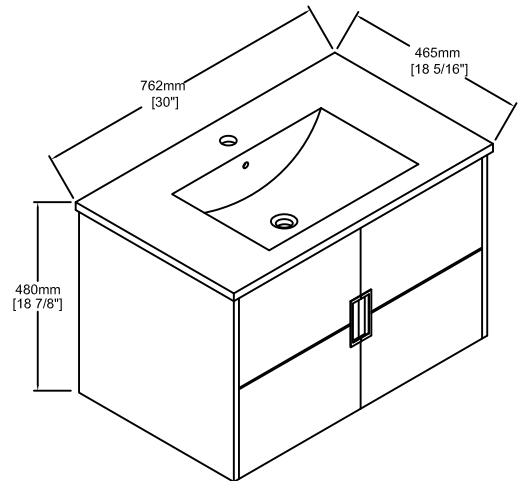

V8045 30

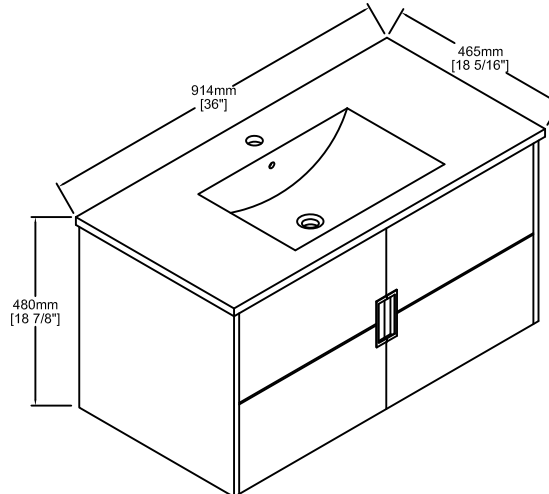

V8045 36

[**BAHAMAS**]
Series Vanities

Specification & Installation Guide

Features

- Modern design with melamine finishes.
- Soft-closing doors.
- Compatible ceramic basins.
- Compatible matching mirror, medicine cabinet, LED Mirror, or LED medicine cabinet.
- Easy installation.

Package Dimension

24" 30-1/8" x 19-1/2" x 25-3/16"

30" 36-1/4" x 18-11/16" x 24-7/16"

36" 42-11/16" x 18-7/8" x 25-3/16"

Colors / Finishes

BROWN WALNUT - 11

CLASSIC OAK - 29

Gross Weight

20" 71 LBS

24" 81 LBS

30" 95 LBS


Sink Top Options

Vanities

Ceramic basin


24"	V8045 - 24	C04 2418
30"	V8045 - 30	C04 3018
36"	V8045 - 36	C04 3618

24" 23-7/16" x 17-15/16" x 18-1/8"

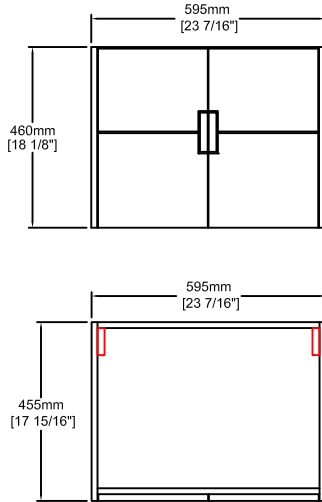


TOP VIEW

30" 29-5/16" x 17-15/16" x 18-1/8"

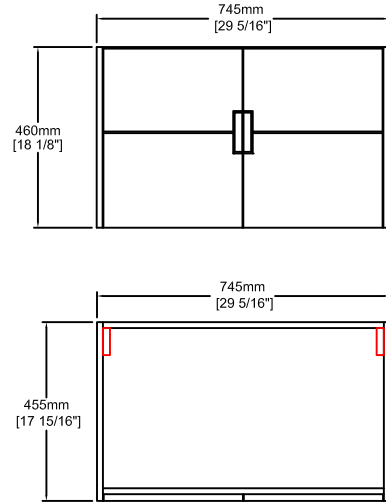


TOP VIEW

36" 35-1/4" x 17-15/16" x 18-1/8"

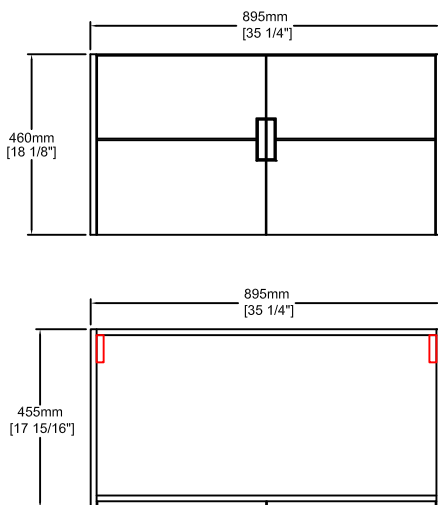








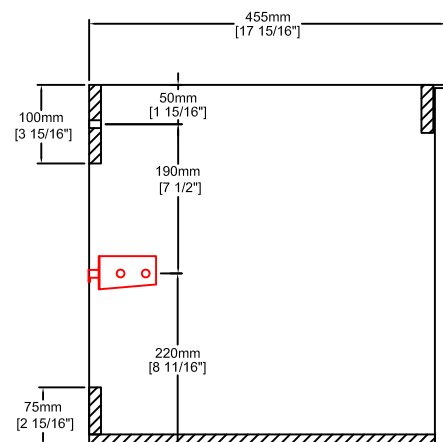










TOP VIEW

Side View



SECTION VIEW


Hardware		
NO.	Draw	QTY
A	 Screws Ø4x14mm	24
B	 Two-in-one connector	17
C	 Two-in-one connector	17
D	 Wood plug	4
E	 White rubber plug(Ø6mm)	2
F	 Screws(Ø4 x 68mm)	2
G	 Stainless steel cover	2
H	 Bracket (46x40x49mm)	2
I	 Bracket (19x19x35mm)	2

Hardware		
NO.	Draw	QTY
J	 Screws Ø3x14mm	24
K	 Hinges (Internal hiding)	4
L	 White hanging code	1
M	 Screw(Ø4 x 25mm)	4
N	 Leveling bracket	2
O	 Green rubber plug	6
P	 Screw(Ø4 x 45mm)	6
Q	 Anti-collision gasket	4
R	 Screwdriver	1


Wall blocking is required for all installation

The suggested heights without the sink are 30-5/8" for Blossom Resin Basin, or 32-5/8" for Blossom Ceramic Basin.


Depending on the sinks selected, the total height will vary from 33-1/2"(850mm) to 35-1/4"(895mm). If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

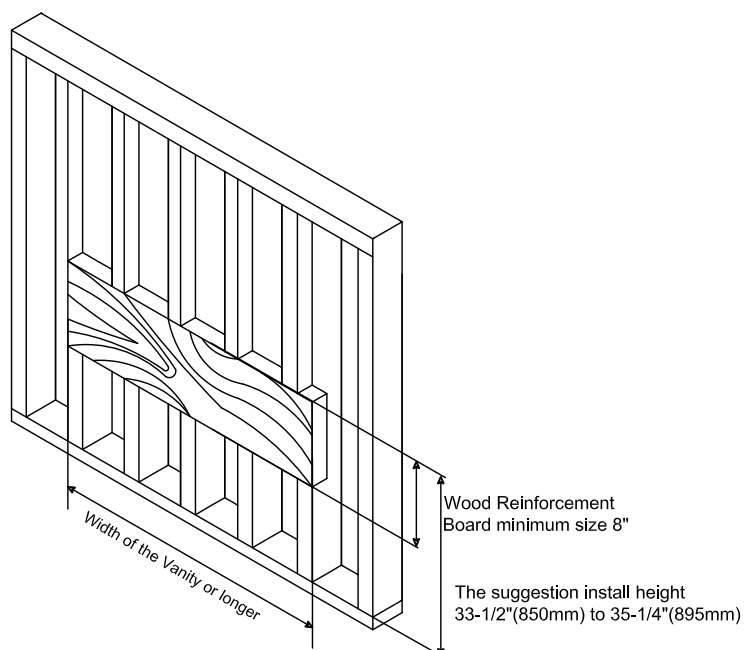


Components

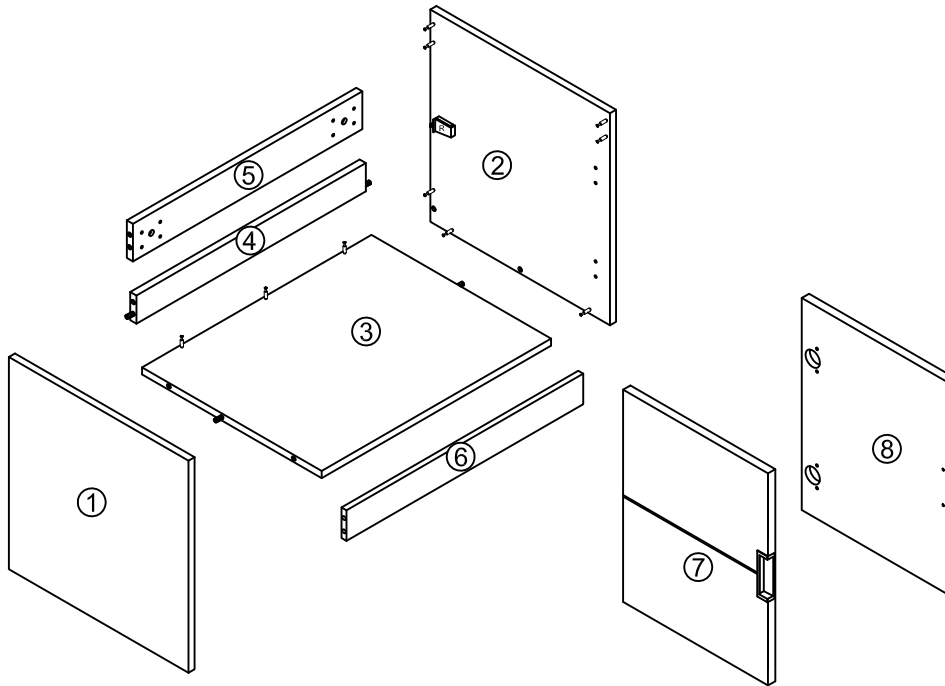

Recommended Tools You Will Need-Outils Require

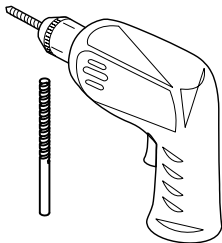


Power drill

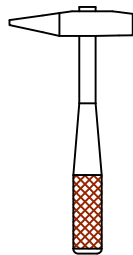

Hammer



Silicone









Pencil





Screwdriver

STEP 1

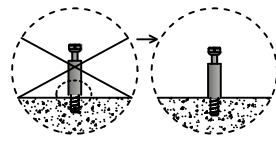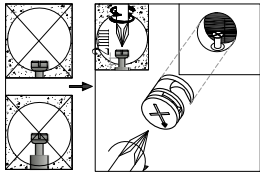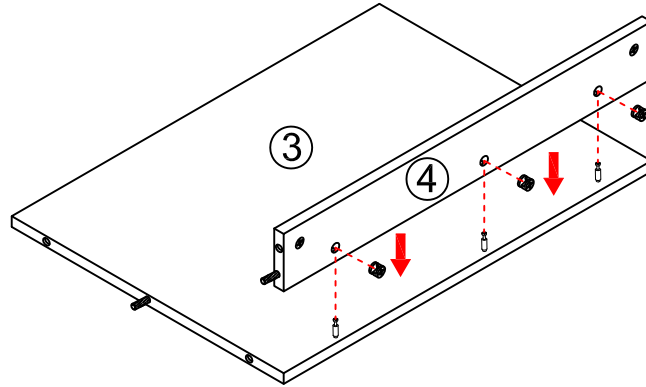



	x3
B	
	x3
C	
	x1
R	

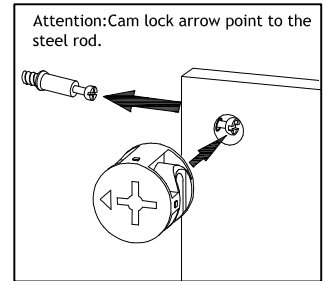
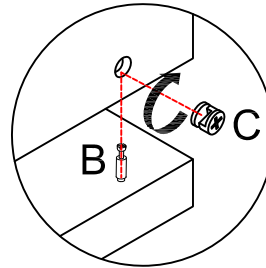


Notes: Screw installation depth as shown





STEP 2

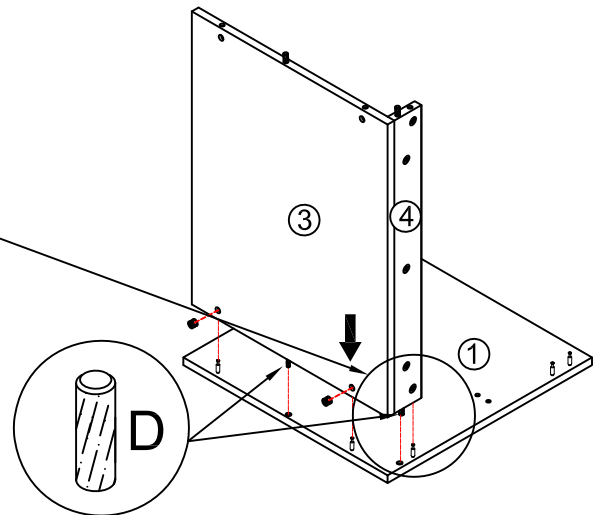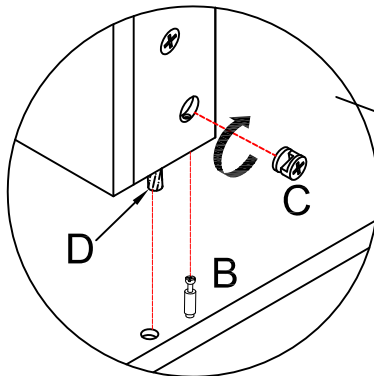


	x3
B	
	x3
C	
	x2
D	
	x1
R	

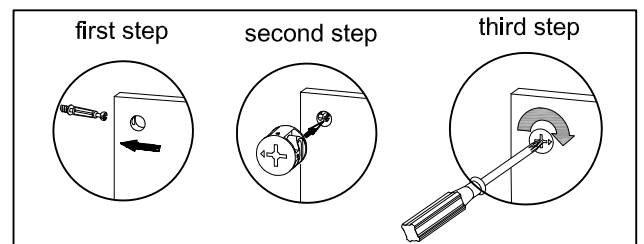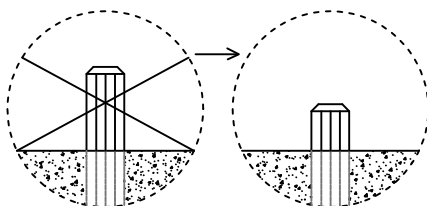


Note: The D parts are used for these two holes







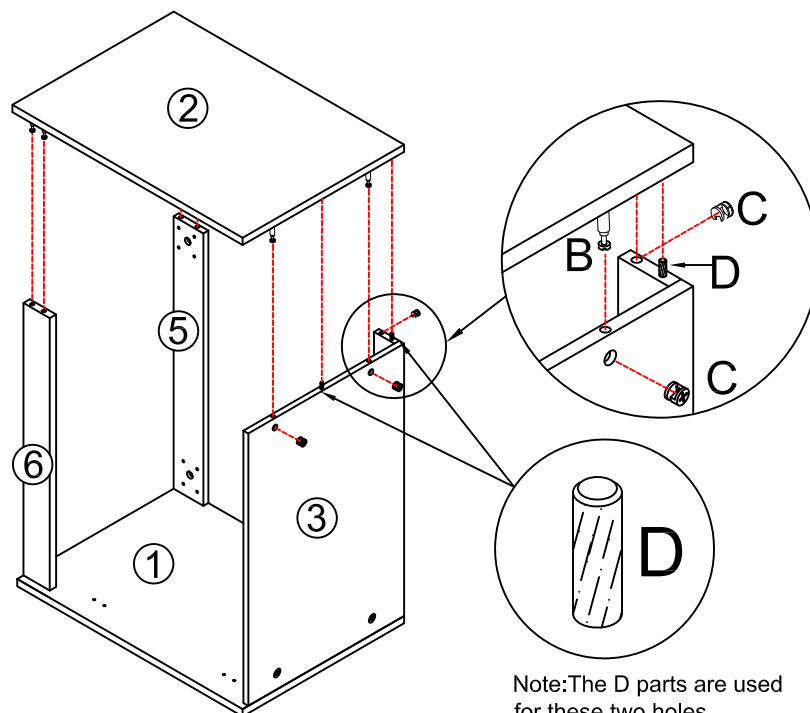
STEP 3

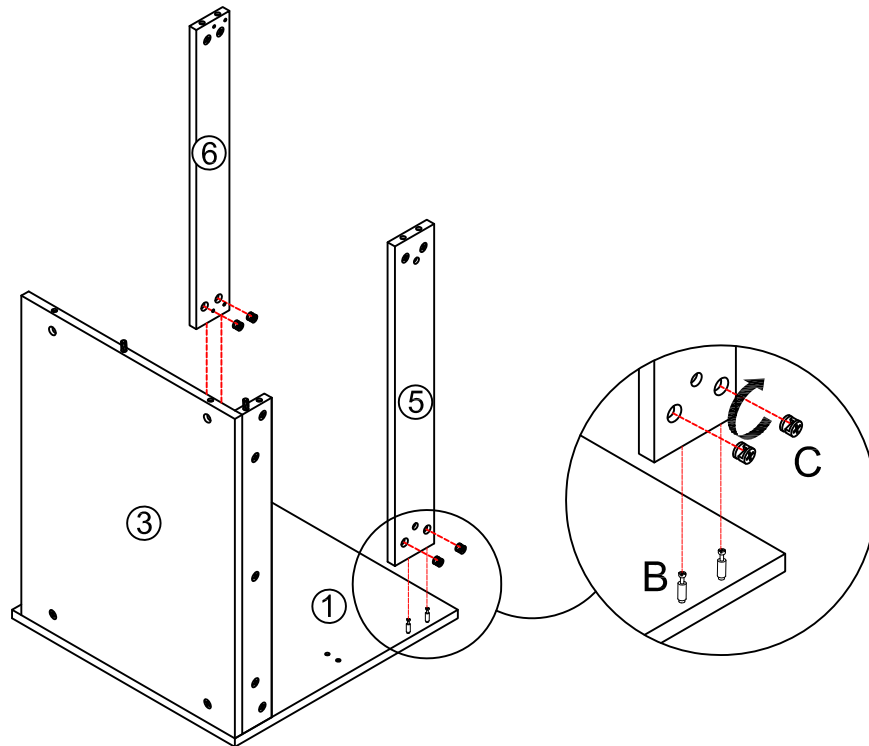	x4
B	
	x4
C	
	x1
R	








STEP 4

	x7
B	
	x7
C	
	x2
D	
	x1
R	






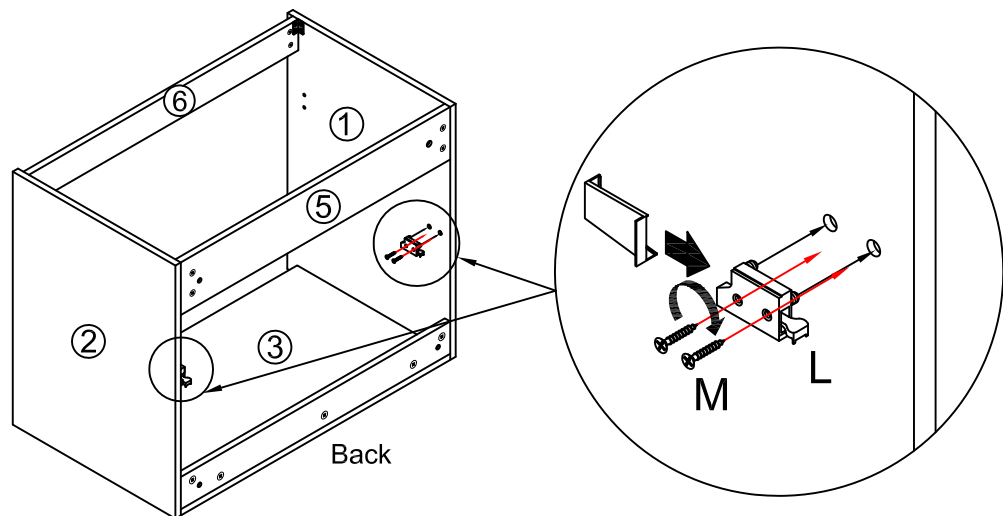
STEP 5

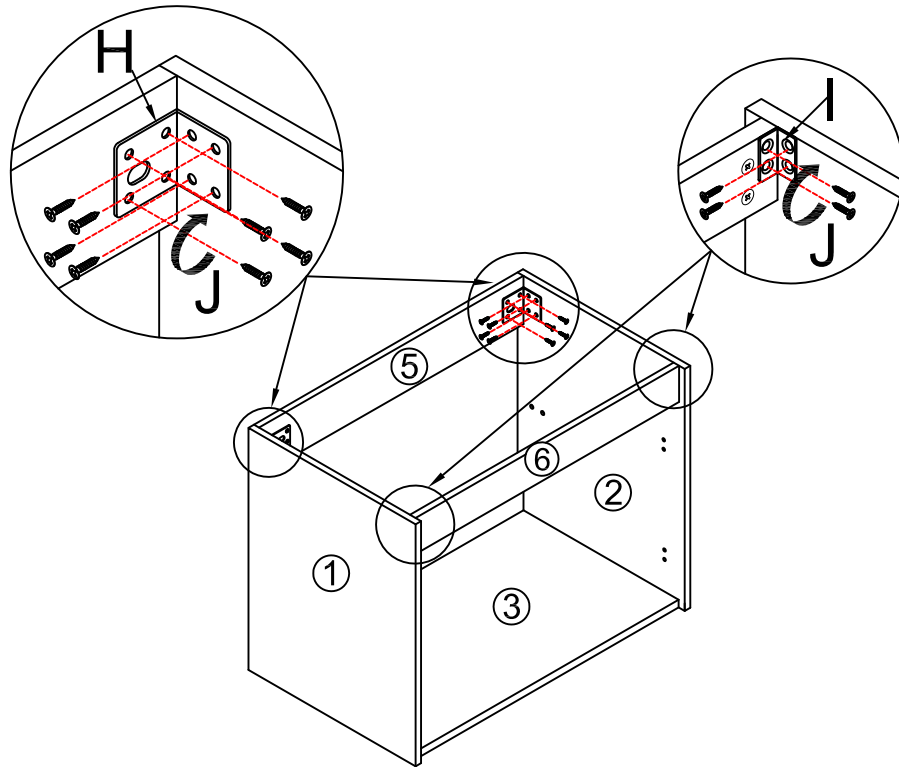	x2
H	
	x2
I	
(Ø3 x 14mm)	
	x24
J	
	
Tool	






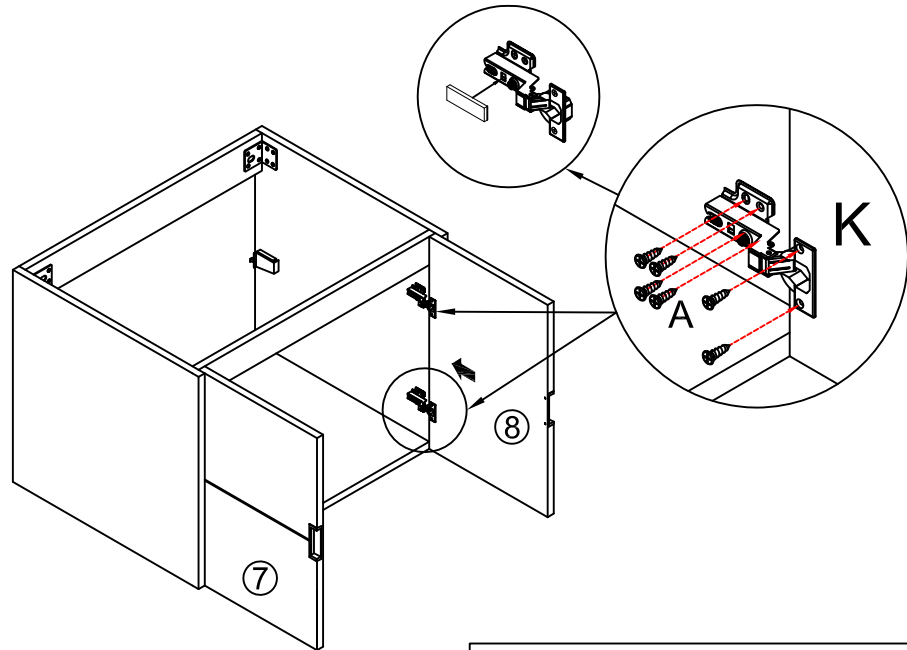
STEP 6

	x1
L	
(Ø4 x 25mm)	
	x4
M	
	
Tool	




STEP 7


	x4
K	
(Ø4 x 14mm)	
	x24
A	
	
Tool	




You can adjust the doors by tightening or loosening the screws on the hinge.

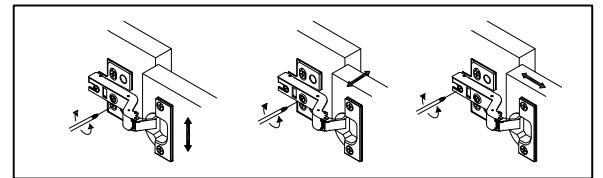

STEP 8

	x4
Q	

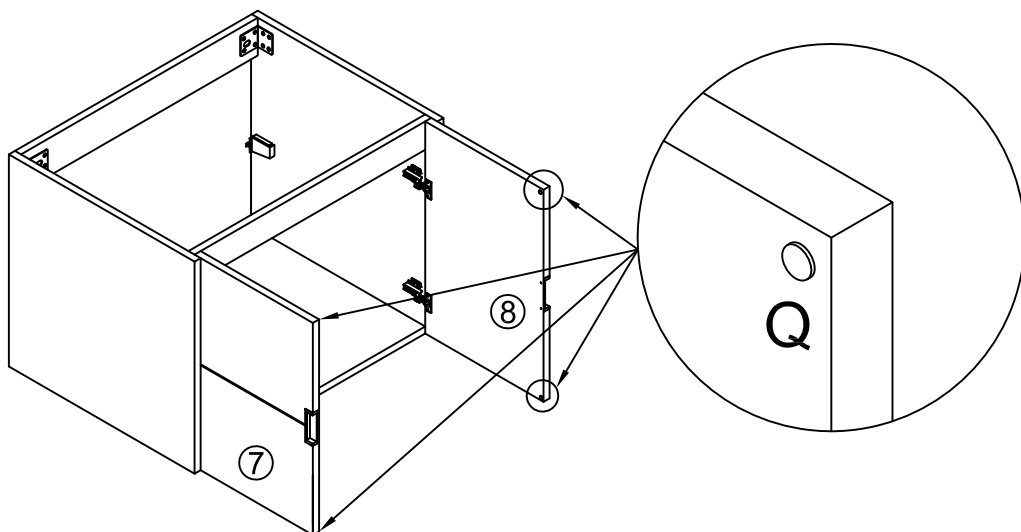


STEP 9

- Draw a punched position on the wall with a pencil.


Tip:

1. The suggestion height of the cabinet is 32-11/16"(830mm)-not including the basin.
2. The suggestion height of the upper hole is 30-11/16"(780mm).
3. The suggestion distance between the upper hole to the lower hole is 8-1/4"(210mm).

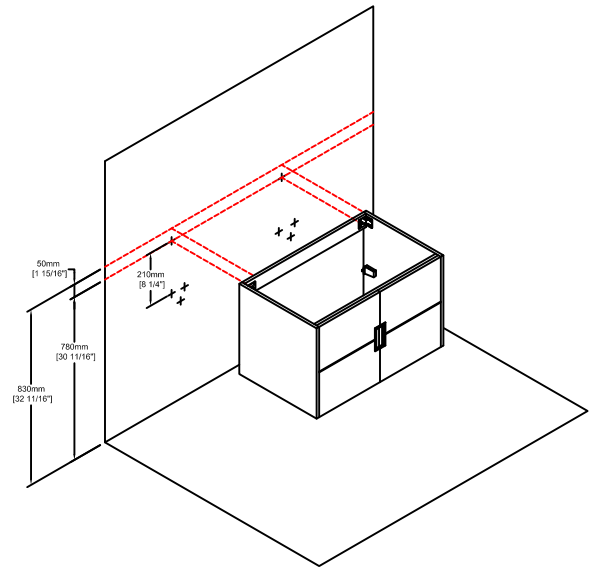


STEP 10

- Drill the holes with suitable drill-bits base on different condition of the wall.

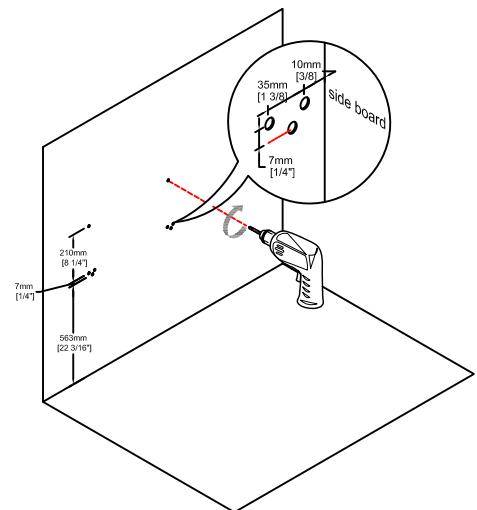


STEP 11

- Use a hammer to knock the white expansion rubber plug into the upper hole, and knock the green rubber plug into the three lower hole, align the hole in the wall and lock the leveling bracket to the wall with screws.

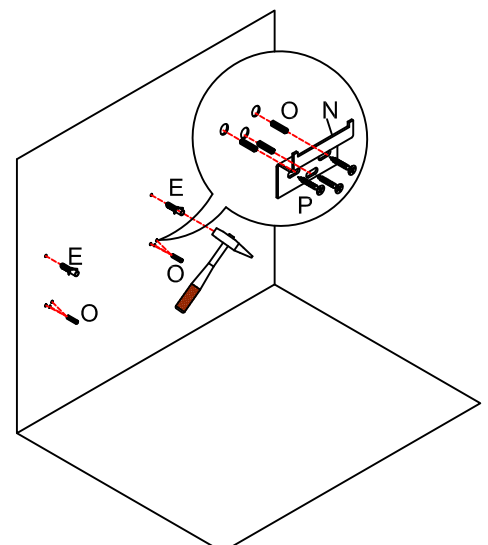


STEP 12

- Hang the accessories behind the cabinet on the leveling bracket.(As the picture shows).

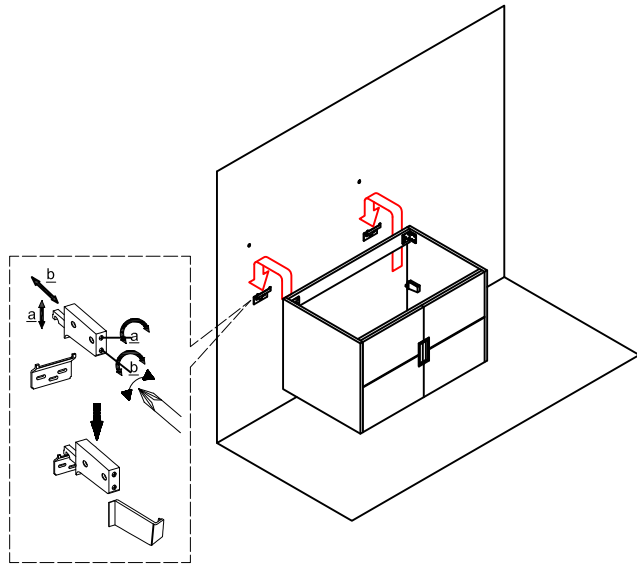


STEP 13

- Fix the cabinet to the wall with screw F and cover it with a stainless steel lid G

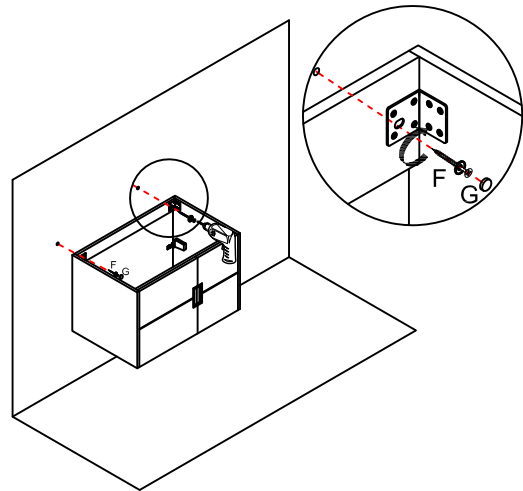

STEP 14

- Install sink top with silicone and finish.

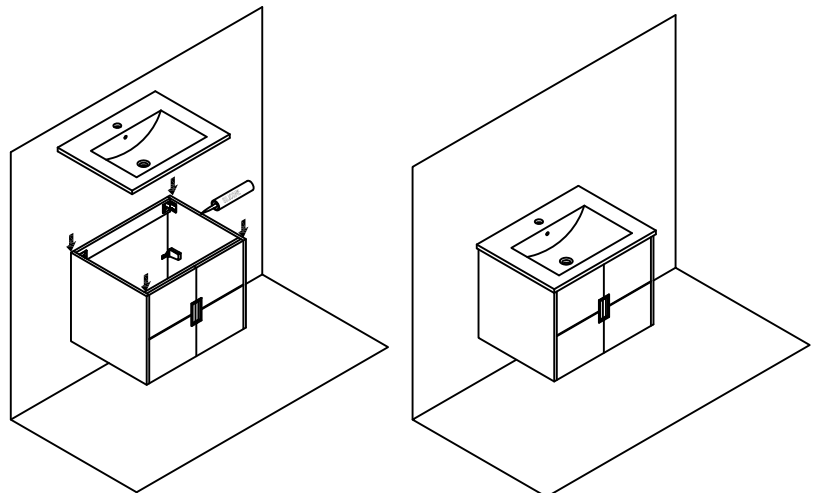



Blossom Kitchen & Bath Supply Corporation
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.