


# HULALA

---

H O M E

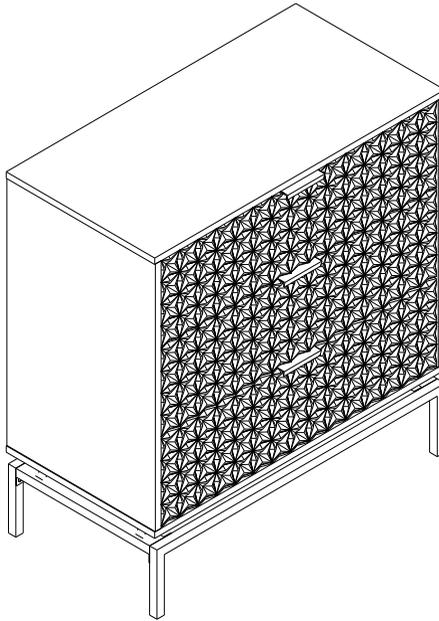

**ITEM NO.SCSD0734**

---

## NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

---


# MAINTAINANCE AND WARNING

- Keep furniture away from heat sources.
- Do not clean furniture with harsh cleaner or polishes. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water to clean spills (Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine. Children should not climb or jump on the furniture.
- Do not write on furniture that is not protected by a padded barrier .
- Not for commercial use, only for residential use.














Weight Limitation

**80LBS**

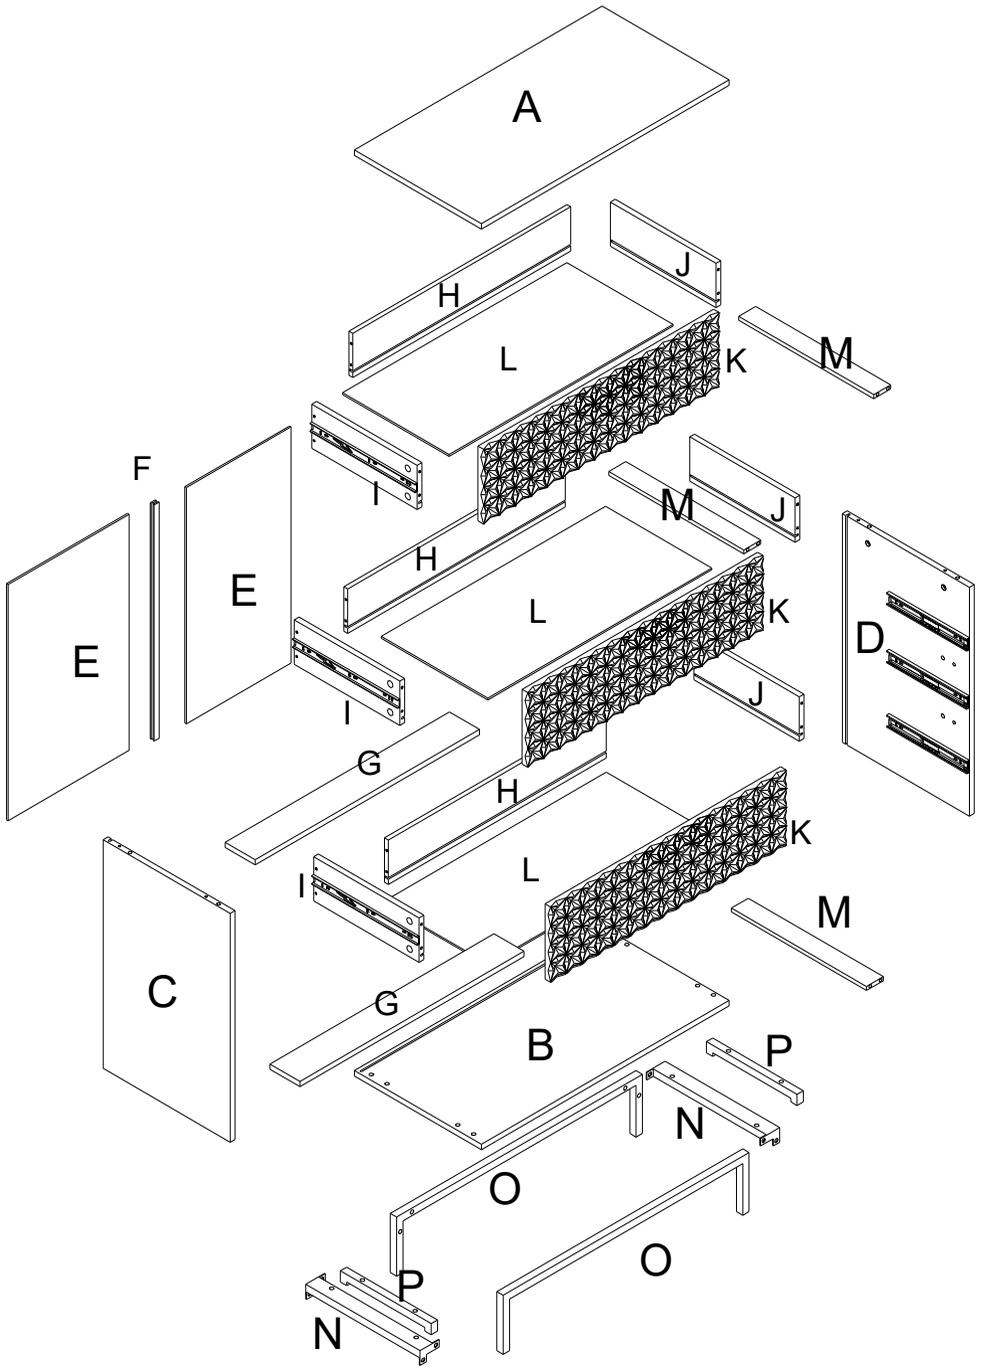


# OVERVIEW

# HARDWARE LIST
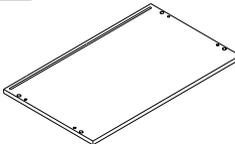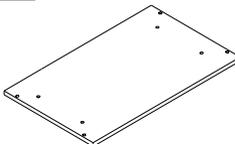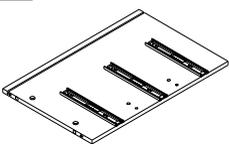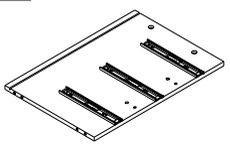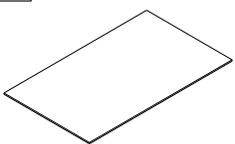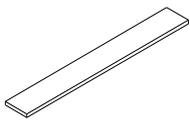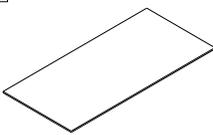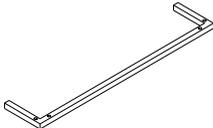
<p><b>A</b></p> 	<p><b>B</b></p> 	<p><b>C</b></p> 	<p><b>D</b></p> 
<p>1 PC</p>	<p>1 PC</p>	<p>1 PC</p>	<p>1 PC</p>
<p><b>E</b></p> 	<p><b>F</b></p> 	<p><b>G</b></p> 	<p><b>H</b></p> 
<p>2 PCS</p>	<p>1 PC</p>	<p>2 PCS</p>	<p>3 PCS</p>
<p><b>I</b></p> 	<p><b>J</b></p> 	<p><b>K</b></p> 	<p><b>L</b></p> 
<p>3 PCS</p>	<p>3 PCS</p>	<p>3 PCS</p>	<p>3 PCS</p>
<p><b>M</b></p> 	<p><b>N</b></p> 	<p><b>O</b></p> 	<p><b>P</b></p> 
<p>3 PCS</p>	<p>2 PCS</p>	<p>2 PCS</p>	<p>2 PCS</p>

Persons Required For Assembly:

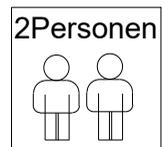

# PARTS LIST 2



①	x22	②	x26	③	x12	④	x26	⑤	x22
									
⑥	x4	⑦	x8	⑧	x4	⑨	x4		
									

# SPARE

①	x2	②	x2	⑤	x2	⑥	x1	⑦	x1
									
⑧	x1	⑨	x1						
									


Be sure to inspect all packing material carefully for small parts, that may have come loose inside the carton during shipment.


# PARTS LIST 1

⑩	x4	⑪	x12	⑫	x3	⑬	x4	⑭	x2
									
⑮	x1	⑯	x26	⑰	x1				
									

Be sure to inspect all packing material carefully for small parts, that may have come loose inside the carton during shipment.


# ASSEMBLY INSTRUCTIONS


②	x4	③	x4	⑰	x1
					

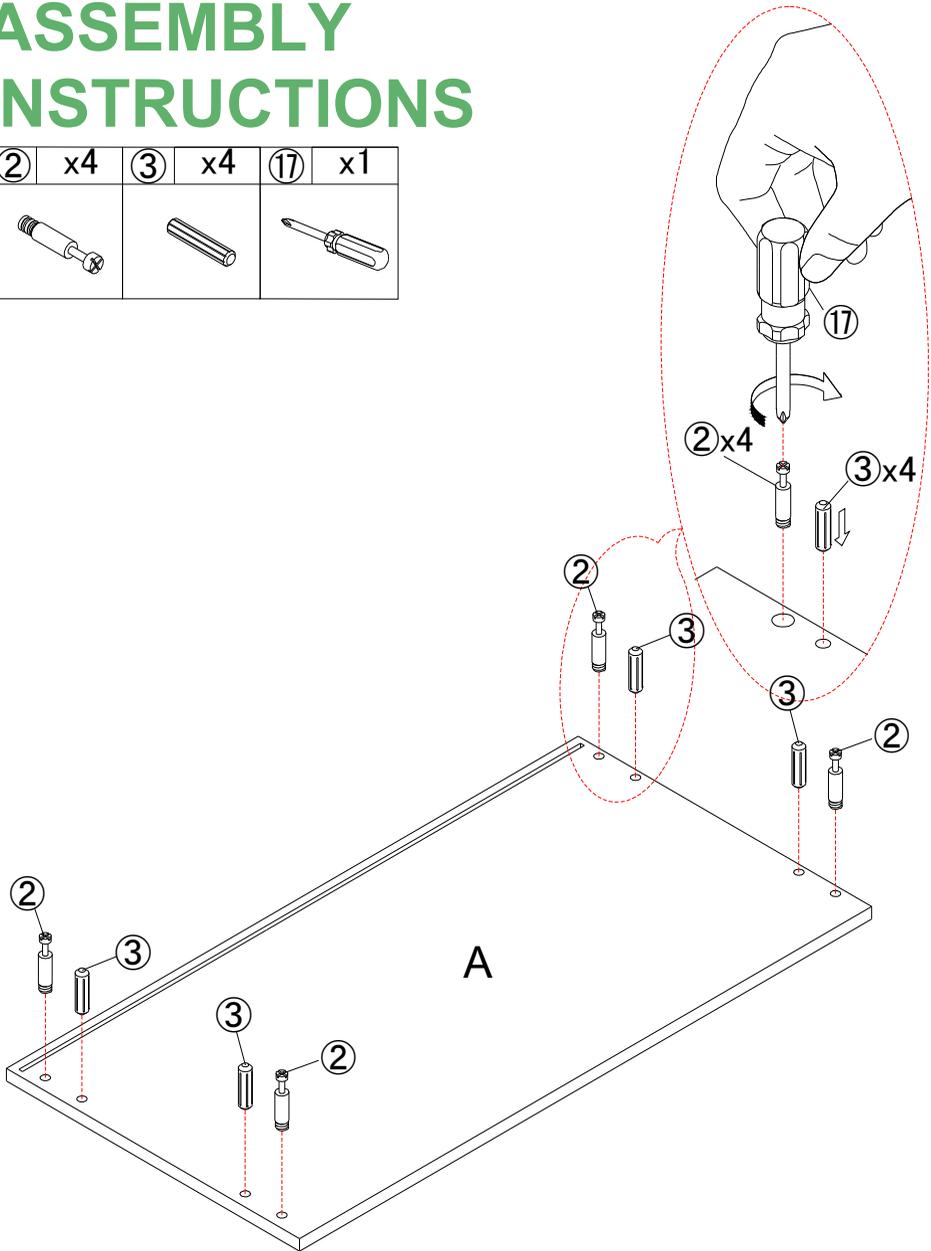

## STEP1:


**Insert wooden dowel ③** into the corresponding hole of panel (A), and insert bolt ② into panel (A), tighten bolt ② with screwdriver ⑰ 07/28





②	x4	③	x4	⑰	x1
					

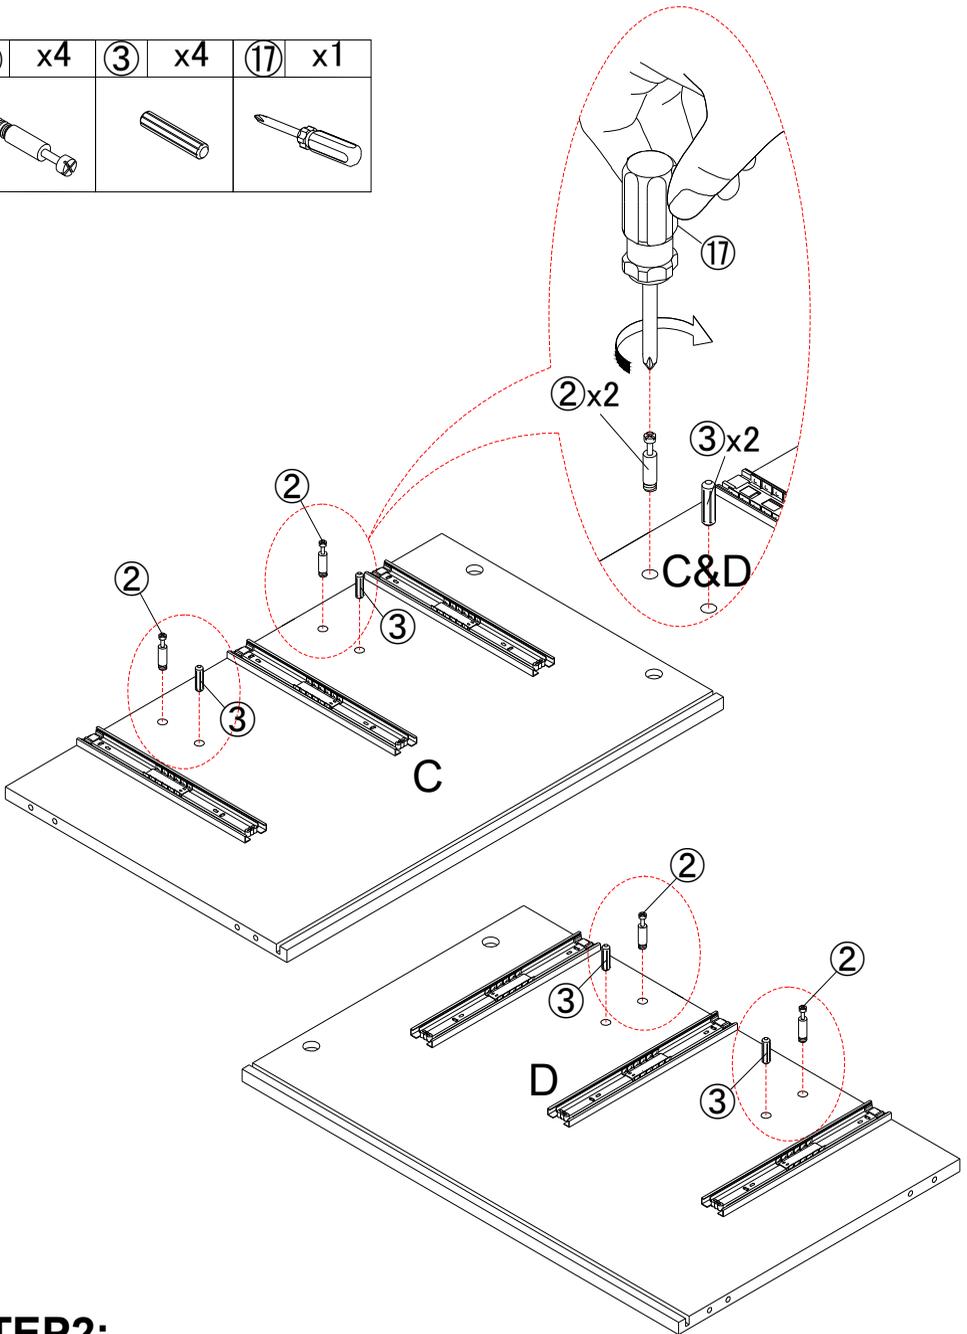

## STEP2:


Insert wooden dowel ③ into the corresponding hole of panel(C)&(D), and tighten bolt ② with screwdriver⑰.


④	x2	⑩⑥	x2	⑩⑦	x1
					

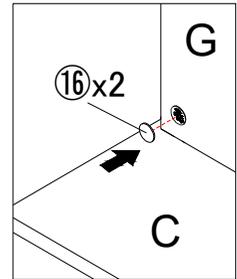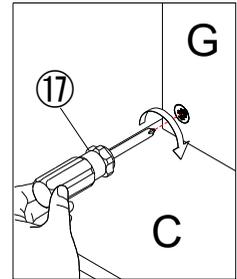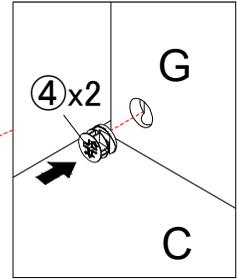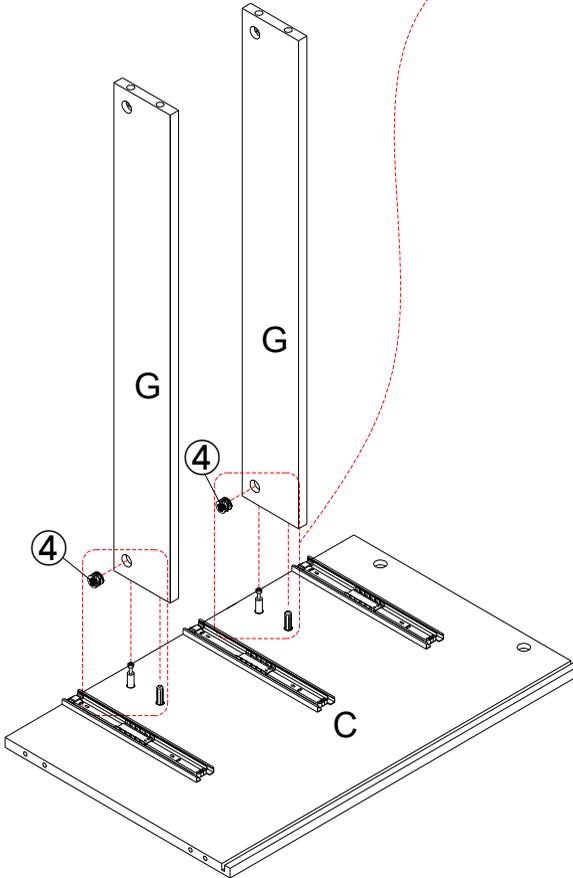

### STEP3:


Insert panel(G) into panel (C),make sure all holes aligned andthen insert cam bolt ④ into the corresponding hole of panel(G),and then tighten cam bolt ④ with screwdriver⑩⑦. after installation, cover the screw holes with ⑩⑥





④	x2	⑯	x2	⑰	x1
					

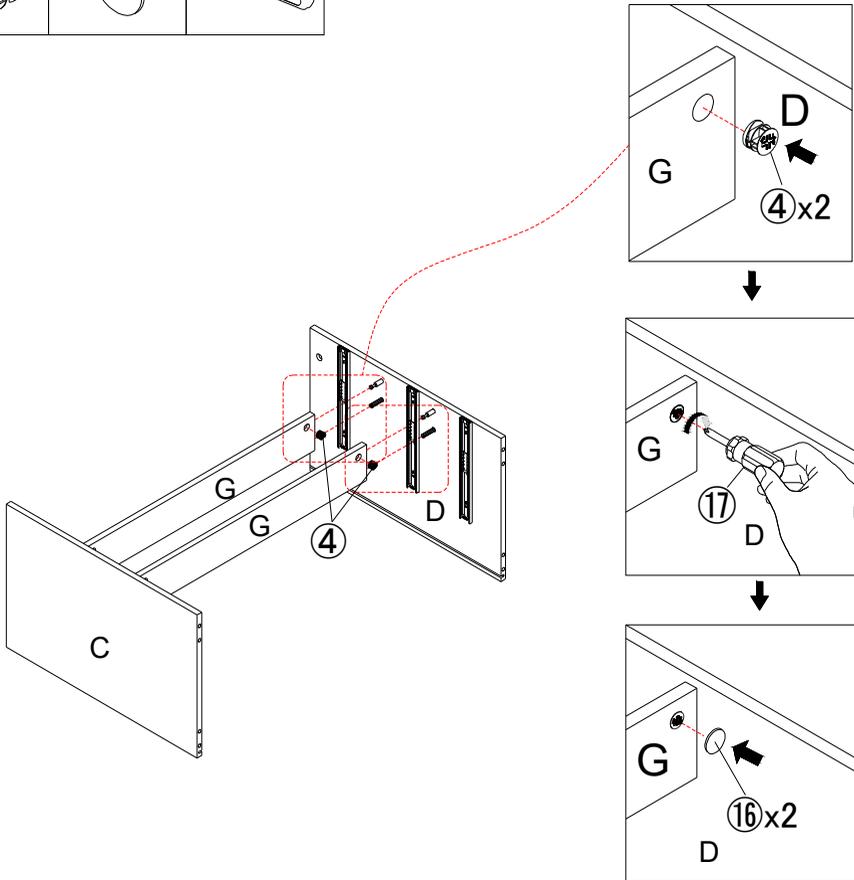

## STEP4:


Insert panel(D) into the corresponding hole of panel (G),make sure all holes aligned and insert cam bolt ④ into the corresponding hole of panel (G),and then tighten cam bolt ④ with screwdriver ⑰. after installation, cover the screw holes with ⑯

④	x4	①6	x4	①7	x1
					

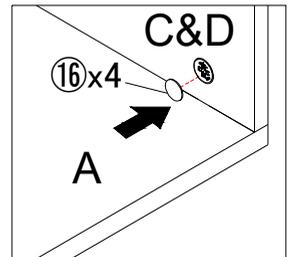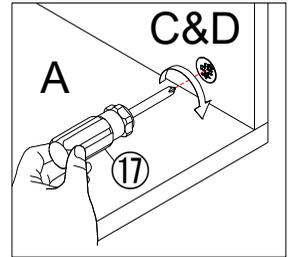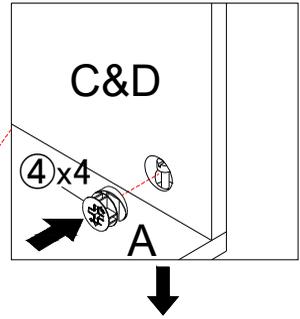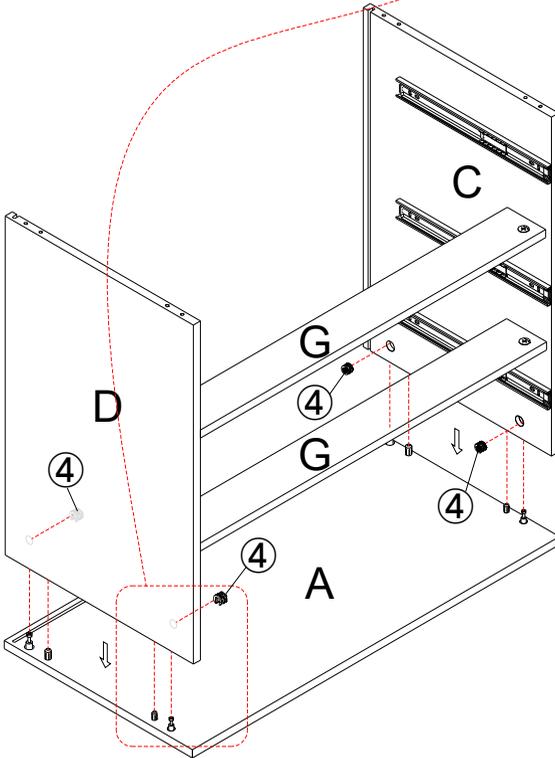


## STEP5:

Insert the preassemble step 4 into the panel (A),make sure all holes aligned and insert cam bolt ④ into the corresponding hole of side panel(C)&(D),tighten cam bolt④ with screwdriver①7.after installation, cover the screw holes with ①6

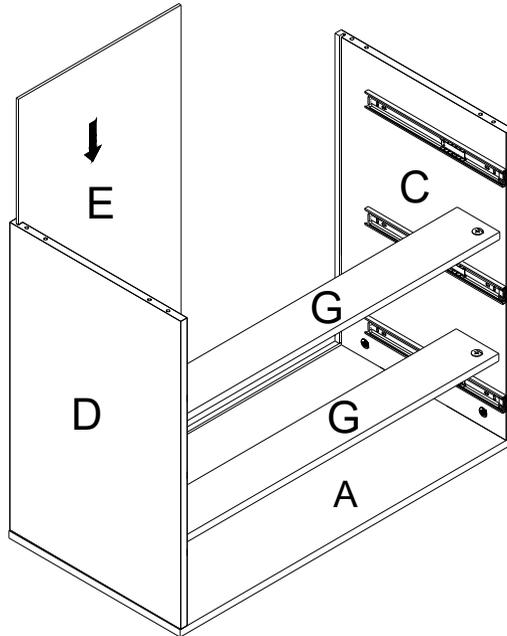


**STEP6:**

Carefully align and slide panel (E) into the groove along rear edge of pre-assembled step 5.

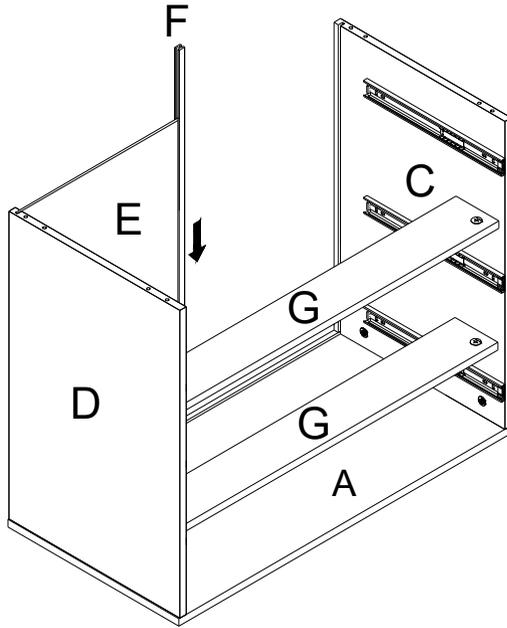

**STEP7:**


**Slide part (F) down the edge of the back panel(E).**

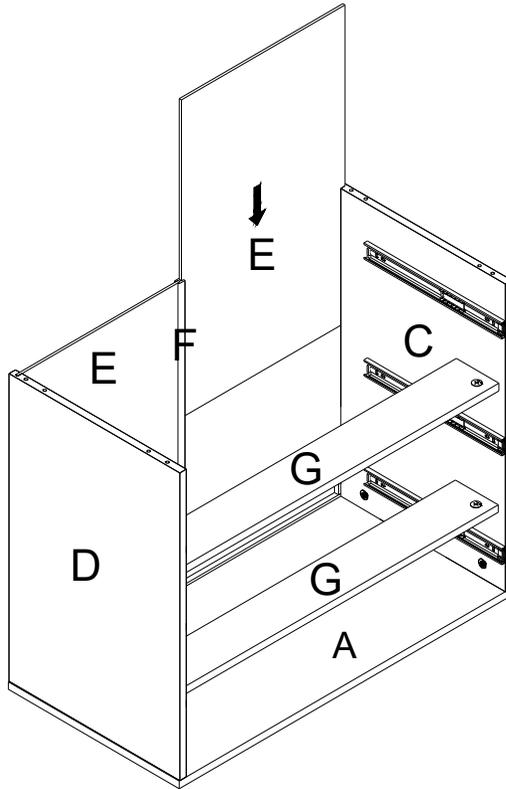

**STEP8:**

**Slide back panel(E) down the edge of the part(F).**


③	x4	⑥	x4	⑮	x1
					

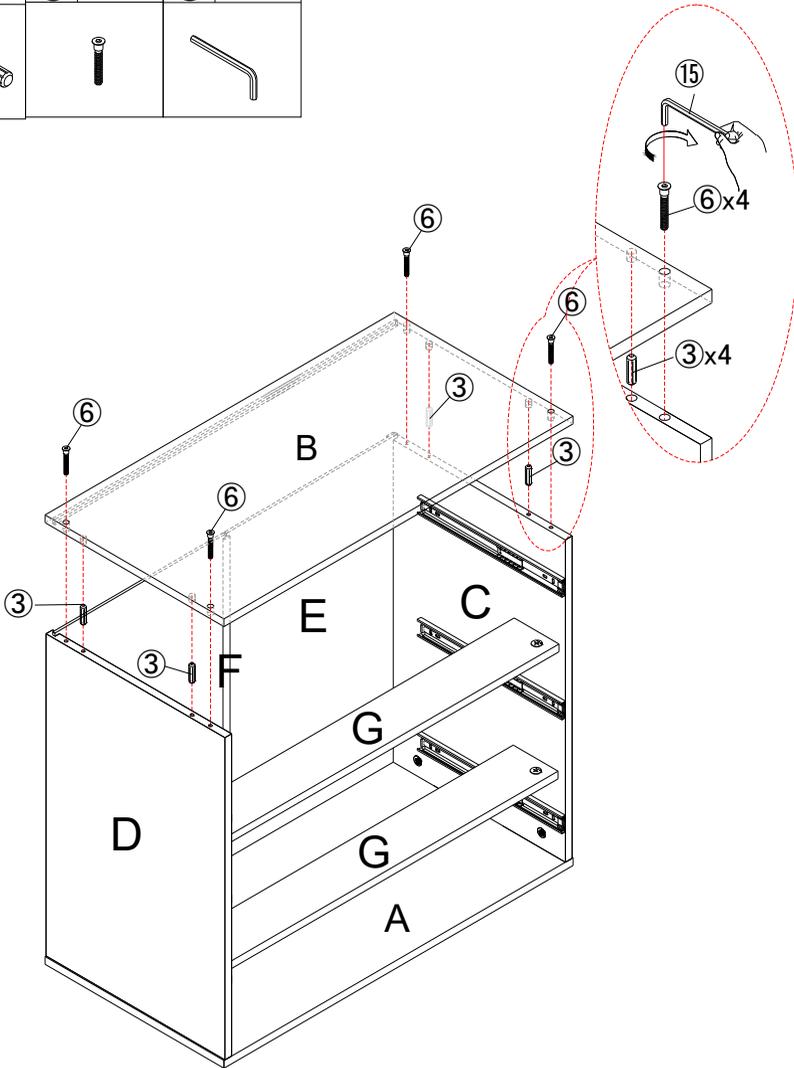

## STEP9:

Insert wooden dowel ③ into the corresponding hole of side panel(C)&(D),and use bolt ⑥ to attach bottom panel(B) to the preassemble step 8, make sure all holes aligned and tighten bolt ⑥ with allen key⑮.

⑧	x4	⑮	x1
			

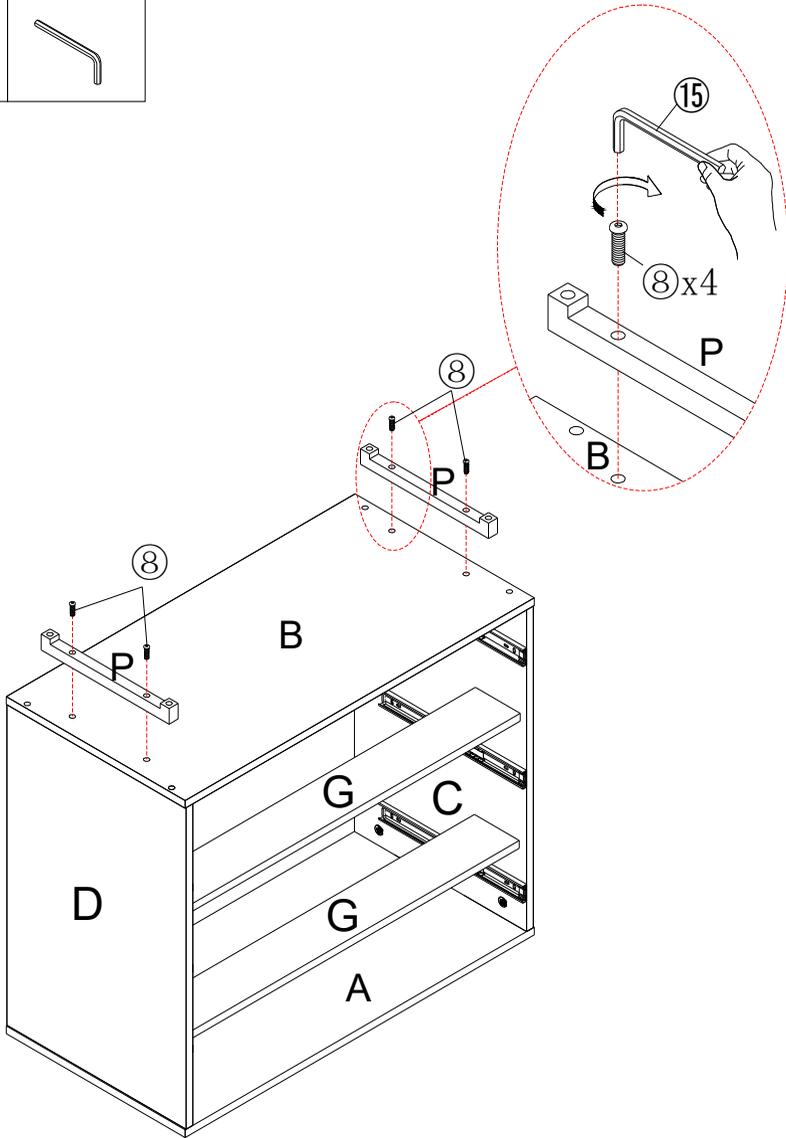


## STEP10:

Use bolt ⑧ to attach leg(P) to the corresponding hole of bottom panel(B),tighten bolt ⑧ with allen key ⑮.

⑦	x8	⑮	x1
			



**Caution: Don't fasten ⑦ bolt until end of step 12!**

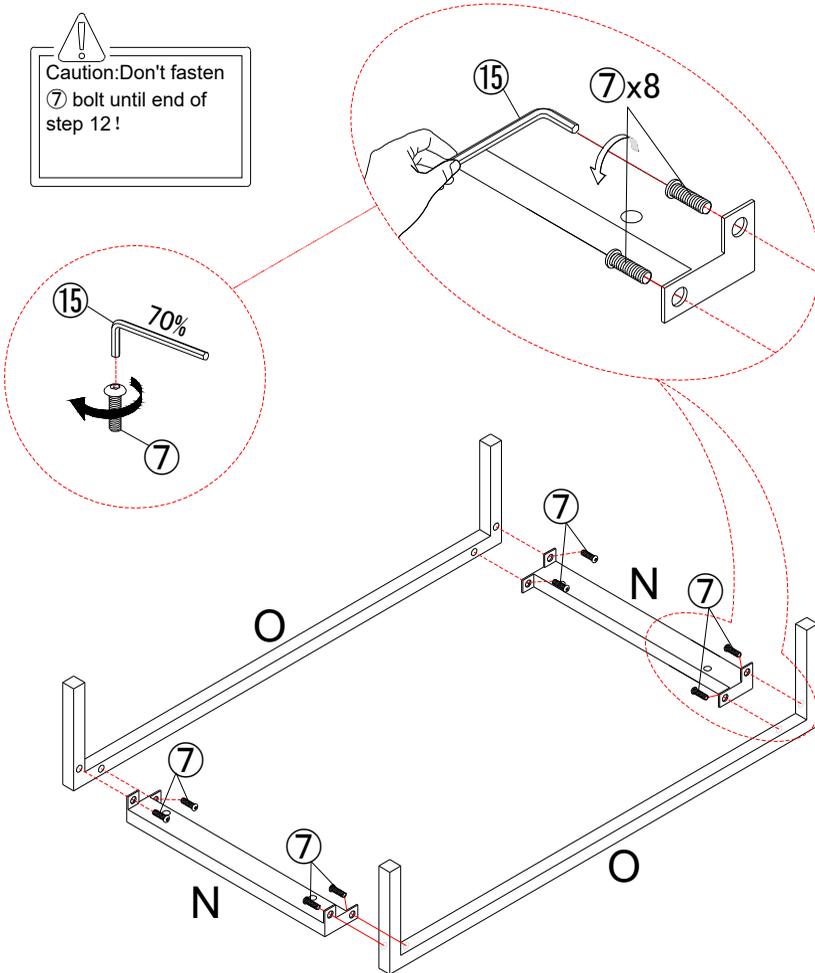


## STEP11:




Use bolt ⑦ to attach part (N) to leg(O) make sure all holes aligned and tighten bolt ⑦ with allen key ⑮.

⑨	x4	⑮	x1
			

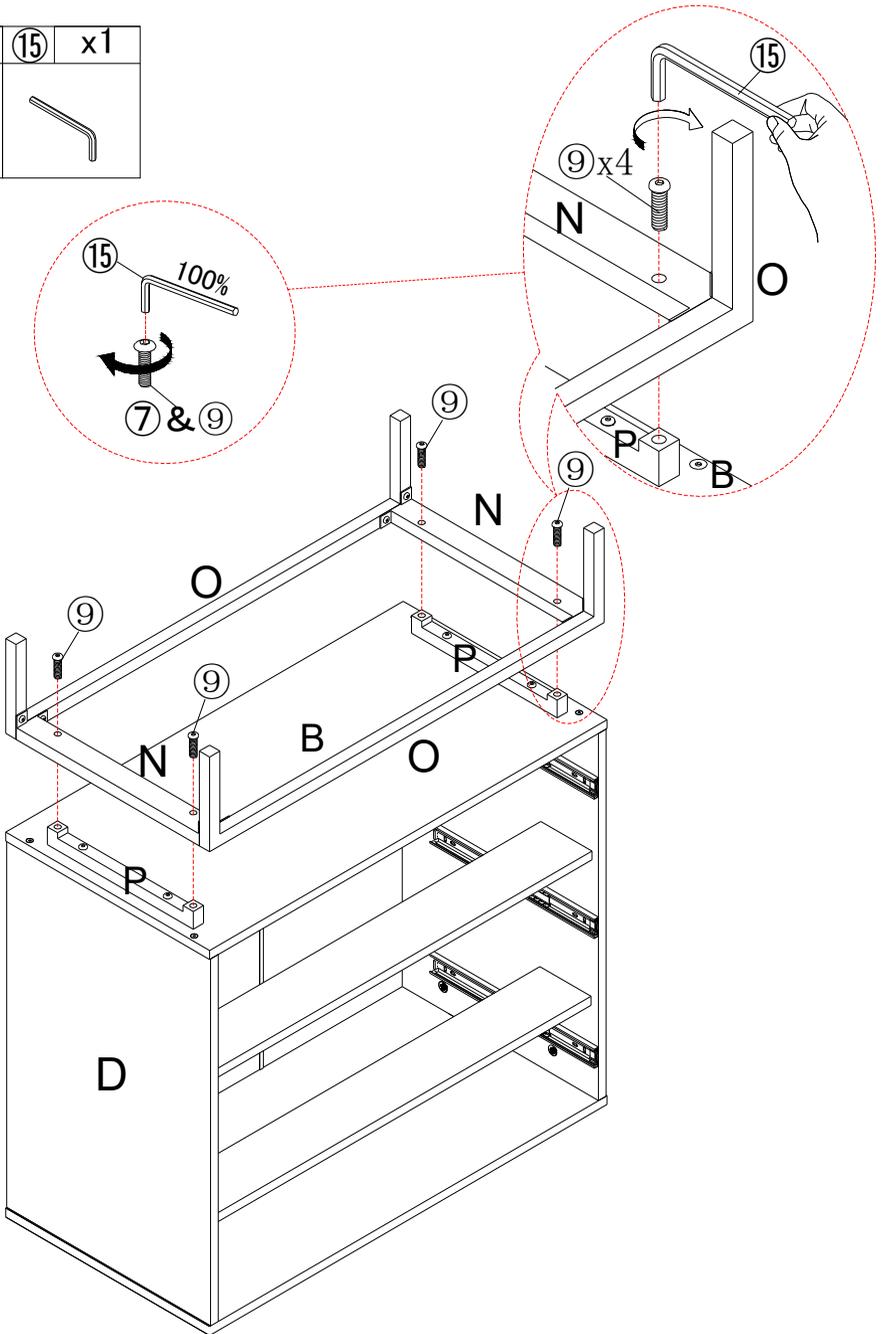


**STEP12: Use bolt ⑨ to attach the preassemble leg(O)&(N) to the corresponding hole of part(P), tighten bolt ⑨ with allen key ⑮.**



①	x12	⑪	x12	⑰	x1
					

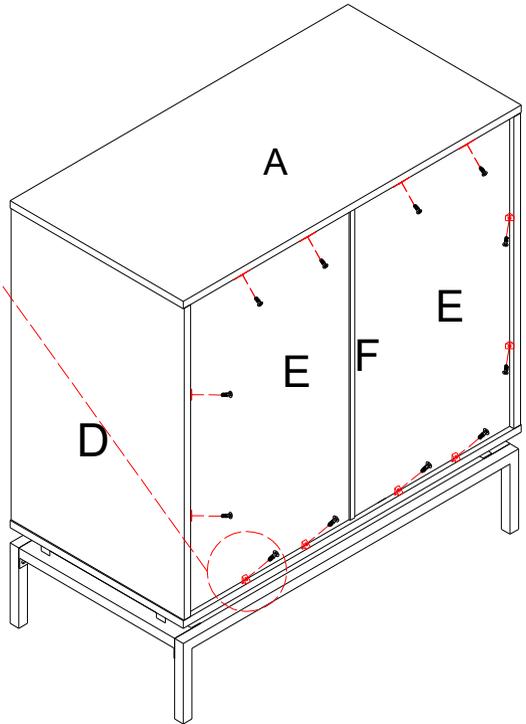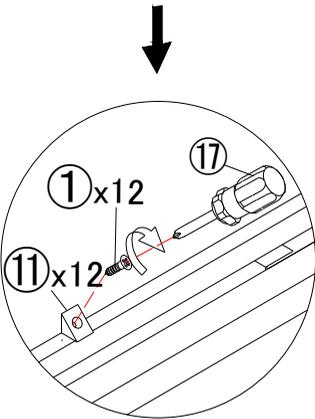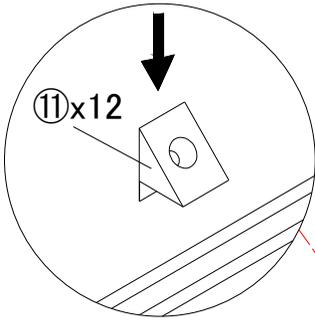

### STEP13:


Insert hardware ⑪ into part E as shown, use screw ① to attach it, tighten screw ① with screwdriver ⑰.


⑤	x18	⑰	x1
			

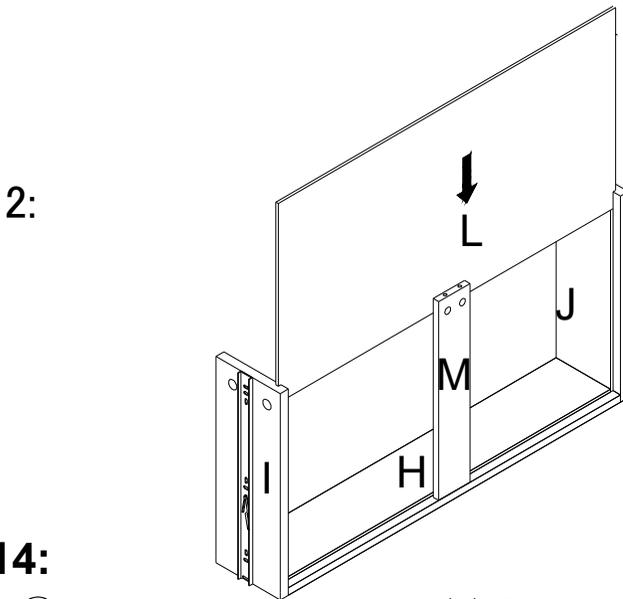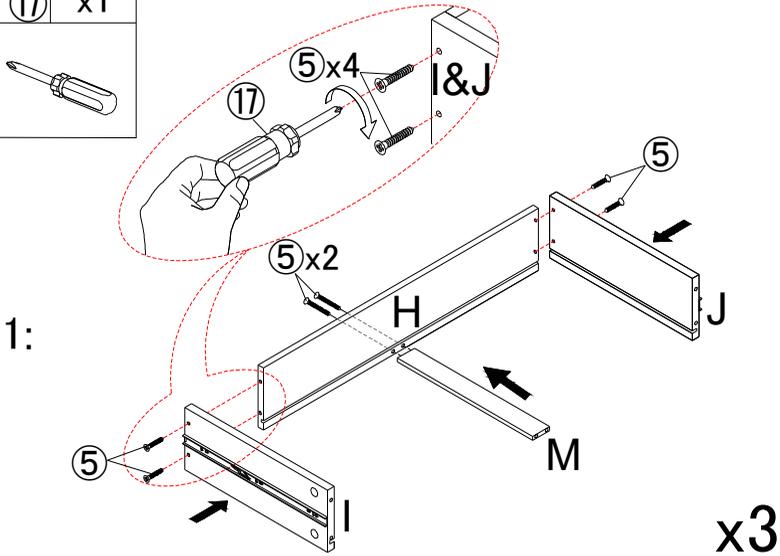

### STEP14:

Use bolt ⑤ to attach drawer side (I) & (J) to drawer back (H), tighten bolt ⑤ with screwdriver ⑰, and use bolt ⑤ to attach part (M) to drawer back (H), tighten bolt ⑤ with screwdriver ⑰, finally carefully align and slide panel (L) into the groove along rear edge of pre-assembled step 5.


②	x18	⑰	x1
			




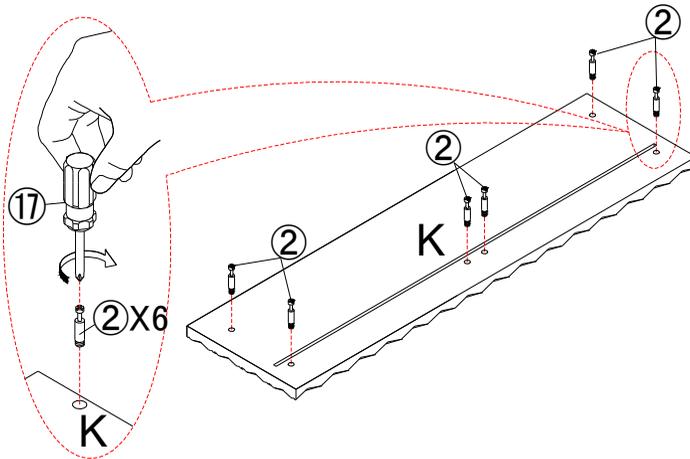


x3

## STEP15:


Insert bolt ② into the corresponding hole of drawer front(K),tighten bolt ② with screwdriver⑰


④	x18	⑩	x18	⑪	x1
					

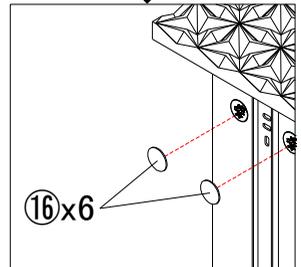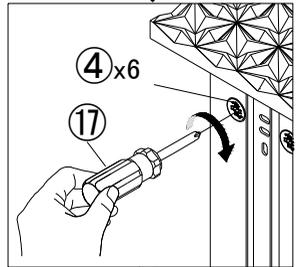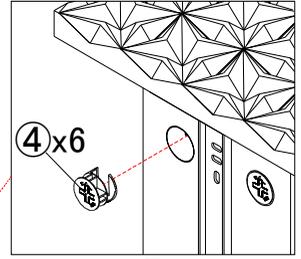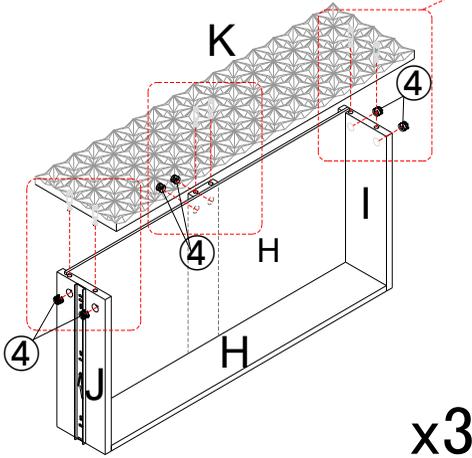

## STEP16:




Insert drawer front (K) into preassembly step 14, make sure all holes aligned and insert cam bolt ④ into the corresponding hole of drawer side ④, tighten cam bolt ④ with screwdriver ⑪. after installation, cover the screw holes with ⑩

①	x6	⑫	x3	⑰	x1
					

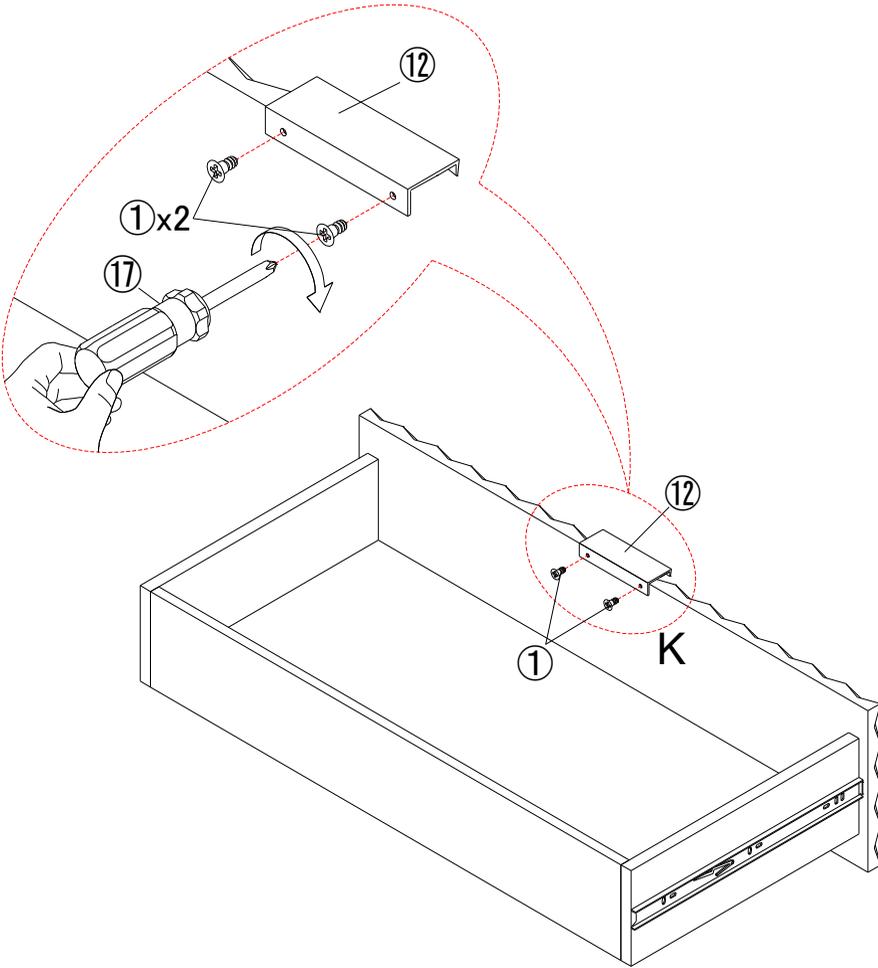




## STEP17:

Use bolt ① to attach handle ⑫ to drawer front (K) , tighten bolts① with screwdriver ⑰.

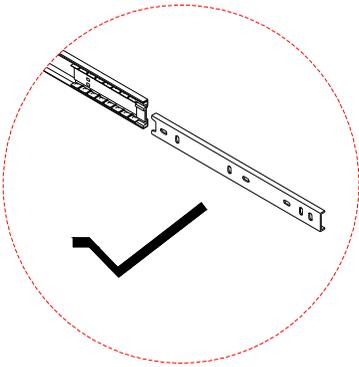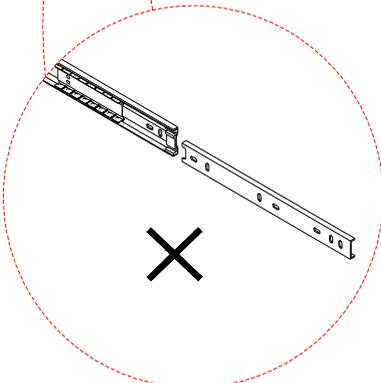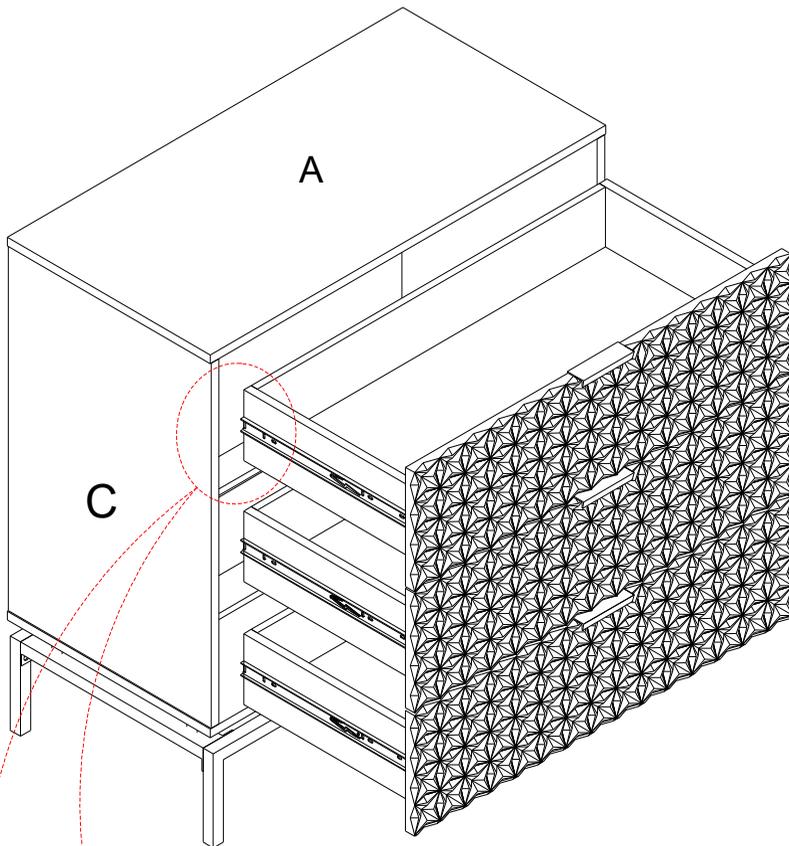


**STEP18:**





①	x4	⑬	x2	⑰	x1
					

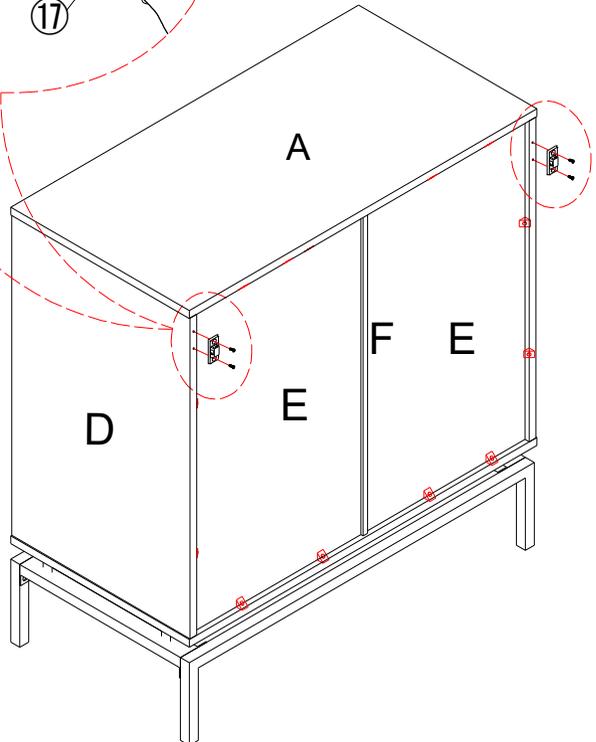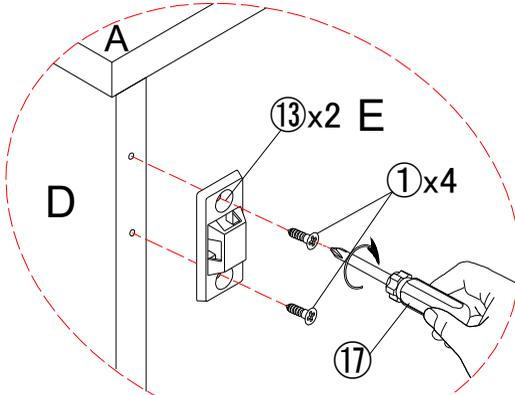

**STEP19:**





Attach part ⑬ to side panel D, C with bolt ① and tighten the bolt with screwdriver ⑰.

⑤	x4	⑩	x4	⑬	x2	⑰	x1
							

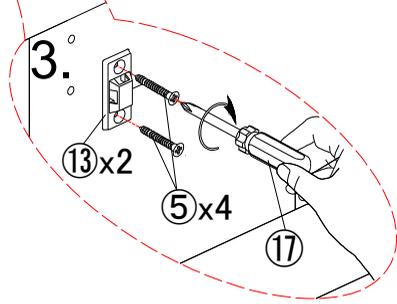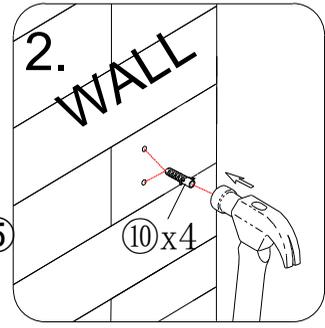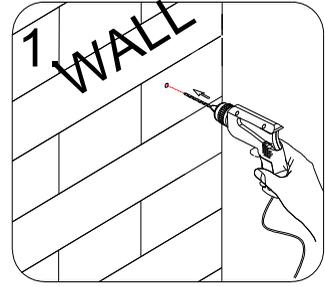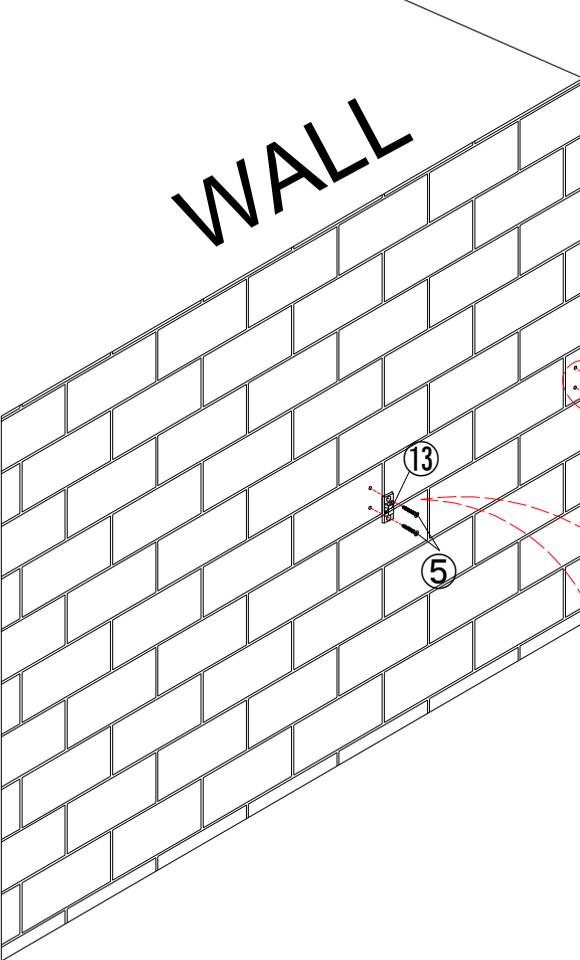

**STEP20:** Mark the position on the wall, that corresponds to the location of part ⑬ on the side panels C,D; Drill and insert the expandable screw ⑩ by hammer.

Assemble the part ⑬ to the wall. Align the hole in the part ⑬ with the expandable screw ⑩, use screw ⑤ to attach it and tighten by screwdriver ⑰.

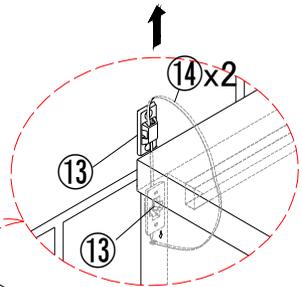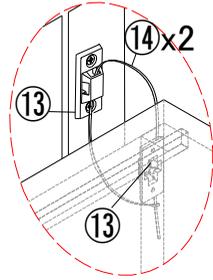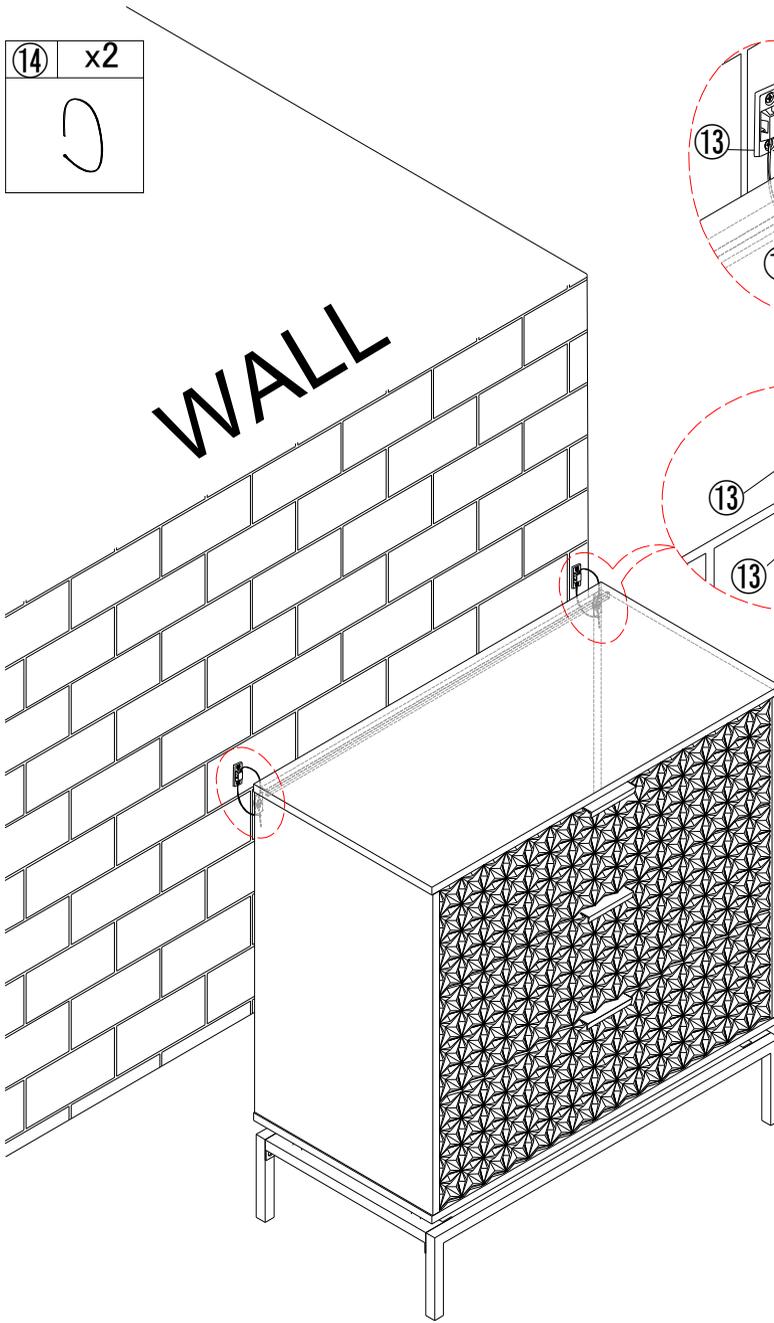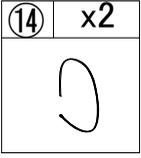

**STEP21:**

Let the plastic belt ⑭ pass through the both part ⑬ and pull tightly.

# WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty  
with assembly? Missing parts?  
Please send email with your order No to  
[customerservice@hulalahome.com](mailto:customerservice@hulalahome.com)  
For return, please check the return policy with  
the retailer or market place you bought from.

Appreciate your purchasing from us.  
Pop up your life by our furniture piece!