

WALL HANGING BEVELLED MIRROR

INSTALLATION SEQUENCE

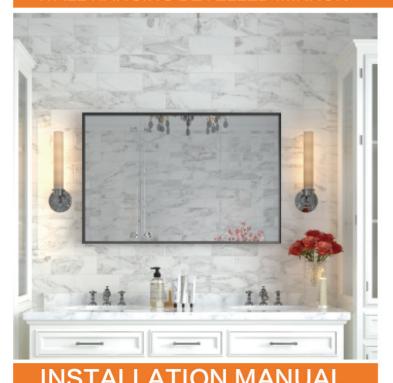

Note: Ensure that the fixing location is able to take the weight of the complete fitting.

-

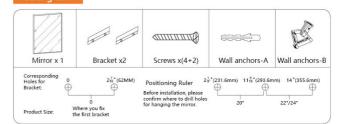


Installation tools




(1)

If you have any problem, please feel free to contact us on aftersale

1. Decide the installation method as per your reference. Confirm the locations for drilling holes with the positioning ruler, and use a marker to mark the spots 023 on the wall.

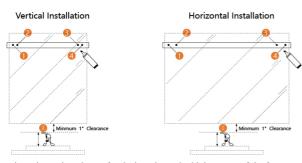


Note: Please hang the mirror a few inches above the highest part of the faucet.




The positioning ruler makes it easier for you to drill perfect holes for the brackets.


- Decide the location to hang your mirror first, and make sure the positioning ruler is placed against the wall horizontally.
- ② The lower line is product size. According to your product size, you can find the corresponding hole spots for the two brackets, which are indicated on the upper line.

2. Use an electric drill to punch holes at the marked spots, and then apply wall anchors with hammer.

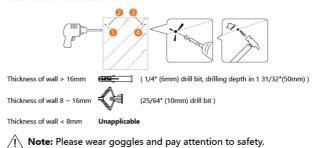



4.Place the mirror against the wall, align the hook with the bracket slot, slowly lower it so that the hook fits into the slot, and gently shake the mirror to ensure that the mirror is securely installed.

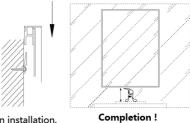

Note: Two-person installation.