


# ASSEMBLY INSTRUCTIONS







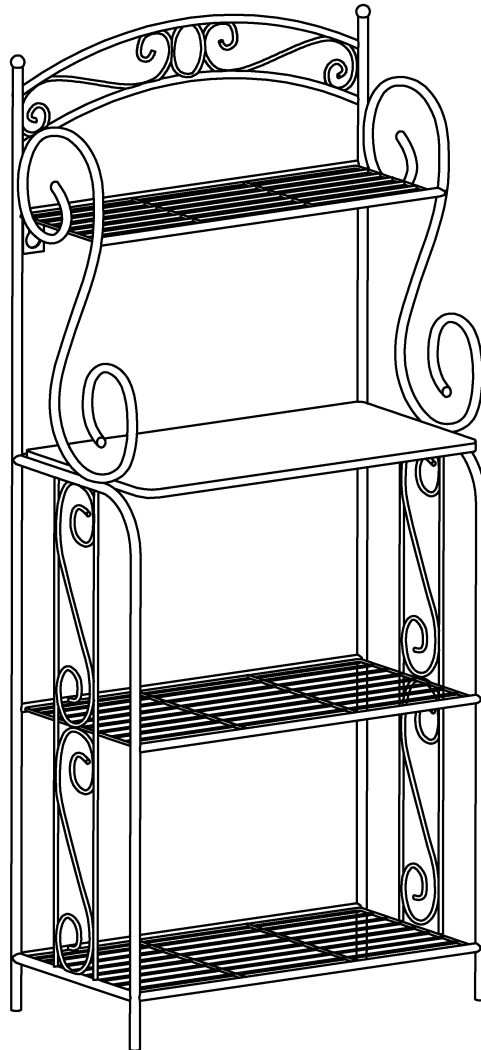


## Kitchen Rack










### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquid to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## Part List


A1  Lower Left Side Frame	Quantity of 1	A2  Lower Right Side Frame	Quantity of 1	A3  Upper Left Side Frame	Quantity of 1	A4  Upper Right Side Frame	Quantity of 1	A5  Upper Back Apron	Quantity of 1
A6  Lower Net Rack	Quantity of 2	A7  Upper Net Rack	Quantity of 1	A8  Middle Panel	Quantity of 1	A9  Connect Bar	Quantity of 1		

## Hardware List

B1  Bolt	Quantity of 14	B2  Screw	Quantity of 4	B3  Screw	Quantity of 2	B4  Anchor	Quantity of 2	B5  Bolt	Quantity of 2	 Allen Key	 (NOT INCLUDED)
--	----------------	---	---------------	---	---------------	--	---------------	---	---------------	---	--

### STEP 1


B1  8pcs

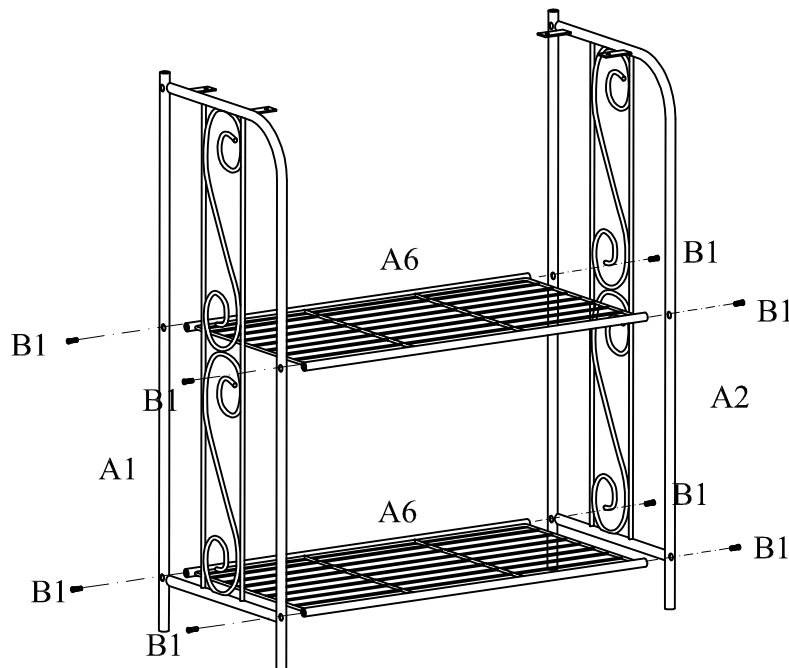



Assemble Lower Side Frames A1&A2 to Lower Net Racks A6 using Bolts B1.

Note: Please do not tighten Bolts B1 until Step 5.
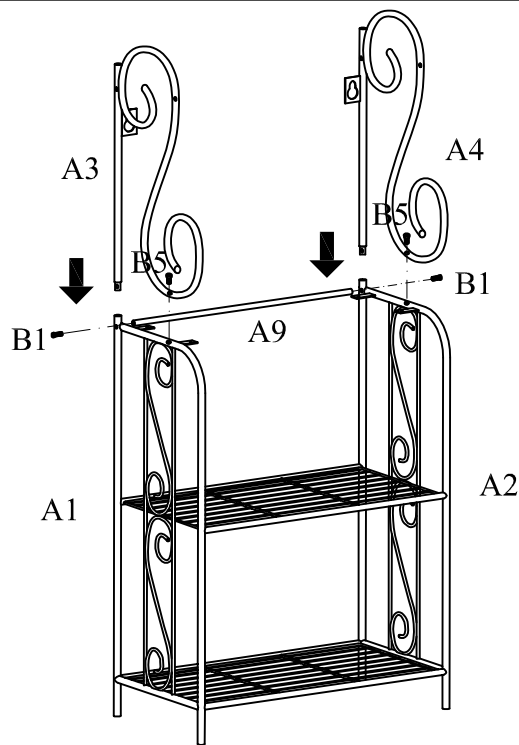
## STEP 2




B1		2pcs
B5		2pcs

1).Insert Upper Side Frames A3&A4 to Lower Side Frames A1&A2 as shown above.

2).Then assemble Upper Side Frames A3&A4 and Connect Bar A9 to Lower Side Frames A1&A2 using Bolts B1 &B5.


Note: Please do not tighten Bolts B1 until Step 5.

## STEP 3

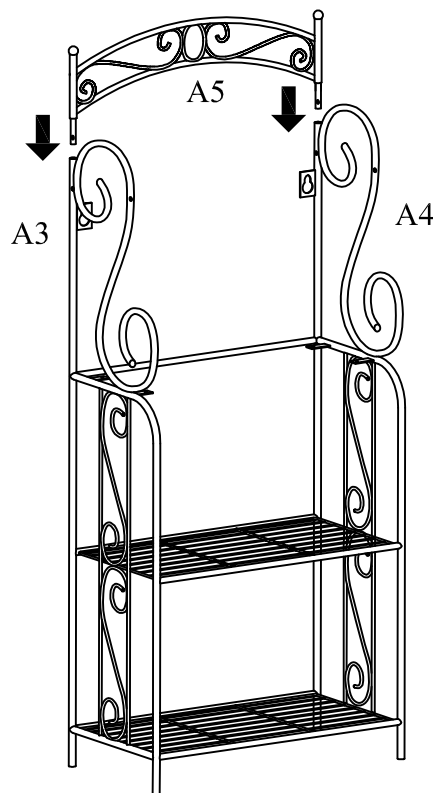


Insert Upper Back Apron A5 to Upper Side Frames A3&A4 as shown above.

## STEP 4

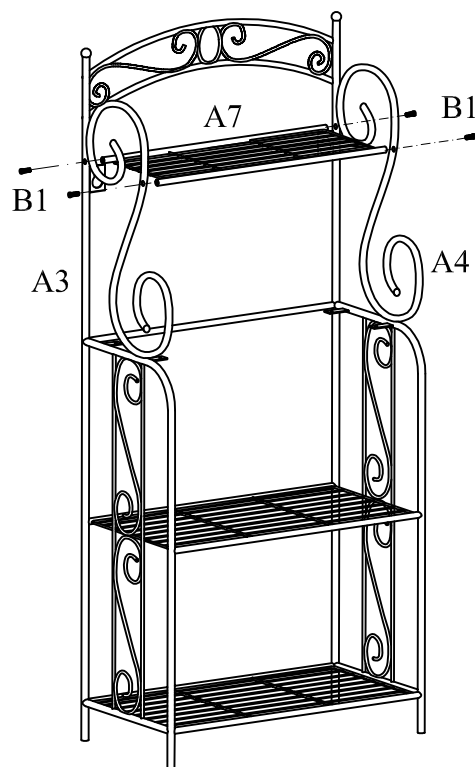


Assemble Upper Net Rack A7 to Upper Side Frames A3&A4 using Bolts B1.  
Note: Please do not tighten Bolts B1 until Step 5.

## STEP 5

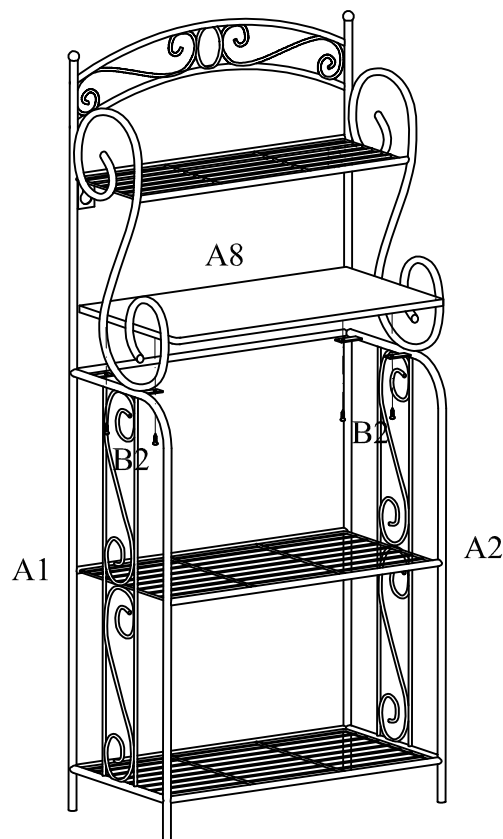





Assemble Middle Panel A8 to Lower Side Frames A1&A2 using Screws B2.  
Note: Please tighten all bolts B1 at this point.

STEP 6

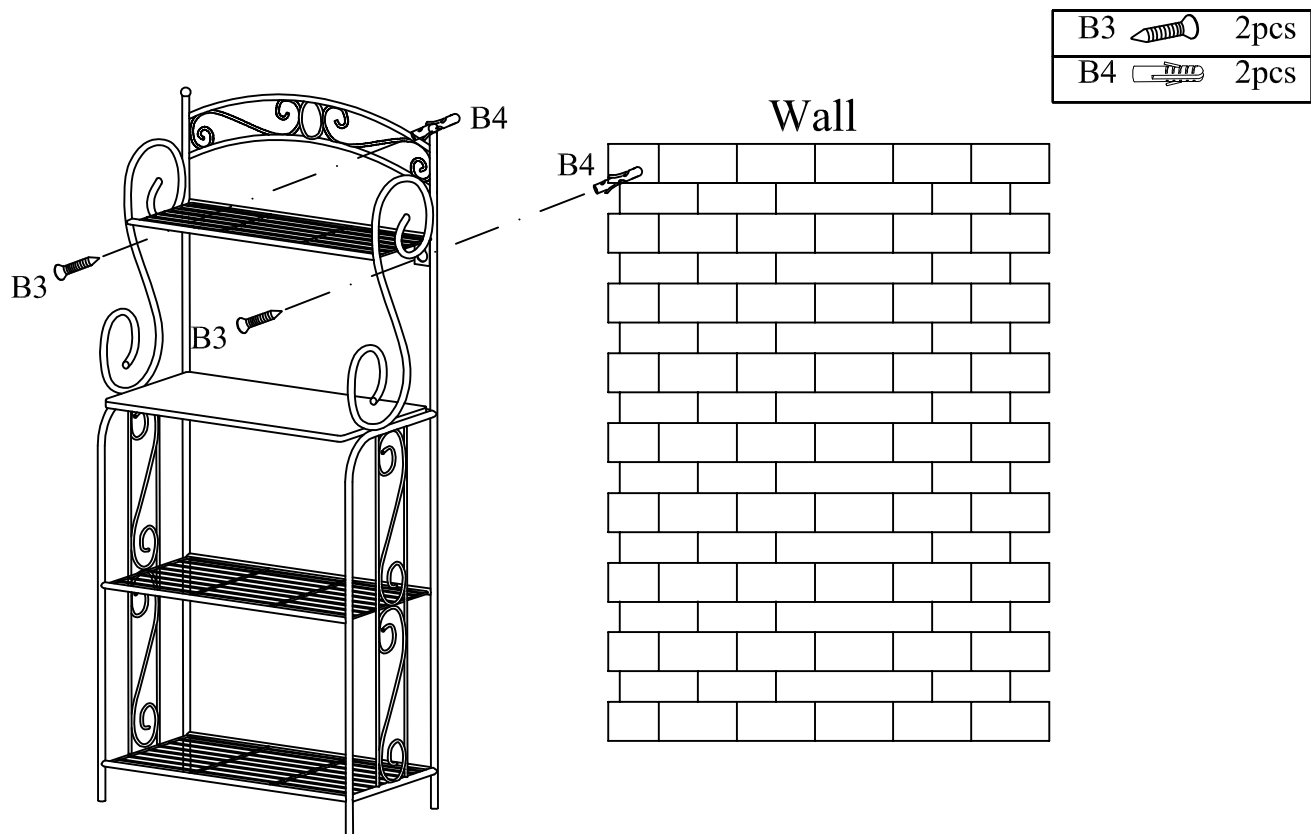

For your safety, please attach this unit to the wall by Screws B3 and Anchors B4.

APPENDIX: Dimension of Hardware in this AI.
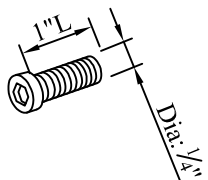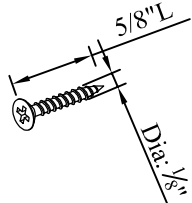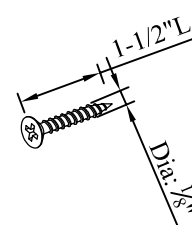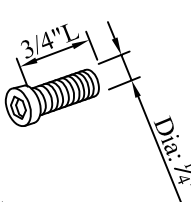
<p>B1.</p>  <p>Bolt</p>	<p>B2.</p>  <p>Screw</p>	<p>B3.</p>  <p>Screw</p>	<p>B5.</p>  <p>Bolt</p>
--	---	--	--