



Assembly Instructions

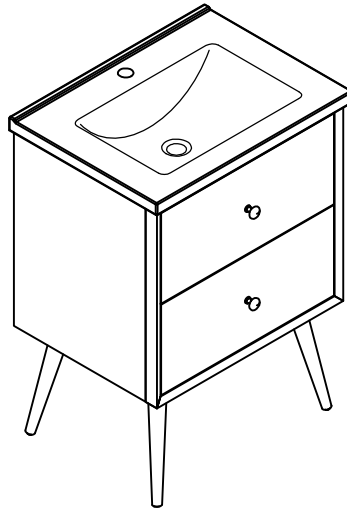

Parts List

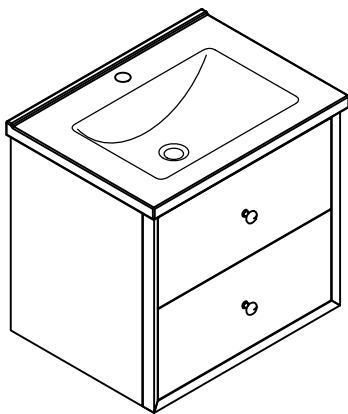


A x 1
Cabinet



B x 4
Legs

Hardware




(H1) x 8




(H2) x 8




(H3) x 8



(H4) x 1



(H5) x 2




(H6) x 2

Assembly Instructions


Step 1

Align the legs to the cabinet

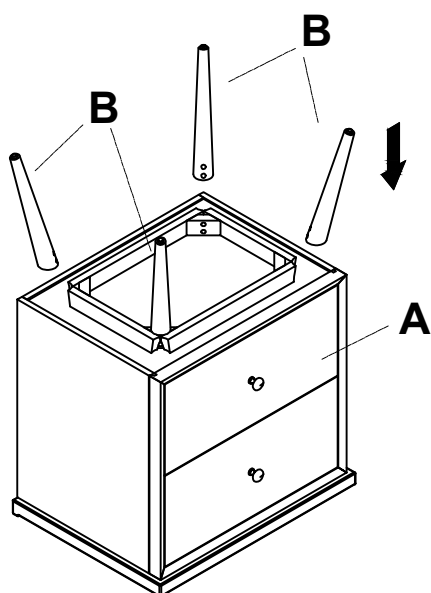


Step 2

Secure the legs to the cabinets with the screws

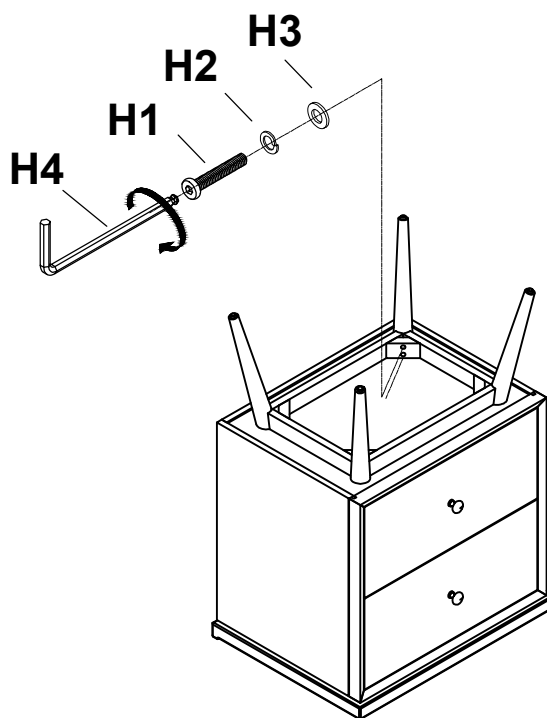

Hardware




(H1) x 8



(H2) x 8



(H3) x 8




(H4) x 1

Assembly Instructions


Step 3

Locate the clips on both sides of the bottom of the drawer, press the clips simultaneously and gently lift the drawer, remove both the drawers from the slide rails and pull it out

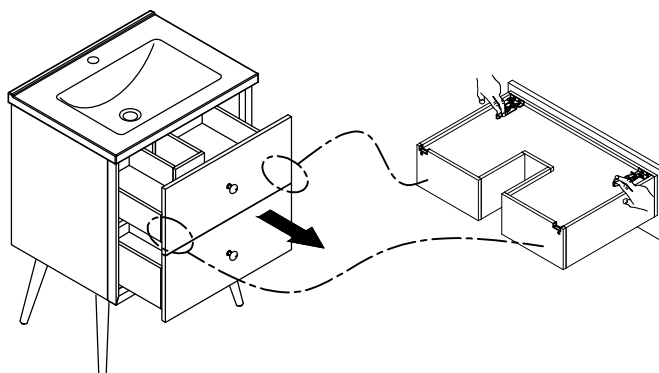


Step 4


Please lock to the wall by drill 2 holes on the backboard. Position the cabinet and mark the two holes on the wall. Move the cabinet away and drill 2 holes into the wall. Knock in H5 (2pcs) into the wall. Reposition the cabinet to the wall and screw H6 (2pcs) through the cabinet hole to secure it.

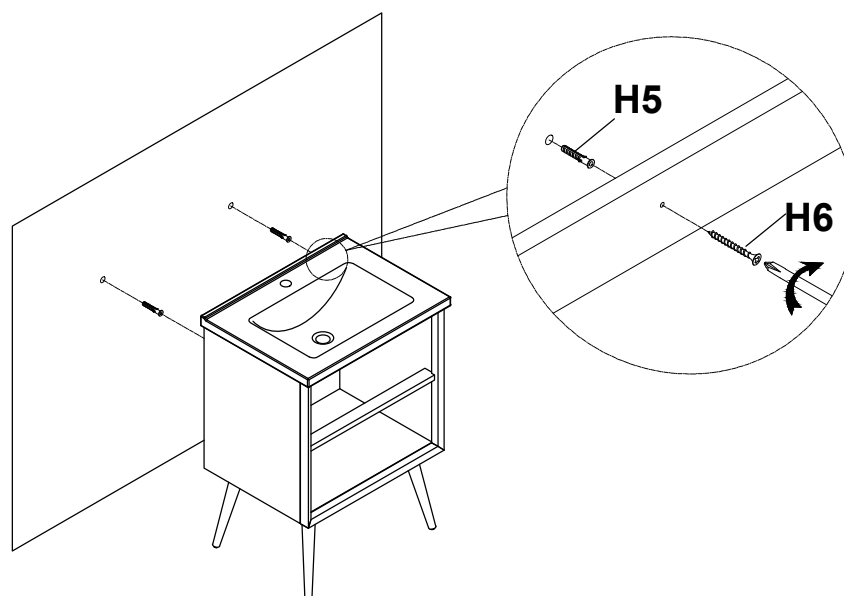

Hardware



(H5) x 2



(H6) x 2

Assembly Instructions

Step 5

Fully extend the drawer slide tracks, gently place the drawer into the hook on the back of the slide track. Lower the drawer onto the extended slide, slide the drawer until it is fully inserted. Rotate left and right to adjust the gap between the top and bottom of the drawer.

