


# Posh Pollen




## ASSEMBLY INSTRUCTION 9822-060 STURRIDGE : 30" HOLLOW SHELF

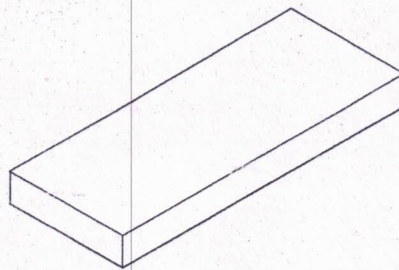


### PART LIST

①

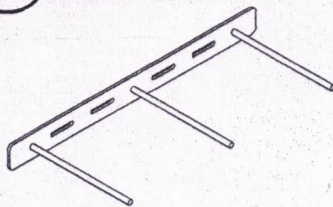

X 1

②

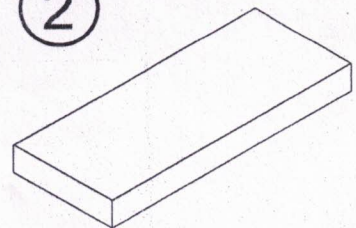

X 1

### HARDWARE LIST

Ⓐ



x 4

Ⓑ



x 4


Ⓒ





x 4



STEP -1

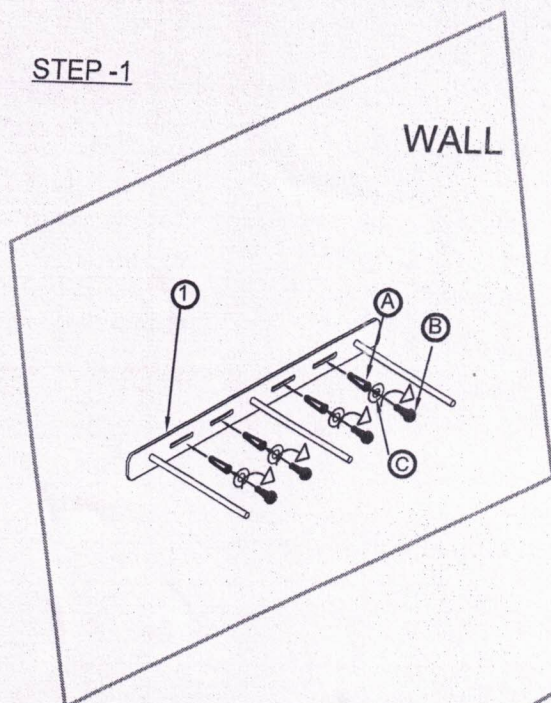


STEP -2

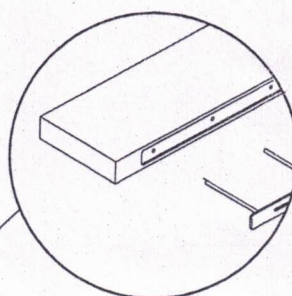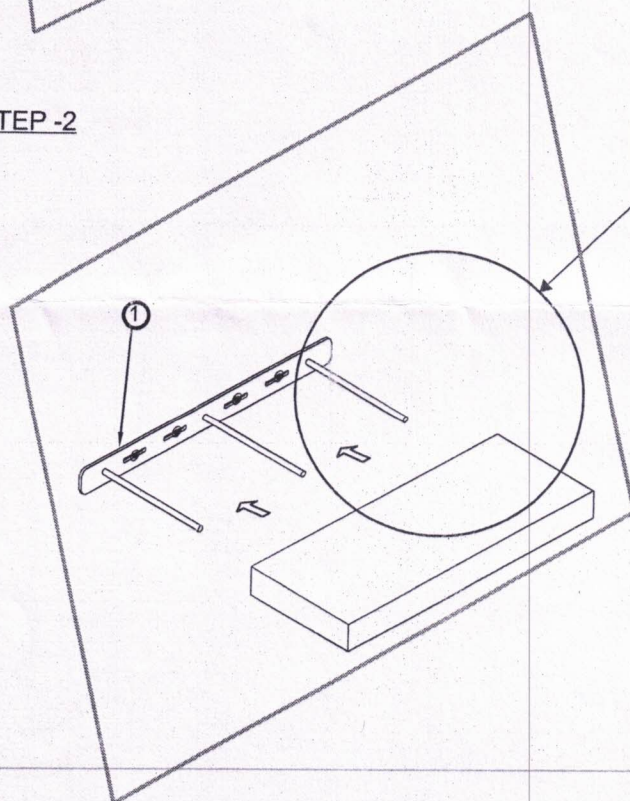

MATCH HOLE TO METAL BAR

STEP -3

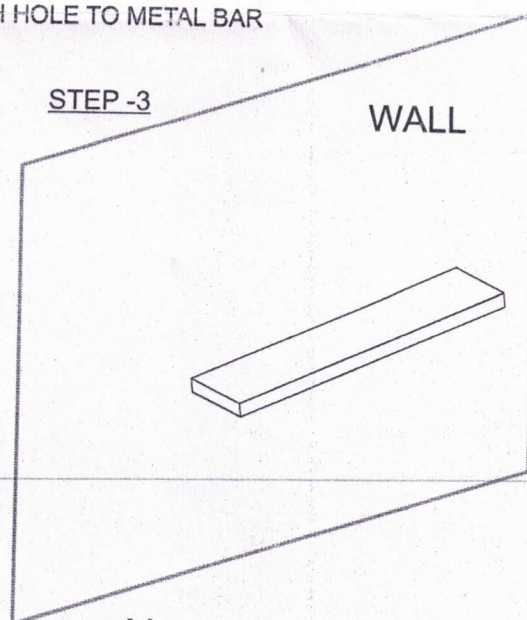

Now its ready to use

**Important guide line**

1. Mounting hardware should be attached to at least 3 wooden studs. (studs are usually 16" apart- on center)
2. You can easily create additional holes in the mounting bracket by using a metal drill bit. In most cases this will be necessary.
3. Professional, "Handy Man" installation is recommended.