


Model: XDA1403002


Norris Freestanding Tub

- Note:**
- Freestanding acrylic tub
 - Smooth interior and exterior finish
 - Includes drain assembly
 - Glossy White rectangle tub

Top

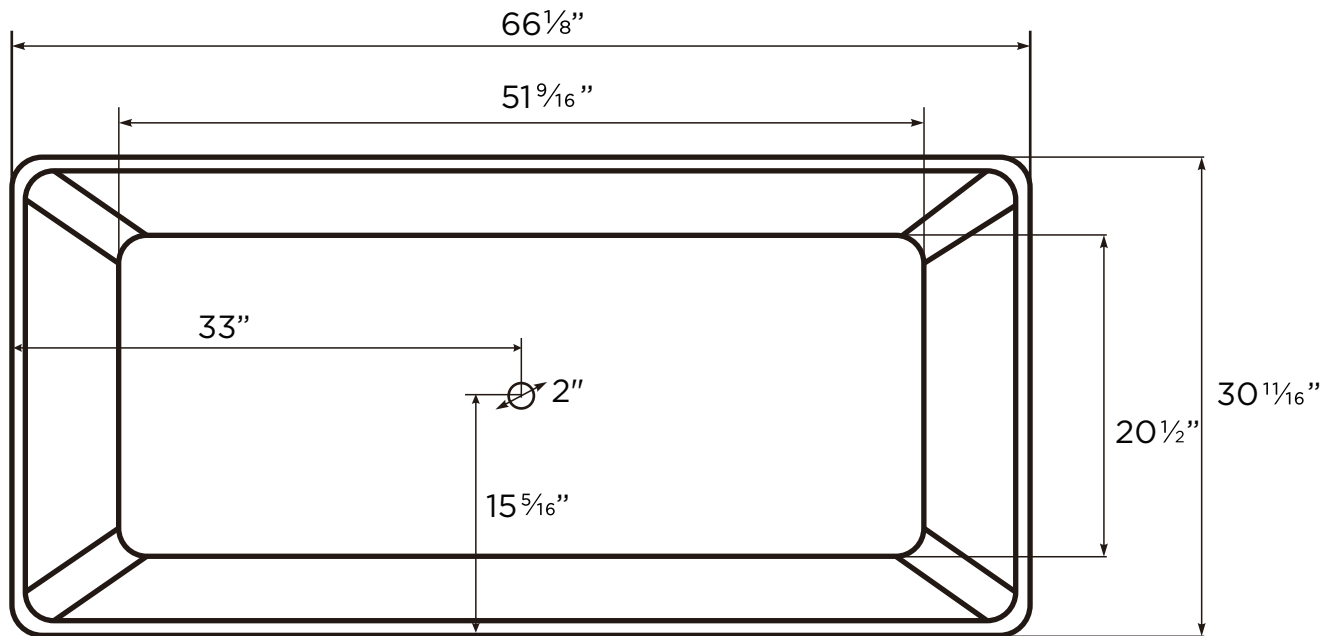


Front

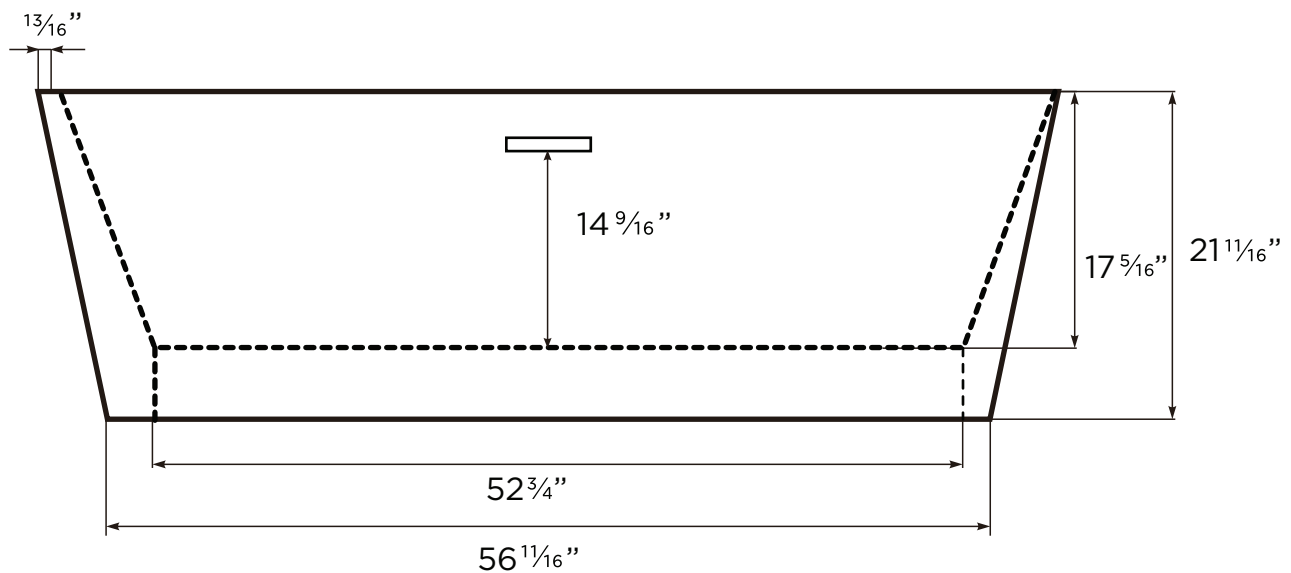

All measurements are approximate and may vary +/- 1/4"

Model: XDA1401001/XDA1402001/XDA1402002/XDA1403002/XDA1404001/
XDA1404002/XDA1405001/XDA1406001/XDA1407001/XDA1408001/
XDA1409001/XDA1410001/XDA1410002/XDA1411002/XDA1414001/
XDA1415001/XDA1418001/XDA1420001/XDA1421001/XDA1424001/
XDA1425001/XDA1427001/XDA1430001/XDA1431001/XDA1432001/
XDA1433001/XDA1435001/XDA1436001/XDA1437001/XDA1439001

Front

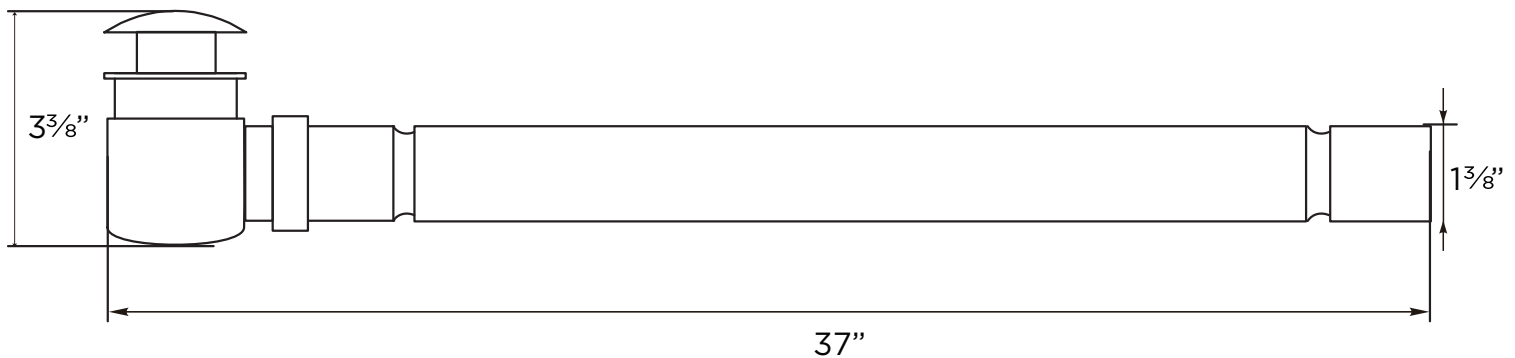

All measurements are approximate and may vary +/- 1/4"

Maykke

www.maykke.com

Installation, Care Guide and Warranty



Freestanding Acrylic Bathtub

NOTICE: Do not change or modify the product in any way. Doing so may compromise the products structural integrity and will void the warranty.

NOTICE: Installation instructions must be followed. Any diversions from the installations may risk property damage and will void the warranty.

NOTICE: When moving your tub, be sure to lift, never slide or pull, doing so may result in damage to the product or the surrounding area.




NOTICE: If you are unfamiliar with tub installation please consult a professional.

IMPORTANT:


Observe all state and local building codes.

Carefully read all installation and care instructions before proceeding.

TOOLS:

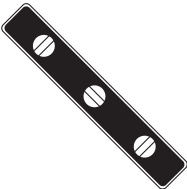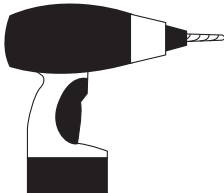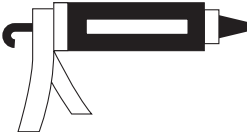 PENCIL	 LEVEL	 DRILL	PLUS: FABRIC CLOTH TO PROTECT THE BATH AND CONVENTIONAL WORKSHOP TOOLS. PLUMBER'S TAPE
 MEASURING TAPE	 ADJUSTABLE KEY	 SILICONE	


PREPARE FOR INSTALLATION:

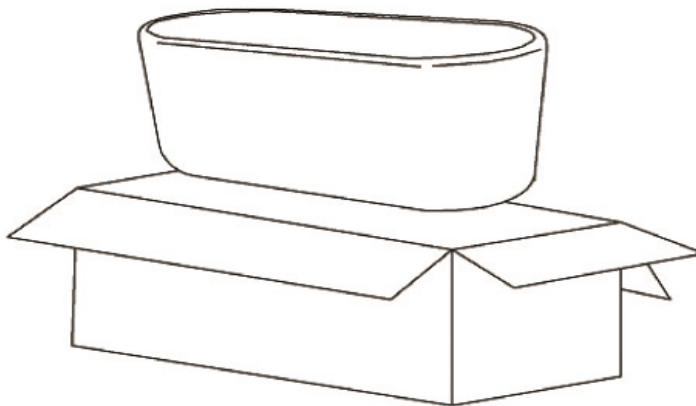

1. Remove the tub from the packaging and place on a soft cloth (it is recommended to have two people for this step).

2. Level the tub by turning it over and rotating the feet underneath (it is recommended to have two people for this step).

3. Fill the tub to the overflow and check for leaks. If the flex hose leaks at the drain/hose adapter, add plumber's tape to the drain threads and re-attach.

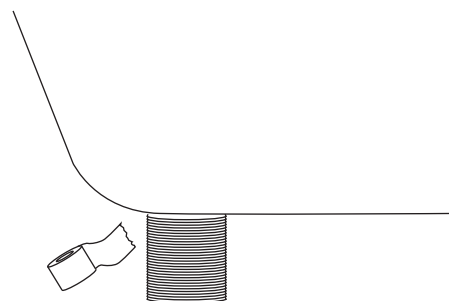


4. Clean and prepare the floor where you will be installing the tub.

5. Place the tub in the exact position you will be installing it (it is recommended to have two people for this step).

6. Using a pencil, trace around the tub, marking the installation area.

INSTALLATION:

1. Determine the location of the drain pipe on the floor by measuring the drain and waste location under the tub. (This will vary on each tub)
2. Apply a bead of silicone or adhesive to the bottom tub supports
3. Apply a bead of tub and tile caulk around the edge of the base.
4. Carefully set the tub in to position and connect the preinstalled drain flex hose to the water pipe, using pvc glue.
5. Filling the tub again check for any leaks in waste connections below. (access below the floor will be necessary)
6. Apply a final bead of silicone around the bottom edge of the tub where it meets the floor and wipe away any excess.
7. For faucet installation consult the manufacuter's instructions.

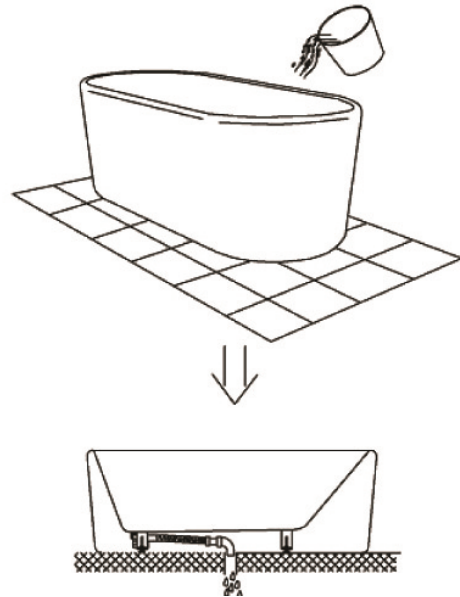

CARE GUIDE:

Care: To help prevent hard water stains, rinse thoroughly and dry with a soft cloth.

Cleaning: Non-abrasive cleaners may be used when necessary.

Note: Use plumbers' tape on the drain threads if experiencing any leaking.

For warranty information please check www.maykke.com

For customer service concerns or support please email: support@maykke.com