
Assembly Instructions

Note: Please help to read my instruction before you ready to assemble.

Sofa

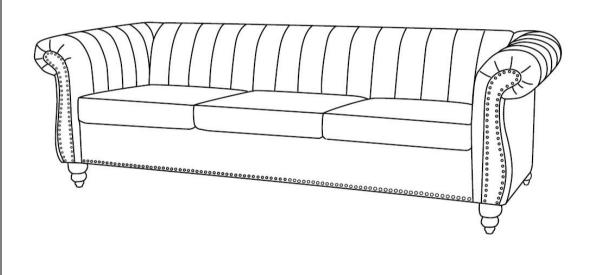


Part List				
Label	Picture	Description	QTY (PCS)	
Α	0 0	Backrest	1	
В		Left Armrest	1	
С		Right Armrest	1	
D		Seat	1	
E		Front Rail	1	
F		Seat Cushion	3	
G		Leg	4	

<u>Hardware</u>				
1)	**	Plastic Washer	7	
2		Allen Wrench	1	

Assembly Preparation



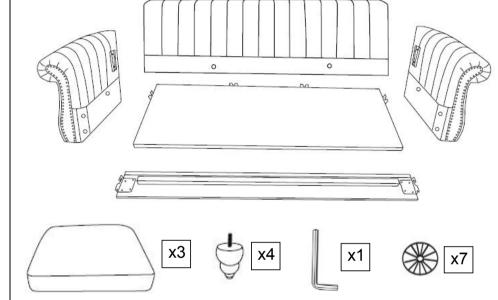

Included:

- -Backrest 1pc
- -Left Armrest 1pc
- -Right Armrest 1pc
- -Seat 1pc
- -Front Rail 1pc
- -Seat Cushion 3pcs
- -Leg 4pcs
- -Allen Wrench 1pc
- -Plastic Washer 7pcs

NOTICE:


- -Please read the instruction from cover to cover in detail. Thanks.
- -Installed by at least two adults
- -To avoid damaging your furniture, Please don't assemble on flooring or carpet.
- -Please assemble on a clean non-marring surface, example for packing foam.
- -Saving all packaging until have finished.

Assembly Steps OVERVIEW Left Armrest(B) Backrest(A) Right Armrest(C) Seat Cushion(F) Front Rail(E) Leg(G)


This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.


FRONT FACING

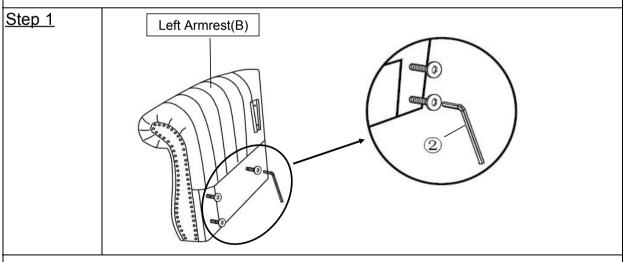


Open the carton and place all the parts on a clean, non-marring surface. Loosen the 3 bolts in Left Armrest(B) around half inch by Allen Wrench(②). Repeat the same step to loosen 3 bolts in Right Armrest(C).

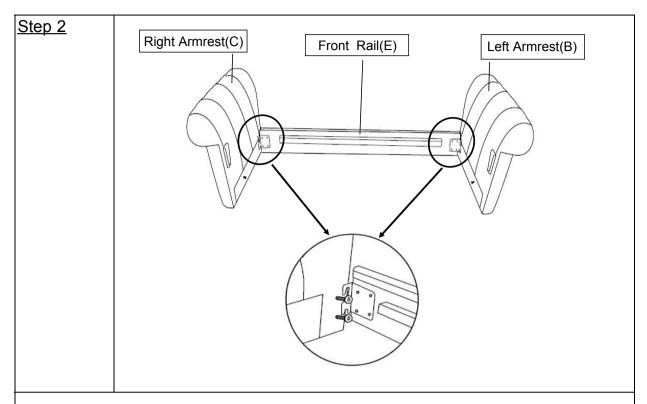

With the assistance of your partner, slide the hook in the eng of Front Rail(E) into the bolts on the Left Armrest(B) and Right Armrest(C), as shown in Picture.

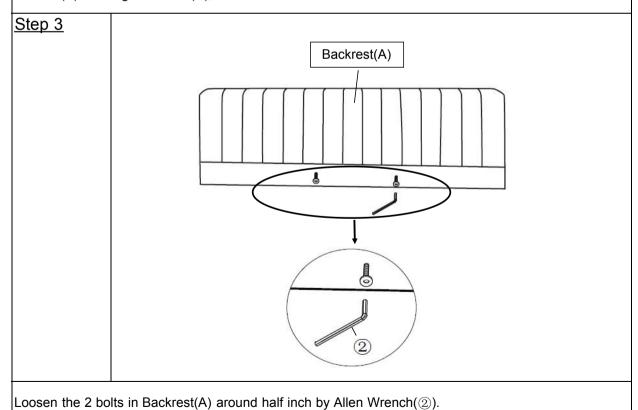

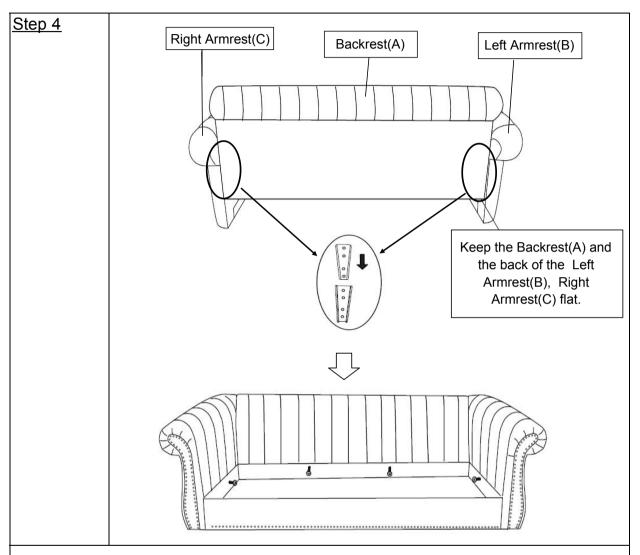

Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture.


Repeat the same process with the Right Armrest(C).

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C).


Assistance from an adult partner is necessary for this assembly process.

During this assembly process - do exercise caution. You may need to use your hand to press down and or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

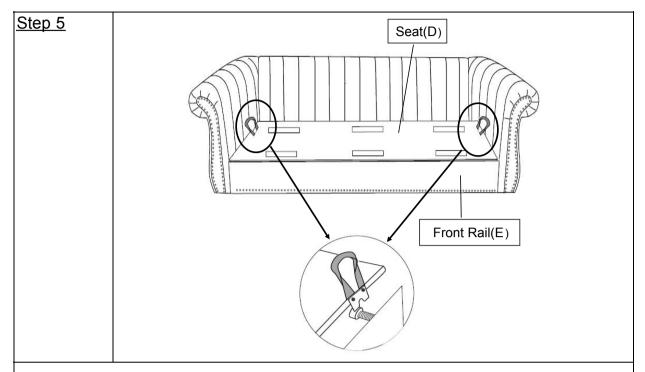


With the assistance of your partner, lift the rope on the two sides of Seat(D) by hand. Put the Seat(D) on the wood bar of the Front Rail(E) and then slowly place it down as shown above. **Note:All the u-shaped iron sheet need clamped to the bolt.**

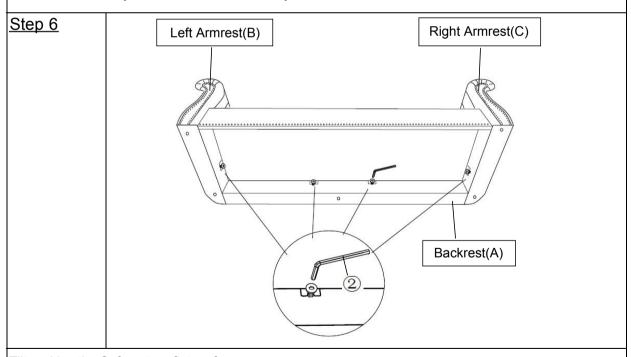

Tilt and lay the Sofa onto a flat surface.

Tighten the Bolts in the bottom of Backrest(A),Left Armrest(B) and Right Armrest(C) by Allen Wrench(②) as pictured above.


Tighten the Bolts fully in a sequential manner.

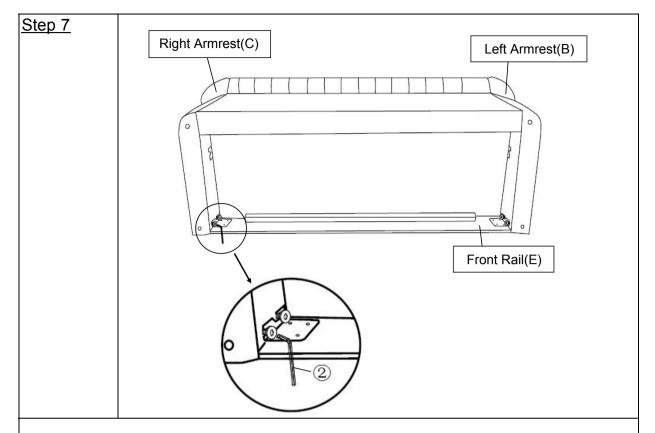

Change tilt and lay the Sofa another side onto a flat surface.

Tighten all the Bolts at the end of bottom Left Armrest(B) and Right Armrest(C) by Allen Wrench(②) as pictured above.


Tighten the Bolts fully in a sequential manner.

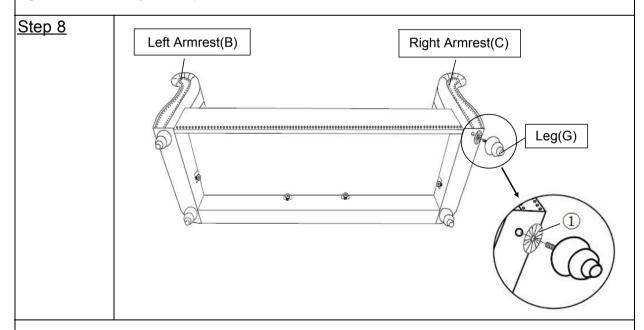


Install the Leg(G) at the bottom of Left Armrest (B) and Right Armrest(C) by placing Plastic Washer(\bigcirc) on the threaded stem.

Then insert threaded stem into the threaded mounting postion at the bottom of Left Armrest(B) and Right Armrest(C). Tighten by turning the Leg clockwise.

Note: The use of Plastic Washer(\mathfrak{D}) are OPTIONAL and are especially useful to help alleviate slight wobbles. Some Legs may need more than one whilst some legs may not need any.

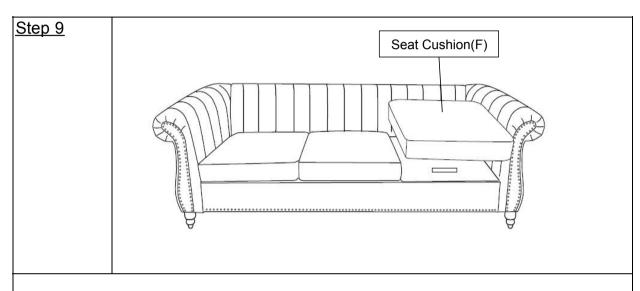

Turn the Sofa to its upright position.
Place the Seat Cushions(F) onto the Sofa.

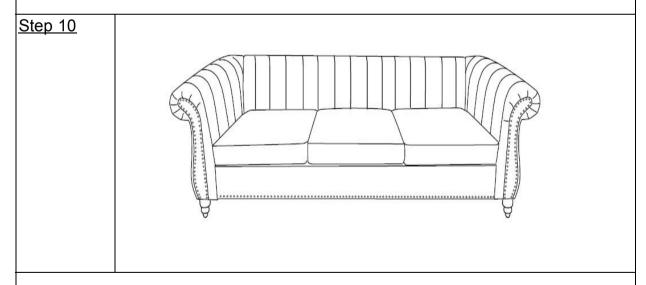

Your Sofa is ready for use.

This sofa can only be used on a flat, level surface.