


**Model:** 015623-H01  
015631-H01  
015636-H01

Wall Hung Collection

**Notes :** When installing cabinet onto a hollow wall, the use of a horizontal reinforcement beam such as a 2" x 8" or 2" x 10" spanning at least two vertical studs is required.

Cabinets that are installed onto a hollow wall without a reinforcement beam will void the manufacturer warranty.

**Step 1 :**

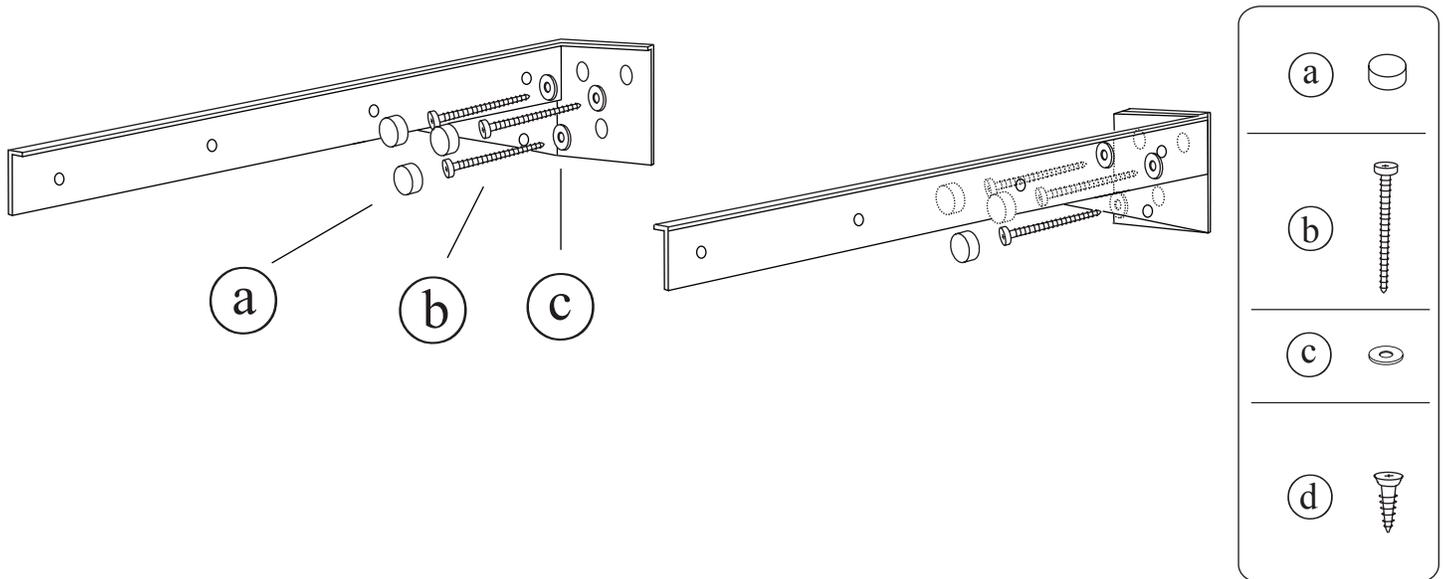

**Step 2 :** Attach the cabinet to the wall bracket.

