

LEGACY STORAGE CABINET • LSC3535 • INSTRUCTIONS

Organize your parts and hardware. You will need a Phillips head and flat head screw driver and rubber mallet.


Hardware :

A: Mounting Bracket(4) • **B:** Hinge(4) • **C:** Lock Lip • **D:** Door Tooth(2) **E:** Small Screw(2) **F:** Cam Locks(13)
G: Cam Pins(13) • **H:** Medium Screws(16) • **I:** Shelf Pins(8) • **J:** Feet(4) **K:** Large Screws(4) •
L: Door Handles(2) • **M:** Keys(2)



Parts :

N: Back • **O:** Bottom • **P:** Sides(2)• **Q:** Shelf **R:** Top• **S:** Door(2)

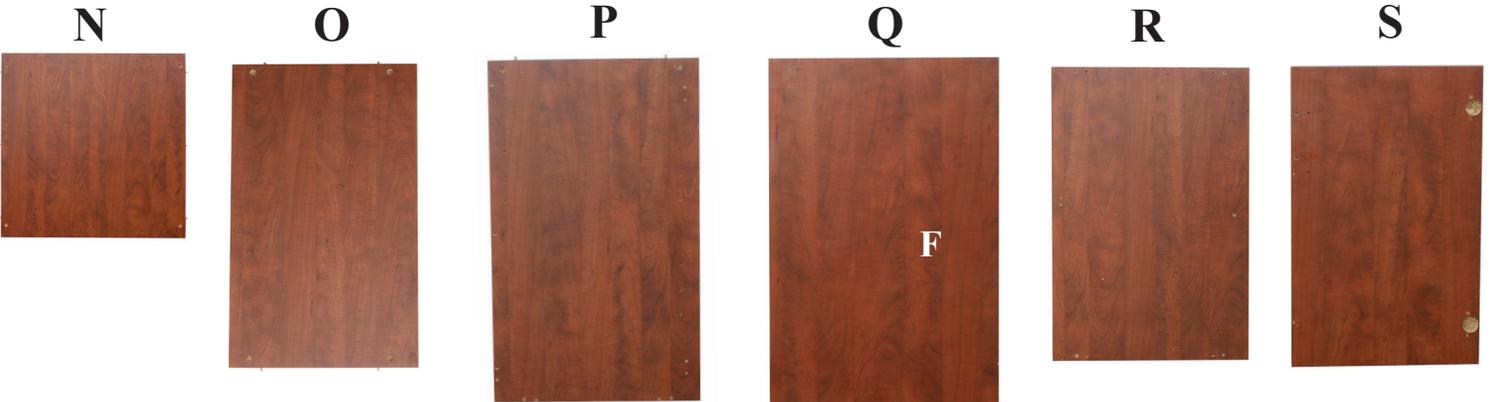

STEP 1 : Place 5 cam locks(F) in back(N)



STEP 2 :Place 4 cam pins(G) and 2 cam locks(F) into each side(P).



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

LEGACY STORAGE CABINET • LSC3535 • INSTRUCTIONS

STEP 3 : Lay back(N) on ground with cam locks facing up. Connect one side(P) to back by inserting cam pins into locks and tightening.



STEP 4 : Place 4 cam locks(F) into bottom (O) and connect by inserting cam locks into pins and tightening. (for best results arrange bottom so cam locks are facing out)



STEP 5A : Connect second side(P) by inserting and tightening cam pins and locks.

STEP 5B : Screw in feet(J) to bottom of both sides(P).

NOTE: If you are stacking the storage cabinet, the feet are optional.



STEP 6 : Screw mouting brackets(A) into pre existing holes in sides(P) using 2 medium screws(H) each.



STEP 7 : Place shelf pins(I) in place and insert shelves(Q).




STEP 8 : Place 5 cam pins(G) into top(R). Also use 2 small screws(E) to secure lock lip(C) in the pre drilled holes.




LEGACY STORAGE CABINET • LSC3535 • INSTRUCTIONS


STEP 9 : Place top(R) onto unit by inserting cam pins into locks and tightening.

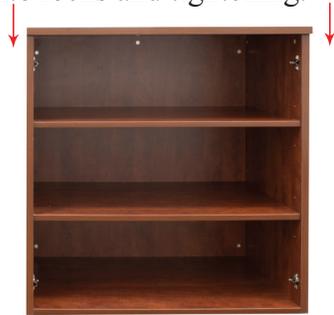

STEP 10 : Attach handles(L) to doors(S) by inserting 2 large screws(K) through existing holes in the door and tightening the handles to the doors.

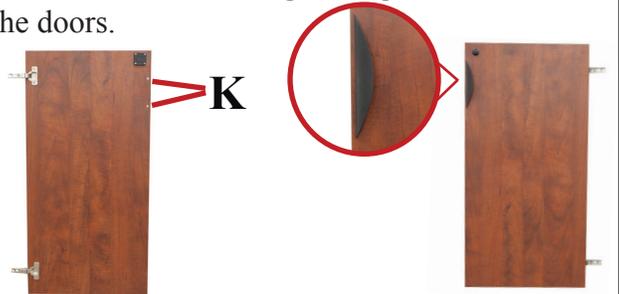

STEP 11 : Attach Hinges(B) to doors(S) with 2 medium screws(H) each.

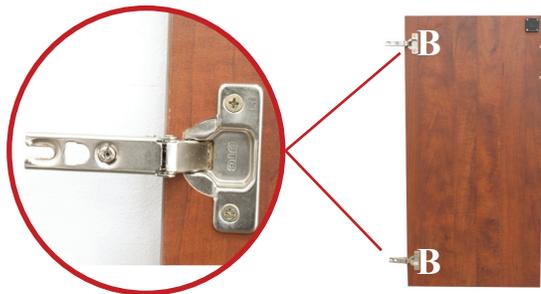

STEP 10 : Connect Doors(S) to mounting brackets(A) on the side walls(P).

STEP 10A : Screw(10A) from bracket(A) interlocks with hinge(B) opening just as screw(10B) on hinge(B) interlocks with mount(A) opening.

Note..The screw 10B is an adjustment for the door position. Turn right to adjust door to center and left to adjust toward the side.

