


## Item # : DW42MWRA Assembly Instructions

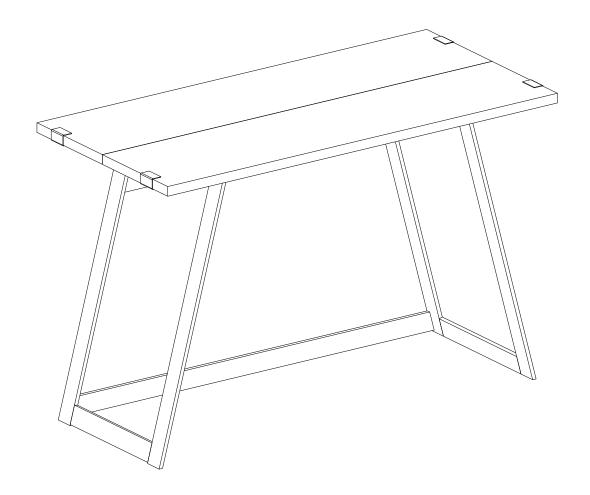



Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

Revised 04/30/2018

## **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The main type of hardware used to assemble this product is: bolts.
- V. Power tools should not be used to assemble this product.



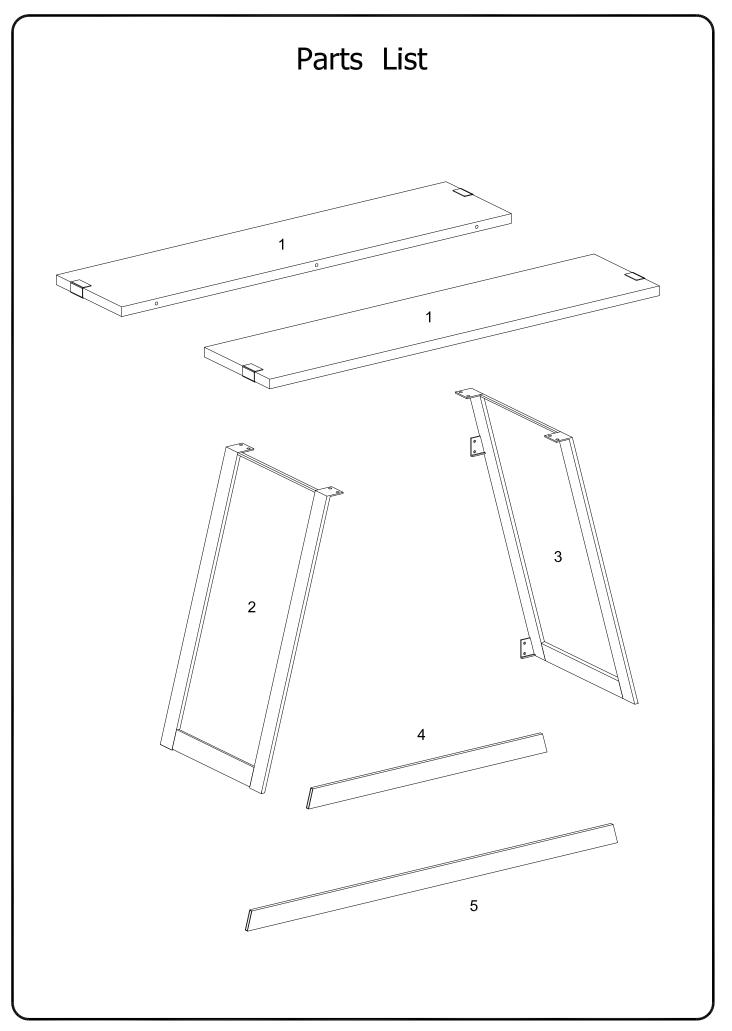


## Hardware List

Wooden dowel Ø8x30mm pcs Α 3 Bolt Ø6x8mm В pcs Bolt Ø6x15mm С pcs Hex Key D M4 pcs


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.



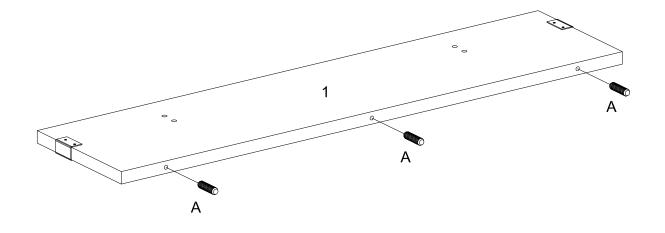


Insert wooden dowel (A) into part (1).

## Step 2

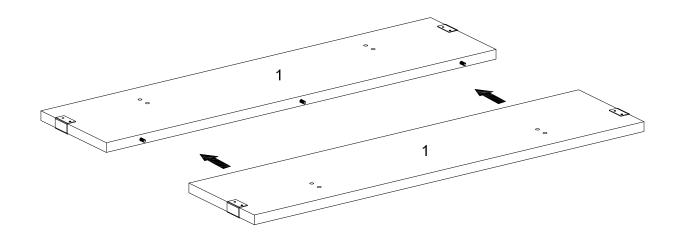


Insert part (1) into part (1).




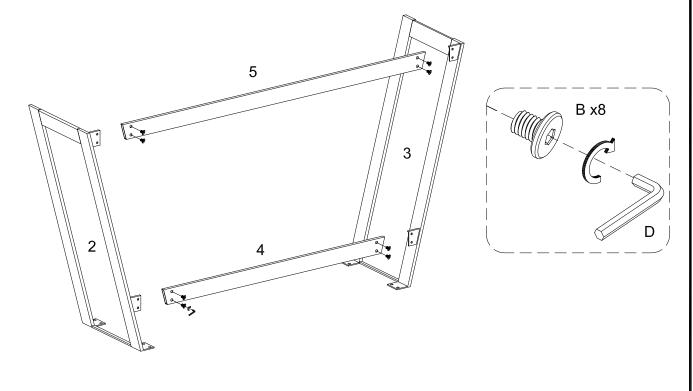

Attach part (4,5) to part (2,3) using bolt (B) with hex key (D).



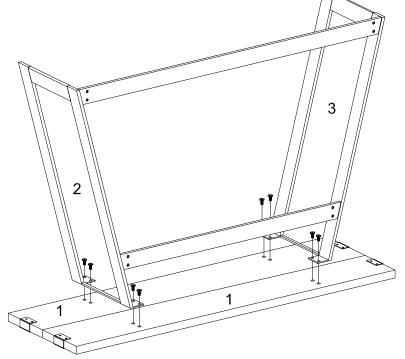

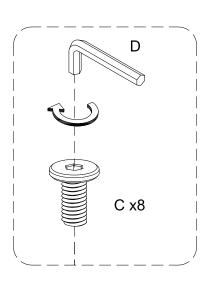

Attach part (2,3) to part (1) using bolt (C) with hex key (D).

