




**PIONEER INDUSTRIES, INC.**  
3325 S. Garfield Ave.  
Commerce, CA 90040  
(800) 338-9468  
[www.pioneerind.com](http://www.pioneerind.com)

# INSTALLATION

## Tools:

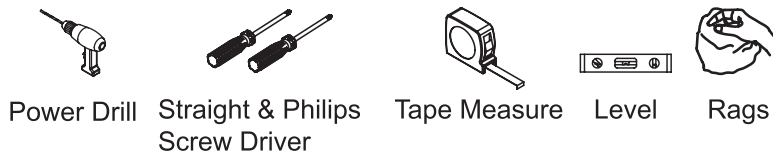


**Model Number:** 7MT030, 7MT031, 7MT032, 7MT033, 7MT034




## Installation Steps:


### Bathroom Hardware

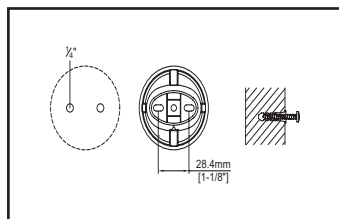

(1) Determine the installation location for the bathroom hardware. Drill 1/4" diameter hole approximate 1-1/8" apart. Place plastic anchors into the drilled holes, use hammer to tap it in flush with the wall. Place the mounting plate and secure them to the wall with the help of mounting screws.

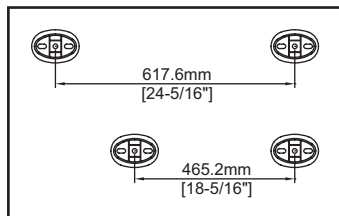

(2) For 7MT030 & 7MT031 Install the mounting plate 24-5/16" & 18-5/16" apart respectively.

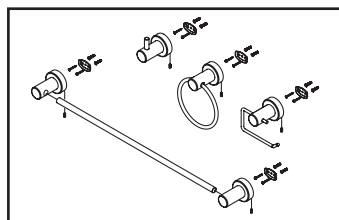

(3) Secure the bathroom hardware with the screw at the bottom. Do not overtighten.



For more care information or trouble shooting inquiries about your Pioneer product, please call:  
**Pioneer Industries, Inc.** (800) 338-9468  
Monday-Friday 8AM to 8PM EST (5AM to 5PM PST)  
[www.pioneerind.com](http://www.pioneerind.com)