
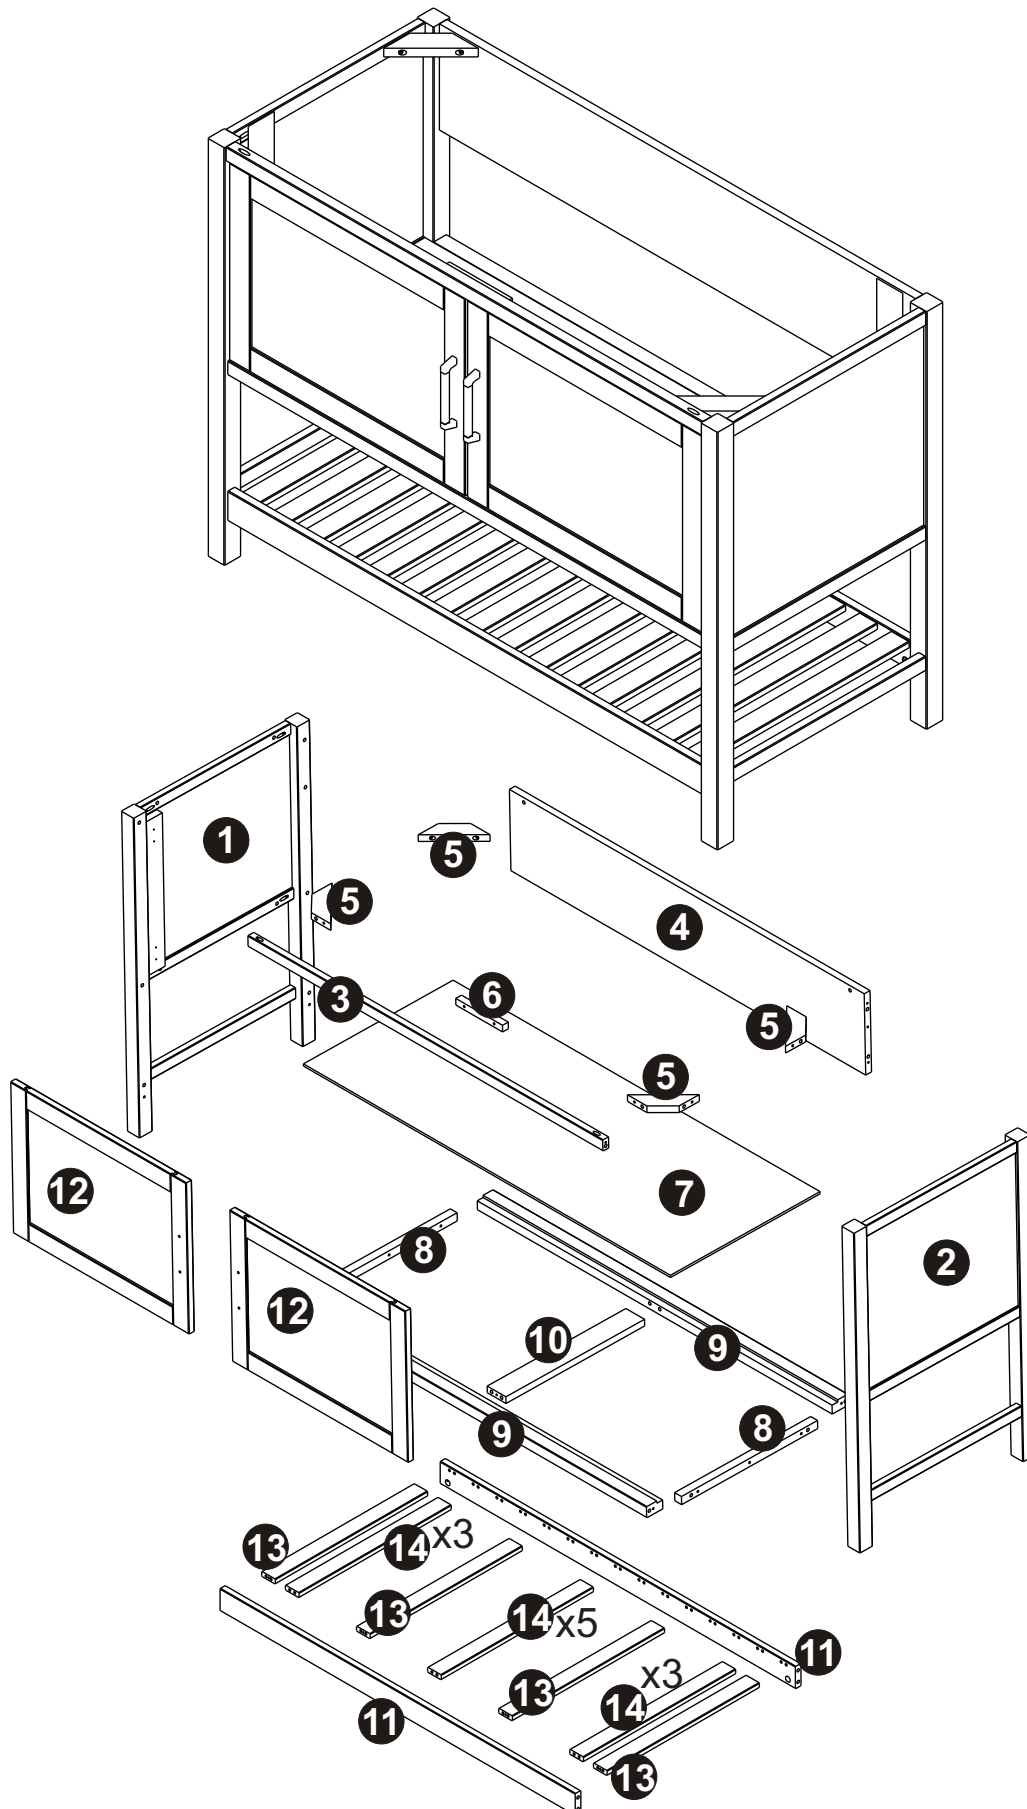








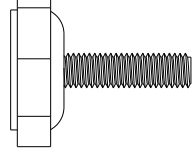


ASSEMBLY INSTRUCTIONS

BENNET 48" VANITY



A	 Ø8x30mm	26
B	 Ø8x20mm	04
C	 Ø3,5x30mm	30
D	 Ø4x25mm	04
E	 Ø3,5x14mm	16
F	 Ø3,5x14mm	02
G	 Ø4x25mm	04
H		02

I		04
J		04
K		02
L	 27x23mm	04
M	 Ø4x25mm	08
N	 Ø6x30mm	60

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at ''www.boltonfurniture.com''.

Tools Required




Phillips Tool



Hammer

* These tools are not supplied by the manufacturer

01

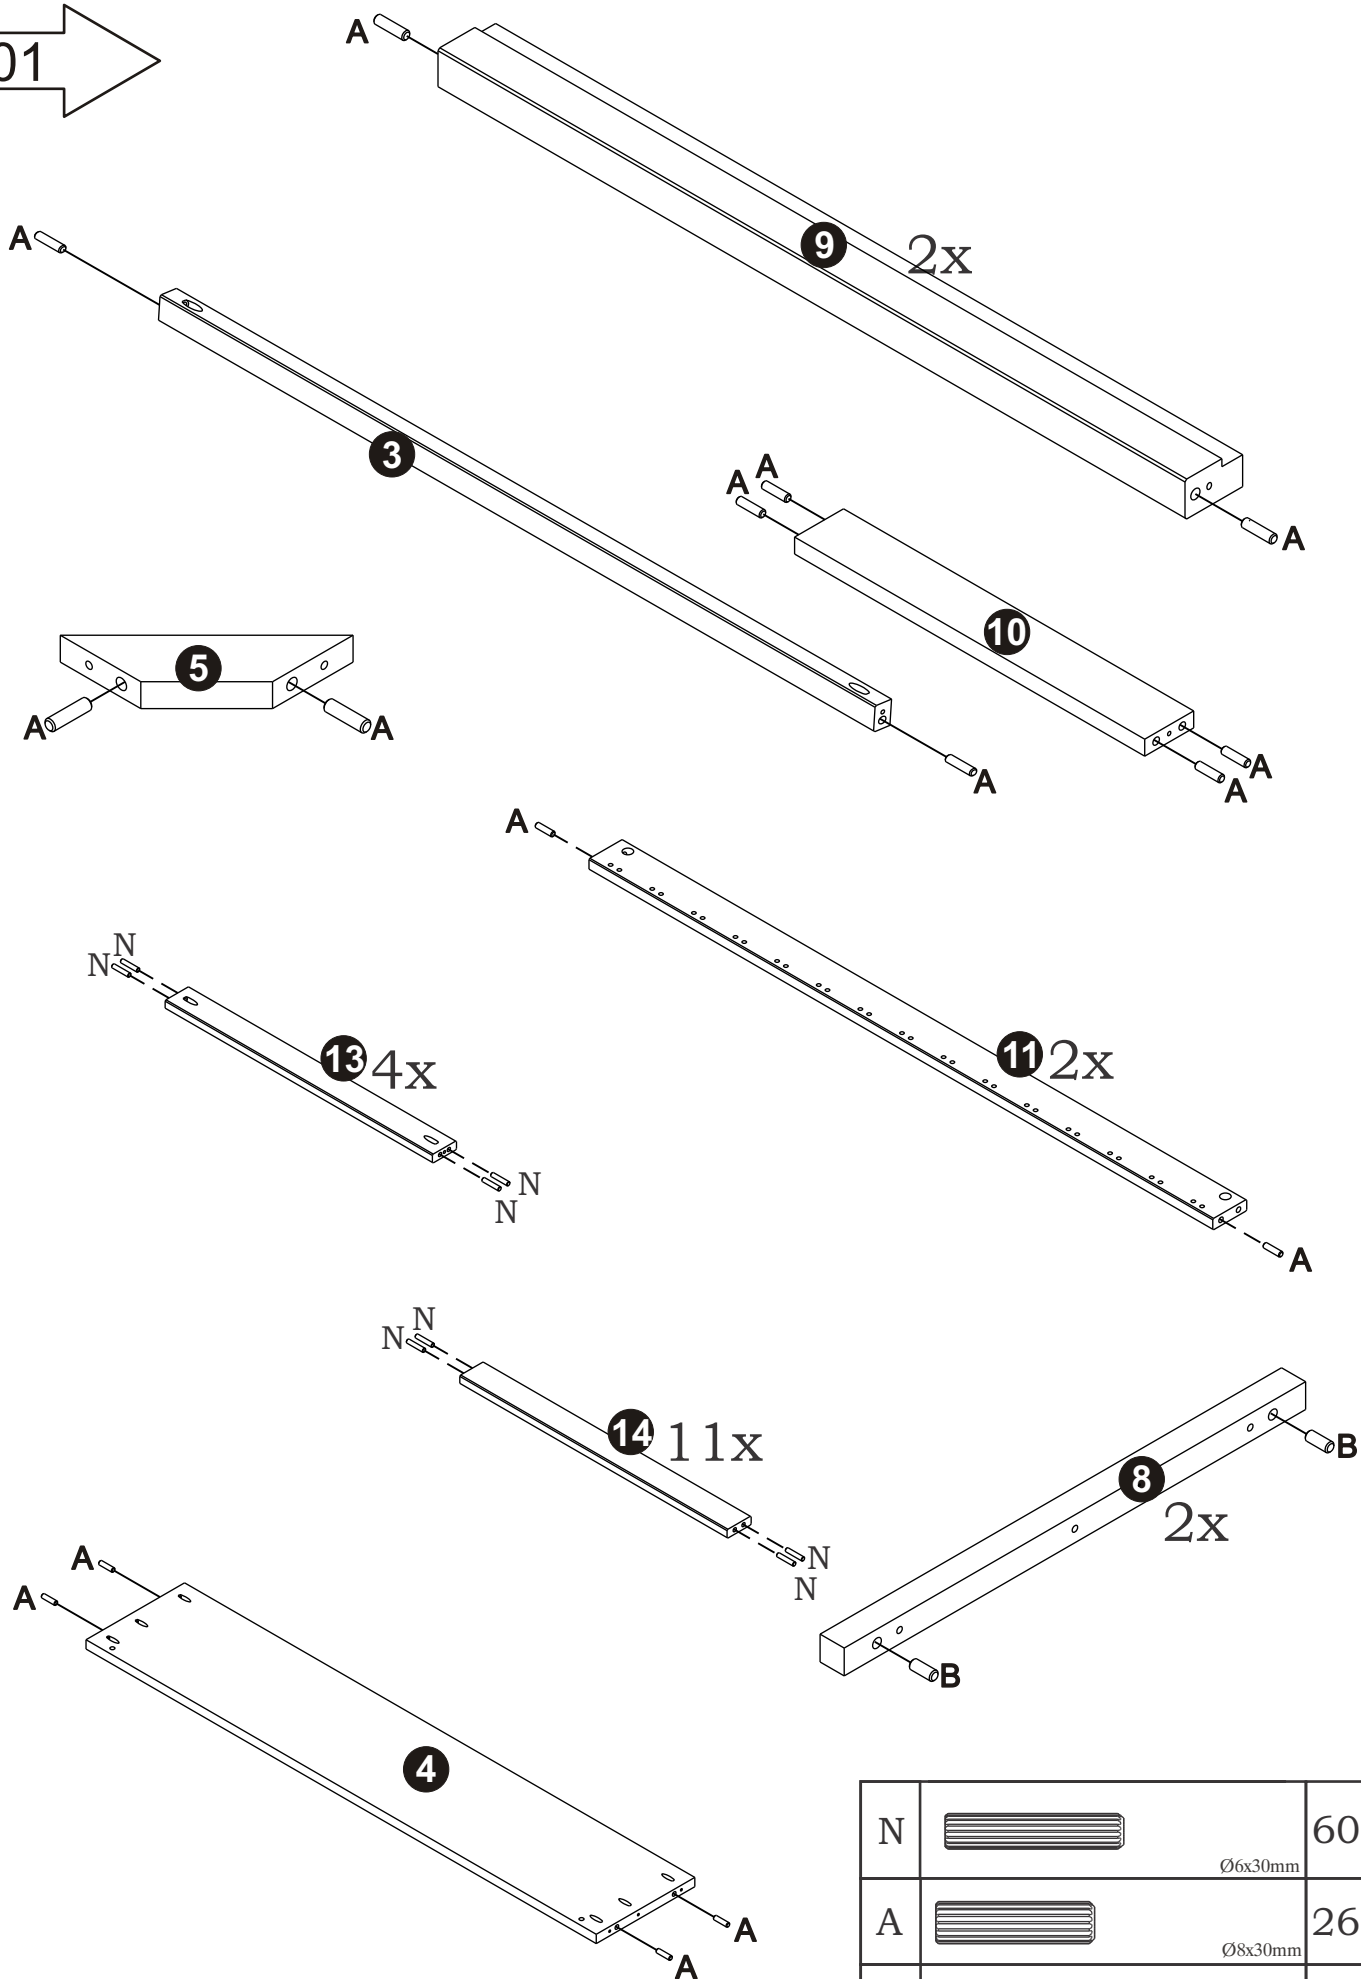


N		60
A		26
B		04


Ø6x30mm

Ø8x30mm


Ø8x20mm


02

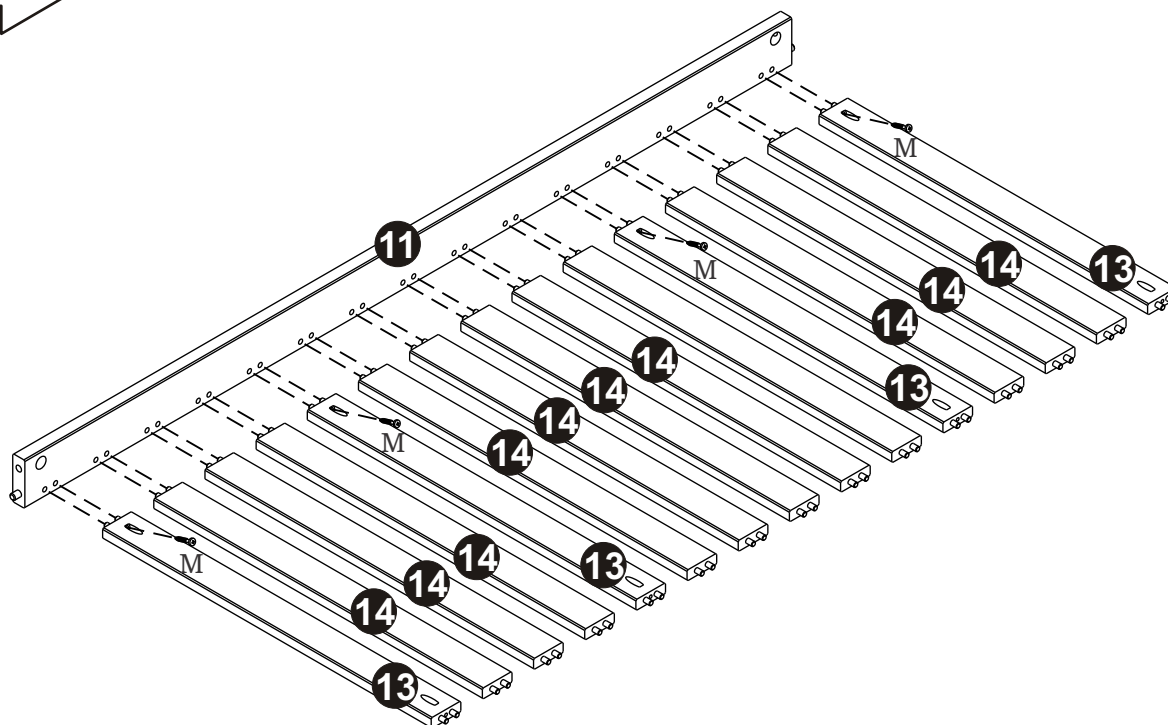


M		04
Ø4x25mm		


03

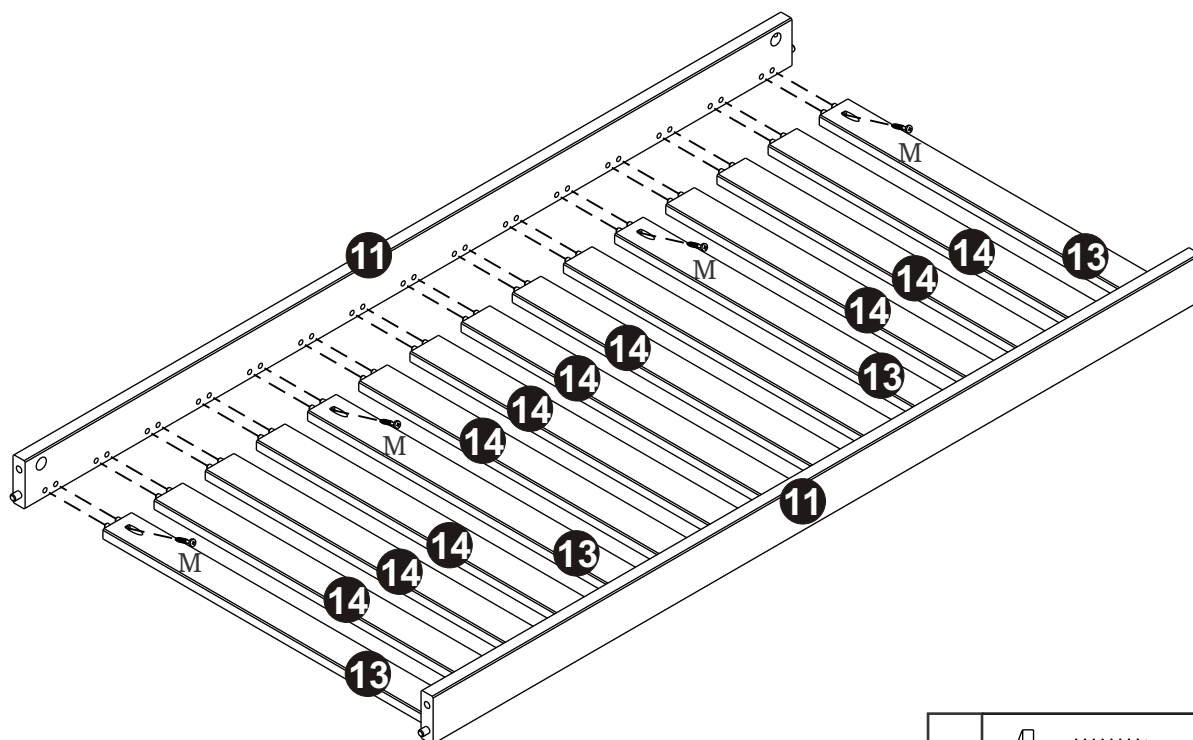


M		04
Ø4x25mm		

04

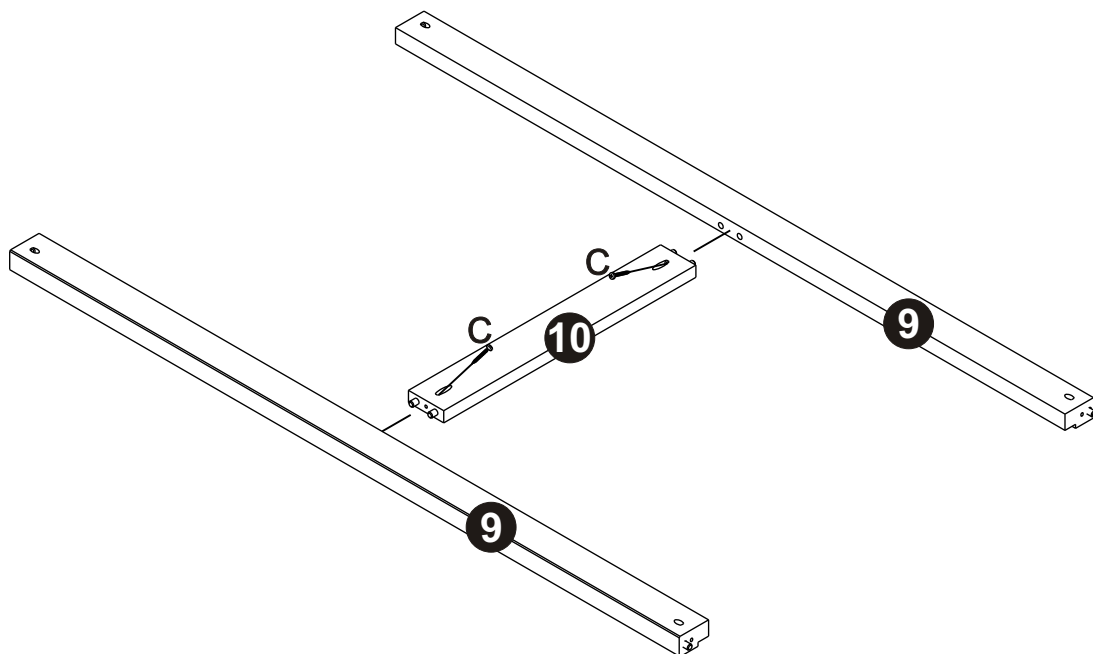


C		02
Ø3,5x30mm		

05

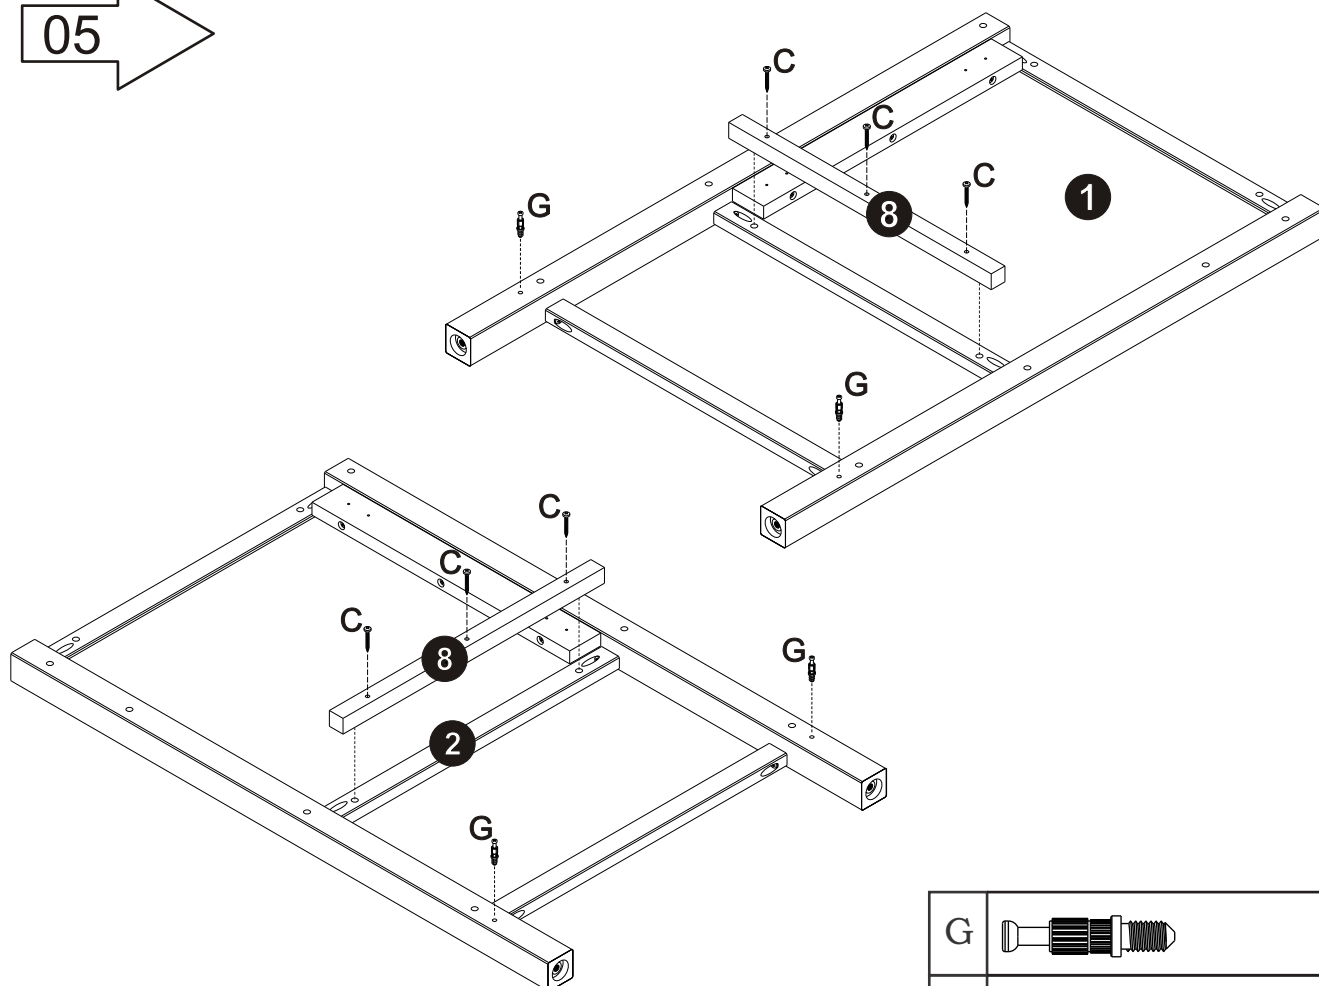


G		04
C		06
Ø3,5x30mm		

06

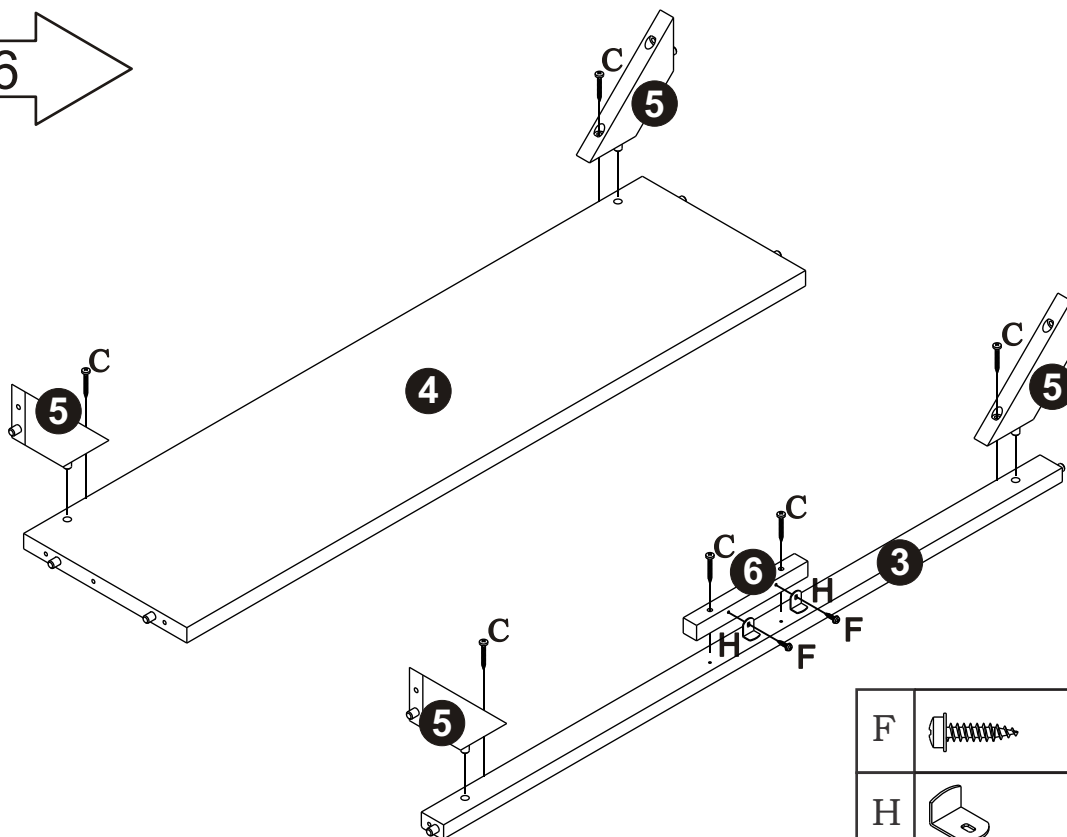



F		Ø3,5x14mm	02
H			02
C		Ø3,5x30mm	06


07

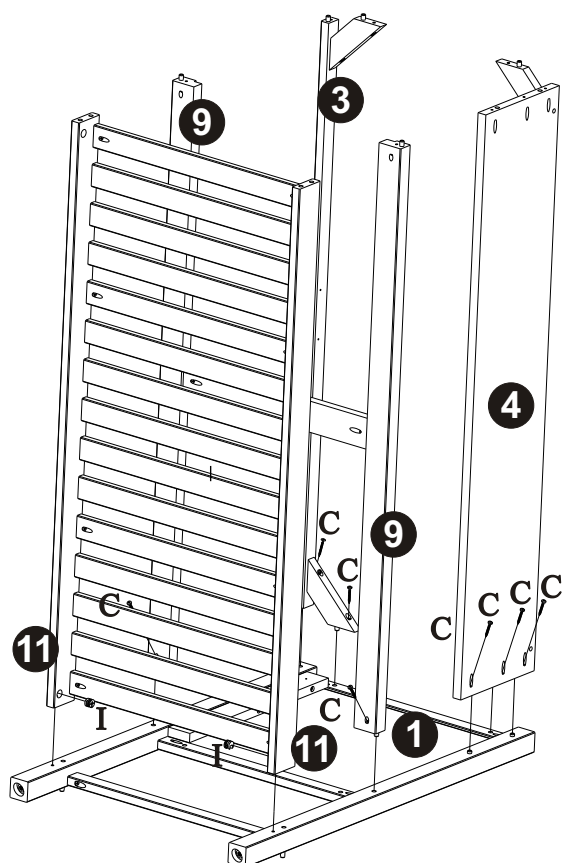

I			02
C		Ø3,5x30mm	08


08

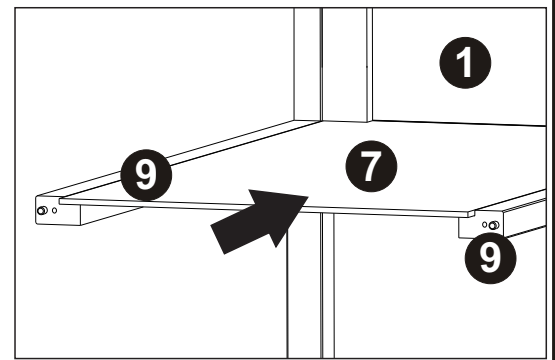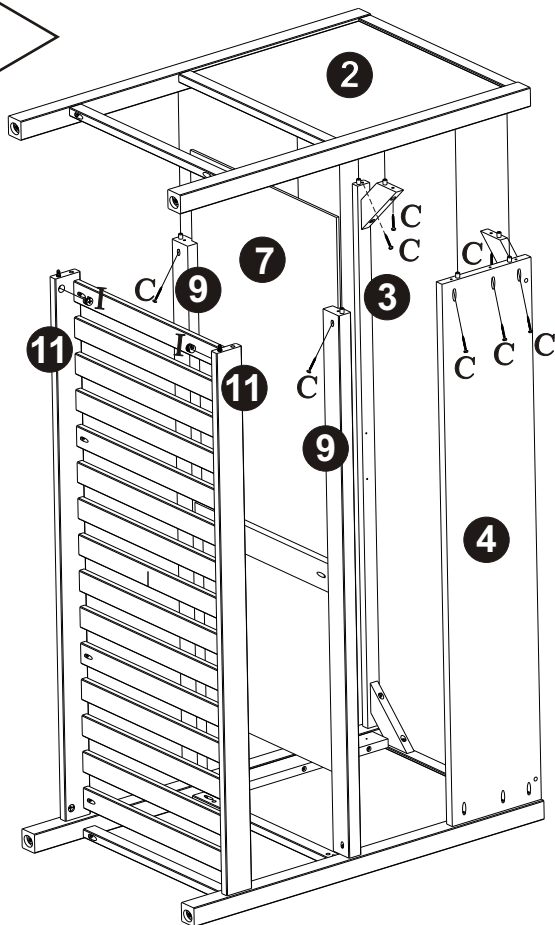

I		02
C		08

Ø3,5x30mm



09

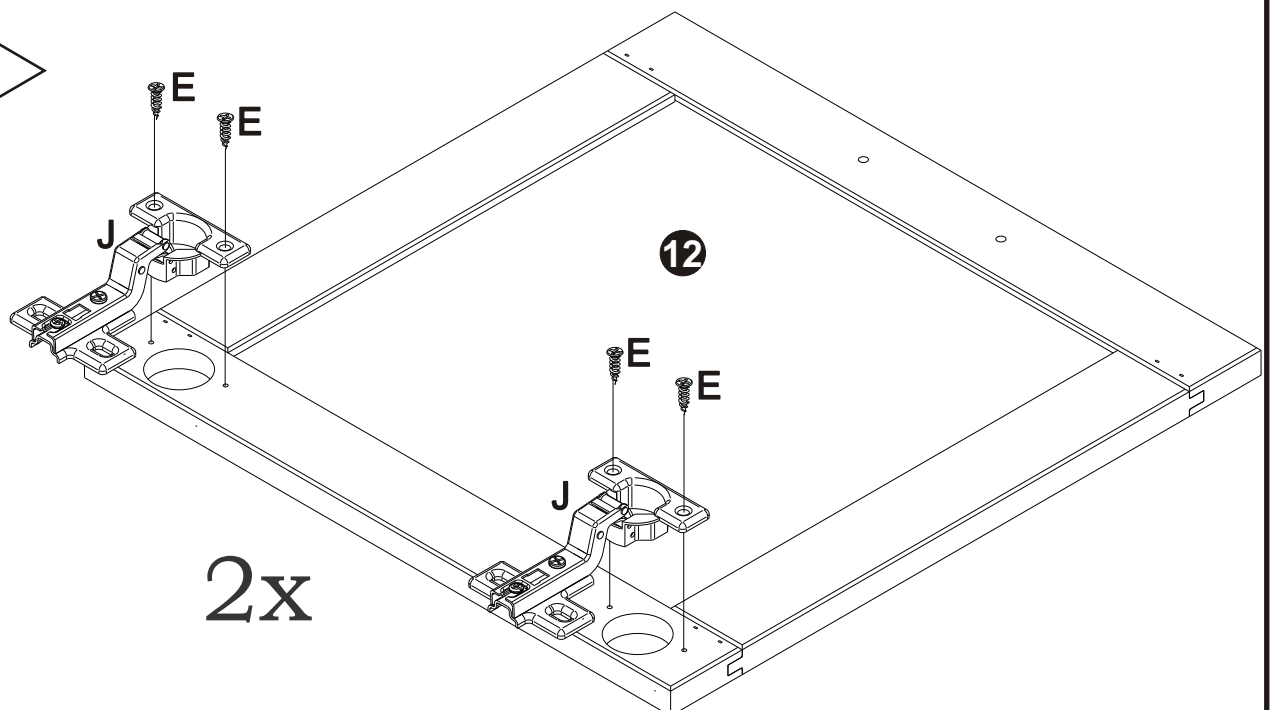


E		08
J		04

Ø3,5x14mm



10

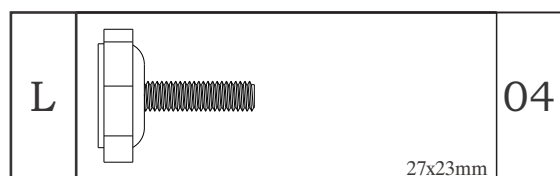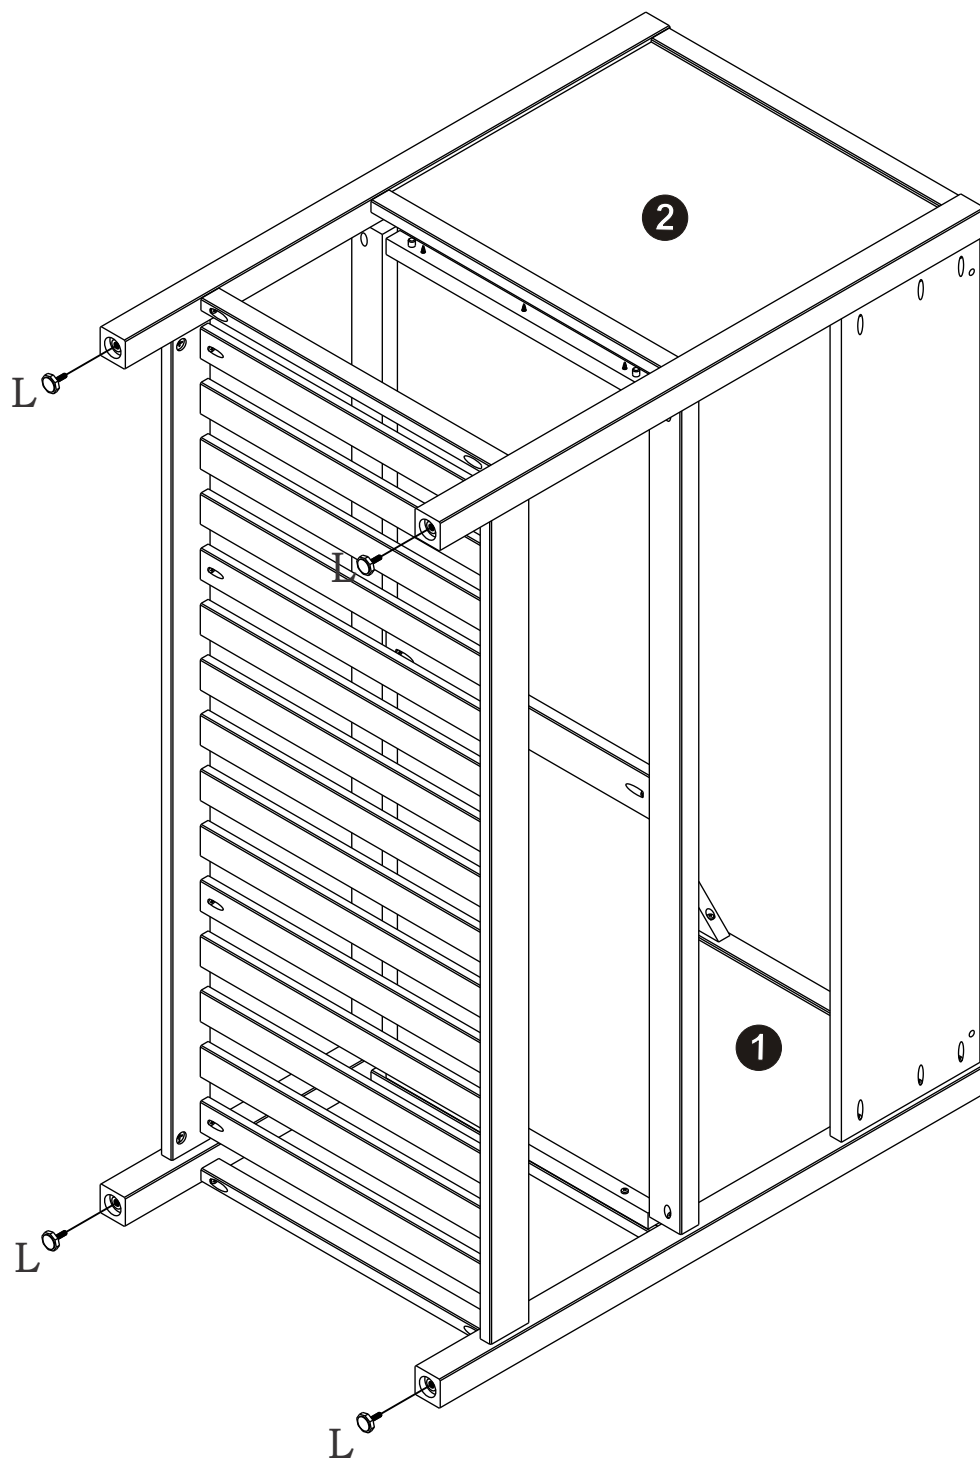

11

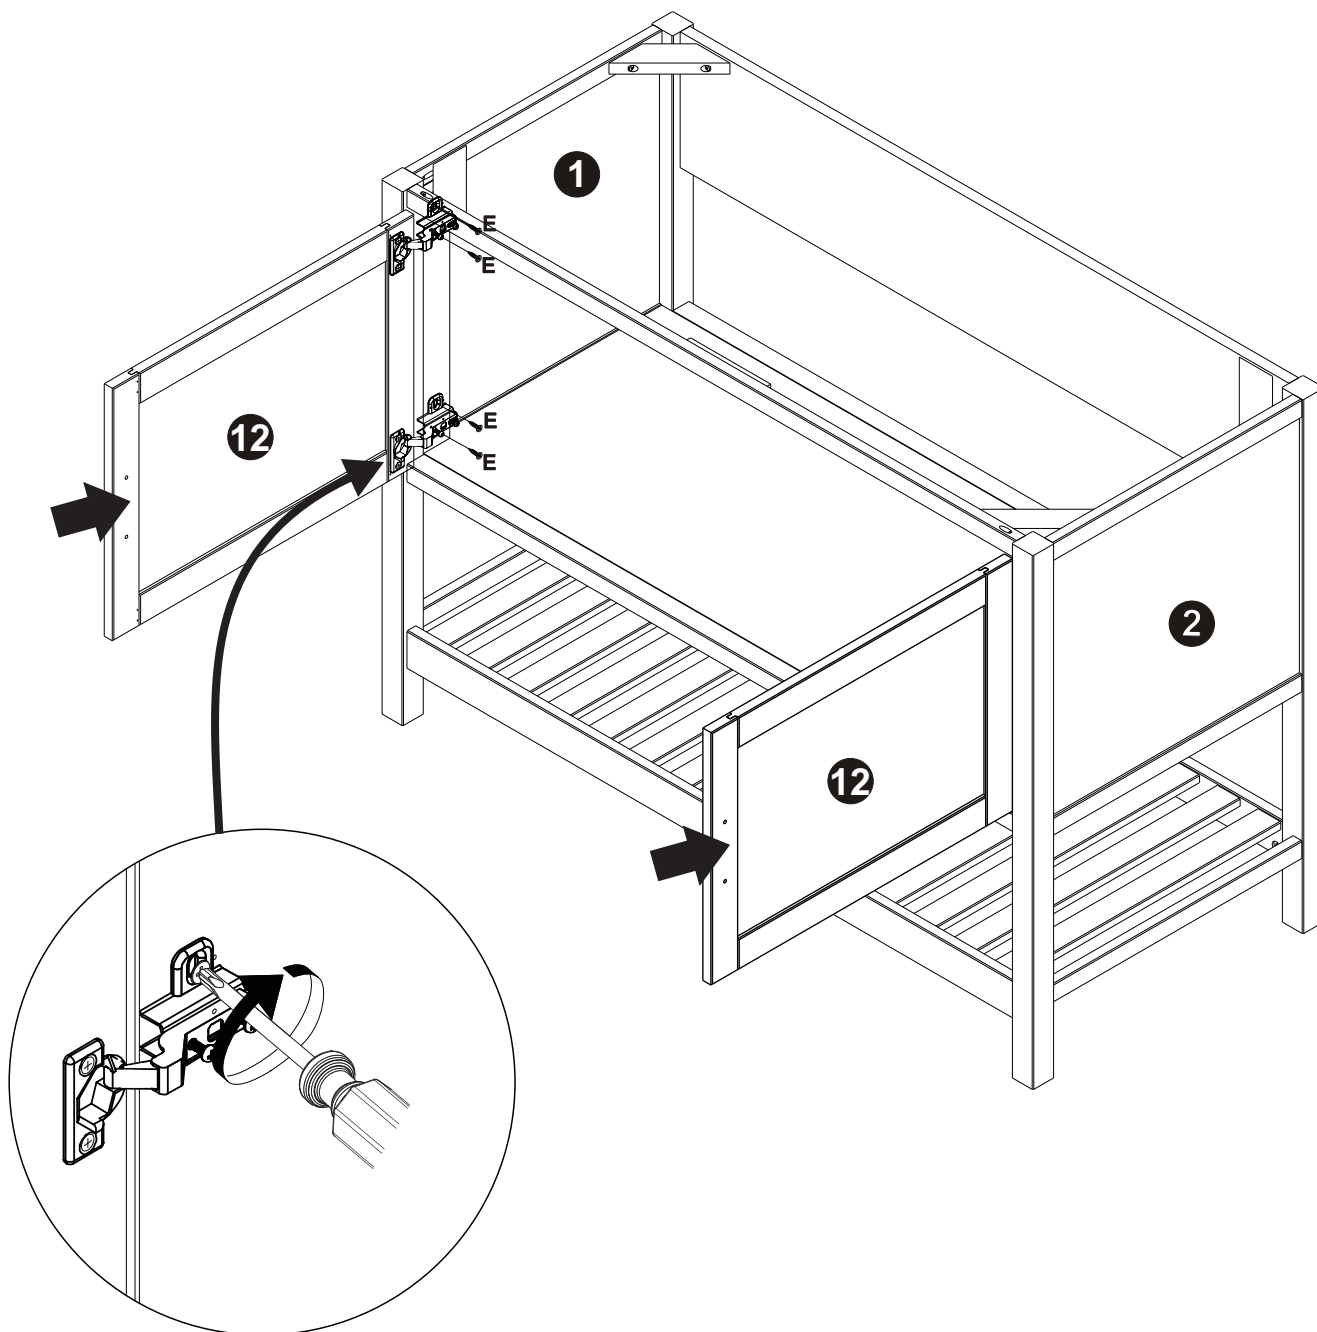

12

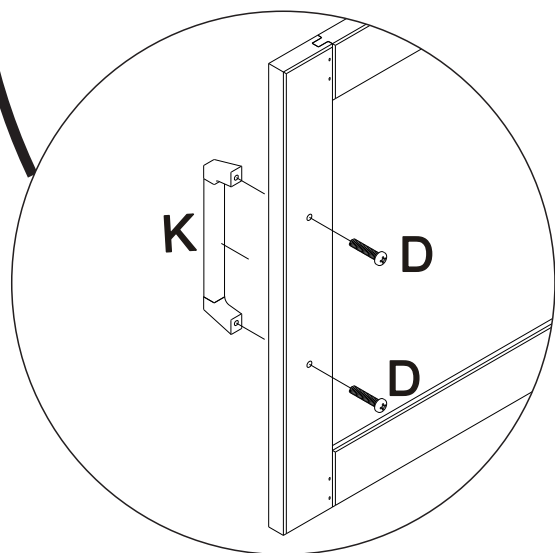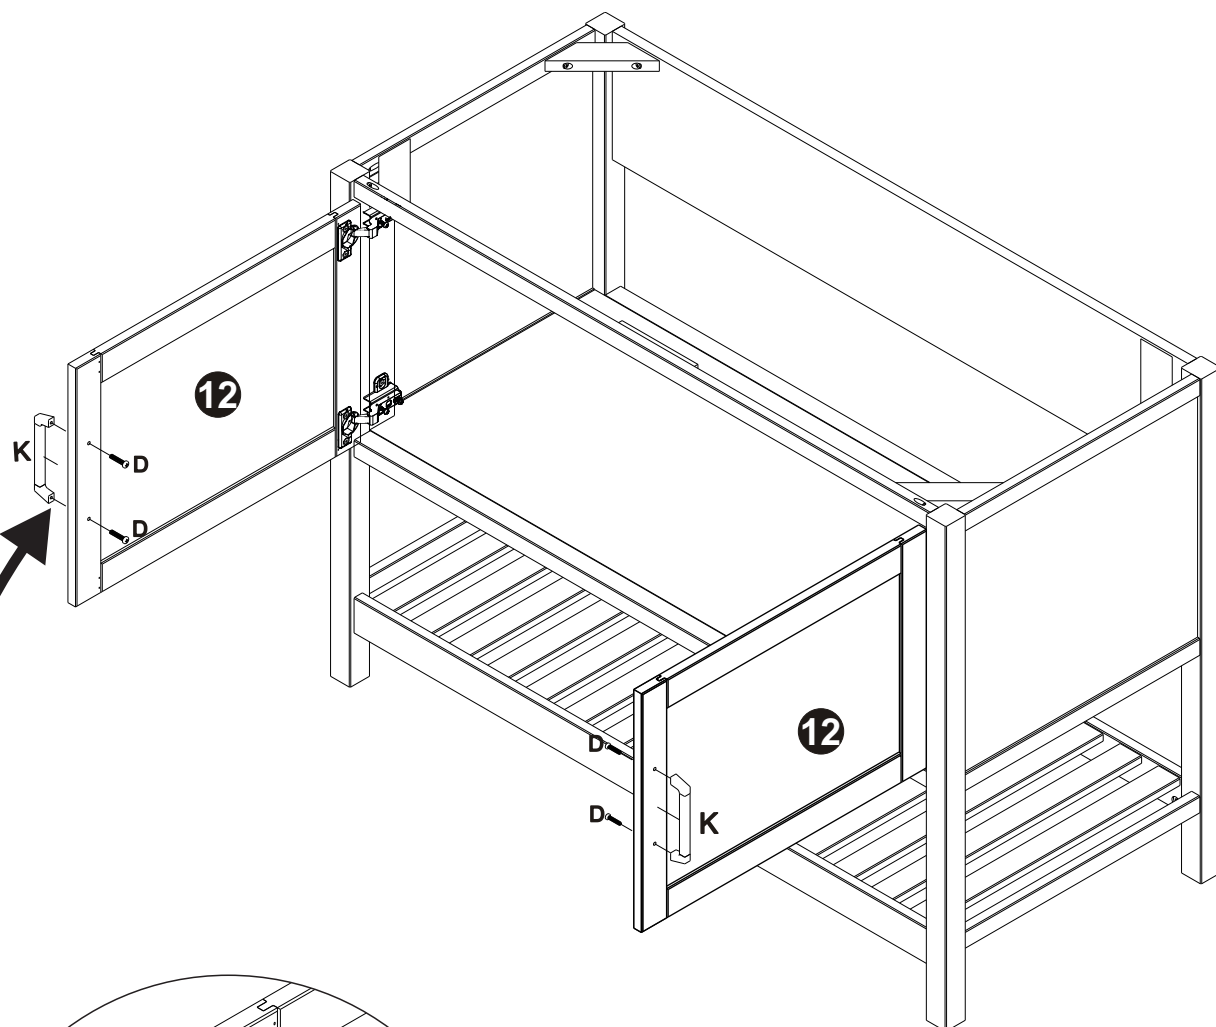

K		02
D		04

Ø4x25mm

13

