




Instructions for electrician
STEPS 2 - 18

WARNING:

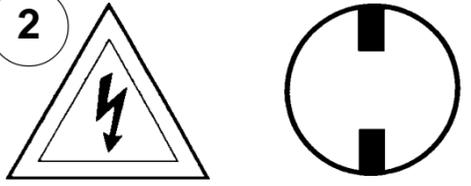


2 Electrical Danger Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

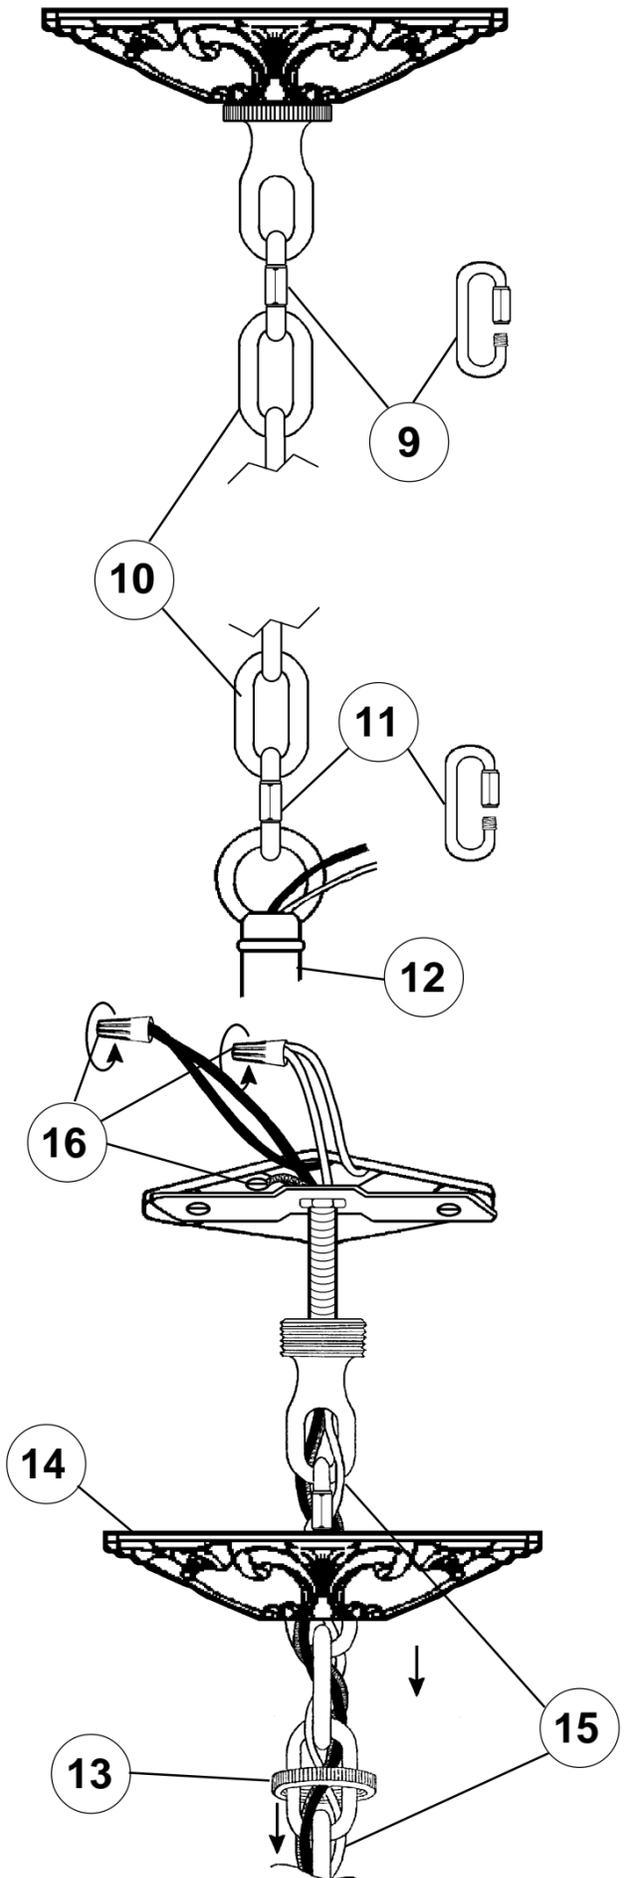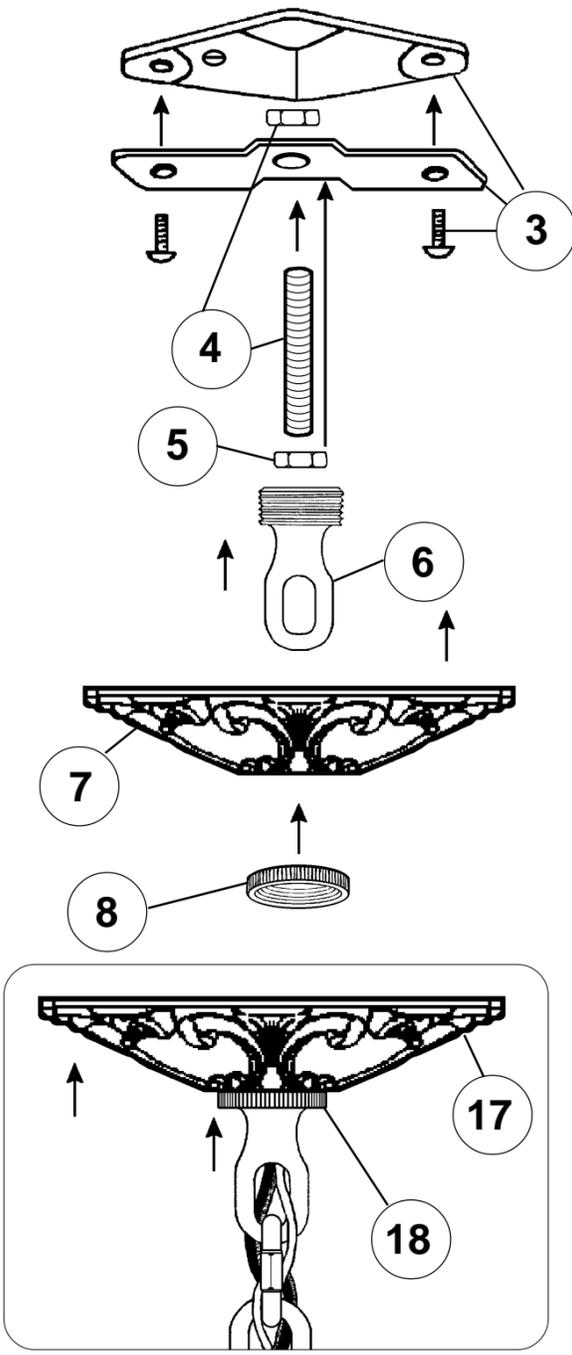

CHANDELIER 5007-___ __ TRIM DIAGRAM

(Finish Option)

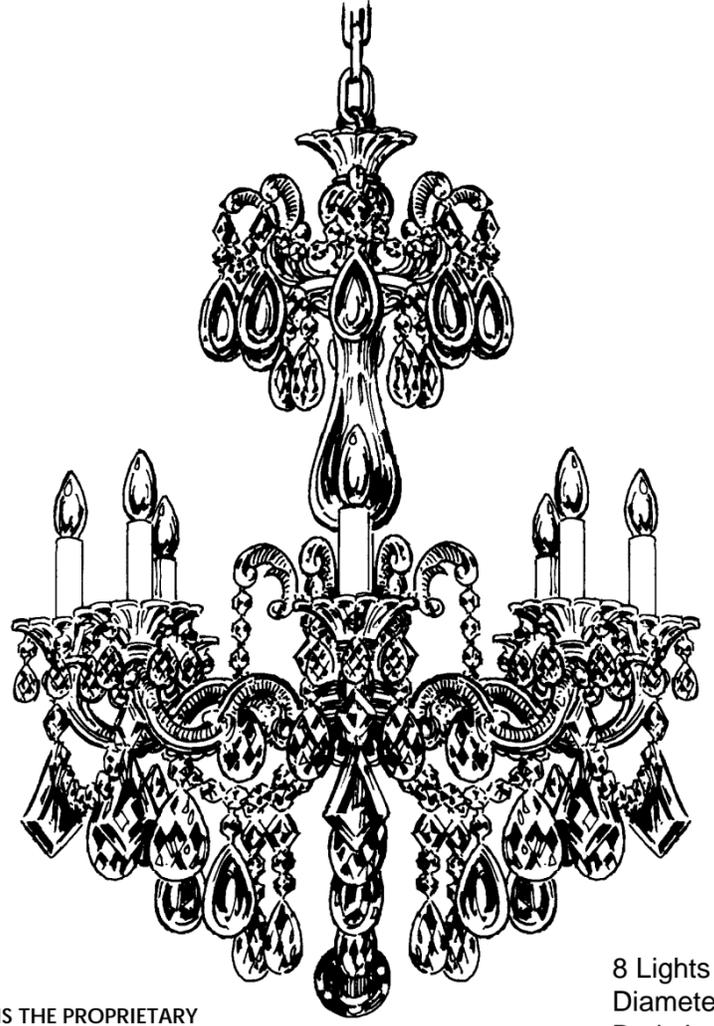

8 Lights
Diameter: 25"
Body Length: 34"
Hanging Weight: 36 lbs.

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADemark OF SCHONBEK WORLDWIDE LIGHTING INC.

SCHONBEK[®]

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

1 **IMPORTANT**
Person who opens carton should record the following information for future service.

CODE #	_____	Four-digit number on outside of carton.
PACKER #	_____	See crystal package label.
ORDER #	_____	See crystal package label.



Instructions for crystal trimming

STEPS 19 - 31



19

You will need 8 - C10
25 Watts Recommended
60 Watts Max

Install bulbs and be
sure to test fixture
BEFORE trimming.

#9764

#9935/1

#9937

#9940/70/2

#9764/1

N465-**

23

31

25

24

26

28

30

22

21


20

29

27



Tighten With
Tool Provided.

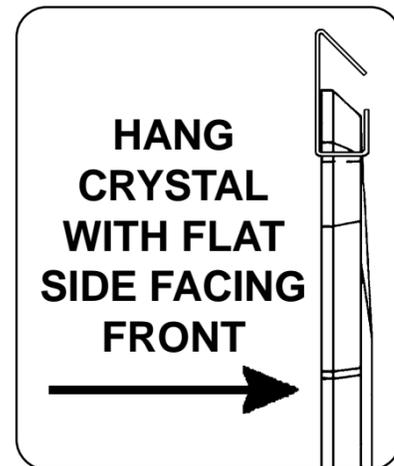

HANG
CRYSTAL
WITH FLAT
SIDE FACING
FRONT

