


ASSEMBLY INSTRUCTION

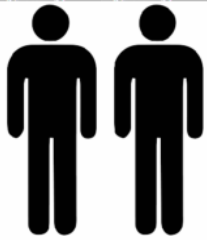

🕒 10 min




① x 12

(Bolt M6 x45)



② x 12

Washer

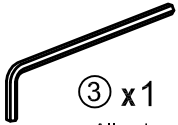

③ x 1

Allen key



④ x 2




⑤ x 2



⑥ x 4




⑦ x 4

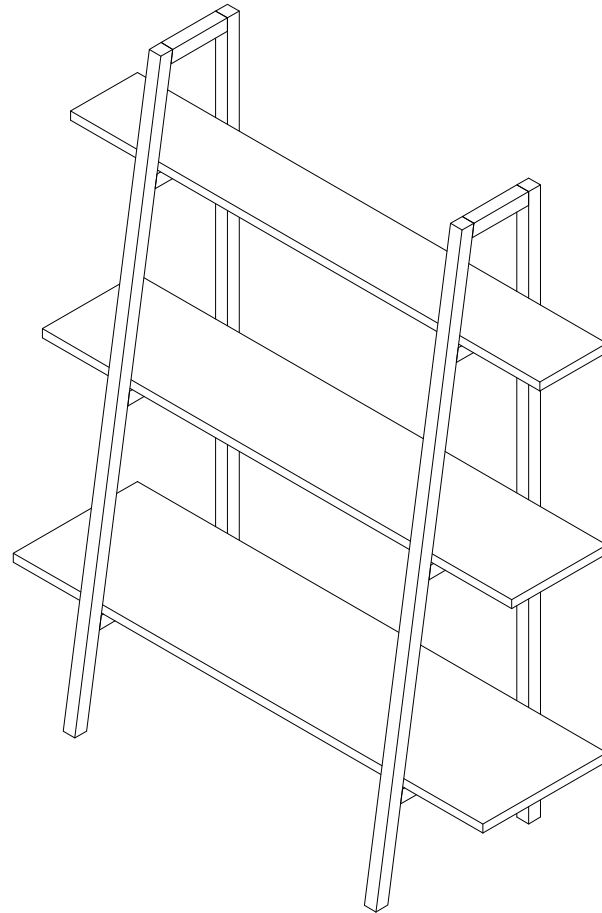


M4H


MADE4HOME




Ⓐ x 2

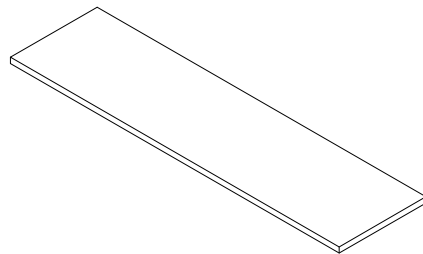

Ⓑ x 1

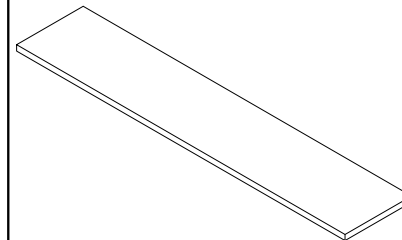


Ⓒ x 1

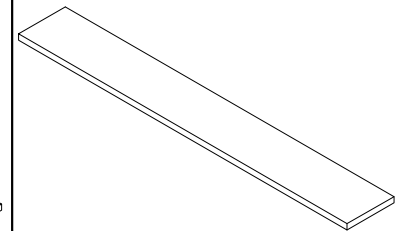

Ⓓ x 1

ASSEMBLY INSTRUCTION

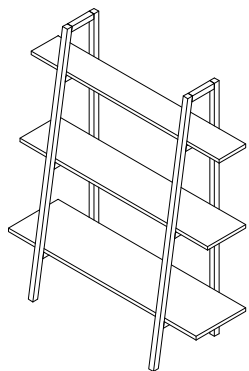

Step 1





50%


Step 2



50%

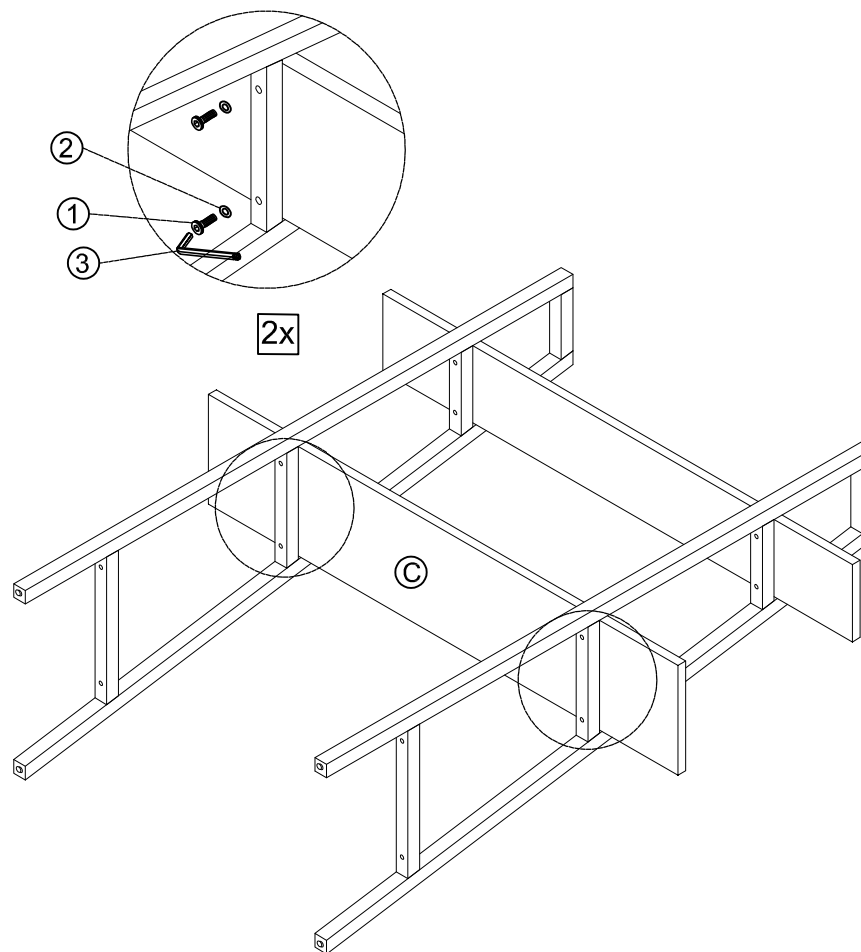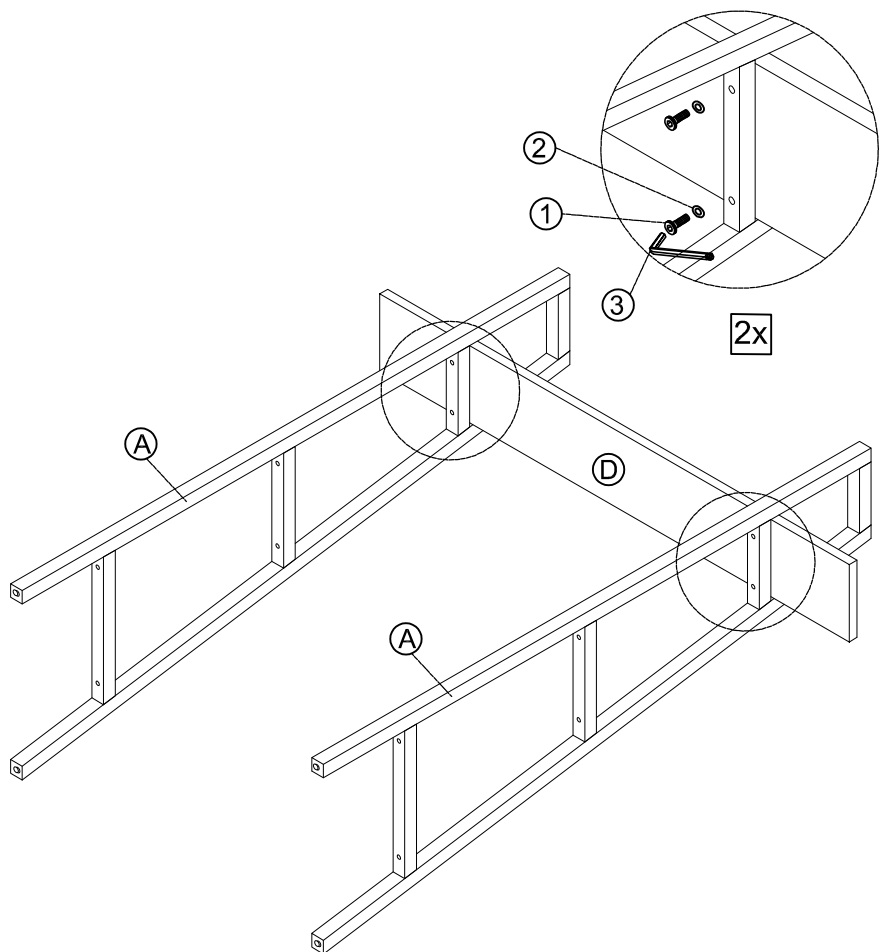

ASSEMBLY INSTRUCTION

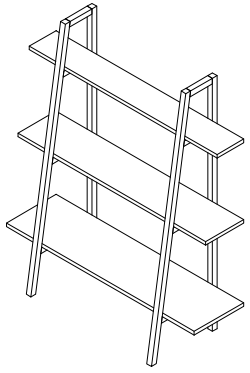

Step 3





50%


Step 4




100%

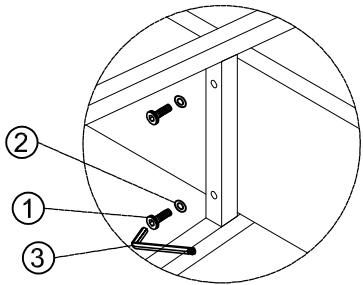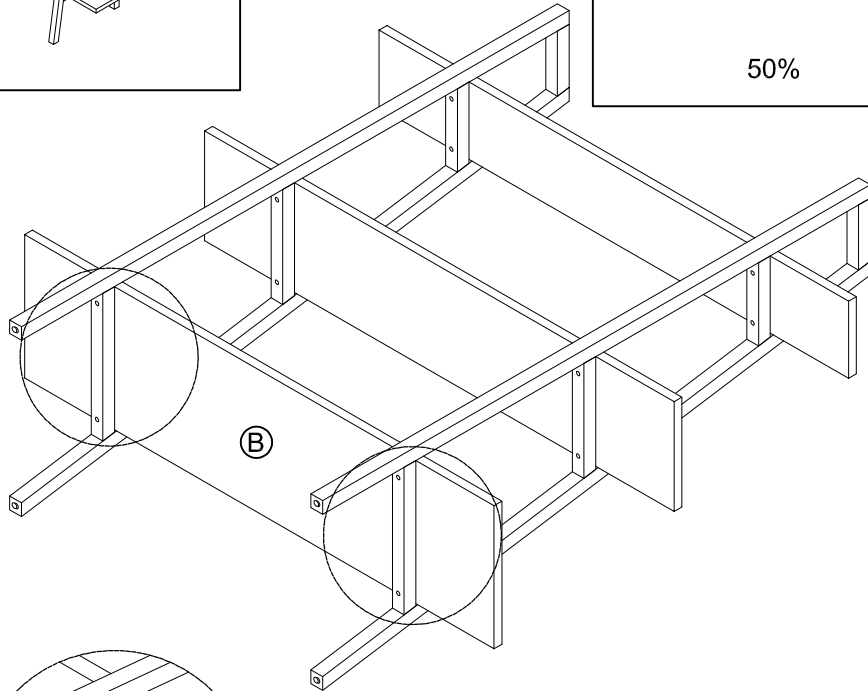


2x

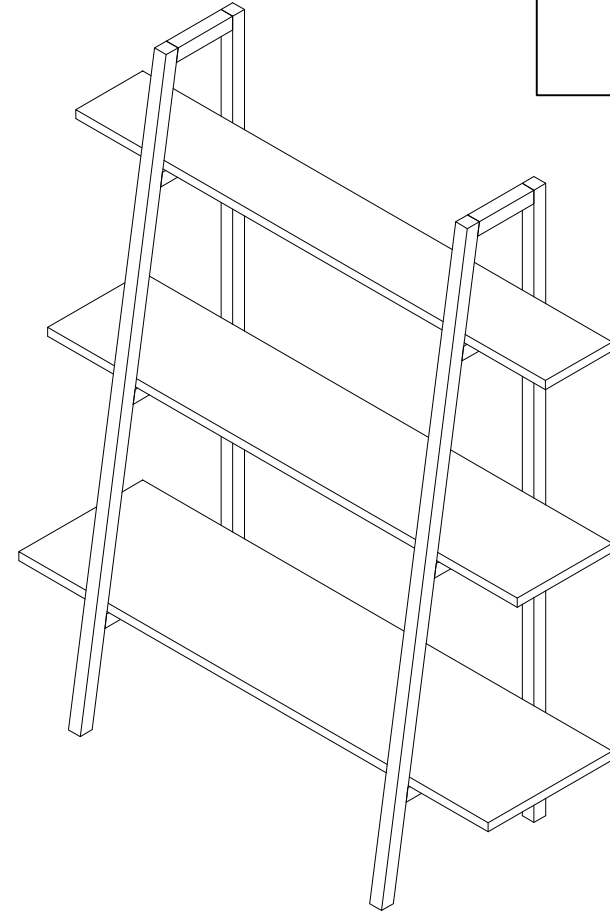

ASSEMBLY INSTRUCTION


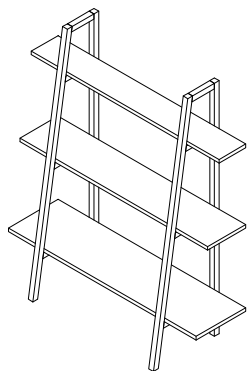


Step 5

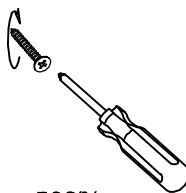

50%

Step 6

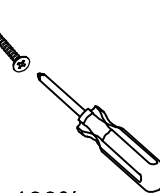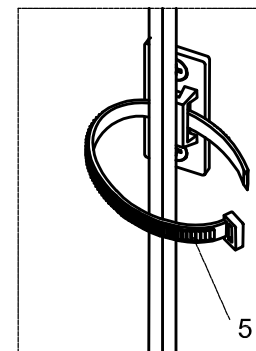

100%

